

| REPAIR KIT | TERMINATING HEAD |                         |                   |
|------------|------------------|-------------------------|-------------------|
|            | PART NUMBER      | DESCRIPTION             | INSTRUCTION SHEET |
| 856600-1   | 58246-1          | MTA-100 Receptacles     | 408-6929          |
|            | 58246-3          |                         | 408-4147          |
| 856600-2   | 58247-1          | MTA-156 Receptacles     | 408-6930          |
|            | 58247-3          |                         | 408-4146          |
|            | 58392-1          | MTA-156 Quad Connectors | 408-9450          |

Figure 1

## 1. INTRODUCTION

This instruction sheet covers the installation of MTA Terminating Head Repair Kits 856600-[ ] for repair of the terminating heads listed in Figure 1. Read these instructions thoroughly before using the repair kit. Refer to the instructions packaged with the MTA terminating head for setup and adjustment instructions.

Reasons for reissue of this instruction sheet are provided in Section 5, REVISION SUMMARY.

## 2. DESCRIPTION

Each repair kit is designed to replace all of the wearable parts in the terminating head. The items contained in the repair kit and their function are as follows:

Cam — indexes the feed slide after each termination

Locating pawl — aligns the connector for insertion and retains it during termination

Feed pawl (with compression spring) — engages the connector and indexes it into position for termination


Feed slide — automatically positions the connector after each termination

Drill blank — helps to remove and install the roll pin in the locating pawl

## 3. INSTALLATION (Terminating Head Repair)

1. Remove the four hex head screws securing the housing to the terminating head. See Figure 2.

2. Depress the adjuster slightly, and pull the housing straight off the terminating head.

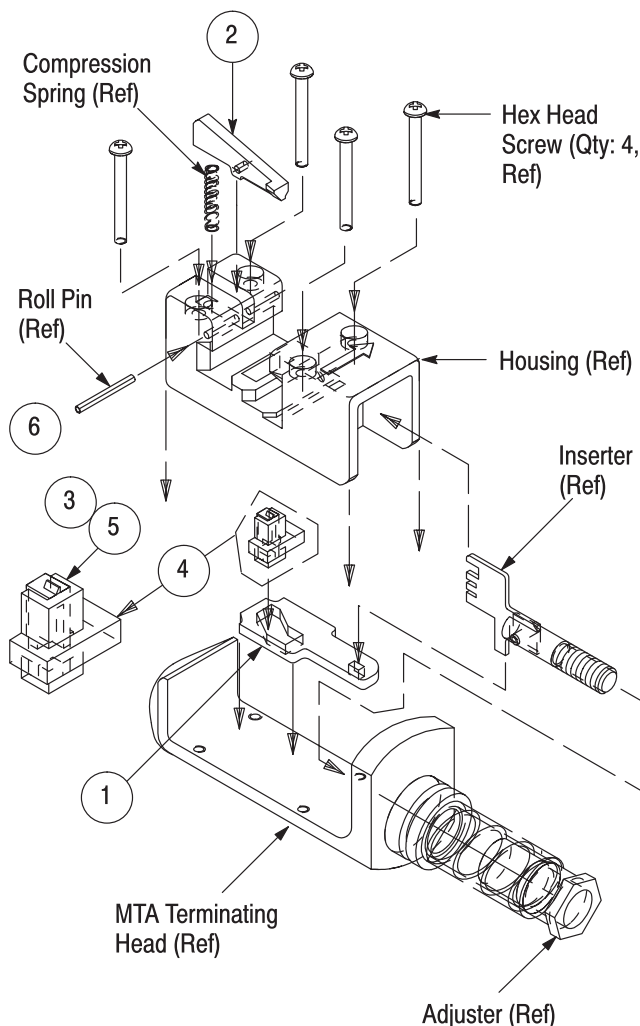

| ITEM | PART NUMBER | DESCRIPTION         | QTY PER REPAIR KIT |               |
|------|-------------|---------------------|--------------------|---------------|
|      |             |                     | -1 (MTA -100)      | -2 (MTA -156) |
| 1    | 312159-1    | CAM                 | 1                  | —             |
|      | 312153-1    | CAM                 | —                  | 1             |
| 2    | 312161-1    | PAWL, Locating      | 1                  | —             |
|      | 312147-1    | PAWL, Locating      | —                  | 1             |
| 3    | 312192-1    | PAWL, Finished Feed | 1                  | 1             |
| 4    | 312151-1    | SLIDE, Feed         | 1                  | 1             |
| 5    | 1-23147-2   | SPRING, Compression | 1                  | 1             |
| 6    | 21667-4     | DRILL BLANK         | 1                  | 1             |

Figure 2

3. Remove the feed slide (subassembly) from the housing.

**CAUTION**

*The feed slide (subassembly) is spring-loaded. Handle the subassembly carefully to avoid inadvertent disassembly.*

4. Using the drill blank, drive the roll pin past the feed pawl. Remove and discard the old feed pawl.
5. Install the new feed pawl.

**NOTE**

*BE SURE that the compression spring under the locating pawl is properly located.*

6. Install the new feed slide (subassembly).
7. Rotate and depress the adjuster slightly to remove the cam. Inspect the condition of the inserter. If the inserter is damaged or broken, it must be replaced according to Section 4. The inserter is not normally a wearing part and is not contained in the repair kit.
8. Install the new cam, and rotate the adjuster. Make sure that the cam and the inserter are oriented as shown in Figure 2.
9. Install the housing into the terminating head as follows:
  - a. Depress the adjuster slightly.
  - b. Guide the inserter into the slot in the housing.
  - c. Engage the feed slide into the opening in the cam.
  - d. Place the housing on the terminating head and secure it with the four hex head screws.

## 4. REPLACEMENT AND REPAIR

The repair kit should be stocked to prevent lost time when replacement of parts is necessary. Order replacement parts through your representative, or call 1-800-526-5142, or send a facsimile of your purchase order to 717-986-7605, or write to:

CUSTOMER SERVICE (038-035)  
TYCO ELECTRONICS CORPORATION  
PO BOX 3608  
HARRISBURG PA 17105-3608

Terminating heads may be submitted for evaluation and repair. For customer repair service, call 1-800-526-5136.

## 5. REVISION SUMMARY

Revisions to this instruction sheet include:

- Updated document to corporate requirements
- Added text to Section 2
- Corrected terminology in Steps 4 and 5 of Section 3



**Стандарт  
Электрон  
Связь**

Мы молодая и активно развивающаяся компания в области поставок электронных компонентов. Мы поставляем электронные компоненты отечественного и импортного производства напрямую от производителей и с крупнейших складов мира.

Благодаря сотрудничеству с мировыми поставщиками мы осуществляем комплексные и плановые поставки широчайшего спектра электронных компонентов.

Собственная эффективная логистика и склад в обеспечивает надежную поставку продукции в точно указанные сроки по всей России.

Мы осуществляем техническую поддержку нашим клиентам и предпродажную проверку качества продукции. На все поставляемые продукты мы предоставляем гарантию .

Осуществляем поставки продукции под контролем ВП МО РФ на предприятия военно-промышленного комплекса России , а также работаем в рамках 275 ФЗ с открытием отдельных счетов в уполномоченном банке. Система менеджмента качества компании соответствует требованиям ГОСТ ISO 9001.

Минимальные сроки поставки, гибкие цены, неограниченный ассортимент и индивидуальный подход к клиентам являются основой для выстраивания долгосрочного и эффективного сотрудничества с предприятиями радиоэлектронной промышленности, предприятиями ВПК и научно-исследовательскими институтами России.

С нами вы становитесь еще успешнее!

**Наши контакты:**

**Телефон:** +7 812 627 14 35

**Электронная почта:** [sales@st-electron.ru](mailto:sales@st-electron.ru)

**Адрес:** 198099, Санкт-Петербург,  
Промышленная ул, дом № 19, литера Н,  
помещение 100-Н Офис 331