Quick Start Guide for TWR-S08LL64

TOWER SYSTEM



MC9S08LL64 S08 ultra-low-power LCD segment MCU



TOWER SYSTEM

Get to know the TWR-S08LL64

Tower Card Connector (Secondary) LCD Display Mini-B USB Connector Potentiometer **BS232** PORT Reset Button 3-Axis Accelerometer I FD4/SW4 MMA73611 LED3/SW3 I FD2/SW2 - Liaht LED1/SW1 Sensor Buzzer MC9S08LL64 MCI Tower Card Connector (Primary) Crvstal



TWR-S08LL64-KIT Freescale Tower System

The TWR-S08LL64 module is part of the Freescale Tower System, a modular development platform that enables rapid prototyping and tool re-use through reconfigurable hardware. Take your design to the next level and begin constructing your Tower System today. The TWR-9S08LL64-KIT comes with two elevator modules (TWR-ELEV) and a prototype module (TWR-PROTO).

Introduction

The MC9S08LL64 device is one of Freescale's low-power microcontrollers with an integrated liquid crystal display (LCD) driver. The TWR-S08LL64 module contains an on-module display that allows developers to explore software development using the integrated LCD driver. This quick start guide is designed to get you ready to develop your next LCD application using the MC9S08LL64 within minutes.

TOWER SYSTEM

Step-by-Step Installation Instructions

After completing the steps in this quick start guide take a look at the TWR-S08LL64 Labs Tutorial document (TWR9S08LL64LAB) included in the Training section of the DVD. Here you'll learn more about the key benefits that MC9S08LL64 provides your application.



Install software and tools

Please insert the provided DVD into your computer. After the initial screen appears, install CodeWarrior development tools in the order listed below. Follow the prompts through the installation of each component, answering each prompt with the default input.

1. Install CodeWarrior Development Studio for Microcontrollers v6.3 Special Edition

- 2. Install P&E toolkit
- Install the two CodeWarrior project files by selecting the Software tab and click the Lab Software Projects link. This will begin extraction of the two project files listed below. Place them in a new My Documents\ TWRLL64 folder on the hard disk of your computer.
 - TWRLL64_Quick_Start
 - TWRLL64_Accelerometer



Set up the TWR-S08LL64 module

- Remove the TWR-S08LL64 module from anti-static pouch. Make sure the jumpers are in the default positions (see diagram on next page).
- 2. This symbol •• indicates **no** jumper is installed.
- 3. Connect provided USB cable from a free USB port on your computer to the mini-B USB connector on the TWR-S08LL64 module. Allow the PC to automatically configure the USB drivers as needed. USB drivers for your TWR-S08LL64 module were pre-loaded in the CodeWarrior installation.



Start CodeWarrior and debug environment

- 1. Start CodeWarrior by selecting it from the Windows Start menu.
- From the CodeWarrior main menu, choose "File > Open" and choose the PE_LL64_Quick_Start.mcp that is found in the My Documents\ TWRLL64 folder on the hard disk of your computer created in step 1.

This is the on-board example you copied from the Getting Started DVD included with the Tower module tool kit.

Click "Open" to open the project window.



- The main portion of the C code for this example is contained in the "LL64_Demo.c" file. Open this file to review the code.
- From the main menu, choose "Project > Debug." This will compile the source code, generate an executable file and download it to the demo TWR-S08LL64 module.
- If prompted, set the connection to HCSO8 and Freescale open source BDM. If the derivative is not set, select MC9S08LL64 from the list. If any further prompts appear, please select "OK." A new debugger environment will open.



Run and debug example code on TWR-S08LL64 module

- From the main menu, choose "Run
 Start/Continue." The program
 will be executed in real time.
- From the main menu, choose
 "Run > Halt." The program execution will stop. The next instruction to be executed is highlighted in the source window.
- From the main menu, choose
 "Run > Single Step." The instruction highlighted in the source window will be executed and the program execution will be stopped immediately.

- From the main menu, choose
 "Run > Start/Continue."
 The application will restart from where it was previously stopped.
- 5. Now that you have successfully completed the software and hardware setup, test your TWR-S08LL64 module by running the Tower module application pre-loaded in the microcontroller's on-chip flash memory. For more detailed information on how to use the demonstration code, please refer to the TWR-S08LL64 Labs Tutorial.

Learn more about the MC9S08LL64 and software

Additional information can be found in the documentation and training tab of the enclosed DVD.

MC9S08LL64 documents:

- MC9S08LL64 Reference Manual
- MC9S08LL64 Data Sheet

TWR-S08LL64-KIT documents:

- Tower Module Schematics
- Tower Module LCD Glass
 Specifications
- Three Axis Low-g Micromachined Accelerometer Data Sheet

Learn more at www.freescale.com/tower and www.freescale.com/lcd.

Freescale, the Freescale logo and CodeWarrior are trademarks or registered trademarks of Freescale Semiconductor, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners. © Freescale Semiconductor, Inc. 2009.

Doc Number: MC9S08LL6436QSG / REV 1 Agile Number: 926-26220 / REV B





Мы молодая и активно развивающаяся компания в области поставок электронных компонентов. Мы поставляем электронные компоненты отечественного и импортного производства напрямую от производителей и с крупнейших складов мира.

Благодаря сотрудничеству с мировыми поставщиками мы осуществляем комплексные и плановые поставки широчайшего спектра электронных компонентов.

Собственная эффективная логистика и склад в обеспечивает надежную поставку продукции в точно указанные сроки по всей России.

Мы осуществляем техническую поддержку нашим клиентам и предпродажную проверку качества продукции. На все поставляемые продукты мы предоставляем гарантию.

Осуществляем поставки продукции под контролем ВП МО РФ на предприятия военно-промышленного комплекса России, а также работаем в рамках 275 ФЗ с открытием отдельных счетов в уполномоченном банке. Система менеджмента качества компании соответствует требованиям ГОСТ ISO 9001.

Минимальные сроки поставки, гибкие цены, неограниченный ассортимент и индивидуальный подход к клиентам являются основой для выстраивания долгосрочного и эффективного сотрудничества с предприятиями радиоэлектронной промышленности, предприятиями ВПК и научноисследовательскими институтами России.

С нами вы становитесь еще успешнее!

Наши контакты:

Телефон: +7 812 627 14 35

Электронная почта: sales@st-electron.ru

Адрес: 198099, Санкт-Петербург, Промышленная ул, дом № 19, литера Н, помещение 100-Н Офис 331