


Energy
Efficient Solutions[™]
optimized for low power

Quick Start Guide

TWR-K60F120M

High-Performance MCUs with
Connectivity and Security



TOWER SYSTEM

Get to Know the TWR-K60F120M

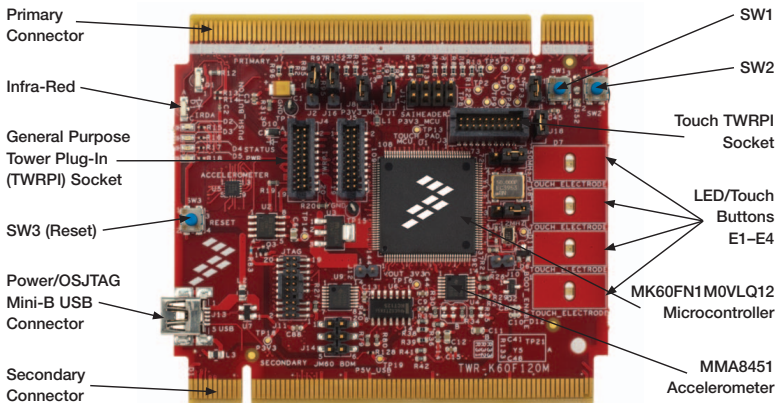


Figure 1: Front side of TWR-K60F120M module (TWRPI devices not shown).


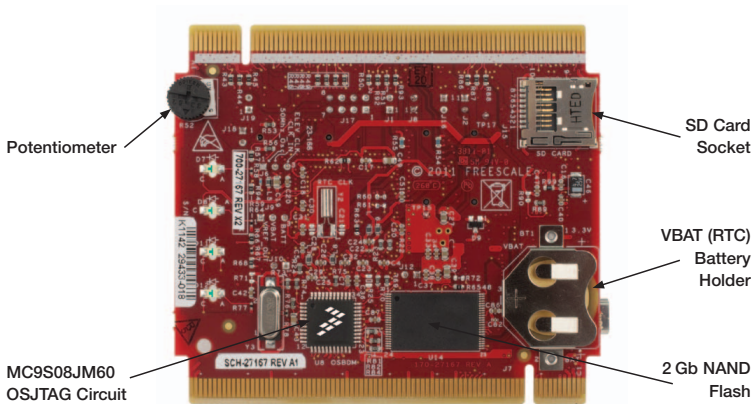


Figure 2: Back side of TWR-K60F120M module.

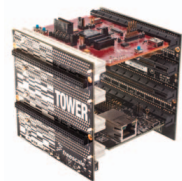

TWR-K60F120M Freescale Tower System

The TWR-K60F120M module is part of the Freescale Tower System, a modular development platform that enables rapid prototyping and tool re-use through reconfigurable hardware. The TWR-K60F120M can be used with a broad selection of Tower System peripheral modules.

TWR-K60F120M Features

- MK60FN1M0VLQ12 MCU (120 MHz ARM® Cortex™-M4 core, floating point unit, 1 MB flash, Ethernet, USB OTG, tamper detection, encryption, NAND flash controller, 144 LQFP)
- MC9S08JM60 open source JTAG (OSJTAG) circuit
- Micron MT29F2G16ABAEAWP 2 Gb NAND flash
- Four user-controlled status LEDs
- Four capacitive touch pads and two mechanical push buttons
- General-purpose TWRPI socket (Tower plug-in module)
- TWRPI-TOUCH-STR socket (touch-sensing Tower plug-in)

Step-by-Step Installation Instructions

1 Install the Software and Tools

Install the P&E Micro Kinetis Tower Toolkit. The Toolkit includes the OSJTAG and USB-to-serial drivers. These can be found on the DVD under Software.

2 Configure the Hardware

Install the included battery into the VBAT (RTC) battery holder. Then, connect one end of the USB cable to the PC and the other end to the power/OSJTAG mini-B connector on the TWR-K60F120M module. Allow the PC to automatically configure the USB drivers if needed.

3 Tilt the Board

Tilt the board side to side to see the LEDs on E1–E4 light up as it is tilted. While the board is held flat, touch the pads on E1–E4 to toggle the LEDs.

4 Play the Memory Game

Press SW2 to play a memory recall game using the touch pads E1–E4. A sequence will light up, then press the touch pads in the order flashed. If an incorrect sequence is touched or too much time has elapsed, the LEDs will blink rapidly and the game will reset.

Press SW1 to return to the accelerometer demo.

5 Download the TWR-K60F120M User Manual and Demonstration Labs

Go to freescale.com/TWR-K60F120M and download the TWR-K60F120M user manual and demonstration labs.

6 Download the Freescale CodeWarrior IDE and MQX™ RTOS

Download the Freescale CodeWarrior IDE and MQX RTOS by clicking on the relevant links on the Software tab of the Tower Kit DVD.

TWR-K60F120M Jumper Options

The following is a list of all jumper options. The default installed jumper settings are shown in white text within the red boxes.

Jumper	Option	Setting	Description
J8	MCU Power Connection	ON	Connect on-board 3.3V supply to MCU
		OFF	Isolate MCU from power (connect an ammeter to measure current)
J9	VBAT Power Selection	1-2	Connect VBAT to on-board 3.3V supply
		2-3	Connect VBAT to the higher voltage between on-board 3.3V supply or coin-cell supply

TWR-K60F120M Jumper Options (continued)

Jumper	Option	Setting	Description
J10	OSJTAG Bootloader Selection	ON	OSJTAG bootloader mode (OSJTAG firmware reprogramming)
		OFF	Debugger mode
J18	50 MHz clock disable	ON	ON = on-board 50 MHz oscillator is powered and sources an input clock to the processor
		OFF	OFF = on-board 50 MHz oscillator is not powered*
J12	JTAG Board Power Connection	ON	Connect on-board 5V supply to JTAG port (supports powering board from JTAG pod supporting 5V supply output)
		OFF	Disconnect on-board 5V supply to JTAG port
J2	IR Transmitter Connection	ON	Connect PTD7/CMT_IRO to IR transmitter (D507)
		OFF	Disconnect PTD7/CMT_IRO from IR transmitter (D507)
J16	IR Receiver Connection	ON	Connect PTC6/CMP0_IN0 to IR receiver
		OFF	Disconnect DAC1_OUT/CMP2_IN3 from IR receiver
J1	VREGIN Power Connection	ON	Connect USB0_VBUS from elevator to VREGIN
		OFF	Disconnect USB0_VBUS from elevator to VREGIN
J19	Potentiometer connection	ON	Connect ADC_DM1 to potentiometer
		OFF	Disconnect ADC_DM1 from potentiometer

*NOTE: This option must be selected whenever a Tower module card that provides a clock on primary elevator pin B24 is connected to the CPU module.

Visit freescale.com/TWR-K60F120M, freescale.com/K60 or freescale.com/Kinetis for information on the TWR-K60F120M module, including:

- TWR-K60F120M user guide
- TWR-K60F120M schematics
- Tower System fact sheet

Support

Visit freescale.com/support for a list of phone numbers within your region.

Warranty

Visit freescale.com/warranty for complete warranty information.

For more information, visit freescale.com/Tower
Join the online Tower community at towergeeks.org

Freescale, the Freescale logo and the Energy Efficient Solutions logo are trademarks of Freescale semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. Kinetis is a trademark of Freescale Semiconductor, Inc. ARM is a registered trademark of ARM Limited. Cortex-M4 is a trademark of ARM Limited. All other product or service names are the property of their respective owners. © 2011 Freescale Semiconductor, Inc.

Doc Number: TWRK60F120MQSG REV 0
Agile Number: 926-78653 REV A





Стандарт Электрон Связь

Мы молодая и активно развивающаяся компания в области поставок электронных компонентов. Мы поставляем электронные компоненты отечественного и импортного производства напрямую от производителей и с крупнейших складов мира.

Благодаря сотрудничеству с мировыми поставщиками мы осуществляем комплексные и плановые поставки широчайшего спектра электронных компонентов.

Собственная эффективная логистика и склад в обеспечивает надежную поставку продукции в точно указанные сроки по всей России.

Мы осуществляем техническую поддержку нашим клиентам и предпродажную проверку качества продукции. На все поставляемые продукты мы предоставляем гарантию .

Осуществляем поставки продукции под контролем ВП МО РФ на предприятия военно-промышленного комплекса России , а также работаем в рамках 275 ФЗ с открытием отдельных счетов в уполномоченном банке. Система менеджмента качества компании соответствует требованиям ГОСТ ISO 9001.

Минимальные сроки поставки, гибкие цены, неограниченный ассортимент и индивидуальный подход к клиентам являются основой для выстраивания долгосрочного и эффективного сотрудничества с предприятиями радиоэлектронной промышленности, предприятиями ВПК и научно-исследовательскими институтами России.

С нами вы становитесь еще успешнее!

Наши контакты:

Телефон: +7 812 627 14 35

Электронная почта: sales@st-electron.ru

Адрес: 198099, Санкт-Петербург,
Промышленная ул, дом № 19, литера Н,
помещение 100-Н Офис 331