

MCP1603 Buck Converter Evaluation Board User's Guide

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the
 intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not
 mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION. QUALITY, PERFORMANCE, MERCHANTABILITY FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

Trademarks

The Microchip name and logo, the Microchip logo, Accuron, dsPIC, KEELOQ, KEELOQ logo, microID, MPLAB, PIC, PICmicro, PICSTART, PRO MATE, rfPIC and SmartShunt are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

AmpLab, FilterLab, Linear Active Thermistor, Migratable Memory, MXDEV, MXLAB, SEEVAL, SmartSensor and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, Application Maestro, CodeGuard, dsPICDEM, dsPICDEM.net, dsPICworks, ECAN, ECONOMONITOR, FanSense, FlexROM, fuzzyLAB, In-Circuit Serial Programming, ICSP, ICEPIC, Mindi, MiWi, MPASM, MPLAB Certified logo, MPLIB, MPLINK, PICkit, PICDEM, PICDEM.net, PICLAB, PICtail, PowerCal, PowerInfo, PowerMate, PowerTool, REAL ICE, rfLAB, Select Mode, Smart Serial, SmartTel, Total Endurance, UNI/O, WiperLock and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

All other trademarks mentioned herein are property of their respective companies.

© 2007, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

Printed on recycled paper.

QUALITY MANAGEMENT SYSTEM
CERTIFIED BY DNV

ISO/TS 16949:2002

Microchip received ISO/TS-16949:2002 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.



Table of Contents

Preface .		1
	Introduction	
	Document Layout	1
	Conventions Used in this Guide	2
	Recommended Reading	2
	The Microchip Web Site	3
	Customer Support	
	Document Revision History	
Chapter 1	l. Product Overview	5
	1.1 Introduction	
	1.2 What is the MCP1603 Buck Converter Evaluation Board?	6
	1.3 What the MCP1603 Buck Converter Evaluation Board Kit includes	6
Chapter 2	2. Installation and Operation	7
•	2.1 Introduction	
	2.2 Features	7
	2.3 Getting Started	7
Appendix	A. Schematic and Layouts	9
	A.1 Introduction	
	A.2 Board - Schematic	10
	A.3 Board - Top Silk Layer	11
	A.4 Board - Top Metal Layer	12
	A.5 Board - Bottom Metal Layer	13
Appendix	B. Bill Of Materials (BOM)	15
Worldwid	e Sales and Service	16

MCP1603 Buck Converter Evaluation Board User's Guide						
NOTES:						



Preface

NOTICE TO CUSTOMERS

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site (www.microchip.com) to obtain the latest documentation available.

Documents are identified with a "DS" number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is "DSXXXXXA", where "XXXXXX" is the document number and "A" is the revision level of the document.

For the most up-to-date information on development tools, see the MPLAB[®] IDE on-line help. Select the Help menu, and then Topics to open a list of available on-line help files.

INTRODUCTION

This chapter contains general information that will be useful to know before using the MCP1603 Buck Converter Evaluation Board. Items discussed in this chapter include:

- Document Layout
- · Conventions Used in this Guide
- Recommended Reading
- The Microchip Web Site
- Customer Support
- · Document Revision History

DOCUMENT LAYOUT

This document describes how to use the MCP1603 Buck Converter Evaluation Board as a development tool to evaluate the MCP1603. The manual layout is as follows:

- Chapter 1. "Product Overview" Important information about the MCP1603
 Buck Converter Evaluation Board.
- Chapter 2. "Installation and Operation" Includes instructions on how to get started with this user's guide and a description of the user's guide.
- Appendix A. "Schematic and Layouts" Shows the schematic and layout diagrams for the MCP1603 Buck Converter Evaluation Board.
- Appendix B. "Bill Of Materials (BOM)" Lists the parts used to build the MCP1603 Buck Converter Evaluation Board.

MCP1603 Buck Converter Evaluation Board User's Guide

CONVENTIONS USED IN THIS GUIDE

This manual uses the following documentation conventions:

DOCUMENTATION CONVENTIONS

Description Represents		Examples		
Arial font:				
Italic characters	Referenced books	MPLAB [®] IDE User's Guide		
	Emphasized text	is the only compiler		
Initial caps	A window	the Output window		
	A dialog	the Settings dialog		
	A menu selection	select Enable Programmer		
Quotes	A field name in a window or dialog	"Save project before build"		
Underlined, italic text with right angle bracket	A menu path	<u>File>Save</u>		
Bold characters	A dialog button	Click OK		
	A tab	Click the Power tab		
N'Rnnnn	A number in verilog format, where N is the total number of digits, R is the radix and n is a digit.	4'b0010, 2'hF1		
Text in angle brackets < >	A key on the keyboard	Press <enter>, <f1></f1></enter>		
Courier New font:				
Plain Courier New	Sample source code	#define START		
	Filenames	autoexec.bat		
	File paths	c:\mcc18\h		
	Keywords	_asm, _endasm, static		
	Command-line options	-Opa+, -Opa-		
	Bit values	0, 1		
	Constants	0xff, 'A'		
Italic Courier New	A variable argument	file.o, where file can be any valid filename		
Square brackets []	Optional arguments	<pre>mcc18 [options] file [options]</pre>		
Curly brackets and pipe character: { }	Choice of mutually exclusive arguments; an OR selection	errorlevel {0 1}		
Ellipses	Replaces repeated text	<pre>var_name [, var_name]</pre>		
	Represents code supplied by user	<pre>void main (void) { }</pre>		

RECOMMENDED READING

This user's guide describes how to use MCP1603 Buck Converter Evaluation Board. Other useful documents are listed below. The following Microchip documents are available and recommended as supplemental reference resources.

MCP1603 Data Sheet, "2.0 MHz, 500 mA Synchronous Buck Regulator" (DS22042)

This data sheet provides detailed information regarding the MCP1603 Buck Regulator product.

THE MICROCHIP WEB SITE

Microchip provides online support via our web site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- Product Support Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- General Technical Support Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip consultant program member listing
- Business of Microchip Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- · Distributor or Representative
- · Local Sales Office
- Field Application Engineer (FAE)
- · Technical Support

Customers should contact their distributor, representative or field application engineer for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at: http://support.microchip.com

DOCUMENT REVISION HISTORY

Revision A (May 2007)

· Initial Release of this Document.

MCP1603 Buck Converter Evaluation Board User's Guide					
NOTES:					



Chapter 1. Product Overview

1.1 INTRODUCTION

Step-down converter choices include a variety of linear and switching regulators. The MCP1603 500 mA synchronous buck regulator provides a low profile, cost effective, and efficient solution for devices like cellular telephones, USB-powered devices and hand held instruments. The device provides a solution with minimal board space because of the high-frequency operation, which reduces the size requirements of the external inductor and capacitor and the 1 mm maximum height TSOT package.

The MCP1603 switches at a fixed frequency of 2.0 MHz when operating at a heavy load. This provides a low-noise, small size solution. When operating at light loads, the MCP1603 changes operation to a pulse frequency modulation (PFM) mode to minimize quiescent current drawn from the input source. No intervention is necessary for smooth transition from one mode to another.

This chapter covers the following topics.

- "What is the MCP1603 Buck Converter Evaluation Board?"
- "What the MCP1603 Buck Converter Evaluation Board Kit includes."

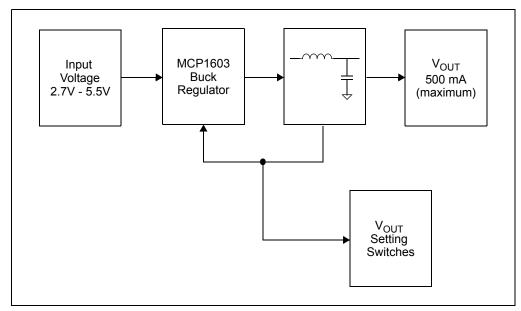


FIGURE 1-1: MCP1603 Buck Converter Evaluation Board Block Diagram.

MCP1603 Buck Converter Evaluation Board User's Guide

1.2 WHAT IS THE MCP1603 BUCK CONVERTER EVALUATION BOARD?

The MCP1603 Buck Converter Evaluation Board demonstrates the use of Microchip's MCP1603 device in a step-down application. The evaluation board is a fully functional platform to evaluate the MCP1603 buck regulator over the input voltage, output voltage and current range of the device.

Test points are provided to allow easy connection of the input voltage source and the output load.

1.3 WHAT THE MCP1603 BUCK CONVERTER EVALUATION BOARD KIT INCLUDES

This MCP1603 Buck Converter Evaluation Board kit includes:

- MCP1603 Buck Converter Evaluation Board (102-00133)
- Analog and Interface Products Demonstration Boards CD-ROM (DS21912)
 - MCP1603 Buck Converter Evaluation Board User's Guide (DS51652)



Chapter 2. Installation and Operation

2.1 INTRODUCTION

The MCP1603 Buck Converter Evaluation Board is designed to demonstrate Microchip's MCP1603 in an adjustable output voltage configuration. The MCP1603 is a 500 mA synchronous buck regulator that features both Pulse Frequency Modulation (PFM) and Pulse Width Modulation (PWM). The PFM mode is used at light loads to improve system efficiency while the 2.0 MHz PWM mode is entered at heavy loads. The transition between PFM and PWM modes automatically occurs without any external intervention. The MCP1603 is available in both adjustable parts that require an external divider to set the output voltage and fixed output voltage parts.

The high switching speed and TSOT package (1 mm maximum height) make the MCP1603 ideal for space constrained applications that require an efficient stepped down voltage.

2.2 FEATURES

The MCP1603 Buck Converter Evaluation Board has the following features:

- · Compact size and low profile 500 mA converter design.
- · Wide Input voltage range from 2.7V to 5.5V.
- Five different output voltage settings: 0.8V, 1.2V, 1.8V, 2.5V, and 3.3V.
- Test points for connecting input voltage source and external load.

2.3 GETTING STARTED

The MCP1603 Buck Converter Evaluation Board is fully assembled and tested for evaluating the MCP1603 device. The board requires the use of an external input voltage source of 2.7V to 5.5V and an external load capable of 500 mA.

2.3.1 Power Input and Output Connection

2.3.1.1 POWERING THE MCP1603 BUCK CONVERTER EVALUATION BOARD

- 1. Connect the positive side of the input source (+) to TP1 (VIN).
- 2. Connect the negative or return side (-) of input source to TP2 (GND). Refer to Figure 2-1. The input voltage should be limited from 2.7V to 5.5V range.

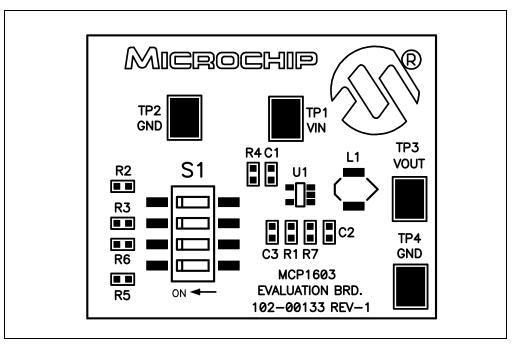


FIGURE 2-1: Setup Configuration Diagram.

2.3.1.2 APPLYING LOAD TO MCP1603 BUCK CONVERTER EVALUATION BOARD

- 1. Connect the positive side of the load (+) to TP3 (VOUT).
- 2. Connect the negative side of the load (-) to TP4 (GND). Refer to Figure 2-1. The maximum load current should not exceed 500 mA.

As an alternative, a resistor can be connected between TP3 and TP4. The value of this resistor must be sized such that the maximum load current does not exceed 500 mA for the selected output voltage.

2.3.1.3 SETTING THE OUTPUT VOLTAGE ON THE MCP1603 BUCK CONVERTER EVALUATION BOARD

The output voltage of the MCP1603 Buck Converter Evaluation Board is set by the position of switch S1 locations. Table 2-1 shows the position of the four S1 switch locations to achieve the five different standard output voltages.

TABLE 2-1: SETTING THE OUTPUT VOLTAGE

Output Voltage	S1 - POS1	S1 - POS2	S1 - POS3	S1 - POS4
0.8V	Off	Off	Off	Off
1.2V	Off	Off	Off	On
1.8V	Off	Off	On	Off
2.5V	Off	On	Off	Off
3.3V	On	Off	Off	Off

Evaluating the Application

The best way to evaluate the MCP1603 Buck Converter Evaluation Board is to dig into the circuit. Measure voltages and currents with a DVM and probe the board with an oscilloscope.




Appendix A. Schematic and Layouts

A.1 INTRODUCTION


This appendix contains the following schematics and layouts for the MCP1603 Buck Converter Evaluation Board:

- Board Schematic
- Board Top Silk Layer
- Board Top Metal Layer
- Board Bottom Metal Layer


A.2 BOARD - SCHEMATIC

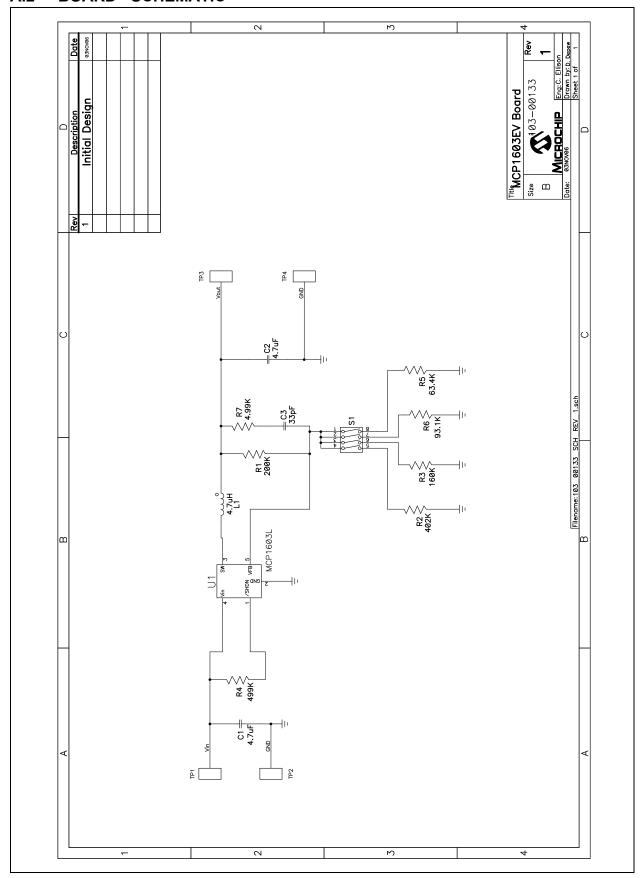


A.3 BOARD - TOP SILK LAYER

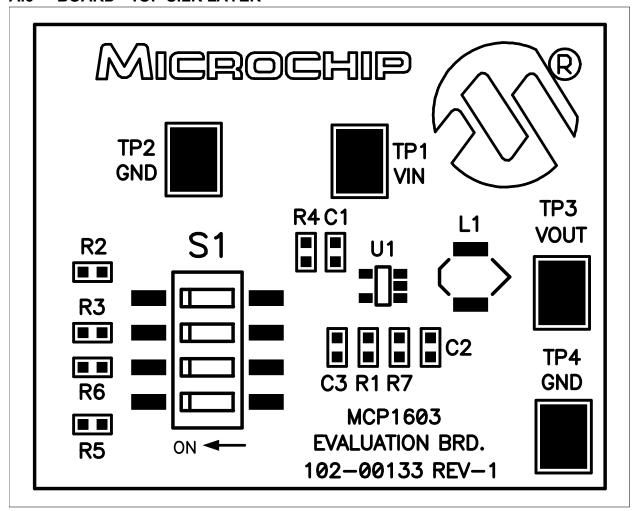

A.4 BOARD - TOP METAL LAYER

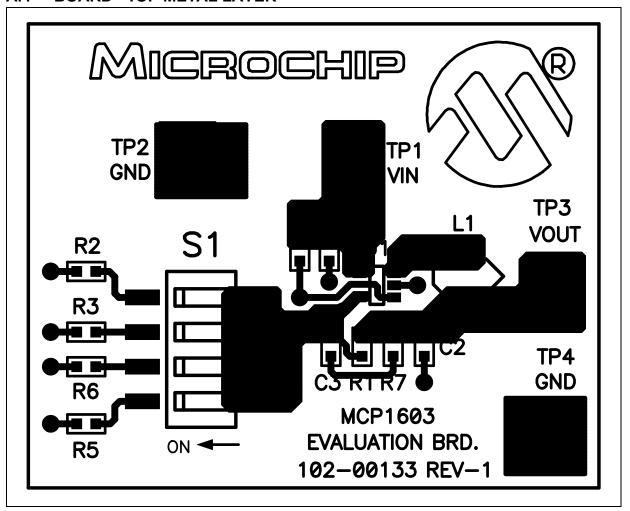

A.5 BOARD - BOTTOM METAL LAYER

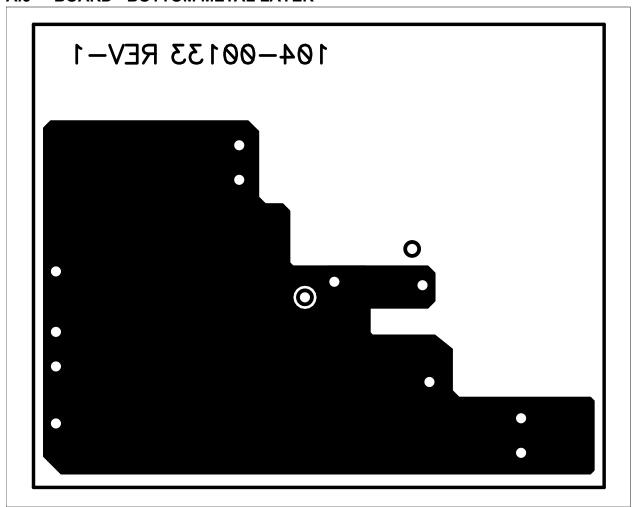

MCP1603 Buck Converter Evaluation Board User's Guide					
NOTES:					



Appendix B. Bill Of Materials (BOM)

TABLE B-1: BILL OF MATERIALS (BOM)

Qty	Reference	Description	Manufacturer	Part Number
2	C1, C2	Cap Ceramic 4.7µF 6.3V X5R 0603	Panasonic® - ECG	ECJ-1VB0J475K
1	C3	Cap Ceramic 33 pF 50V 0603	Panasonic - ECG	ECJ-1VC1H330J
1	L1	4.7 μH Inductor	Coiltronics	SD3812-4R7-R
1	R1	Res 200 kΩ 1/10W 1% 0603	Panasonic - ECG	ERJ-3EKF2003V
1	R2	Res 402 kΩ 1/10W 1% 0603	Panasonic - ECG	ERJ-3EKF4023V
1	R3	Res 160 kΩ 1/10W 5% 0603	Panasonic - ECG	ERJ-3GEYJ164V
1	R4	Res 499 kΩ 1/10W 1% 0603	Panasonic - ECG	ERJ-3EKF4993V
1	R5	Res 63.4 kΩ 1/10W 1% 0603	Panasonic - ECG	ERJ-3EKF6342V
1	R6	Res 93.1 kΩ 1/10W 1% 0603	Panasonic - ECG	ERJ-3EKF9312V
1	R7	Res 4.99 kΩ 1/10W 1% 0603	Panasonic - ECG	ERJ-3EKF4991V
1	S1	Switch DIP SPST Sealed 4POS SMD	ITT Industries / C&K Div	SD04H1SK
4	TP1, TP2, TP3, TP4	PC Test Point Compact SMD	Keystone Electronics®	5016
1	U1	500 mA Synchronous Buck Regulator	Microchip Technology Inc.	MCP1603L-ADJI/OS

Note 1: The components listed in this Bill of Materials are representative of the PCB assembly. The released BOM used in manufacturing uses all RoHS-compliant components.



WORLDWIDE SALES AND SERVICE

AMERICAS

Corporate Office

2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7200 Fax: 480-792-7277 Technical Support:

http://support.microchip.com

Web Address: www.microchip.com

Atlanta

Duluth, GA Tel: 678-957-9614 Fax: 678-957-1455

Roston

Westborough, MA Tel: 774-760-0087 Fax: 774-760-0088

Chicago Itasca, IL

Tel: 630-285-0071 Fax: 630-285-0075

Dallas

Addison, TX Tel: 972-818-7423 Fax: 972-818-2924

Detroit

Farmington Hills, MI Tel: 248-538-2250 Fax: 248-538-2260

Kokomo

Kokomo, IN Tel: 765-864-8360 Fax: 765-864-8387

Los Angeles

Mission Viejo, CA Tel: 949-462-9523 Fax: 949-462-9608

Santa Clara

Santa Clara, CA Tel: 408-961-6444 Fax: 408-961-6445

Toronto

Mississauga, Ontario, Canada

Tel: 905-673-0699 Fax: 905-673-6509

ASIA/PACIFIC

Asia Pacific Office

Suites 3707-14, 37th Floor Tower 6, The Gateway Habour City, Kowloon Hong Kong

Tel: 852-2401-1200 Fax: 852-2401-3431

Australia - Sydney Tel: 61-2-9868-6733 Fax: 61-2-9868-6755

China - Beijing

Tel: 86-10-8528-2100 Fax: 86-10-8528-2104

China - Chengdu Tel: 86-28-8665-5511 Fax: 86-28-8665-7889

China - Fuzhou

Tel: 86-591-8750-3506 Fax: 86-591-8750-3521

China - Hong Kong SAR Tel: 852-2401-1200

Fax: 852-2401-3431

China - Qingdao Tel: 86-532-8502-7355

Fax: 86-532-8502-7205

China - Shanghai

Tel: 86-21-5407-5533 Fax: 86-21-5407-5066

China - Shenyang

Tel: 86-24-2334-2829 Fax: 86-24-2334-2393

China - Shenzhen

Tel: 86-755-8203-2660 Fax: 86-755-8203-1760

China - Shunde

Tel: 86-757-2839-5507 Fax: 86-757-2839-5571

China - Wuhan

Tel: 86-27-5980-5300 Fax: 86-27-5980-5118

China - Xian

Tel: 86-29-8833-7250 Fax: 86-29-8833-7256

ASIA/PACIFIC

India - Bangalore

Tel: 91-80-4182-8400 Fax: 91-80-4182-8422

India - New Delhi

Tel: 91-11-4160-8631 Fax: 91-11-4160-8632

India - Pune

Tel: 91-20-2566-1512 Fax: 91-20-2566-1513

Japan - Yokohama

Tel: 81-45-471- 6166 Fax: 81-45-471-6122

Korea - Gumi

Tel: 82-54-473-4301 Fax: 82-54-473-4302

Korea - Seoul

Tel: 82-2-554-7200 Fax: 82-2-558-5932 or 82-2-558-5934

Malaysia - Penang Tel: 60-4-646-8870

Fax: 60-4-646-5086

Philippines - Manila

Tel: 63-2-634-9065 Fax: 63-2-634-9069

Singapore Tel: 65-6334-8870

Fax: 65-6334-8850 Taiwan - Hsin Chu Tel: 886-3-572-9526

Fax: 886-3-572-6459

Taiwan - Kaohsiung Tel: 886-7-536-4818

Fax: 886-7-536-4803

Taiwan - Taipei

Tel: 886-2-2500-6610 Fax: 886-2-2508-0102

Thailand - Bangkok Tel: 66-2-694-1351

Fax: 66-2-694-1350

EUROPE

Austria - Wels

Tel: 43-7242-2244-39 Fax: 43-7242-2244-393 Denmark - Copenhagen

Tel: 45-4450-2828

Fax: 45-4485-2829

France - Paris

Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79

Germany - Munich

Tel: 49-89-627-144-0 Fax: 49-89-627-144-44

Italy - Milan

Tel: 39-0331-742611 Fax: 39-0331-466781

Netherlands - Drunen Tel: 31-416-690399

Fax: 31-416-690340 Spain - Madrid

Tel: 34-91-708-08-90

Fax: 34-91-708-08-91 UK - Wokingham

Tel: 44-118-921-5869 Fax: 44-118-921-5820

12/08/06



Мы молодая и активно развивающаяся компания в области поставок электронных компонентов. Мы поставляем электронные компоненты отечественного и импортного производства напрямую от производителей и с крупнейших складов мира.

Благодаря сотрудничеству с мировыми поставщиками мы осуществляем комплексные и плановые поставки широчайшего спектра электронных компонентов.

Собственная эффективная логистика и склад в обеспечивает надежную поставку продукции в точно указанные сроки по всей России.

Мы осуществляем техническую поддержку нашим клиентам и предпродажную проверку качества продукции. На все поставляемые продукты мы предоставляем гарантию.

Осуществляем поставки продукции под контролем ВП МО РФ на предприятия военно-промышленного комплекса России, а также работаем в рамках 275 ФЗ с открытием отдельных счетов в уполномоченном банке. Система менеджмента качества компании соответствует требованиям ГОСТ ISO 9001.

Минимальные сроки поставки, гибкие цены, неограниченный ассортимент и индивидуальный подход к клиентам являются основой для выстраивания долгосрочного и эффективного сотрудничества с предприятиями радиоэлектронной промышленности, предприятиями ВПК и научноисследовательскими институтами России.

С нами вы становитесь еще успешнее!

Наши контакты:

Телефон: +7 812 627 14 35

Электронная почта: sales@st-electron.ru

Адрес: 198099, Санкт-Петербург,

Промышленная ул, дом № 19, литера Н,

помещение 100-Н Офис 331