


EasyPIC™ v7

for dsPIC30®

USER'S GUIDE

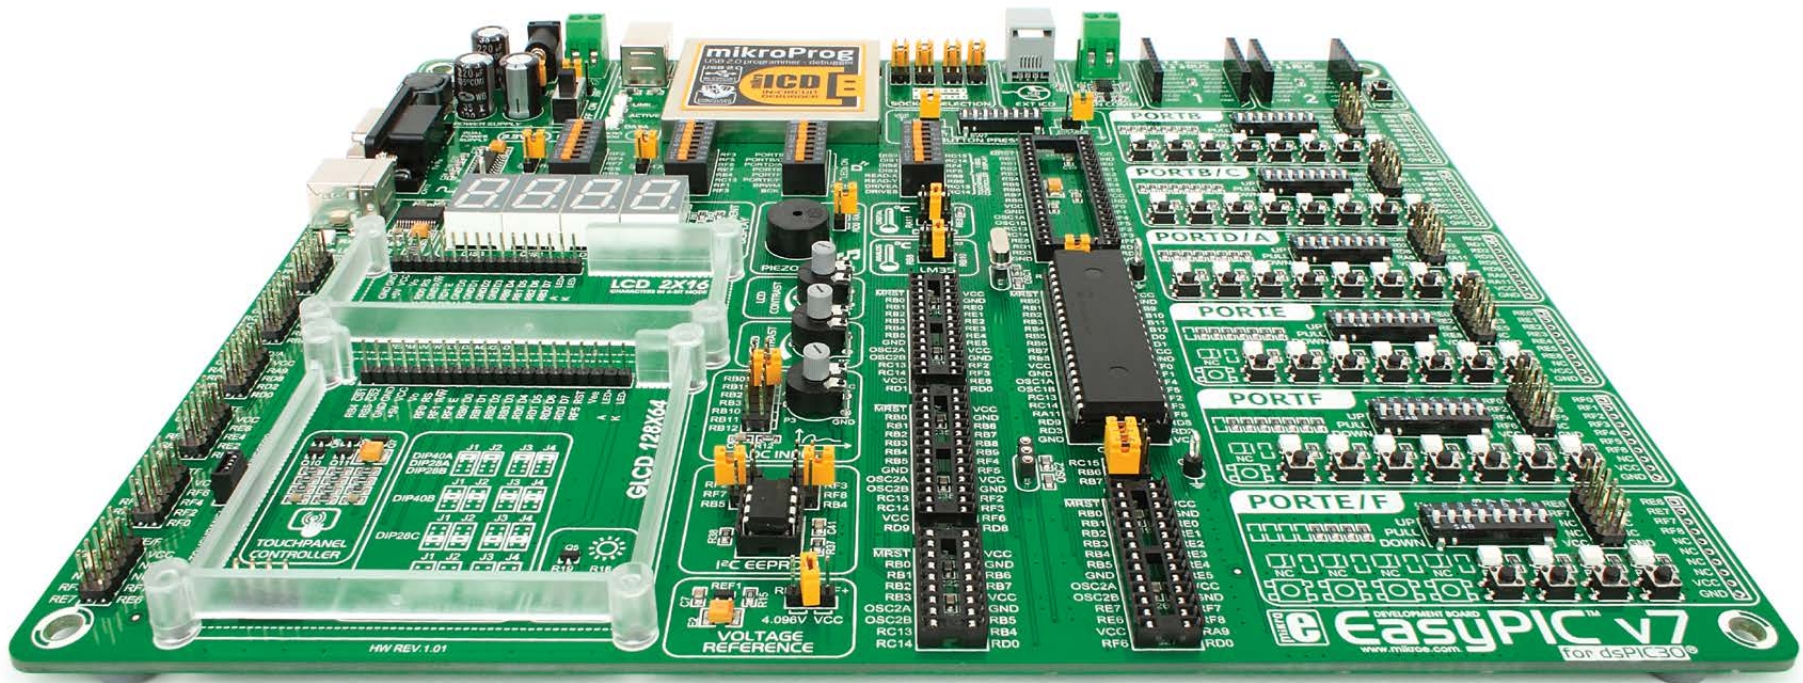

dsPIC30®

14 microcontrollers supported
dsPIC30® in DIP package

DUAL POWER SUPPLY



Supports 3.3V and 5V devices
Dual Power Supply



Easily add extra boards
mikroBUS™ sockets

connectivity



Four connectors for each port
Amazing Connectivity



Fast USB 2.0 programmer and
In-Circuit Debugger

To our valued customers

From the day one, we in MikroElektronika gave ourselves the highest possible goals in pursuit of excellence. That same day, the idea of EasyPIC™ development board was born. In its each and tiniest piece we had put all of our energy, creativity and sense of what's best for an engineer.

Today, we present you the 7th generation of our boards, which brings us some exciting new features. We hope that you will like it as much as we do.

Use it wisely and have fun!

A handwritten signature in blue ink, appearing to read 'Nebojsa Matic', with a stylized, cursive script.

Nebojsa Matic,
Owner and General Manager
of MikroElektronika

Introduction

Introduction	04
It's good to know	05

Power Supply

Dual power supply	06
-------------------------	----

Supported MCUs

Supported microcontrollers	08
----------------------------------	----

Programming

On-board programmer	10
Installing programmer drivers	12
Programming software	13
mikroLCD™ - In Circuit Debugger	14

Communication

UART via RS-232	16
UART via USB	17
CAN communication	18

Connectivity

mikroBUS™ sockets	19
Input/Output Group	22

Displays

LCD 2x16 characters	24
GLCD 128x64px	25
Touch panel controller	26
4 digit 7-seg display	27

Other Modules

DS1820 - Digital Temperature Sensor	28
LM35 - Analog Temperature Sensor	29
ADC inputs	30
I²C EEPROM	31
Piezo Buzzer	32
Additional GNDs	33

What's Next


What's Next?	34
--------------------	----

Introduction

dsPIC30F® microcontrollers are 16-bit high-performance digital signal controllers suitable for advanced motor control algorithms, digital power converters, speech and audio applications. We realized that benefit and start to develop a new system which is convenient for wide range of dsPIC30F® microcontroller family produced in DIP packages. We focused all of our creativity and knowledge into making a revolutionary new design which covers many internal modules. Finally, we present you the EasyPIC™ v7 for dsPIC30® board which is powerful, well organized, with on-board programmer and debugger. Board is suitable for students, hobbyists, enthusiasts and professionals.

We hope you will enjoy it as much as we do.

EasyPIC™ v7 for dsPIC30® development Team

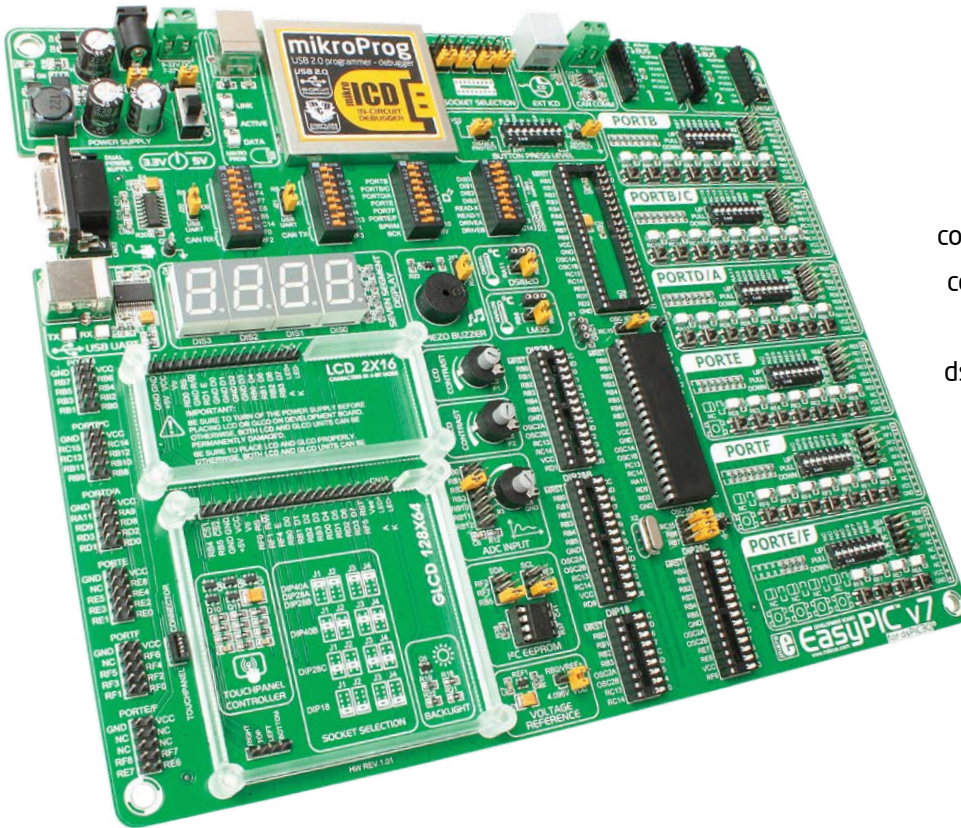

Four Connectors for each port
Amazing connectivity

EasyPIC™ v7 for dsPIC30® is all about connectivity. Having three different connectors for each port, you can connect accessory boards, sensors and your custom electronics easier then ever before.



Everything is already here
mikroProg™ on board

Powerful on-board mikroProg™ programmer and In-Circuit debugger can program and debug 14 dsPIC30® microcontrollers. You will need it, whether you are a professional or a beginner.



3.3V and 5V power supply
Dual Power Supply

EasyPIC™ v7 for dsPIC30® is among few development boards which support both 3.3V and 5V power supply. This feature allows you to use the microcontrollers with both power supply. It's like having two boards instead of one!



For easier connections
mikroBUS™ support

Just plug in your Click™ board, and it's ready to work. We picked up a set of the most useful pins you need for development and made a pinout standard you will enjoy using.




It's good to know

dsPIC30F4013 is the default microcontroller!

dsPIC30F4013 is the default chip of EasyPIC™ v7 for dsPIC30®. It has **30 MIPS** operation, **48K bytes** of program memory, **2048 bytes** of SRAM memory, **1024 bytes** of EEPROM memory. It has 24-bit wide instructions and 16-bit wide data path. It's loaded with great modules: 30 General purpose **I/O pins**, 12-bit Analog-to-Digital with up to 13 channels (**ADC**), 5x16-bit and 2x32-bit timers, 2x**UART**, 1x**SPI**, 1x**I²C**, 1x**CAN**, 16-bit compare/PWM output functions. It has two 40-bit wide accumulators with optional saturation logic, 17-bit x 17-bit single hardware fractional/integer cycle multiplier and all DSP instructions are single cycle.

- Great choice for both beginners and professionals
- Rich with modules
- Enough RAM and Flash
- Comes with examples for *mikroC*, *mikroBasic* and *mikroPascal* compilers

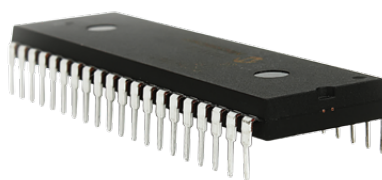

System Specification



power supply
7-23V AC or 9-32V DC
or via USB cable (5V DC)



power consumption
~99mA when all peripheral
modules are disconnected



board dimensions
266 x 220mm (10.47 x 8.66 inch)




weight
~445g (0.981 lbs)

Package contains



- 1** Damage resistant protective box

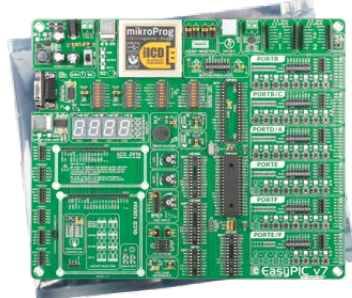

- 2** EasyPIC™ v7 for dsPIC30® board in antistatic bag



- 3** USB cable



- 4** User Manuals and Board schematics

Dual power supply

Board contains switching power supply that creates stable voltage and current levels necessary for powering each part of the board.

Power supply section contains two power regulators: **MC34063A**, which generates VCC-5V, and **MC33269DT3.3** which creates VCC-3.3V power supply. Board can be powered in three different ways: with **USB power supply (CN1)**, using external adapters via adapter connector (**CN25**) or additional screw terminals (**CN24**). External adapter voltage levels must be in range of **9-32V DC** and **7-23V AC**. Use jumper **J8** to specify which power source you are using, and jumper **J16** to specify whether you are using 5V or 3.3V power supply. Upon providing the power using either external adapter, or USB power source, you can turn on power supply by using **SWITCH 1 (Figure 3-1)**. Power **LED (Green ON)** will indicate the presence of power supply.

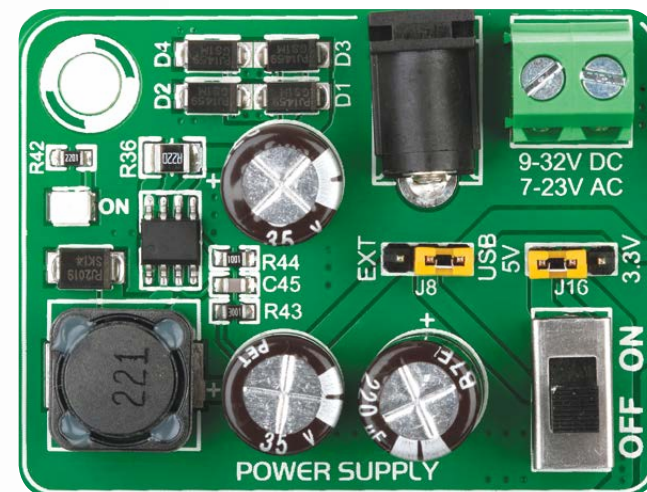


Figure 3-1: Power supply unit of EasyPIC™ v7 for dsPIC30®

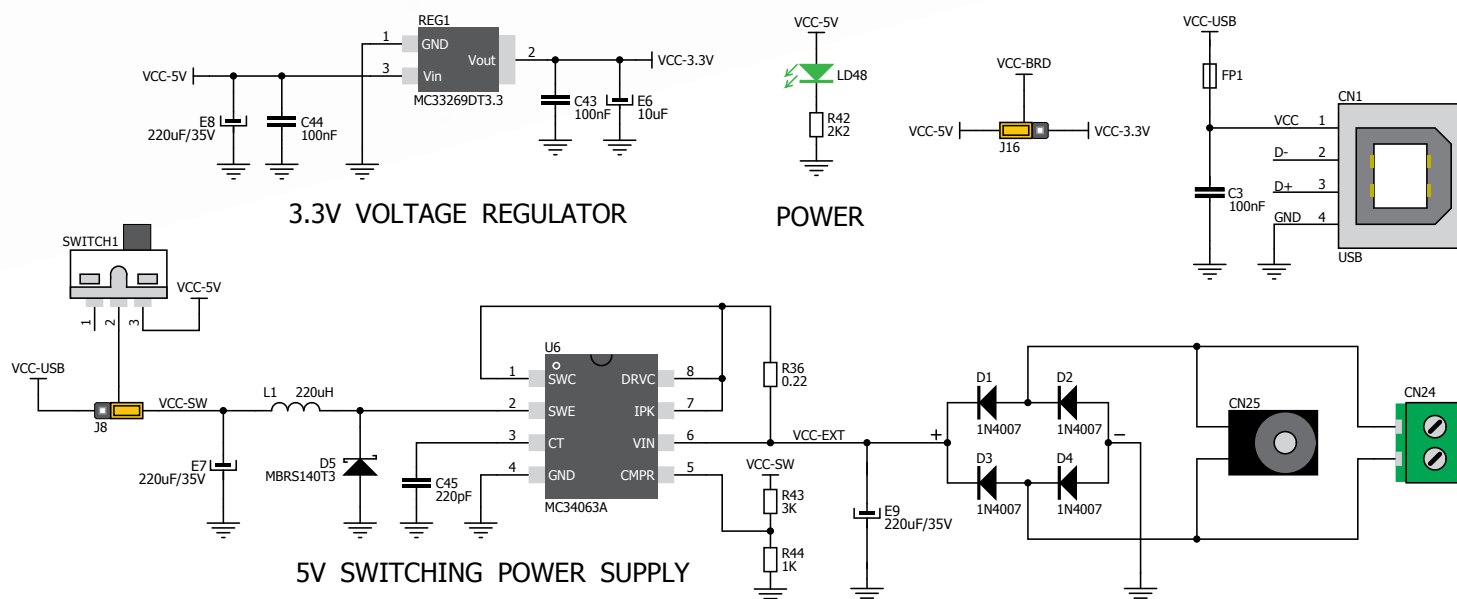


Figure 3-2: Dual power supply unit schematics

DUAL POWER SUPPLY



EasyPIC™ v7 for dsPIC30® development board supports both 3.3V and 5V power supply on a single board. This feature enables you to use wide range of peripheral boards.

Power supply:

via DC connector or screw terminals (7V to 23V AC or 9V to 32V DC), or via USB cable (5V DC)

Power capacity:

up to 500mA with USB, and up to 600mA with external power supply


How to power the board?

1. With USB cable



Set J8 jumper to USB position

To power the board with USB cable, place jumper **J8** in USB position, and place jumper **J16** in 5V or 3.3V position. You can then plug in the USB cable as shown on images **1** and **2**, and turn the power switch ON.

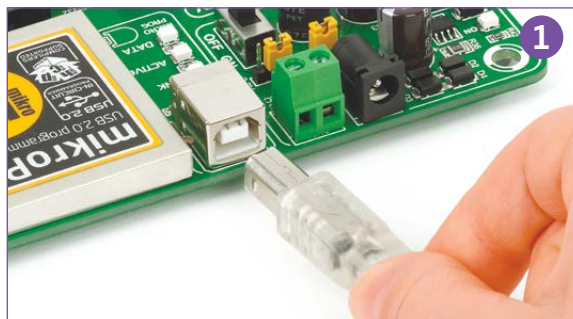


2. Using adapter



Set J8 jumper to EXT position

To power the board via adapter connector, place jumper **J8** in EXT position, and place jumper **J16** in 5V or 3.3V position. You can then plug in the adapter cable as shown on images **3** and **4**, and turn the power switch ON.


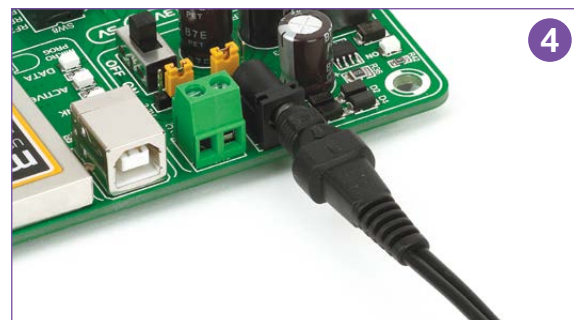


3. With laboratory power supply



Set J8 jumper to EXT position

To power the board using screw terminals, place jumper **J8** in EXT position, and place jumper **J16** in 5V or 3.3V position. You can then screw-on the cables in the screw terminals as shown on images **5** and **6**, and turn the power switch ON.

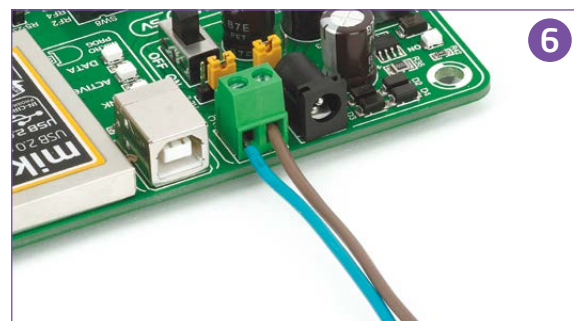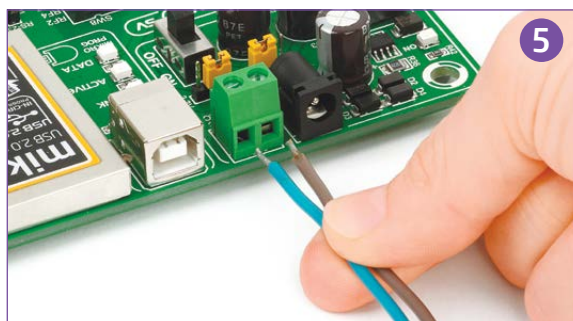

Supported microcontrollers

Board contains six DIP sockets: DIP40A, DIP40B, DIP28A, DIP28B, DIP28C, DIP18. With dual power supply and smart on-board mikroProg, board is capable of programming and debugging 14 different microcontrollers from dsPIC30F® family.

There are two DIP40, three DIP28 and one DIP18 socket for dsPIC30F® microcontrollers provided on the board. Which of these sockets you will use depends solely on the pinout of the microcontroller in use. The **EasyPIC™ v7 for dsPIC30F** development system comes with the **dsPIC30F4013** microcontroller in a **DIP40** package (pinout corresponds to **DIP40B** socket). In order for microcontrollers to have a stable operation, we provided decoupling capacitive filters on every board socket, **Figure 4-1**.



Which socket to use?

Supported microcontrollers come in different DIP packages (DIP40, DIP28 and DIP18) and with different pinout. That is why you need to put chosen microcontroller in appropriate socket. Here is the list of supported microcontrollers with DIP sockets:

DIP40A	dsPIC30F3011, dsPIC30F4011
DIP40B	dsPIC30F3014, dsPIC30F4013 (default chip)
DIP28A	dsPIC30F2010, dsPIC30F3010, dsPIC30F4012
DIP28B	dsPIC30F2012, dsPIC30F3013
DIP28C	dsPIC30F1010, dsPIC30F2020
DIP18	dsPIC30F2011, dsPIC30F3012

(see figure 4-1)

Figure 4-1:
Schematics
of on-board
DIP sockets
and
decoupling
capacitors


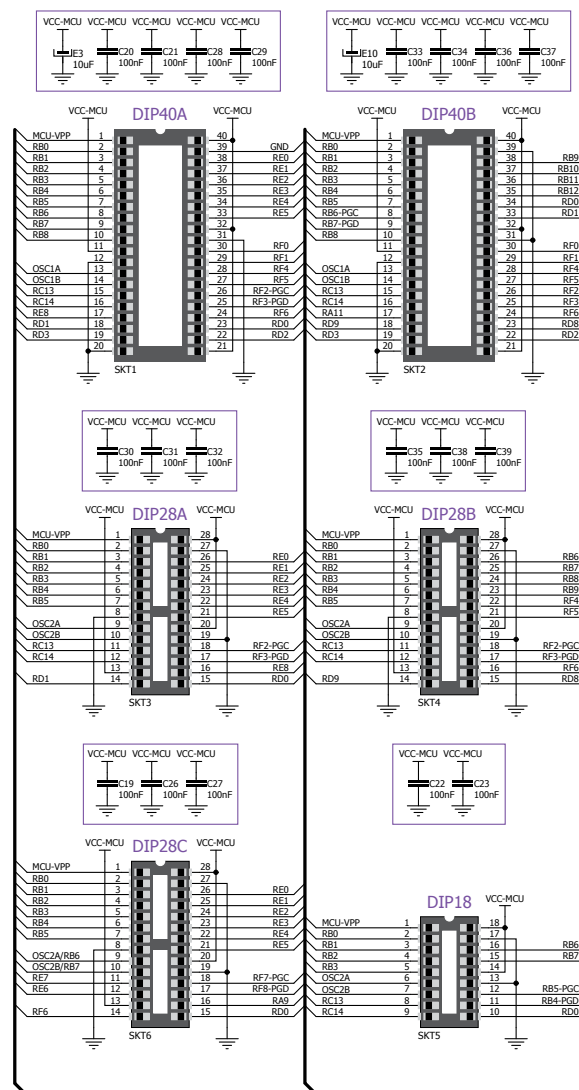


Figure 4-2:
crystal
oscillators

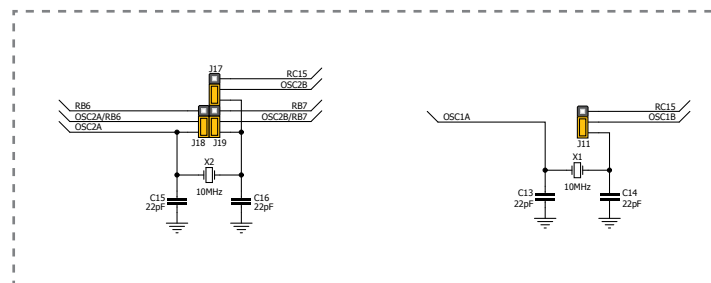

How to properly place your microcontroller into the DIP socket?

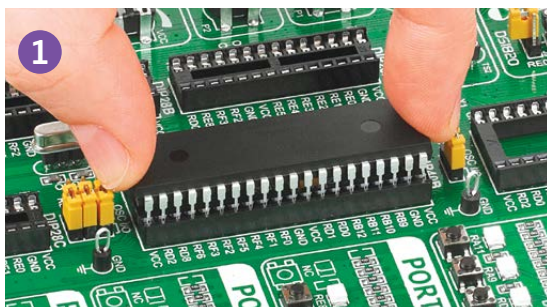


Figure 4-3: Place both ends of microcontroller on the socket so the pins are aligned correctly

Before you plug the microcontroller into the appropriate socket, make sure that the **power supply is turned off**. Images above show how to correctly plug a microcontroller. First make sure that

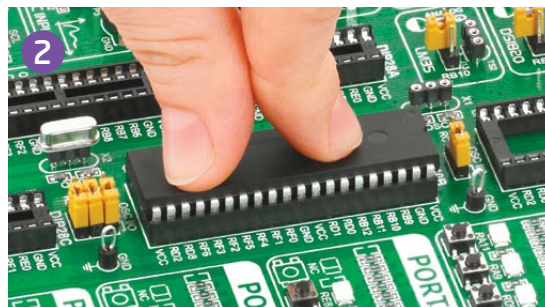


Figure 4-4: with both fingers, evenly distribute the force and press the chip into the socket.

a half circular cut in the microcontroller DIP packaging matches the cut in the DIP socket. Place both ends of the microcontroller into the socket as shown in **Figure 4-3**. Then put the microcontroller slowly down until



Figure 4-5: Properly placed microcontroller will have equally leveled pins.

all the pins match the socket as shown in **Figure 4-4**. Check again if everything is placed correctly and press the microcontroller until it is completely plugged into the socket as shown in **Figure 4-5**.

IMPORTANT: *Only one microcontroller may be plugged into the development board at the same time.*

Using crystal oscillators



Figure 4-6: RC15 as I/O pin (when using internal oscillator)



Figure 4-7: RC15 connected to X1 quartz-crystal

PIC microcontrollers normally use a quartz crystal for the purpose of providing clock frequency. The **EasyPIC™ v7 for dsPIC30®** provides two sockets for quartz-crystal. Microcontrollers in **DIP40A** and **DIP40B** packages use socket **X1 (OSC1)** for quartz-crystal.



Figure 4-8: RC15, RB6 and RB7 as I/O pins (when using internal oscillator)

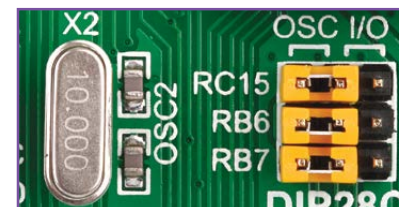


Figure 4-9: RC15, RB6 and RB7 connected to X2 quartz-crystal

If you want to use microcontrollers in **DIP28A**, **DIP28B**, **DIP28C** and **DIP18** packages, it is necessary to put quartz crystal into socket **X2 (OSC2)**. The value of the crystal depends on the maximum clock frequency allowed and your application. You can always exchange the default 10MHz crystal with another one.

On-board programmer



What is mikroProg™?

mikroProg™ is a fast USB 2.0 programmer with mikroICD™ hardware In-Circuit Debugger. Smart engineering allows mikroProg™ to support all dsPIC30® DIP microcontrollers from Microchip® in a single programmer. Outstanding performance and easy operation are among its top features.

How do I start?

In order to start using mikroProg™ and program your microcontroller, you just have to follow two simple steps:

1. Install the necessary software

- Install USB drivers
- Install mikroProg Suite™ for PIC® software

2. Power up the board, and you are ready to go.


- Plug in the programmer USB cable
- LINK LED should light up.

Socket selection

Jumpers **J1**, **J2**, **J3** and **J4** are used to select **PGC** and **PGD** programming lines for your microcontroller. Make sure to place jumpers in the proper position for your socket.



DIP40A
DIP28A
DIP28B

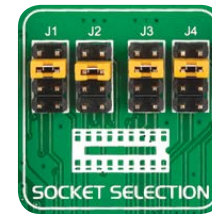

DIP40B



DIP28C



DIP18

Why so many LEDs?

Three LEDs indicate specific programmer operation. **Link** LED lights up when USB link is established with your PC, **Active** LED lights up when programmer is active. **Data** is on when data is being transferred between the programmer and PC software (compiler or mikroProg Suite™ for PIC®).



IMPORTANT - Programming/Debugging mode raises MCU voltage to 5V!

When on-board mikroProg™ programmer is in programming/debugging mode, it automatically raises the MCU voltage to 5V regardless of the power supply selection (jumper J16). Note that all external peripherals that can only work on 3.3V must be removed from the board when programming/debugging is in progress, otherwise they can be permanently damaged. When programming/debugging is not in progress (execute mode or release mode) you can connect both 3.3V or 5V peripherals to the board depending on the position of jumper J16.



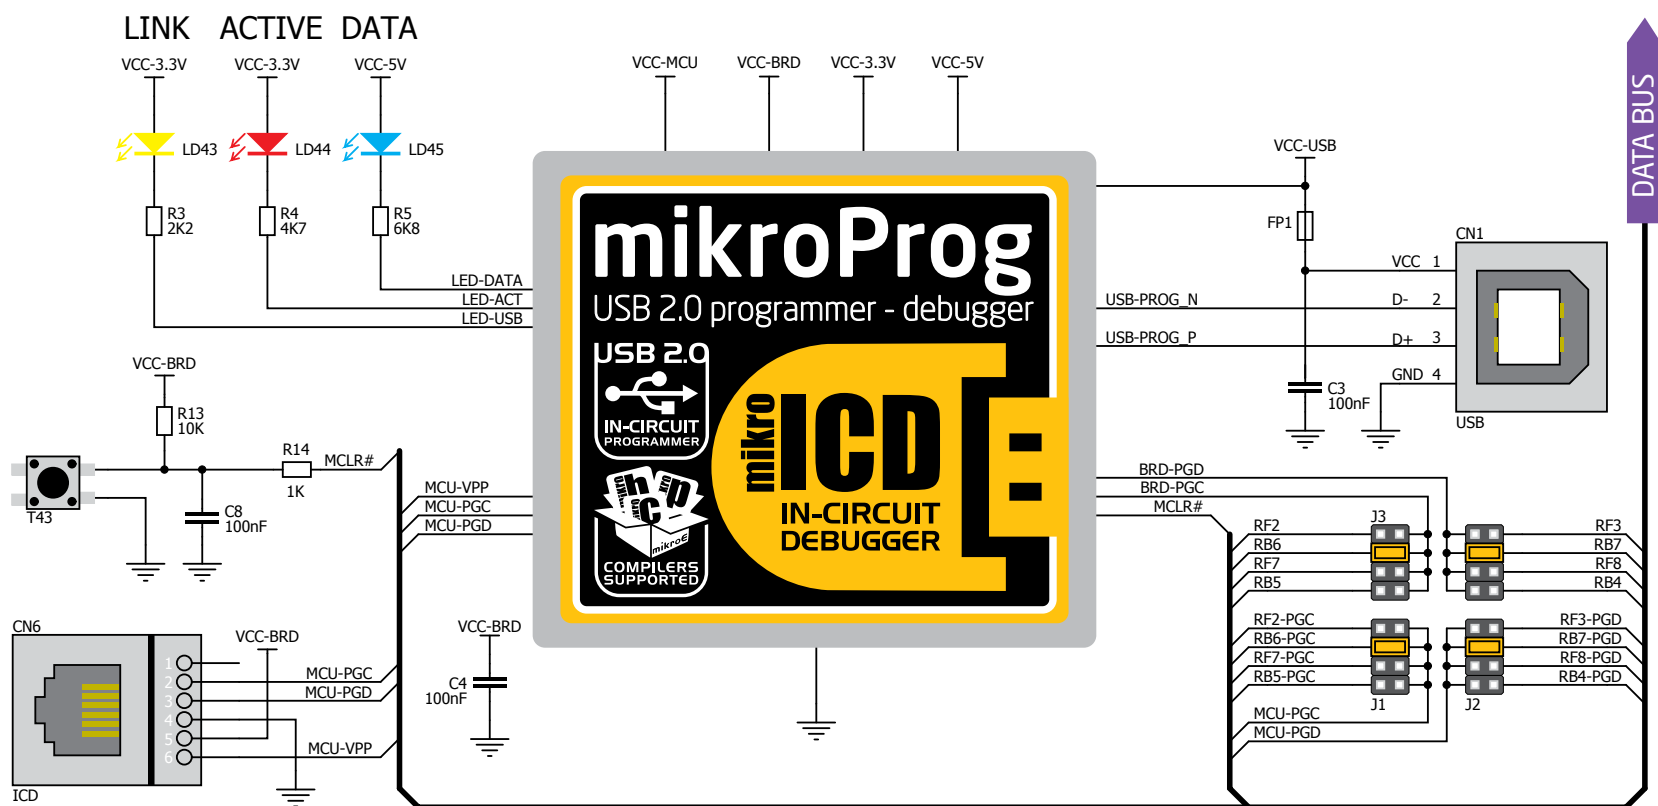



Figure 5-1: mikroProg™ block schematics

Programming with ICD2/ICD3

EasyPIC™ v7 for dsPIC30® is equipped with RJ-12 connector compatible with Microchip® ICD2® and ICD3® external programmers. You can either use the on-board mikroProg™ programmer or external programming tools with the board as long as you use only one of them at the same time. Still you have to **set the appropriate jumpers**, as described in the previous page. Insert your ICD programmer cable into connector **CN6**, as shown in images **1** and **2**.

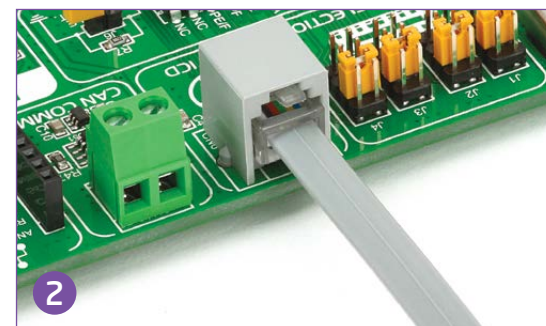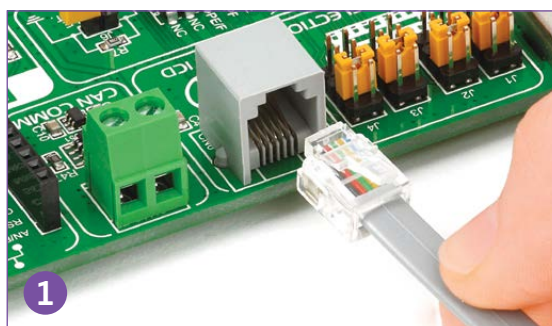

Installing programmer drivers

 On-board mikroProg™ requires drivers in order to work. Drivers are located on the  that you received with the EasyPIC™ v7 for dsPIC30® package:



http://www.mikroe.com/downloads/get/1202/mikroprog_for_plc_drivers_v200.zip

When you locate the drivers, please extract files from the ZIP archive. Folder with extracted files contains folders with drivers for different operating systems. Depending on which operating system you use, choose adequate folder and open it.



Vista 32bit, Win
2008 32 bit,
Windows 7 32 bit



Vista 64bit, Win
2008 64 bit,
Windows 7 64 bit



Win 98



Win 2000, XP,
2003 32-bit




Win XP, 2003
64-bit




installing_usb_drivers.pdf

In the opened folder you should be able to locate the driver setup file. Double click on setup file to begin installation of the programmer drivers.

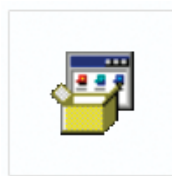


USB18PRG-Vista-x64.EXE

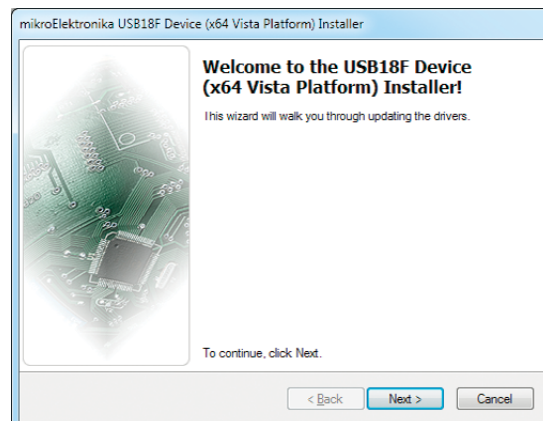


Step 1 - Start Installation

Welcome screen of the installation. Just click on **Next** button to proceed.

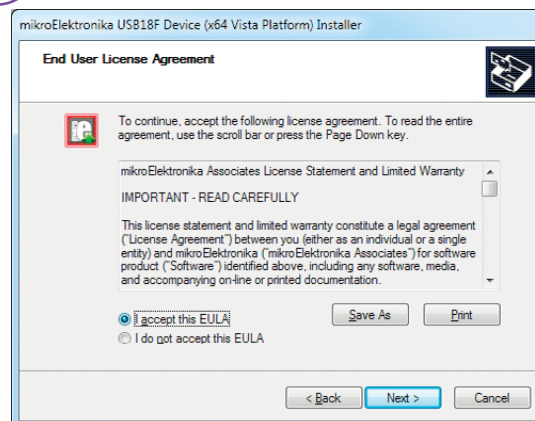


Step 2 - Accept EULA

Carefully read **End User License Agreement**. If you agree with it, click **Next** to proceed.

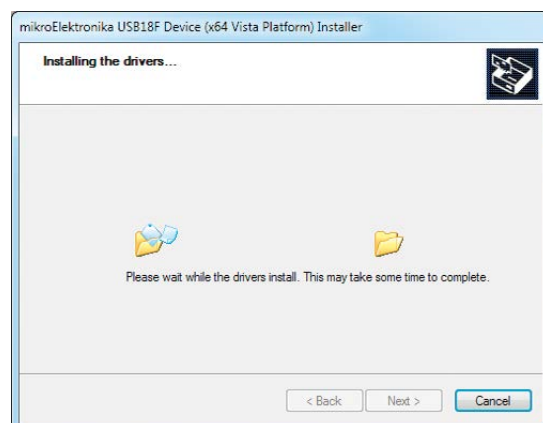

Step 3 - Installing drivers

Drivers are installed automatically in a matter of seconds.

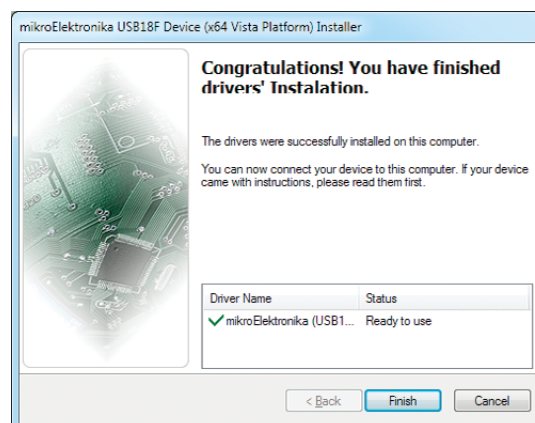

Step 4 - Finish installation

You will be informed if the drivers are installed correctly. Click on **Finish** button to end installation process.

Programming software


mikroProg Suite™ for PIC®

On-board **mikroProg™** programmer requires special programming software called **mikroProg Suite™ for PIC®**. This software is used for programming all of Microchip® microcontroller families, including PIC10, PIC12, PIC16, PIC18, dsPIC30/33, PIC24 and PIC32. Software has intuitive interface and **SingleClick™** programming technology. To begin, first locate the installation archive on our website:



http://www.mikroe.com/downloads/get/1201/mikroprog_suite_for_pic.zip

After downloading, extract the package and double click the executable setup file, to start installation.

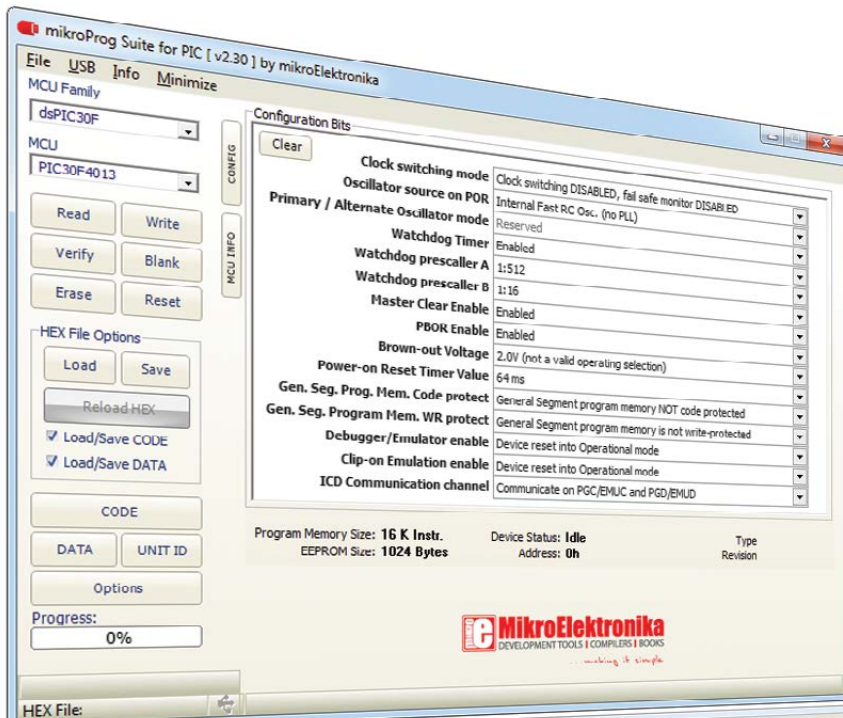

EasyPIC^{v7}
for dsPIC30


Installation wizard - 6 simple steps




Step 1 - Start Installation




Step 2 - Accept EULA and continue

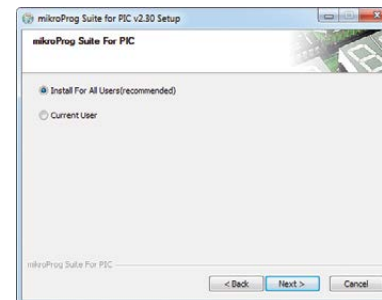


Step 3 - Install for All users or current user

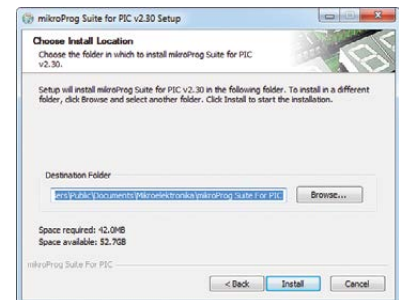

Step 4 - Choose destination folder

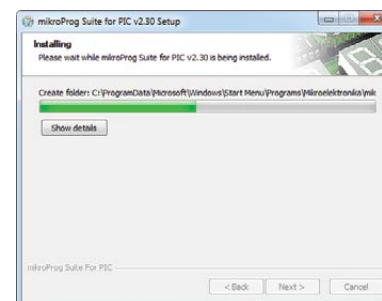

Step 5 - Installation in progress

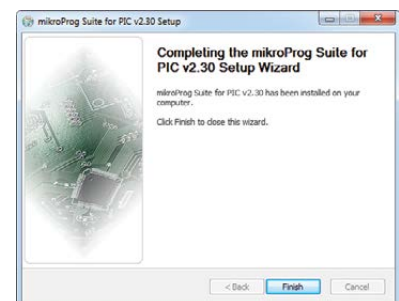

Step 6 - Finish Installation

mikroICD™ - In Circuit Debugger

What is Debugging?

Every developer comes to a point where he has to monitor the code execution in order to find errors in the code, or simply to see if everything is going as planned. This hunt for bugs, or errors in the code is called **debugging**. There are two ways to do this: one is **the software simulation**, which enables you to simulate what is supposed to be happening on the microcontroller as your code lines are executed, and the other, most reliable one, is monitoring the code execution on the chip itself. And this latter one is called **In-Circuit debugging**. "In-Circuit" means that it is the real deal - code executes right on the target device.

What is mikroICD™?

The on-board **mikroProg™** programmer supports **mikroICD™** - a highly effective tool for a **Real-Time debugging** on hardware level. The mikroICD™ debugger enables you to execute your program on the host PIC microcontroller and view variable values, Special Function Registers (SFR), RAM, CODE and EEPROM memory along with the mikroICD™ code execution on hardware. Whether you are a beginner, or a professional, this powerful tool, with intuitive interface and convenient set of commands will enable you to track down bugs quickly. mikroICD™ is one of the fastest, and most reliable debugging tools on the market.

Supported Compilers

All MikroElektronika compilers, **mikroC™**, **mikroBasic™** and **mikroPascal™** for PIC®, dsPIC® and PIC32® natively support mikroICD™. Specialized mikroICD™ DLL module allows compilers to exploit the full potential of fast hardware debugging. Along with compilers, make sure to install the appropriate **programmer drivers** and **mikroProg Suite™ for PIC®** programming software, as described on **pages 12 and 13**.

How do I use the debugger?

When you build your project for debugging, and program the microcontroller with this HEX file, you can start the debugger using **[F9]** command. Compiler will change layout to debugging view, and a blue line will mark where code execution is currently paused. Use **debugging toolbar** in the **Watch Window** to guide the program execution, and stop anytime. Add the desired variables to Watch Window and monitor their values. Complete guide to using mikroICD™ with your compiler is provided with the EasyPIC™ v7 for dsPIC30® package.



Figure 5-2: mikroICD™ manual explains debugging thoroughly

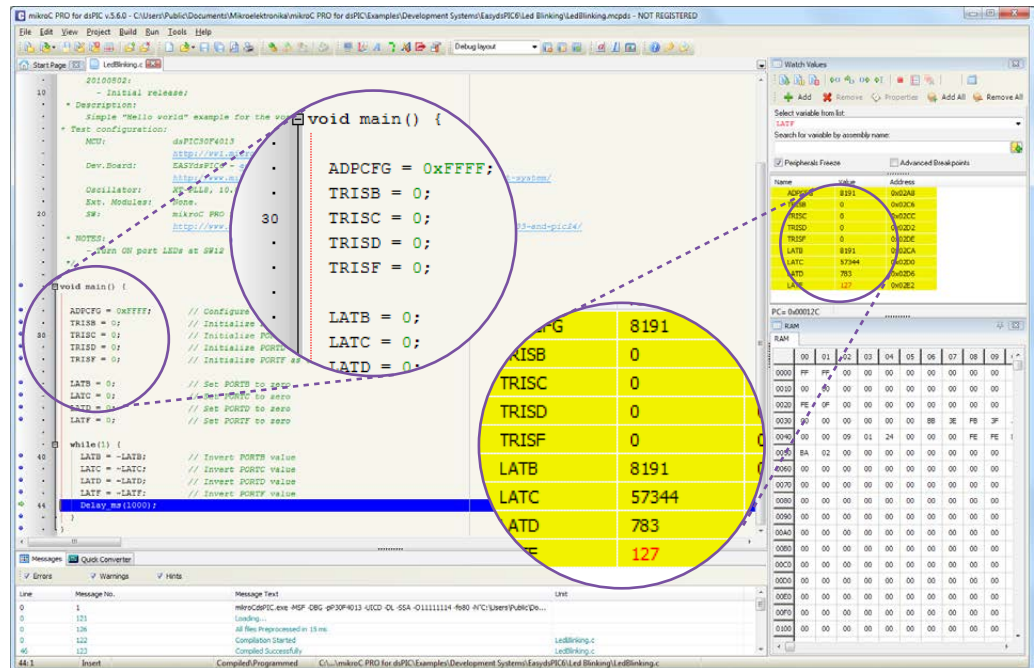













Figure 5-3: mikroC PRO for dsPIC® compiler in debugging view, with SFR registers in Watch Window



mikroCD™ commands




Here is a short overview of which debugging commands are supported in MikroElektronika compilers. You can see what each command does, and what are their shortcuts when you are in debugging mode. It will give you some general picture of what your debugger can do.

Toolbar Icon	Command Name	Shortcut	Description
	Start Debugger	[F9]	Starts Debugger.
	Run/Pause Debugger	[F6]	Run/Pause Debugger.
	Stop Debugger	[Ctrl + F2]	Stops Debugger.
	Step Into	[F7]	Executes the current program line, then halts. If the executed program line calls another routine, the debugger steps into the routine and halts after executing the first instruction within it.
	Step Over	[F8]	Executes the current program line, then halts. If the executed program line calls another routine, the debugger will not step into it. The whole routine will be executed and the debugger halts at the first instruction following the call.
	Step Out	[Ctrl + F8]	Executes all remaining program lines within the subroutine. The debugger halts immediately upon exiting the subroutine.
	Run To Cursor	[F4]	Executes the program until reaching the cursor position.
	Toggle Breakpoint	[F5]	Toggle breakpoints option sets new breakpoints or removes those already set at the current cursor position.
	Show/Hide breakpoints	[Shift+F4]	Shows/Hides window with all breakpoints
	Clears breakpoints	[Shift+Ctrl+F5]	Deletes selected breakpoints
	Jump to interrupt	[F2]	Opens window with available interrupts (doesn't work in mikroCD™ mode)

UART via RS-232




Enabling RS-232

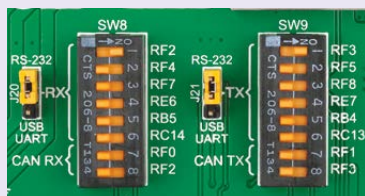

In order to enable RS-232 communication, you must set **J20** and **J21** jumpers in the **RS-232** position, and enable desired **RX** and **TX** lines via **SW8** and **SW9** DIP switches. For example, if you want to enable RS-232 connection on UART1 module of the default **dsPIC30F4013** chip, you should enable **SW8.1** (RF2) and **SW9.1** (RF3) lines.

The **UART** (universal asynchronous receiver/transmitter) is one of the most common ways of exchanging data between the MCU and peripheral components. It is a serial protocol with separate transmit and receive lines, and can be used for full-duplex communication. Both sides must be initialized with the same baud rate, otherwise the data will not be received correctly.

RS-232 serial communication is performed through a 9-pin SUB-D connector and the microcontroller UART module. In order to enable this communication, it is necessary to establish a connection between **RX** and **TX** lines on SUB-D connector and the same pins on the target microcontroller using DIP switches. Since RS-232 communication voltage levels are different than microcontroller logic levels, it is necessary to use a RS-232 Transceiver circuit, such as **MAX3232** as shown on **Figure 6-1**.

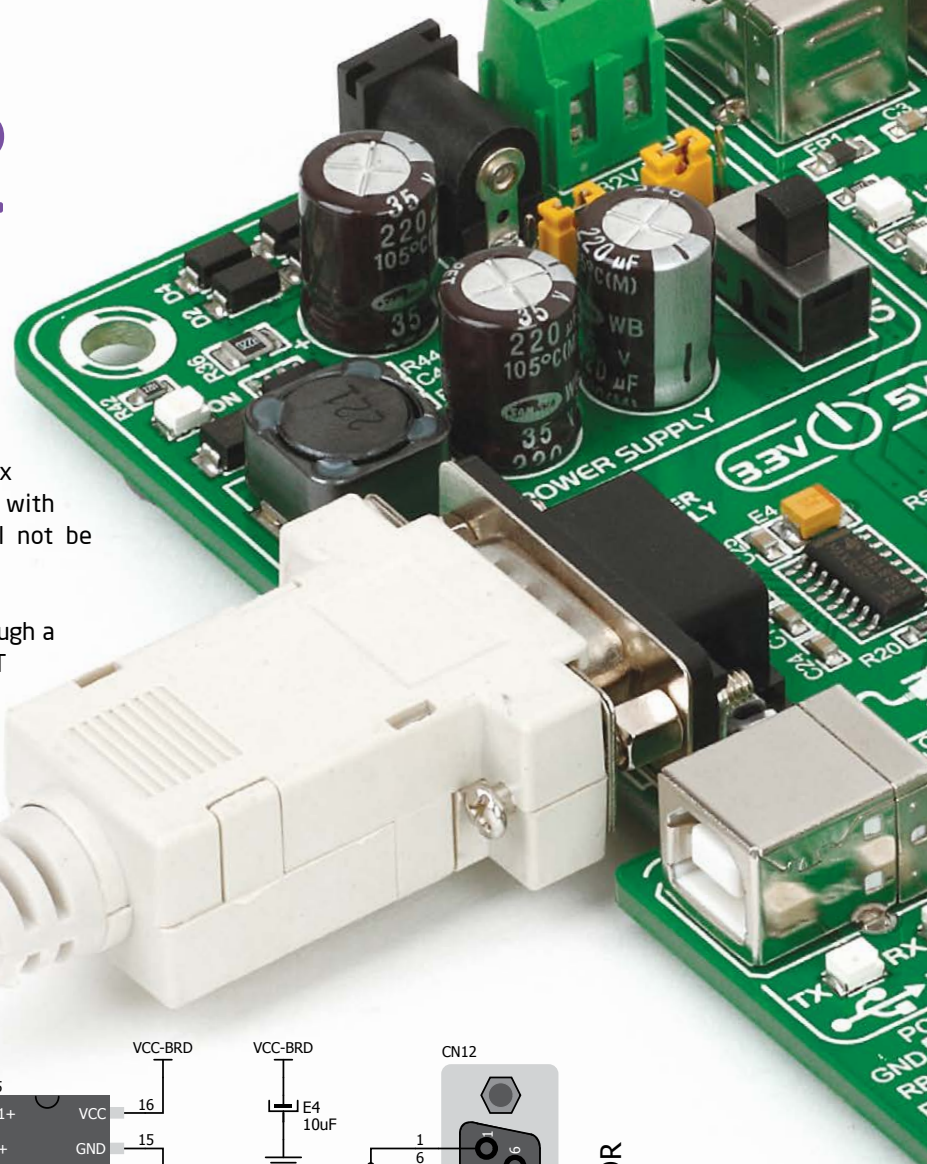

DATA BUS

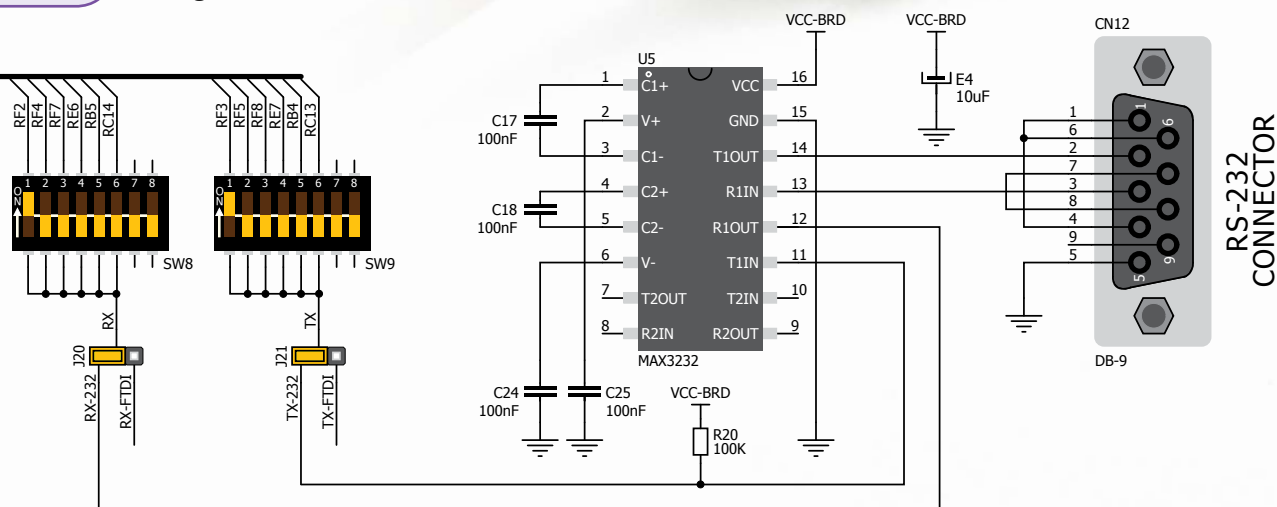


Figure 6-1:
RS-232
connection
schematics

UART via USB



Enabling USB-UART



In order to enable USB-UART communication, you must set **J20** and **J21** jumpers in the **USB-UART** position, and enable desired **RX** and **TX** lines via **SW8** and **SW9** DIP switches. For example, if you want to enable USB-UART connection on UART1 module of the default **dsPIC30F4013** chip, you should enable **SW8.1** (RF2) and **SW9.1** (RF3) lines.

Modern PC computers, laptops and notebooks are no longer equipped with RS-232 connectors and UART controllers. They are nowadays replaced with USB connectors and USB controllers. Still, certain technology enables UART communication to be done over USB connection. Controllers such as **FT232RL** from FTDI® convert UART signals to the appropriate USB standard. In order to use USB-UART module on EasyPIC™ v7 for dsPIC30®, you must first install FTDI drivers on your computer. Drivers can be found on the link below:



<http://www.ftdichip.com/Drivers/VCP.htm>

USB-UART communication is being done through a FT232RL controller, USB connector (**CN2**), and microcontroller UART module. To establish this connection, you must put **J20** and **J21** jumpers in the **USB-UART** position, and connect **RX** and **TX** lines of the microcontroller to the appropriate input and output pins of the FT232RL. This selection is done using DIP switches **SW8** and **SW9**.

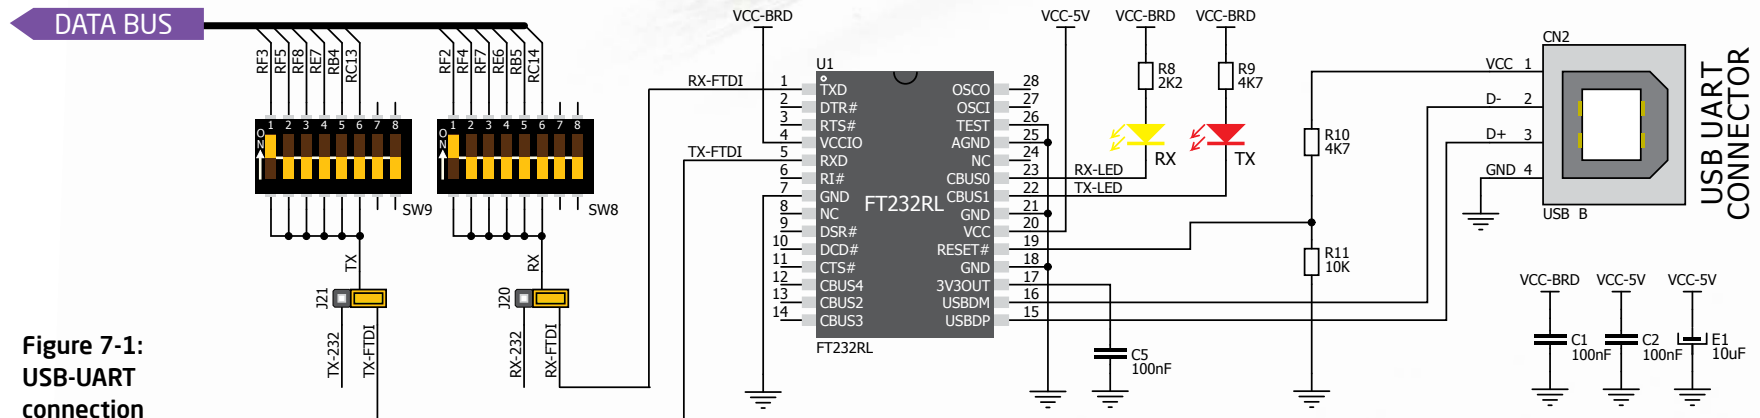



Figure 7-1:
USB-UART
connection
schematics

CAN communication

Controller Area Network (CAN or CAN bus) is a vehicle bus standard designed to allow microcontrollers and devices to communicate with each other within a vehicle without a host computer. CAN is a message-based protocol, designed specifically for automotive applications but now also used in other areas such as industrial automation and medical equipment. EasyPIC™ v7 for dsPIC30® is equipped with high-speed **MCP2551** CAN Transceiver and a pair of screw terminals which provide microcontrollers with integrated CAN controller with the necessary physical interface for CAN communication. Make sure to correctly connect negative and positive differential communication lines before using this module.



Enabling CAN

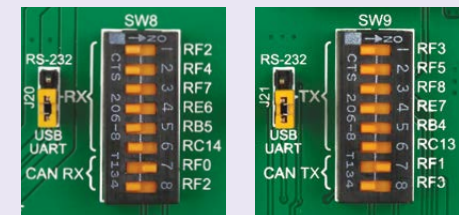

In order to enable CAN communication, you must push **SW8.7** (RF0) or **SW8.8** (RF2) and **SW9.7** (RF1) or **SW9.8** (RF3) to **ON** position. This connects the **TX** and **RX** lines to appropriate microcontroller pins and its CAN module.

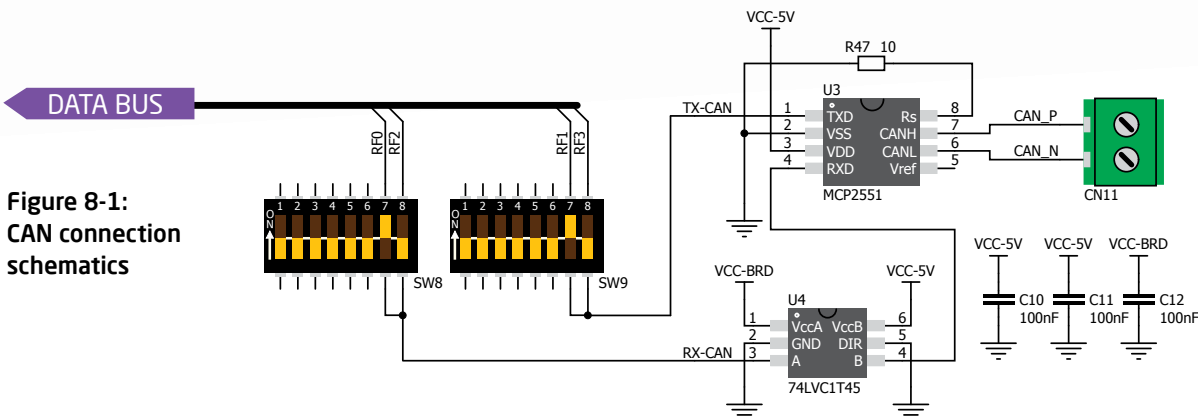


Figure 8-1:
CAN connection
schematics


mikroBUS™ sockets

Easier connectivity and simple configuration are imperative in modern electronic devices. Success of the USB standard comes from its simplicity of usage and high and reliable data transfer rates. As we in MikroElektronika see it, Plug-and-Play devices with minimum settings are the future in embedded world too. This is why our engineers have come up with a simple, but brilliant pinout with lines that most of today's accessory boards require, which almost completely eliminates the need of additional hardware settings. We called this new standard the **mikroBUS™**. EasyPIC™ v7 for dsPIC30® supports mikroBUS™ with two on-board sockets. As you can see, there are no additional DIP switches, or jumper selections. Everything

is already routed to the most appropriate pins of the microcontroller sockets.

mikroBUS™ host connector

Each mikroBUS™ host connector consists of two 1x8 female headers containing pins that are most likely to be used in the target accessory board. There are three groups of communication pins: **SPI**, **UART** and **I²C** communication. There are also single pins for **PWM**, **Interrupt**, **Analog input**, **Reset** and **Chip Select**. Pinout contains two power groups: **+5V** and **GND** on one header and **+3.3V** and **GND** on the other 1x8 header.

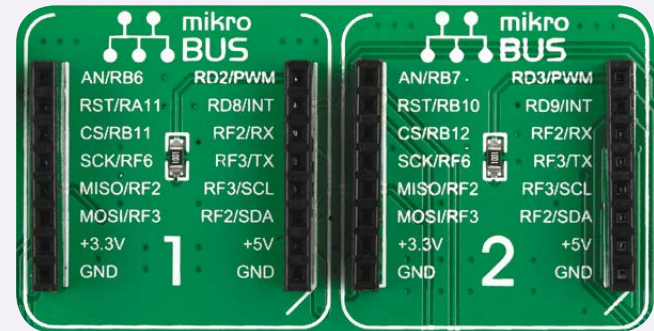

mikroBUS™ pinout explained

AN - Analog pin

RST - Reset pin

CS - SPI Chip Select line

SCK - SPI Clock line

MISO - SPI Slave Output line

MOSI - SPI Slave Input line

+3.3V - VCC-3.3V power line

GND - Reference Ground

PWM - PWM output line

INT - Hardware Interrupt line

RX - UART Receive line

TX - UART Transmit line

SCL - I2C Clock line

SDA - I2C Data line

+5V - VCC-5V power line

GND - Reference Ground


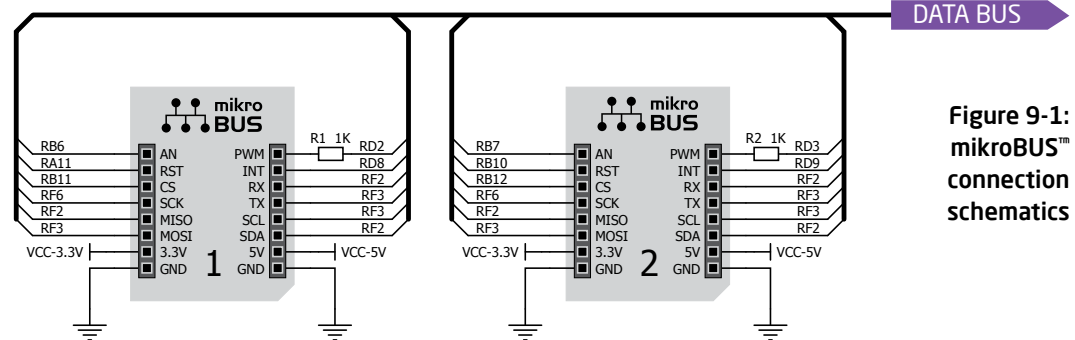



Figure 9-1:
mikroBUS™
connection
schematics

Integrate mikroBUS™ in your design


mikroBUS™ is not made to be only a part of our development boards. You can freely place mikroBUS™ host connectors in your final PCB designs, as long as you clearly mark them with mikroBUS™ logo and footprint specifications. For more information, logo artwork and PCB files visit our web site:

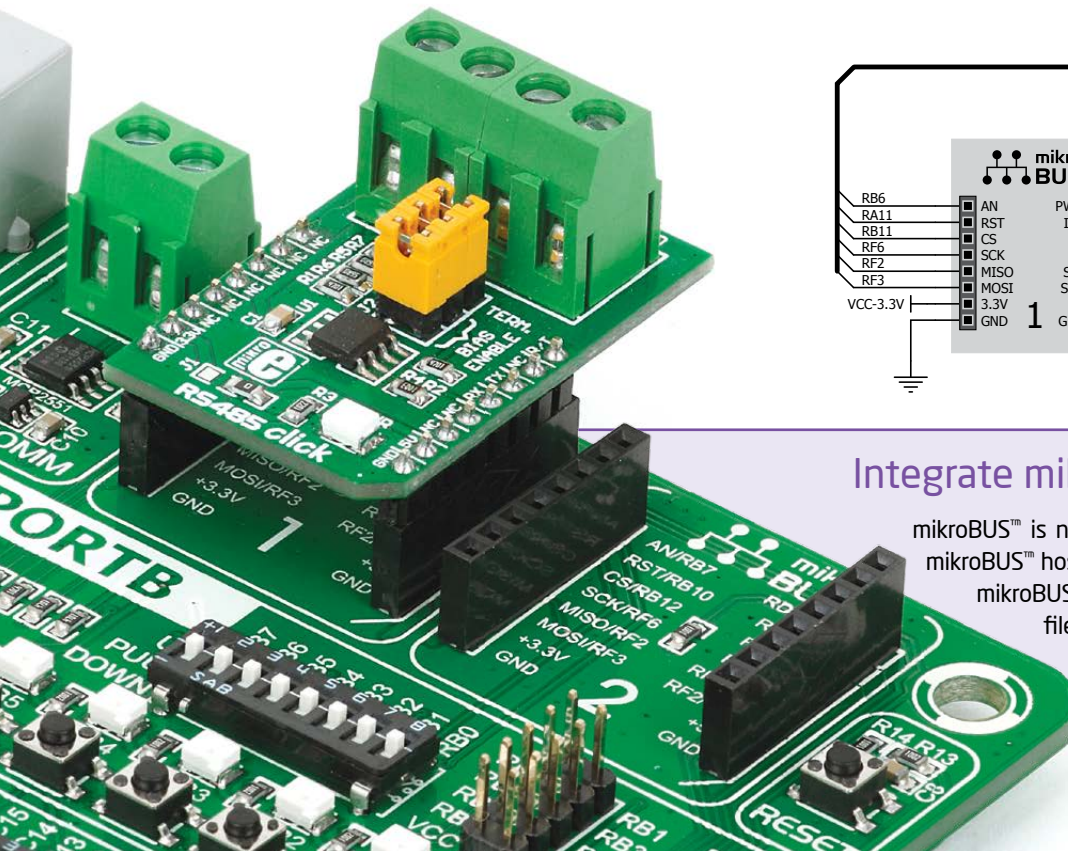

<http://www.mikroe.com/mikrobus/>

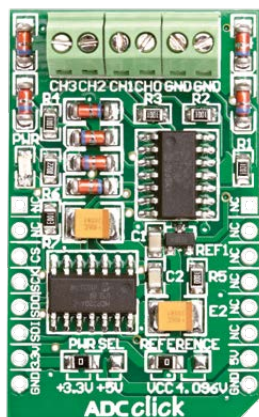


ADC click™

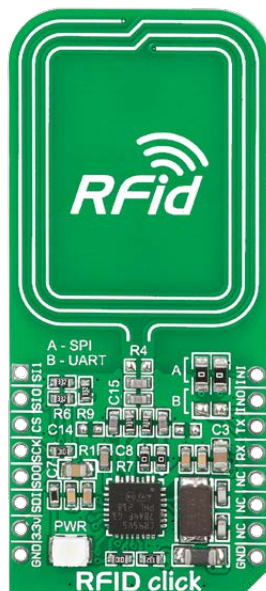

RFID click™



Bluetooth click™

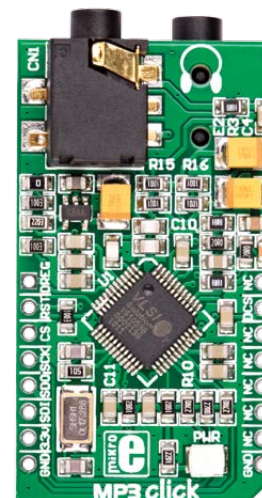

MP3 click™



GSM click™


Click Boards™ are plug-n-play!

MikroElektronika portfolio of over 200 accessory boards is now enriched by an additional set of mikroBUS™ compatible **Click Boards™**. Almost each month several new Click boards™ are released. It is our intention to provide the community with as much of these boards as possible, so you will be able to expand your EasyPIC™ v7 for dsPIC30® with additional functionality with


literally zero hardware configuration. Just plug and play. Visit the Click boards™ webpage for the complete list of available boards:




<http://www.mikroe.com/click/>

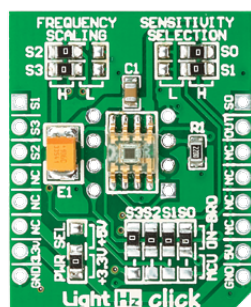


Light click™

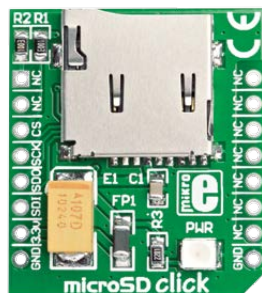


microSD click™

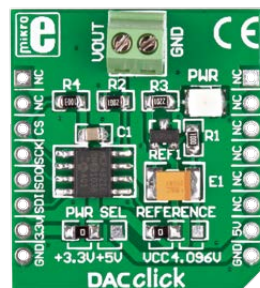

DAC click™

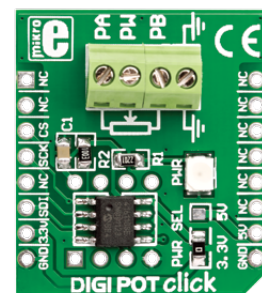

DIGIPOT click™

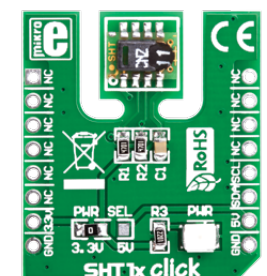


SHT1x click™



WiFi PLUS click™




GPS click™

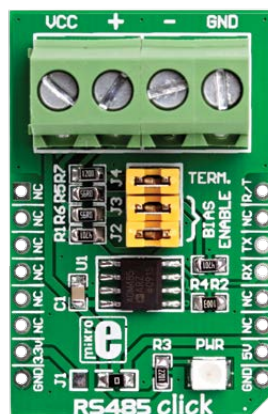

RS485 click™



CAN SPI click™

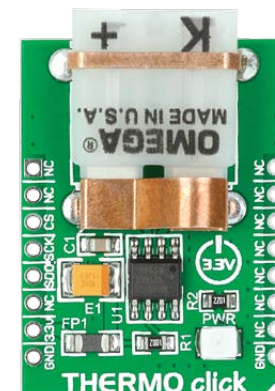

THERMO click™

LIBSTOCK™ A PLACE FOR CODE®

[BROWSE CODE](#) | [SHARE CODE](#) | [REQUEST CODE](#) | [ABOUT LIBSTOCK](#)

Use your forum account to login.

LOGIN

Username:

Password:

LOGIN

Not registered? [Sign Up for free!](#)

Code Examples

It easy to get your Click™ board up and running. We provided the examples for mikroC™, mikroBasic™ and mikroPascal™ compilers on our [Libstock community web site](#). Just download them and you are ready to start:

<http://www.libstock.com>

CATEGORIES ☐ All codes ☐ Libraries ☐ Projects ☐ Visual Projects ☒ Examples

COMPILERS ☐ mikroC ☐ mikroBasic ☐ mikroPascal ☐ Other Compilers

SORT BY ☐ best rank ☐ oldest ☐ by author ☐ alphabetically ☒ most downloaded ☐ with source ☐ with example

CATEGORY: ALL CODES << previous | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 next >> last

GSM click - Example

Rating: ★★★★★

Author: [MikroElektronika Team](#)

Version: 1.0.0.0

Last Updated: 2014-05-09

Category: [GSM / GPRS](#)

Downloaded: 7921 times

Followed by: 2 users

[Download \[648.97KB\]](#)

Description

This is a sample program which demonstrates the use of **GSM click**. Program uses GSM module GL865 for sending/receiving SMS and establishing calls with dialed number. Dialing is done using GLCD+Touch Panel GUI.

[\[learn more\]](#)

supported microcontrollers
PIC 16C610 PIC16C620 PIC16C630 PIC16C640 PIC16C650 PIC16C660 PIC16C670 PIC16C680 PIC16C690 PIC16C700 PIC16C710 PIC16C720 PIC16C730 PIC16C740 PIC16C750 PIC16C760 PIC16C770 PIC16C780 PIC16C790 PIC16C800 PIC16C810 PIC16C820 PIC16C830 PIC16C840 PIC16C850 PIC16C860 PIC16C870 PIC16C880 PIC16C890 PIC16C900 PIC16C910 PIC16C920 PIC16C930 PIC16C940 PIC16C950 PIC16C960 PIC16C970 PIC16C980 PIC16C990 PIC17C430 PIC17C440 PIC17C450 PIC17C460 PIC17C470 PIC17C480 PIC17C490 PIC17C500 PIC17C510 PIC17C520 PIC17C530 PIC17C540 PIC17C550 PIC17C560 PIC17C570 PIC17C580 PIC17C590 PIC17C600 PIC17C610 PIC17C620 PIC17C630 PIC17C640 PIC17C650 PIC17C660 PIC17C670 PIC17C680 PIC17C690 PIC17C700 PIC17C710 PIC17C720 PIC17C730 PIC17C740 PIC17C750 PIC17C760 PIC17C770 PIC17C780 PIC17C790 PIC17C800 PIC17C810 PIC17C820 PIC17C830 PIC17C840 PIC17C850 PIC17C860 PIC17C870 PIC17C880 PIC17C890 PIC17C900 PIC17C910 PIC17C920 PIC17C930 PIC17C940 PIC17C950 PIC17C960 PIC17C970 PIC17C980 PIC17C990 PIC18C440 PIC18C450 PIC18C460 PIC18C470 PIC18C480 PIC18C490 PIC18C500 PIC18C510 PIC18C520 PIC18C530 PIC18C540 PIC18C550 PIC18C560 PIC18C570 PIC18C580 PIC18C590 PIC18C600 PIC18C610 PIC18C620 PIC18C630 PIC18C640 PIC18C650 PIC18C660 PIC18C670 PIC18C680 PIC18C690 PIC18C700 PIC18C710 PIC18C720 PIC18C730 PIC18C740 PIC18C750 PIC18C760 PIC18C770 PIC18C780 PIC18C790 PIC18C800 PIC18C810 PIC18C820 PIC18C830 PIC18C840 PIC18C850 PIC18C860 PIC18C870 PIC18C880 PIC18C890 PIC18C900 PIC18C910 PIC18C920 PIC18C930 PIC18C940 PIC18C950 PIC18C960 PIC18C970 PIC18C980 PIC18C990 PIC19C460 PIC19C470 PIC19C480 PIC19C490 PIC19C500 PIC19C510 PIC19C520 PIC19C530 PIC19C540 PIC19C550 PIC19C560 PIC19C570 PIC19C580 PIC19C590 PIC19C600 PIC19C610 PIC19C620 PIC19C630 PIC19C640 PIC19C650 PIC19C660 PIC19C670 PIC19C680 PIC19C690 PIC19C700 PIC19C710 PIC19C720 PIC19C730 PIC19C740 PIC19C750 PIC19C760 PIC19C770 PIC19C780 PIC19C790 PIC19C800 PIC19C810 PIC19C820 PIC19C830 PIC19C840 PIC19C850 PIC19C860 PIC19C870 PIC19C880 PIC19C890 PIC19C900 PIC19C910 PIC19C920 PIC19C930 PIC19C940 PIC19C950 PIC19C960 PIC19C970 PIC19C980 PIC19C990 PIC20C660 PIC20C670 PIC20C680 PIC20C690 PIC20C700 PIC20C710 PIC20C720 PIC20C730 PIC20C740 PIC20C750 PIC20C760 PIC20C770 PIC20C780 PIC20C790 PIC20C800 PIC20C810 PIC20C820 PIC20C830 PIC20C840 PIC20C850 PIC20C860 PIC20C870 PIC20C880 PIC20C890 PIC20C900 PIC20C910 PIC20C920 PIC20C930 PIC20C940 PIC20C950 PIC20C960 PIC20C970 PIC20C980 PIC20C990 PIC24C020 PIC24C030 PIC24C040 PIC24C050 PIC24C060 PIC24C070 PIC24C080 PIC24C090 PIC24C100 PIC24C110 PIC24C120 PIC24C130 PIC24C140 PIC24C150 PIC24C160 PIC24C170 PIC24C180 PIC24C190 PIC24C200 PIC24C210 PIC24C220 PIC24C230 PIC24C240 PIC24C250 PIC24C260 PIC24C270 PIC24C280 PIC24C290 PIC24C300 PIC24C310 PIC24C320 PIC24C330 PIC24C340 PIC24C350 PIC24C360 PIC24C370 PIC24C380 PIC24C390 PIC24C400 PIC24C410 PIC24C420 PIC24C430 PIC24C440 PIC24C450 PIC24C460 PIC24C470 PIC24C480 PIC24C490 PIC24C500 PIC24C510 PIC24C520 PIC24C530 PIC24C540 PIC24C550 PIC24C560 PIC24C570 PIC24C580 PIC24C590 PIC24C600 PIC24C610 PIC24C620 PIC24C630 PIC24C640 PIC24C650 PIC24C660 PIC24C670 PIC24C680 PIC24C690 PIC24C700 PIC24C710 PIC24C720 PIC24C730 PIC24C740 PIC24C750 PIC24C760 PIC24C770 PIC24C780 PIC24C790 PIC24C800 PIC24C810 PIC24C820 PIC24C830 PIC24C840 PIC24C850 PIC24C860 PIC24C870 PIC24C880 PIC24C890 PIC24C900 PIC24C910 PIC24C920 PIC24C930 PIC24C940 PIC24C950 PIC24C960 PIC24C970 PIC24C980 PIC24C990 PIC26C930 PIC26C940 PIC26C950 PIC26C960 PIC26C970 PIC26C980 PIC26C990 PIC18C240 PIC18C250 PIC18C260 PIC18C270 PIC18C280 PIC18C290 PIC18C300 PIC18C310 PIC18C320 PIC18C330 PIC18C340 PIC18C350 PIC18C360 PIC18C370 PIC18C380 PIC18C390 PIC18C400 PIC18C410 PIC18C420 PIC18C430 PIC18C440 PIC18C450 PIC18C460 PIC18C470 PIC18C480 PIC18C490 PIC18C500 PIC18C510 PIC18C520 PIC18C530 PIC18C540 PIC18C550 PIC18C560 PIC18C570 PIC18C580 PIC18C590 PIC18C600 PIC18C610 PIC18C620 PIC18C630 PIC18C640 PIC18C650 PIC18C660 PIC18C670 PIC18C680 PIC18C690 PIC18C700 PIC18C710 PIC18C720 PIC18C730 PIC18C740 PIC18C750 PIC18C760 PIC18C770 PIC18C780 PIC18C790 PIC18C800 PIC18C810 PIC18C820 PIC18C830 PIC18C840 PIC18C850 PIC18C860 PIC18C870 PIC18C880 PIC18C890 PIC18C900 PIC18C910 PIC18C920 PIC18C930 PIC18C940 PIC18C950 PIC18C960 PIC18C970 PIC18C980 PIC18C990 PIC16C160 PIC16C170 PIC16C180 PIC16C190 PIC16C200 PIC16C210 PIC16C220 PIC16C230 PIC16C240 PIC16C250 PIC16C260 PIC16C270 PIC16C280 PIC16C290 PIC16C300 PIC16C310 PIC16C320 PIC16C330 PIC16C340 PIC16C350 PIC16C360 PIC16C370 PIC16C380 PIC16C390 PIC16C400 PIC16C410 PIC16C420 PIC16C430 PIC16C440 PIC16C450 PIC16C460 PIC16C470 PIC16C480 PIC16C490 PIC16C500 PIC16C510 PIC16C520 PIC16C530 PIC16C540 PIC16C550 PIC16C560 PIC16C570 PIC16C580 PIC16C590 PIC16C600 PIC16C610 PIC16C620 PIC16C630 PIC16C640 PIC16C650 PIC16C660 PIC16C670 PIC16C680 PIC16C690 PIC16C700 PIC16C710 PIC16C720 PIC16C730 PIC16C740 PIC16C750 PIC16C760 PIC16C770 PIC16C780 PIC16C790 PIC16C800 PIC16C810 PIC16C820 PIC16C830 PIC16C840 PIC16C850 PIC16C860 PIC16C870 PIC16C880 PIC16C890 PIC16C900 PIC16C910 PIC16C920 PIC16C930 PIC16C940 PIC16C950 PIC16C960 PIC16C970 PIC16C980 PIC16C990 PIC16C1000 PIC16C1010 PIC16C1020 PIC16C1030 PIC16C1040 PIC16C1050 PIC16C1060 PIC16C1070 PIC16C1080 PIC16C1090 PIC16C1100 PIC16C1110 PIC16C1120 PIC16C1130 PIC16C1140 PIC16C1150 PIC16C1160 PIC16C1170 PIC16C1180 PIC16C1190 PIC16C1200 PIC16C1210 PIC16C1220 PIC16C1230 PIC16C1240 PIC16C1250 PIC16C1260 PIC16C1270 PIC16C1280 PIC16C1290 PIC16C1300 PIC16C1310 PIC16C1320 PIC16C1330 PIC16C1340 PIC16C1350 PIC16C1360 PIC16C1370 PIC16C1380 PIC16C1390 PIC16C1400 PIC16C1410 PIC16C1420 PIC16C1430 PIC16C1440 PIC16C1450 PIC16C1460 PIC16C1470 PIC16C1480 PIC16C1490 PIC16C1500 PIC16C1510 PIC16C1520 PIC16C1530 PIC16C1540 PIC16C1550 PIC16C1560 PIC16C1570 PIC16C1580 PIC16C1590 PIC16C1600 PIC16C1610 PIC16C1620 PIC16C1630 PIC16C1640 PIC16C1650 PIC16C1660 PIC16C1670 PIC16C1680 PIC16C1690 PIC16C1700 PIC16C1710 PIC16C1720 PIC16C1730 PIC16C1740 PIC16C1750 PIC16C1760 PIC16C1770 PIC16C1780 PIC16C1790 PIC16C1800 PIC16C1810 PIC16C1820 PIC16C1830 PIC16C1840 PIC16C1850 PIC16C1860 PIC16C1870 PIC16C1880 PIC16C1890 PIC16C1900 PIC16C1910 PIC16C1920 PIC16C1930 PIC16C1940 PIC16C1950 PIC16C1960 PIC16C1970 PIC16C1980 PIC16C1990 PIC16C2000 PIC16C2010 PIC16C2020 PIC16C2030 PIC16C2040 PIC16C2050 PIC16C2060 PIC16C2070 PIC16C2080 PIC16C2090 PIC16C2100 PIC16C2110 PIC16C2120 PIC16C2130 PIC16C2140 PIC16C2150 PIC16C2160 PIC16C2170 PIC16C2180 PIC16C2190 PIC16C2200 PIC16C2210 PIC16C2220 PIC16C2230 PIC16C2240 PIC16C2250 PIC16C2260 PIC16C2270 PIC16C2280 PIC16C2290 PIC16C2300 PIC16C2310 PIC16C2320 PIC16C2330 PIC16C2340 PIC16C2350 PIC16C2360 PIC16C2370 PIC16C2380 PIC16C2390 PIC16C2400 PIC16C2410 PIC16C2420 PIC16C2430 PIC16C2440 PIC16C2450 PIC16C2460 PIC16C2470 PIC16C2480 PIC16C2490 PIC16C2500 PIC16C2510 PIC16C2520 PIC16C2530 PIC16C2540 PIC16C2550 PIC16C2560 PIC16C2570 PIC16C2580 PIC16C2590 PIC16C2600 PIC16C2610 PIC16C2620 PIC16C2630 PIC16C2640 PIC16C2650 PIC16C2660 PIC16C2670 PIC16C2680 PIC16C2690 PIC16C2700 PIC16C2710 PIC16C2720 PIC16C2730 PIC16C2740 PIC16C2750 PIC16C2760 PIC16C2770 PIC16C2780 PIC16C2790 PIC16C2800 PIC16C2810 PIC16C2820 PIC16C2830 PIC16C2840 PIC16C2850 PIC16C2860 PIC16C2870 PIC16C2880 PIC16C2890 PIC16C2900 PIC16C2910 PIC16C2920 PIC16C2930 PIC16C2940 PIC16C2950 PIC16C2960 PIC16C2970 PIC16C2980 PIC16C2990 PIC16C3000 PIC16C3010 PIC16C3020 PIC16C3030 PIC16C3040 PIC16C3050 PIC16C3060 PIC16C3070 PIC16C3080 PIC16C3090 PIC16C3100 PIC16C3110 PIC16C3120 PIC16C3130 PIC16C3140 PIC16C3150 PIC16C3160 PIC16C3170 PIC16C3180 PIC16C3190 PIC16C3200 PIC16C3210 PIC16C3220 PIC16C3230 PIC16C3240 PIC16C3250 PIC16C3260 PIC16C3270 PIC16C3280 PIC16C3290 PIC16C3300 PIC16C3310 PIC16C3320 PIC16C3330 PIC16C3340 PIC16C3350 PIC16C3360 PIC16C3370 PIC16C3380 PIC16C3390 PIC16C3400 PIC16C3410 PIC16C3420 PIC16C3430 PIC16C3440 PIC16C3450 PIC16C3460 PIC16C3470 PIC16C3480 PIC16C3490 PIC16C3500 PIC16C3510 PIC16C3520 PIC16C3530 PIC16C3540 PIC16C3550 PIC16C3560 PIC16C3570 PIC16C3580 PIC16C3590 PIC16C3600 PIC16C3610 PIC16C3620 PIC16C3630 PIC16C3640 PIC16C3650 PIC16C3660 PIC16C3670 PIC16C3680 PIC16C3690 PIC16C3700 PIC16C3710 PIC16C3720 PIC16C3730 PIC16C3740 PIC16C3750 PIC16C3760 PIC16C3770 PIC16C3780 PIC16C3790 PIC16C3800 PIC16C3810 PIC16C3820 PIC16C3830 PIC16C3840 PIC16C3850 PIC16C3860 PIC16C3870 PIC16C3880 PIC16C3890 PIC16C3900 PIC16C3910 PIC16C3920 PIC16C3930 PIC16C3940 PIC16C3950 PIC16C3960 PIC16C3970 PIC16C3980 PIC16C3990 PIC16C4000 PIC16C4010 PIC16C4020 PIC16C4030 PIC16C4040 PIC16C4050 PIC16C4060 PIC16C4070 PIC16C4080 PIC16C4090 PIC16C4100 PIC16C4110 PIC16C4120 PIC16C4130 PIC16C4140 PIC16C4150 PIC16C4160 PIC16C4170 PIC16C4180 PIC16C4190 PIC16C4200 PIC16C4210 PIC16C4220 PIC16C4230 PIC16C4240 PIC16C4250 PIC16C4260 PIC16C4270 PIC16C4280 PIC16C4290 PIC16C4300 PIC16C4310 PIC16C4320 PIC16C4330 PIC16C4340 PIC16C4350 PIC16C4360 PIC16C4370 PIC16C4380 PIC16C4390 PIC16C4400 PIC16C4410 PIC16C4420 PIC16C4430 PIC16C4440 PIC16C4450 PIC16C4460 PIC16C4470 PIC16C4480 PIC16C4490 PIC16C4500 PIC16C4510 PIC16C4520 PIC16C4530 PIC16C4540 PIC16C4550 PIC16C4560 PIC16C4570 PIC16C4580 PIC16C4590 PIC16C4600 PIC16C4610 PIC16C4620 PIC16C4630 PIC16C4640 PIC16C4650 PIC16C4660 PIC16C4670 PIC16C4680 PIC16C4690 PIC16C4700 PIC16C4710 PIC16C4720 PIC16C4730 PIC16C4740 PIC16C4750 PIC16C4760 PIC16C4770 PIC16C4780 PIC16C4790 PIC16C4800 PIC16C4810 PIC16C4820 PIC16C4830 PIC16C4840 PIC16C4850 PIC16C4860 PIC16C4870 PIC16C4880 PIC16C4890 PIC16C4900 PIC16C4910 PIC16C4920 PIC16C4930 PIC16C4940 PIC16C4950 PIC16C4960 PIC16C4970 PIC16C4980 PIC16C4990 PIC16C5000 PIC16C5010 PIC16C5020 PIC16C5030 PIC16C5040 PIC16C5050 PIC16C5060 PIC16C5070 PIC16C5080 PIC16C5090 PIC16C5100 PIC16C5110 PIC16C5120 PIC16C5130 PIC16C5140 PIC16C5150 PIC16C5160 PIC16C5170 PIC16C5180 PIC16C5190 PIC16C5200 PIC16C5210 PIC16C5220 PIC16C5230 PIC16C5240 PIC16C5250 PIC16C5260 PIC16C5270 PIC16C5280 PIC16C5290 PIC16C5300 PIC16C5310 PIC16C5320 PIC16C5330 PIC16C5340 PIC16C5350 PIC16C5360 PIC16C5370 PIC16C5380 PIC16C5390 PIC16C5400 PIC16C5410 PIC16C5420 PIC16C5430 PIC16C5440 PIC16C5450 PIC16C5460 PIC16C5470 PIC16C5480 PIC16C5490 PIC16C5500 PIC16C5510 PIC16C5520 PIC16C5530 PIC16C5540 PIC16C5550 PIC16C5560 PIC16C5570 PIC16C5580 PIC16C5590 PIC16C5600 PIC16C5610 PIC16C5620 PIC16C5630 PIC16C5640 PIC16C5650 PIC16C5660 PIC16C5670 PIC16C5680 PIC16C5690 PIC16C5700 PIC16C5710 PIC16C5720 PIC16C5730 PIC16C5740 PIC16C5750 PIC16C5760 PIC16C5770 PIC16C5780 PIC16C5790 PIC16C5800 PIC16C5810 PIC16C5820 PIC16C5830 PIC16C5840 PIC16C5850 PIC16C5860 PIC16C5870 PIC16C5880 PIC16C5890 PIC16C5900 PIC16C5910 PIC16C5920 PIC16C5930 PIC16C5940 PIC16C5950 PIC16C5960 PIC16C5970 PIC16C5980 PIC16C5990 PIC16C6000 PIC16C6010 PIC16C6020 PIC16C6030 PIC16C6040 PIC16C6050 PIC16C6060 PIC16C6070 PIC16C6080 PIC16C6090 PIC16C6100 PIC16C6110 PIC16C6120 PIC16C6130 PIC16C6140 PIC16C6150 PIC16C6160 PIC16C6170 PIC16C6180 PIC16C6190 PIC16C6200 PIC16C6210 PIC16C6220 PIC16C6230 PIC16C6240 PIC16C6250 PIC16C6260 PIC16C6270 PIC16C6280 PIC16C6290 PIC16C6300 PIC16C6310 PIC16C6320 PIC16C6330 PIC16C6340 PIC16C6350 PIC16C6360 PIC16C6370 PIC16C6380 PIC16C6390 PIC16C6400 PIC16C6410 PIC16C6420 PIC16C6430 PIC16C6440 PIC16C6450 PIC16C6460 PIC16C6470 PIC16C6480 PIC16C6490 PIC16C6500 PIC16C6510 PIC16C6520 PIC16C6530 PIC16C6540 PIC16C6550 PIC16C6560 PIC16C6570 PIC16C6580 PIC16C6590 PIC16C6600 PIC16C6610 PIC16C6620 PIC16C6630 PIC16C6640 PIC16C6650 PIC16C6660 PIC16C6670 PIC16C6680 PIC16C6690 PIC16C6700 PIC16C6710 PIC16C6720 PIC16C6730 PIC16C6740 PIC16C6750 PIC16C6760 PIC16C6770 PIC16C6780 PIC16C6790 PIC16C6800 PIC16C6810 PIC16C6820 PIC16C6830 PIC16C6840 PIC16C6850 PIC16C6860 PIC16C6870 PIC16C6880 PIC16C6890 PIC16C6900 PIC16C6910 PIC16C6920 PIC16C6930 PIC16C6940 PIC16C6950 PIC16C6960 PIC16C6970 PIC16C6980 PIC16C6990 PIC16C7000 PIC16C7010 PIC16C7020 PIC16C7030 PIC16C7040 PIC16C7050 PIC16C7060 PIC16C7070 PIC16C7080 PIC16C7090 PIC16C7100 PIC16C7110 PIC16C7120 PIC16C7130 PIC16C7140 PIC16C7150 PIC16C7160 PIC16C7170 PIC16C7180 PIC16C7190 PIC16C7200 PIC16C7210 PIC16C7220 PIC16C7230 PIC16C7240 PIC16C7250 PIC16C7260 PIC16C7270 PIC16C7280 PIC16C7290 PIC16C7300 PIC16C7310 PIC16C7320 PIC16C7330 PIC16C7340 PIC16C7350 PIC16C7360 PIC16C7370 PIC16C7380 PIC16C7390 PIC16C7400 PIC16C7410 PIC16C7420 PIC16C7430 PIC16C7440 PIC16C7450 PIC16C7460 PIC16C7470 PIC16C7480 PIC16C7490 PIC16C7500 PIC16C7510 PIC16C7520 PIC16C7530 PIC16C7540 PIC16C7550 PIC16C7560 PIC16C7570 PIC16C7580 PIC16C7590 PIC16C7600 PIC16C7610 PIC16C7620 PIC16C7630 PIC16C7640 PIC16C7650 PIC16C7660 PIC16C7670 PIC16C7680 PIC16C7690 PIC16C7700 PIC16C7710 PIC16C7720 PIC16C7730 PIC16C7740 PIC16C7750 PIC16C7760 PIC16C7770 PIC16C7780 PIC16C7790 PIC16C7800 PIC16C7810 PIC16C7820 PIC16C7830 PIC16C7840 PIC16C7850 PIC16C7860 PIC16C7870 PIC16C7880 PIC16C7890 PIC16C7900 PIC16C7910 PIC16C7920 PIC16C7930 PIC16C7940 PIC16C7950 PIC16C7960 PIC16C7970 PIC16C7980 PIC16C7990 PIC16C8000 PIC16C8010 PIC16C8020 PIC16C8030 PIC16C8040 PIC16C8050 PIC16C8060 PIC16C8070 PIC16C8080 PIC16C8090 PIC16C8100 PIC16C8110 PIC16C8120 PIC16C8130 PIC16C8140 PIC16C8150 PIC16C8160 PIC16C8170 PIC16C8180 PIC16C8190 PIC16C8200 PIC16C8210 PIC16C8220 PIC16C8230 PIC16C8240 PIC16C8250 PIC16C8260 PIC16C8270 PIC16C8280 PIC16C8290 PIC16C8300 PIC16C8310 PIC16C8320 PIC16C8330 PIC16C8340 PIC16C8350 PIC16C8360 PIC16C8370 PIC16C8380 PIC16C8390 PIC16C8400 PIC16C8410 PIC16C8420 PIC16C8430 PIC16C8440 PIC16C8450 PIC16C8460 PIC16C8470 PIC16C8480 PIC16C8490 PIC16C8500 PIC16C8510 PIC16C8520 PIC16C8530 PIC16C8540 PIC16C8550 PIC16C8560 PIC16C8570 PIC16C8580 PIC16C8590 PIC16C8600 PIC16C8610 PIC16C8620 PIC16C8630 PIC16C8640 PIC16C8650 PIC16C8660 PIC16C8670 PIC16C8680 PIC16C8690 PIC16C8700 PIC16C8710 PIC16C8720 PIC16C8730 PIC16C8740 PIC16C8750 PIC16C8760 PIC16C8770 PIC16C8780 PIC16C8790 PIC16C8800 PIC16C8810 PIC16C8820 PIC16C8830 PIC16C8840 PIC16C8850 PIC16C8860 PIC16C8870 PIC16C8880 PIC16C8890 PIC16C8900 PIC16C8910 PIC16C8920 PIC16C8930 PIC16C8940 PIC16C8950 PIC16C8960 PIC16C8970 PIC16C8980 PIC16C8990 PIC16C9000 PIC16C9010 PIC16C9020 PIC16C9030 PIC16C9040 PIC16C9050 PIC16C9060 PIC16C9070 PIC16C9080 PIC16C9090 PIC16C9100 PIC16C9110 PIC16C9120 PIC16C9130 PIC16C9140 PIC16C9150 PIC16C9160 PIC16C9170 PIC16C9180 PIC16C9190 PIC16C9200 PIC16C9210 PIC16C9220 PIC16C9230 PIC16C9240 PIC16C9250 PIC16C9260 PIC16C9270 PIC16C9280 PIC16C9290 PIC16C9300 PIC16C9310 PIC16C9320 PIC16C9330 PIC16C9340 PIC16C9350 PIC16C9360 PIC16C9370 PIC16C9380 PIC16C9390 PIC16C9400 PIC16C9410 PIC16C9420 PIC16C9430 PIC16C9440 PIC16C9450 PIC16C9460 PIC16C9470 PIC16C9480 PIC16C9490 PIC16C9500 PIC16C9510 PIC16C9520 PIC16C9530 PIC16C9540 PIC16C9550 PIC16C9560 PIC16C9570 PIC16C9580 PIC16C9590 PIC16C9600 PIC16C9610 PIC16C9620 PIC16C9630 PIC16C9640 PIC16C9650 PIC16C9660 PIC16C9670 PIC16C9680 PIC16C9690 PIC16C9700 PIC16C9710 PIC16C9720 PIC16C9730 PIC16C9740 PIC16C9750 PIC16C9760 PIC16C9770 PIC16C9780 PIC16C9790 PIC16C9800 PIC16C9810 PIC16C9820 PIC16C9830 PIC16C9840 PIC16C9850 PIC16C9860 PIC16C9870 PIC16C9880 PIC16C9890 PIC16C9900 PIC16C9910 PIC16C9920 PIC16C9930 PIC16C9940 PIC16C9950 PIC16C9960 PIC16C9970 PIC16C9980 PIC16C9990 PIC17C430 PIC17C440 PIC17C450 PIC17C460 PIC17C470 PIC17C480 PIC17C490 PIC17C500 PIC17C510 PIC17C520 PIC17C530 PIC17C540 PIC17C550 PIC17C560 PIC17C570 PIC17C580 PIC17C590 PIC17C600 PIC17C610 PIC17C620 PIC17C630 PIC17C640 PIC17C650 PIC17C660 PIC17C670 PIC17C680 PIC17C690 PIC17C700 PIC17C710 PIC17C720 PIC17C730 PIC17C740 PIC17C750 PIC17C760 PIC17C770 PIC17C780 PIC17C790 PIC17C800 PIC17C810 PIC17C820 PIC17C830 PIC17C840 PIC17C850 PIC1

Input/Output Group

One of the most distinctive features of EasyPIC™ v7 for dsPIC30® are its Input/Output PORT groups. They add so much to the connectivity potential of the board.

Everything is grouped together

PORT **headers**, PORT **buttons** and PORT **LEDs** are next to each other, and grouped together. It makes development easier, and the entire EasyPIC™ v7 for dsPIC30® cleaner and well organized. We have also provided an **additional PORT headers** on the left side of the board, so you can access any pin you want from both sides of the board.

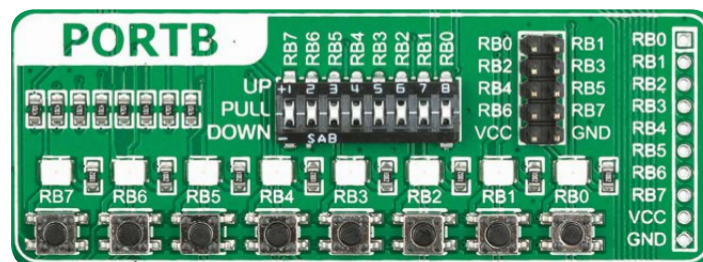


Figure 10-1: I/O group contains PORT headers, tri-state pull up/down DIP switch, buttons and LEDs all in one place

Tri-state pull-up/down DIP switches

Tri-state DIP switches, like **SW1** on **Figure 10-2**, are used to enable 4K7 pull-up or pull-down resistor on any desired port pin. Each of those switches has three states:

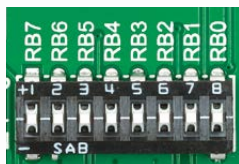


Figure 10-2: Tri-state DIP switch on PORTB

1. **middle position** disables both pull-up and pull-down feature from the PORT pin
2. **up position** connects the resistor in pull-up state to the selected pin
3. **down position** connects the resistor in pull-down state to the selected PORT pin.

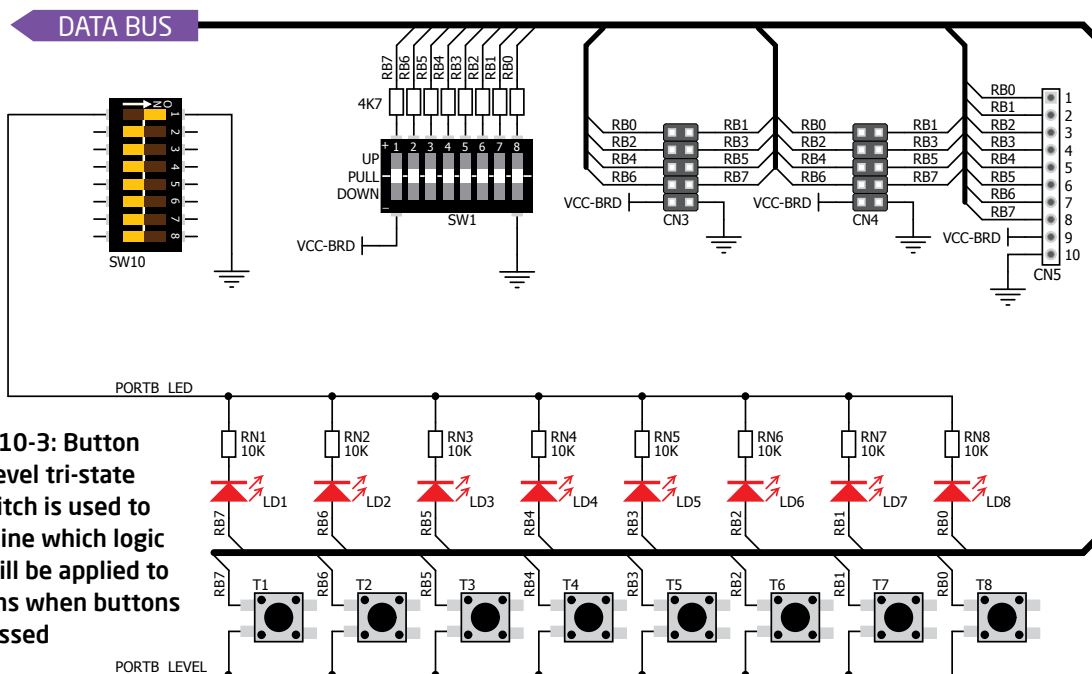


Figure 10-3: Button press level tri-state DIP switch is used to determine which logic level will be applied to port pins when buttons are pressed


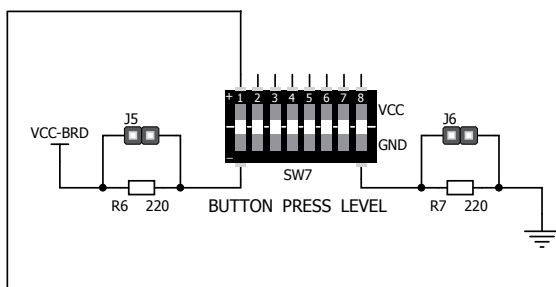


Figure 10-4: Schematic of the single I/O group connected to microcontroller PORTB

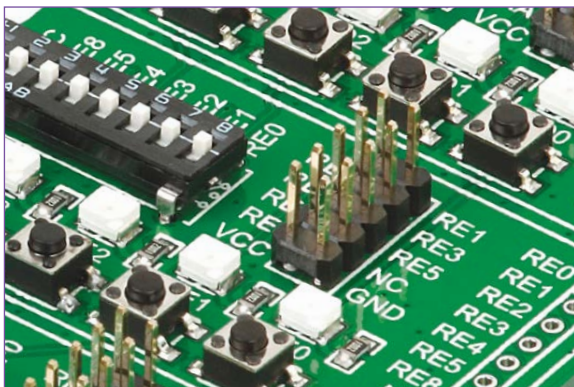

Headers

With enhanced connectivity as one of the key features of EasyPIC™ v7 for dsPIC30®, we have provided **two connection headers for each PORT**. I/O PORT group contains one male IDC10 2x5 header (like **CN3** on **Figure 10-4**) and one 1x10 row of connection pads (like **CN5** on **Figure 10-4**). There is **one more IDC10 header** available on the left side of the board, next to the section with displays. These headers are all compatible with all MikroElektronika accessory boards, and enable simple connection.


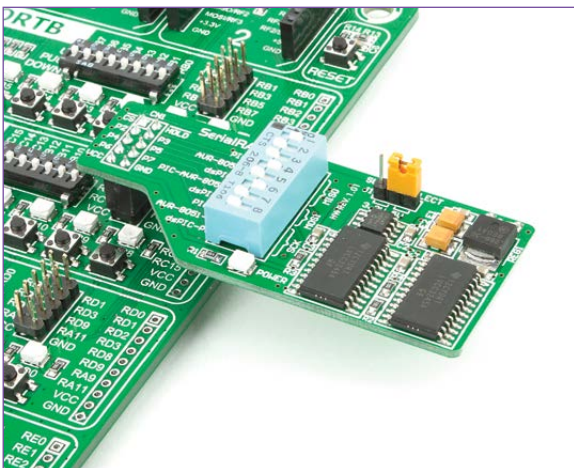


Figure 10-5: IDC10 male headers enable easy connection with MikroElektronika accessory boards

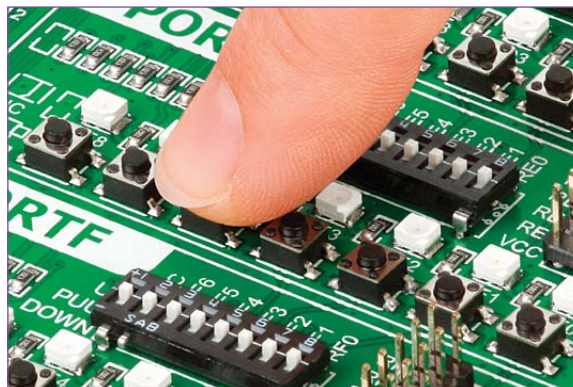

Buttons




Figure 10-6: Button press level DIP switch (tri-state)

The logic state of all microcontroller digital inputs may be changed using **push buttons**. Tri-state DIP switch **SW7** is available for selecting which logic state will be applied to corresponding MCU pin when button is pressed, for each I/O port separately. If you, for example, place **SW7.1** in **VCC** position, then pressing any of push buttons in PORTB I/O group will apply logic one to the appropriate microcontroller pin. The same goes for **GND**. If DIP switch is in the middle position neither of two logic states will be applied to the appropriate microcontroller pin. You can disable pin protection 220ohm resistors by placing jumpers **J5** and **J6**, which will connect your push buttons directly to VCC or GND. Be aware that doing so you may accidentally damage MCU in case of wrong usage.




Reset Button

In the far upper right section of the board, there is a **RESET button**, which can be used to manually reset the microcontroller.

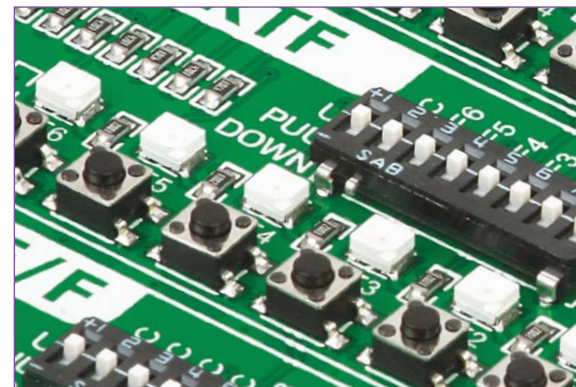

LEDs

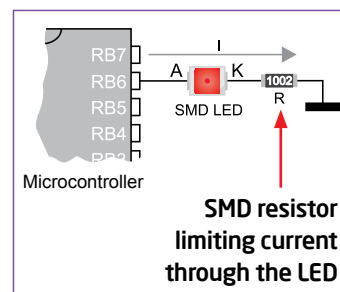

LED (Light-Emitting Diode) is a highly efficient electronic light source. When connecting LEDs, it is necessary to place a current limiting resistor in series so that LEDs are provided with

the current value specified by the manufacturer. The current varies from 0.2mA to 20mA, depending on the type of the LED and the manufacturer. The EasyPIC™ v7 for dsPIC30® board uses low-current LEDs with typical current consumption of 0.2mA or 0.3mA. Board contains 42 LEDs which can be used for visual indication of the logic state on PORT pins. An active LED indicates that a logic high (1) is present on the pin. In order to enable PORT LEDs, it is necessary to enable the corresponding DIP switch on **SW10** (**Figure 10-7**).


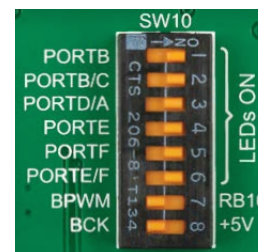


Figure 10-7: SW10.1 through SW10.6 switches are used to enable PORT LEDs

LCD 2x16 characters

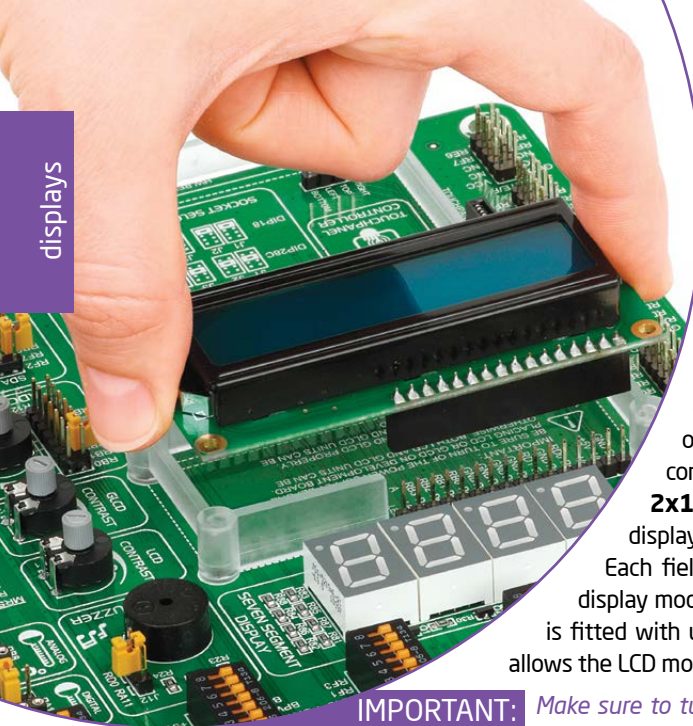

Liquid Crystal Displays or LCDs are cheap and popular way of representing information to the end user of some electronic device. Character LCDs can be used to represent standard and custom characters in the predefined number of fields. EasyPIC™ v7 for dsPIC30® provides the connector and the necessary interface for supporting **2x16 character LCDs** in 4-bit mode. This type of display has two rows consisted of 16 character fields. Each field is a 7x5 pixel matrix. Communication with the display module is done through **CN7** display connector. Board is fitted with uniquely designed plastic display distancer, which allows the LCD module to perfectly and firmly fit into place.

IMPORTANT: Make sure to turn off the power supply before placing LCD onto the board. Otherwise your display can be permanently damaged.

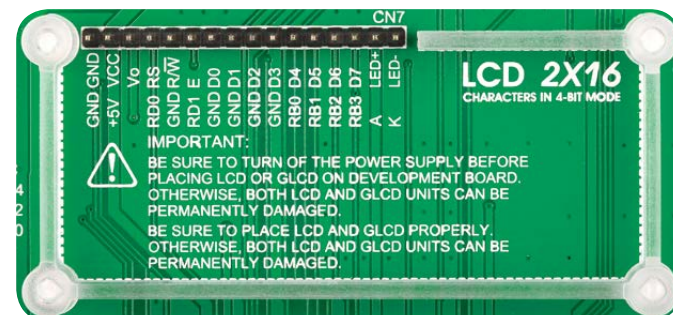


Figure 11-1: On-board LCD 2x16 display connector

Connector pinout explained

GND and **VCC** - Display power supply lines

V0 - LCD contrast level from potentiometer P4

RS - Register Select Signal line

E - Display Enable line


R/W - Determines whether display is in Read or Write mode. It's always connected to GND, leaving the display in Write mode all the time.

D0-D3 - Display is supported in 4-bit data mode, so lower half of the data byte interface is connected to GND.

D4-D7 - Upper half of the data byte

LED+ - Connection with the back light LED anode

LED- - Connection with the back light LED cathode

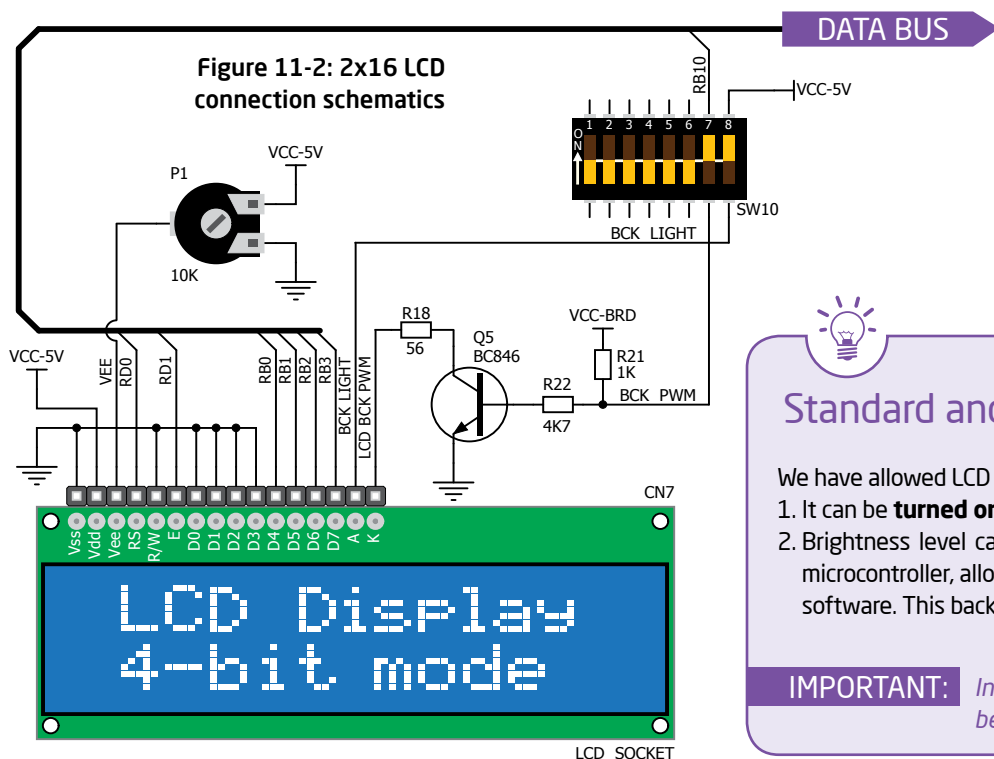


Standard and PWM-driven back light

We have allowed LCD back light to be enabled in two different ways:

1. It can be **turned on with full brightness** using **SW10.8** switch.
2. Brightness level can be determined **with PWM signal** from the microcontroller, allowing you to write custom back light controlling software. This back light mode is enabled with **SW10.7** switch.


IMPORTANT: In order to use PWM back light both **SW10.7** and **SW10.8** switches must be enabled at the same time.

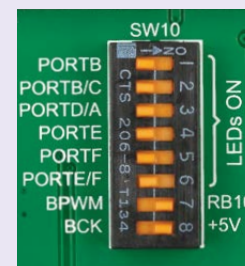

GLCD 128x64

Graphical Liquid Crystal Displays, or GLCDs are used to display monochromatic graphical content, such as text, images, human-machine interfaces and other content. EasyPIC™ v7 for dsPIC30® provides the connector and necessary interface for supporting GLCD with resolution of 128x64 pixels, driven by the KS108 or compatible display controller. Communication with the display module is done through **CN16** display connector. Board is fitted with uniquely designed plastic display distancer, which allows the GLCD module to perfectly and firmly fit into place.

Display connector is routed to RF0, RF1, RF4, RF5 (control lines) and to RB0-RB3, RD0-RD3 (data lines) of the microcontroller sockets. Since the same ports are used by 2x16 character LCD display, you cannot use both displays simultaneously. You can control the display contrast using dedicated potentiometer **P2**. Full brightness display back light can be enabled with **SW10.8** switch, and PWM-driven back light with **SW10.7** switch.

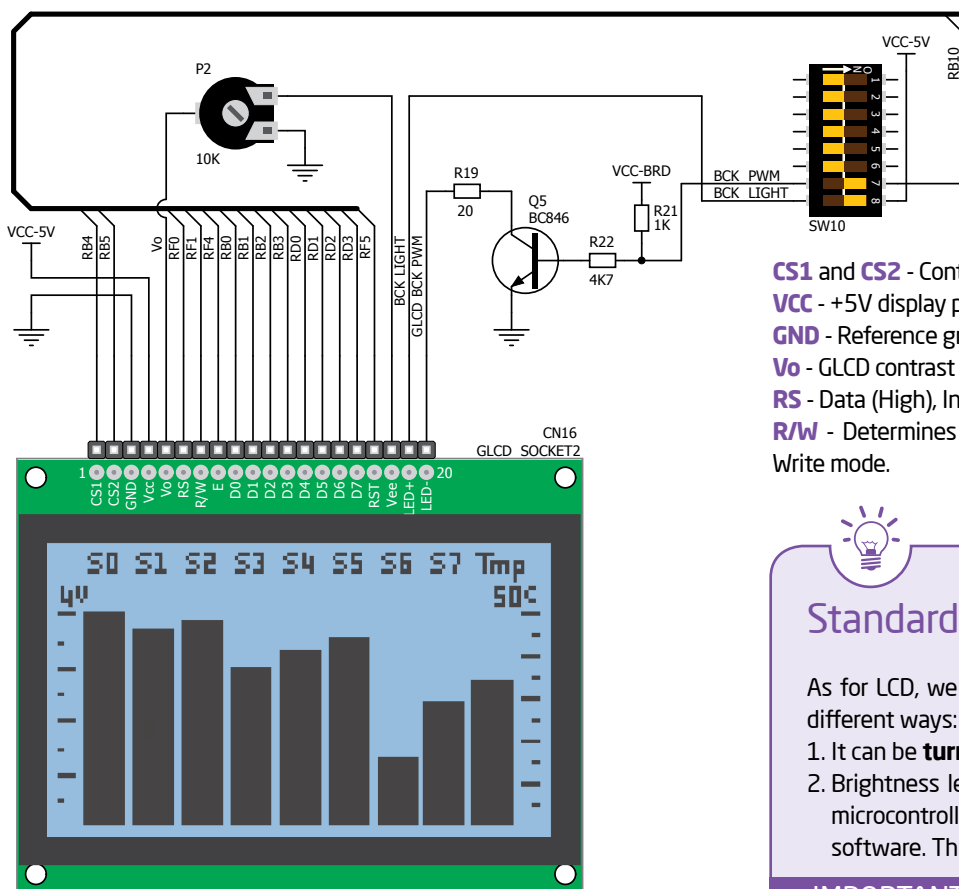

DATA BUS

Connector pinout explained

CS1 and **CS2** - Controller Chip Select lines
VCC - +5V display power supply
GND - Reference ground
V0 - GLCD contrast level from potentiometer P3
RS - Data (High), Instruction (Low) selection line
R/W - Determines whether display is in Read or Write mode.

E - Display Enable line
D0-D7 - Data lines
RST - Display reset line
Vee - Reference voltage for GLCD contrast potentiometer P3
LED+ - Connection with the back light LED anode
LED- - Connection with the back light LED cathode



Standard and PWM-driven back light

As for LCD, we have allowed GLCD back light to be enabled in two different ways:

1. It can be **turned on with full brightness** using **SW10.8** switch.
2. Brightness level can be determined **with PWM signal** from the microcontroller, allowing you to write custom back light controlling software. This back light mode is enabled with **SW10.7** switch.

IMPORTANT: In order to use PWM back light both **SW10.7** and **SW10.8** switches must be enabled at the same time.



Figure 12-1: GLCD 128x64 connection schematics

Touch panel controller

Touch panel is a glass panel whose surface is covered with two layers of resistive material. When the screen is pressed, the outer layer is pushed onto the inner layer and appropriate controllers can measure that pressure and pinpoint its location. This is how touch panels can be used as an input devices. EasyPIC™ v7 for dsPIC30®

is equipped with touch panel controller and connector for **4-wire resistive touch panels**. It can very accurately register pressure at a specific point, representing the touch coordinates in the form of analog voltages, which can then be easily converted to X and Y values. Touch panel comes as a part of display.

Correctly placing the touch panel cable into the connector

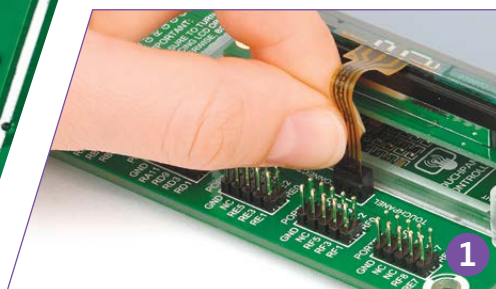


Figure 13-1: Put Touch Panel flat cable in the connector

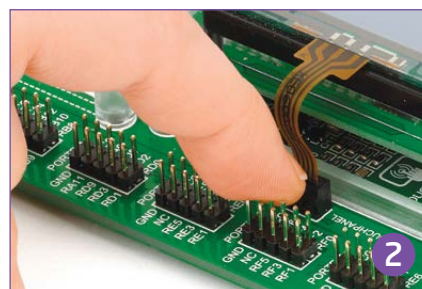


Figure 13-2: Use a tip of your finger to push it inside

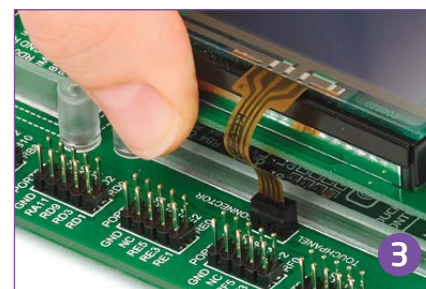


Figure 13-3: Now place GLCD with Touch panel into GLCD socket

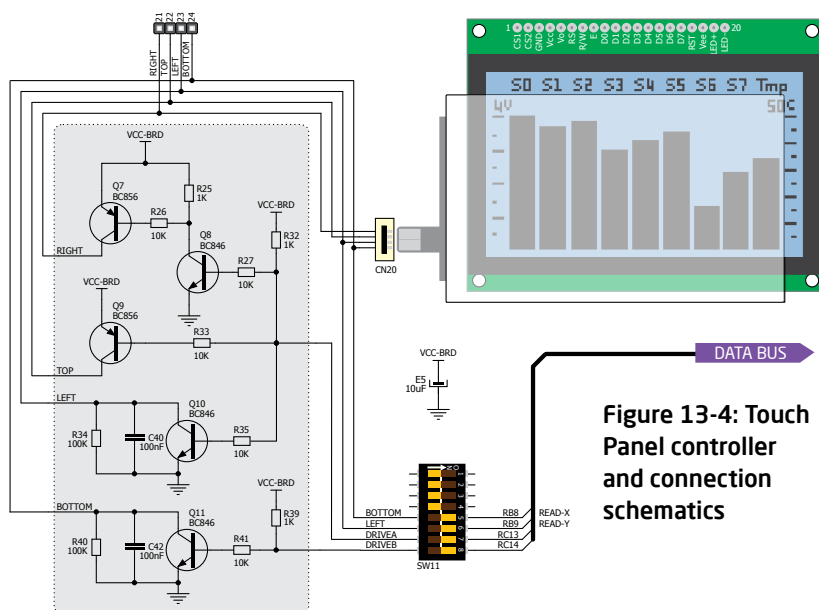


Figure 13-4: Touch Panel controller and connection schematics



Enabling Touch panel

Touch panel is enabled using **SW11.5, SW11.6, SW11.7** and **SW11.8** switches. They connect **BOTTOM (READ-X)** and **LEFT (READ-Y)** lines of the touch panel with **RB8** and **RB9** analog inputs, and **DRIVEA** and **DRIVEB** with **RC13** and **RC14** digital outputs on microcontroller sockets. Make sure to disconnect other peripherals, LEDs and additional pull-up or pull-down resistors from the interface lines in order not to interfere with signal/data integrity.

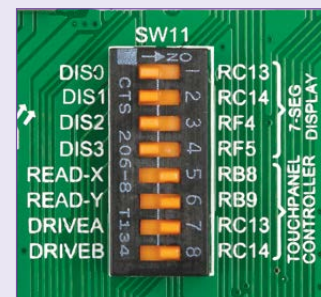


Figure 13-5: Turn on switches 5 through 8 on SW11 to enable Touch panel controller

4 digit 7-seg display

One seven segment digit consist of 7+1 LEDs which are arranged in a specific formation which can be used to represent digits from 0 to 9 and even some letters. One additional LED is used for marking the decimal dot, in case you want to write a decimal point in the desired segment. EasyPIC™ v7 for dsPIC30® contains four of these digits put together to form 4-digit 7-segment display. Driving such a display is done using **multiplexing techniques**. Data lines are shared between segments, and therefore the same segment LEDs in each digit are connected in parallel. Each digit has it's **unique digit select line**,

which is used to enable the digit to which the data is currently being sent. By multiplexing data through all four segments fast enough, you create an illusion that all four segments are in operation simultaneously. This is possible because human eye has a slower reaction time than the mention changes.

This way you can represent numbers in decimal or hexadecimal form. Eight data lines that are common for all the digits are connected to PORTB, and digit select lines are connected to RC13, RC14, RF4 and RF5 lines on the microcontroller sockets.



Enabling the display

To enable digit select lines for the 4-digit 7-segment display you have to turn on **SW11.1, SW11.2, SW11.3** and **SW11.4** switches. Digit select lines are connected to **RC13, RC14, RF4** and **RF5** pins on the microcontroller sockets, while data lines are connected to **RB0 - RB7** pins. Make sure to disconnect other peripherals from the interface lines in order not to interfere with signal/data integrity.

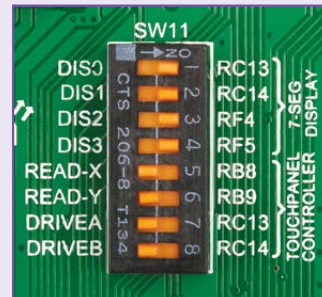


Figure 14-1: Turn on switches 1 through 4 on SW11 to enable 4-digit 7-seg display

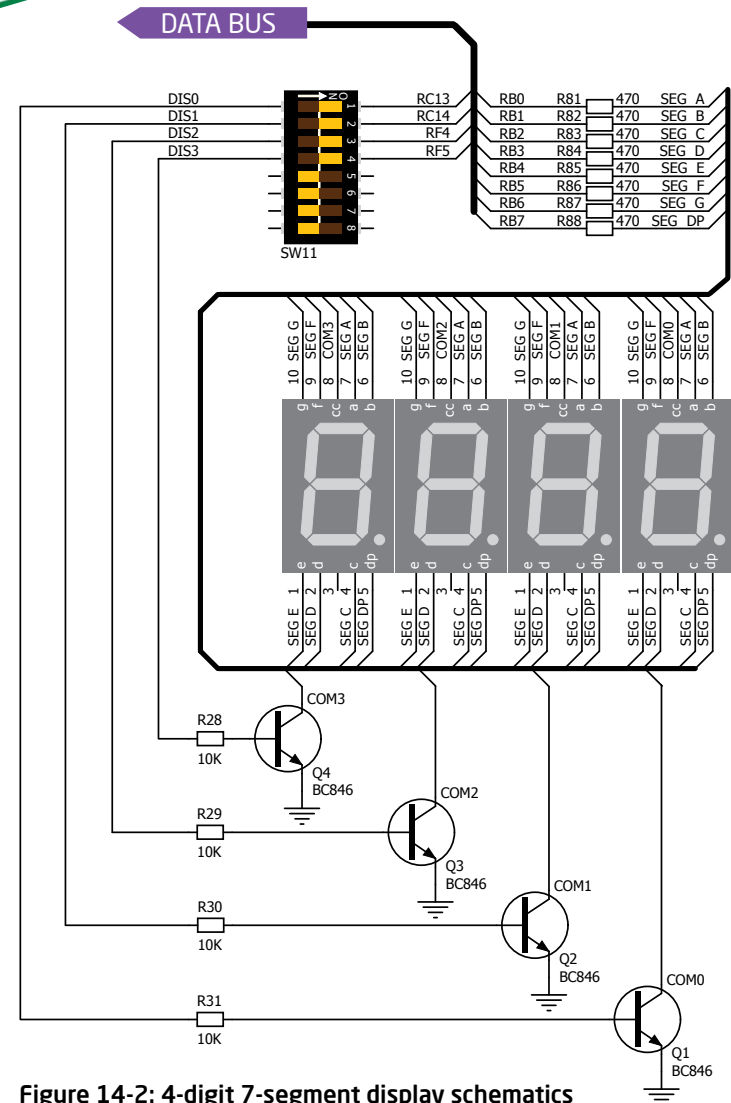
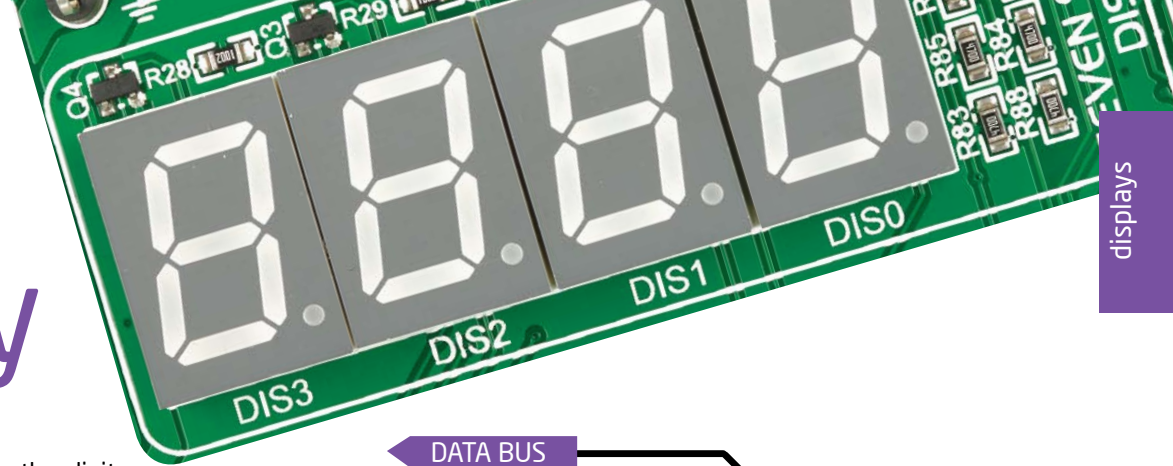


Figure 14-2: 4-digit 7-segment display schematics

DS1820 - Digital Temperature Sensor

DS1820 is a digital temperature sensor that uses **1-wire® interface** for its operation. It is capable of measuring temperatures within the range of -55 to 128°C, and provides $\pm 0.5^\circ\text{C}$ accuracy for temperatures within the range of -10 to 85°C. It requires 3V to 5.5V power supply for stable operation. It takes maximum

of 750ms for the DS1820 to calculate temperature with 9-bit resolution. **1-wire® serial communication** enables data to be transferred over a single communication line, while the process itself is under the control of the master microcontroller. The advantage of such communication is that only one microcontroller pin is used. Multiple

sensors can be connected on the same line. All slave devices by default have a unique ID code, which enables the master device to easily identify all devices sharing the same interface. Board provides a separate socket (**TS1**) for the DS1820. Communication line with the microcontroller is connected via jumper **J9**.

Enabling DS1820 Sensor

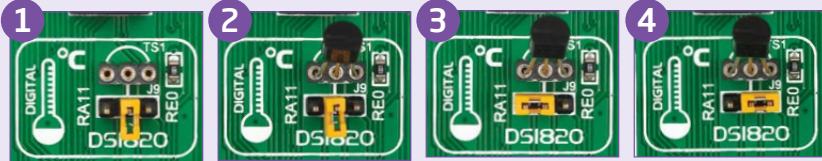


Figure 15-1:
DS1820 not connected

Figure 15-2:
DS1820 placed in socket

Figure 15-3:
DS1820 connected to RA11 pin

Figure 15-4:
DS1820 connected to RE0 pin

EasyPIC™ v7 for dsPIC30® enables you to establish 1-wire® communication between **DS1820** and the microcontroller via **RA11** or **RE0** microcontroller pins. The selection of either of those two lines is done using **J9** jumper. When placing the sensor in the socket make sure that half-circle on the board's silkscreen markings matches the rounded part of the DS1820 sensor. If you accidentally connect the sensor the other way, it may be permanently damaged. Make sure to disconnect other peripherals (except 1-wire), LEDs and additional pull-up or pull-down resistors from the interface lines in order not to interfere with signal/data integrity.

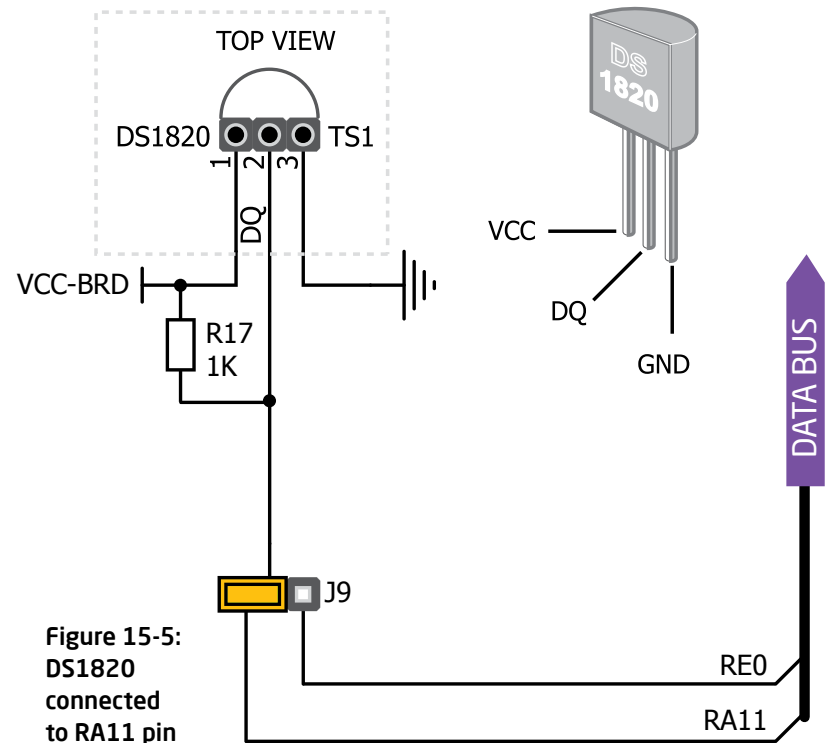



Figure 15-5:
DS1820 connected to RA11 pin

LM35 - Analog Temperature Sensor

The **LM35** is a low-cost precision integrated-circuit temperature sensor, whose output voltage is linearly proportional to the Celsius (Centigrade) temperature. The LM35 thus has an advantage over linear temperature sensors calibrated in ° Kelvin, as the user is not required to subtract a large constant voltage from its output to

obtain convenient Centigrade scaling. It has a linear $+10.0 \text{ mV}/^{\circ}\text{C}$ scale factor and less than $60 \mu\text{A}$ current drain. As it draws only $60 \mu\text{A}$ from its supply, it has very low self-heating, less than 0.1°C in still air. EasyPIC™ v7 for dsPIC30® enables you to get analog readings from the LM35 sensor in restricted temperature range from $+2^{\circ}\text{C}$ to $+150^{\circ}\text{C}$.

Board provides a separate socket (**TS2**) for the LM35 sensor in TO-92 plastic packaging. Readings are done with microcontroller using single analog input line, which is selected with jumper **J13**. Jumper connects the sensor with either **PB8** or **PB10** microcontroller pins.

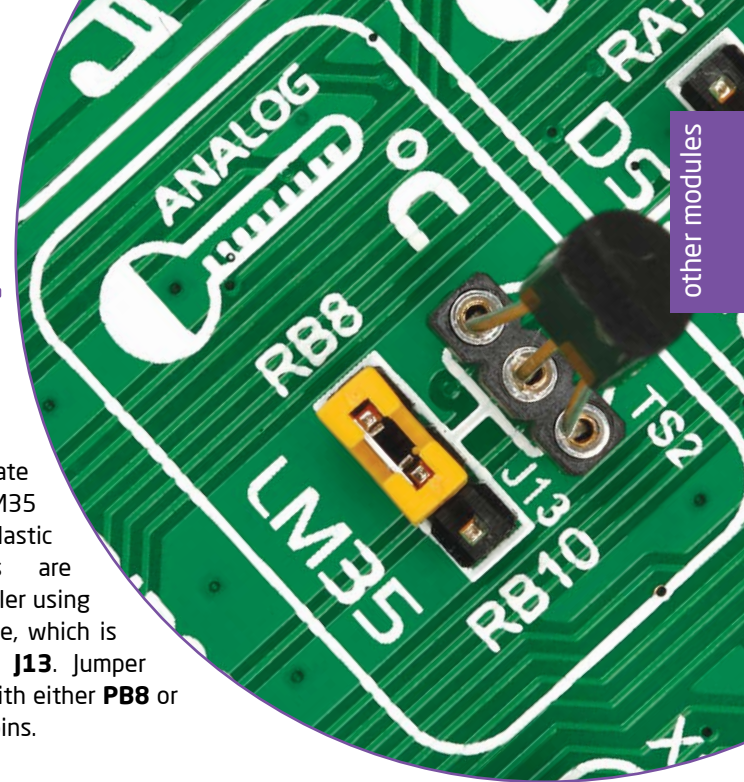

Enabling LM35 Sensor

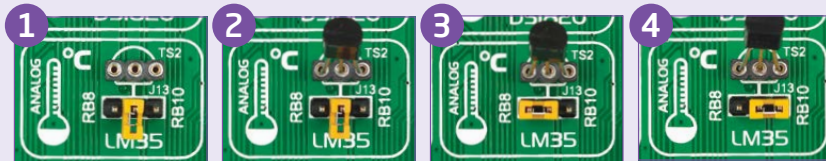


Figure 16-1:
LM35 not connected

Figure 16-2:
LM35 placed in socket

Figure 16-3:
LM35 connected to RB8 pin

Figure 16-4:
LM35 connected to RB10 pin

EasyPIC™ v7 for dsPIC30® enables you to get analog readings from the LM35 sensor using **RB8** or **RB10** microcontroller pins. The selection of either of those two lines is done using **J13** jumper. When placing the sensor in the socket make sure that half-circle on the board's silkscreen markings matches the rounded part of the LM35 sensor. If you accidentally connect the sensor the other way, it can be permanently damaged and you might need to replace it with another one. During the sensor readings make sure that no other device is using the selected analog line, as that may interfere with the readings.


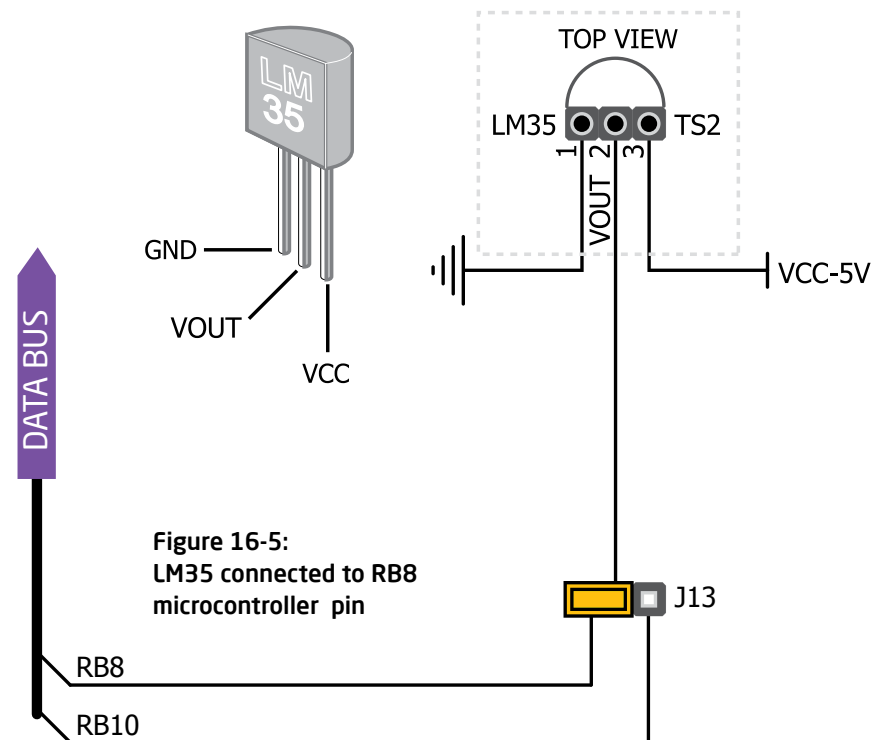


Figure 16-5:
LM35 connected to RB8 microcontroller pin

ADC inputs

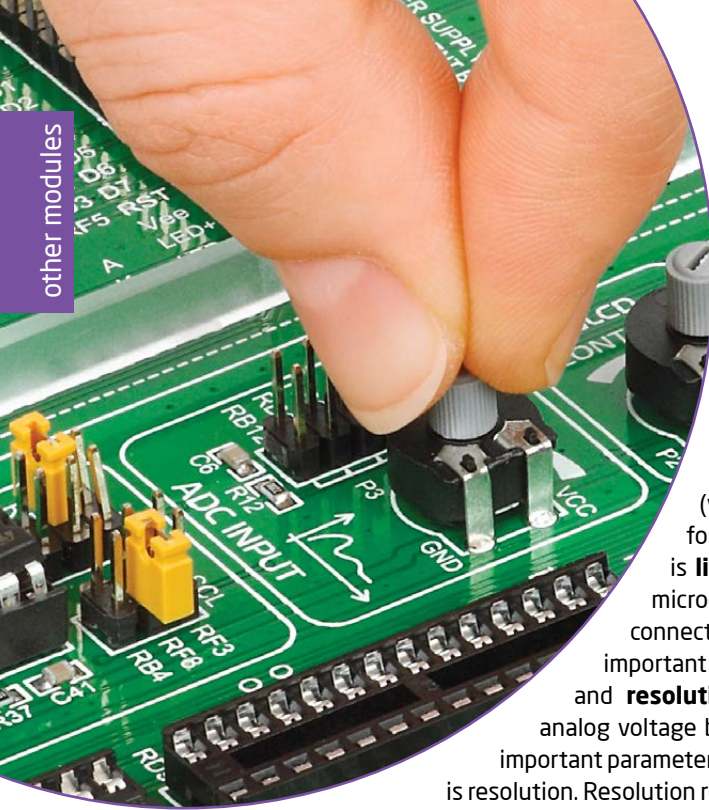

Digital signals have **two discrete states**, which are decoded as **high** and **low**, and interpreted as **logic 1** and **logic 0**. **Analog signals**, on the other hand, are **continuous**, and can have any value within defined range. **A/D converters** are specialized circuits which can convert analog signals (voltages) into a digital representation, usually in form of an **integer number**. The value of this number is **linearly dependent** on the input voltage value. Most microcontrollers nowadays internally have A/D converters connected to one or more input pins. Some of the most important parameters of A/D converters are **conversion time** and **resolution**. Conversion time determines how fast can an analog voltage be represented in form of a digital number. This is an important parameter if you need fast data acquisition. The other parameter is resolution. Resolution represents the number of discrete steps that supported voltage range can be divided into. It determines the sensitivity of the A/D converter.

Resolution is represented in maximum number of bits that resulting number occupies. Most PIC[®] microcontrollers have 12-bit resolution, meaning that maximum value of conversion can be represented with 12 bits, which converted to integer is $2^{12}=4096$. This means that supported voltage range, for example from 0-5V, can be divided into 4096 discrete steps of about 1.22mV. We gave you the possibility to set microcontroller voltage reference to 4.096V DC by putting jumper **J10 (RB0/VREF+)** to 4.096V position, **Figure 17-2**. This can be done **only when the power supply is 5V (jumper J16 in 5V position)**. In that case discrete steps are 1mV. When using voltage reference module, make sure to disconnect other peripherals from RB0 pin. EasyPIC[™] v7 for dsPIC30[®] provides an interface in form of potentiometer for simulating analog input voltages that can be routed to any of the 7 supported analog input pins.


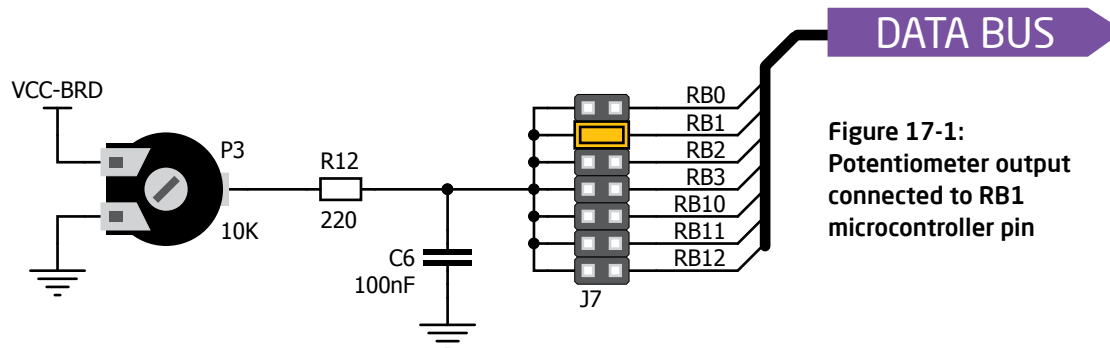


Figure 17-1:
Potentiometer output
connected to RB1
microcontroller pin



Enabling ADC inputs

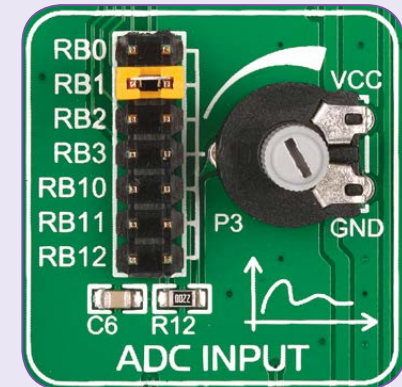

In order to connect the output of the potentiometer **P3** to **RB0, RB1, RB2, RB3, RB10, RB11** or **RB12** analog microcontroller inputs, you have to place the jumper **J7** in the desired position. By moving the potentiometer knob, you can create voltages in range from **GND** to **VCC-BRD**.

In order to set microcontroller voltage reference, you must place jumper **J10 (RB0/VREF+)** to appropriate position. Use 4.096V position **ONLY** when the jumper **J16** is in 5V position.

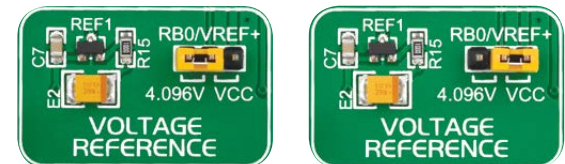


Figure 17-2: use jumper J10 to set microcontroller voltage reference to 4.096V or VCC position

I²C EEPROM



Enabling I²C EEPROM



In order to connect I²C EEPROM to the microcontroller you must place **J14 (SCL)** and **J15 (SDA)** jumpers in appropriate position. **1k Ω** pull-up resistors necessary for I²C communication are already provided on **SDA** and **SCL** lines. Prior to using EEPROM in your application, make sure to disconnect other peripherals, LEDs and additional pull-up or pull-down resistors from the interface lines in order not to interfere with signal/data integrity.

EEPROM is short for **Electrically Erasable Programmable Read Only Memory**. It is usually a secondary storage memory in devices containing data that is retained even if the device loses power supply. Because of the ability to alter single bytes of data, EEPROM devices are used to store personal preference and configuration data in a wide spectrum of consumer, automotive, telecommunication, medical, industrial, and PC applications.

EasyPIC™ v7 for dsPIC30® supports serial EEPROM which uses **I²C communication interface** and has **1024 bytes** of available memory. Board contains socket for serial EEPROMs in DIP8 packaging, so you can easily exchange it with different memory size EEPROM IC. EEPROM itself supports single byte or 16-byte (page) write and read operations. Data rate is 400 kHz for both 3.3V and 5V power supply.

What is I²C?

I²C is a multi-master serial single-ended bus that is used to attach low-speed peripherals to computer or embedded systems. I²C uses only two open-drain lines, **Serial Data Line (SDA)** and **Serial Clock (SCL)**, pulled up with resistors. **SCL** line is driven by a master, while **SDA** is used as bidirectional line either by master or slave device. Up to 112 slave devices can be connected to the same bus. Each slave must have a unique address.

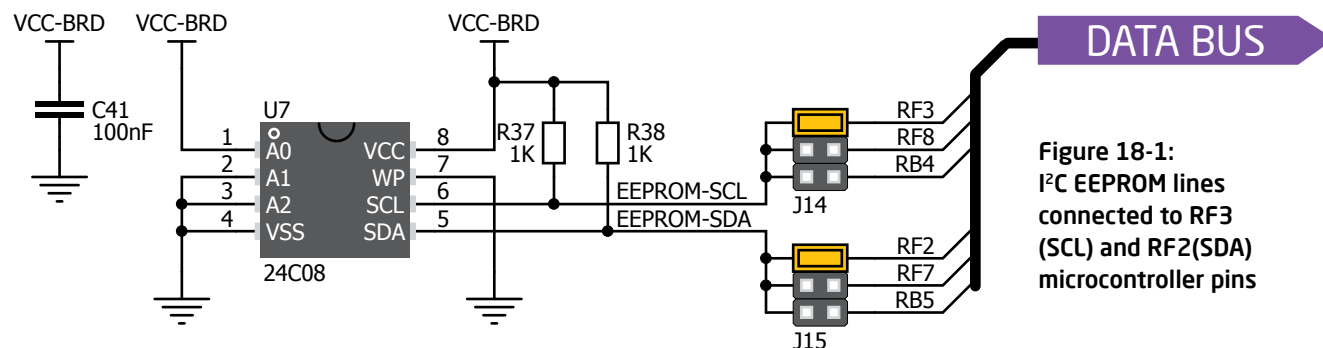


Figure 18-1:
I²C EEPROM lines
connected to RF3
(SCL) and RF2(SDA)
microcontroller pins

Piezo Buzzer

Piezo electricity is the charge which accumulates in certain solid materials in response to mechanical pressure, but also providing the charge to the piezoelectric material causes it to physically deform. One of the most widely used applications of piezo electricity is the production of sound generators, called piezo buzzers. **Piezo buzzer** is an electric component that comes in different shapes and sizes, which can be used to create sound waves when provided with analog electrical signal. EasyPIC™ v7 for dsPIC30® comes with piezo buzzer which can be connected either to **RDO** or **RA11** microcontroller pins, which is determined by the position of **J12** jumper. Buzzer is driven by transistor **Q6** (Figure 19-1). Microcontrollers can create sound by generating a PWM (Pulse Width Modulated) signal - a **square**

wave signal, which is nothing more than a sequence of logic zeros and ones. Frequency of the square signal determines the pitch of the generated sound, and duty cycle of the signal can be used to increase or decrease the volume in the range from 0% to 100% of the duty cycle. You can generate PWM signal using hardware capture-compare module, which is usually available in most microcontrollers, or by writing a custom software which emulates the desired signal waveform.

Supported sound frequencies

Piezo buzzer's resonant frequency (where you can expect it's best performance) is **3.8kHz**, but you can also use it to create sound in the range between **2kHz** and **4kHz**.

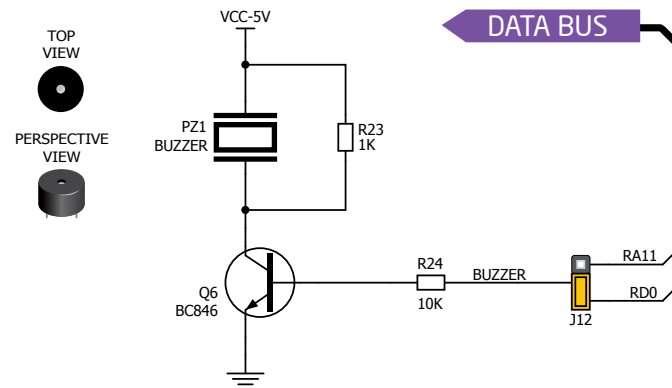


Figure 19-1: Piezo buzzer connected to RDO microcontroller pin

Freq = 3kHz, Duty Cycle = 50%



Freq = 3kHz,
Volume = 50%

Freq = 3kHz, Duty Cycle = 80%



Freq = 3kHz,
Volume = 80%

Freq = 3kHz, Duty Cycle = 20%



Freq = 3kHz,
Volume = 20%

How to make it sing?

Buzzer starts "singing" when you provide PWM signal from the microcontroller to the buzzer driver. The pitch of the sound is determined by the frequency, and amplitude is determined by the duty cycle of the PWM signal.

Enabling Piezo Buzzer

In order to use the on-board Piezo Buzzer in your application, you first have to connect the transistor driver of piezo buzzer to the appropriate microcontroller pin. This is done using jumper **J12**. You can place the jumper in two positions, thus connecting the buzzer driver to either **RDO** or **RA11** microcontroller pin.




Figure 19-2: Use jumper **J12** to connect Piezo buzzer on **RDO** or **RA11** pin



Additional GNDs

EasyPIC™ v7 for dsPIC30® contains three **GND pins** located in different sections of the board, which allow you to easily connect oscilloscope GND reference when you monitor signals on microcontroller pins, or signals of on-board modules.

- 1 GND is located between RS-232 UART module and SW8 DIP switch.
- 2 GND is located on the left side of the PORTF I/O group
- 3 GND is located on the left side of the PORTD/A I/O group

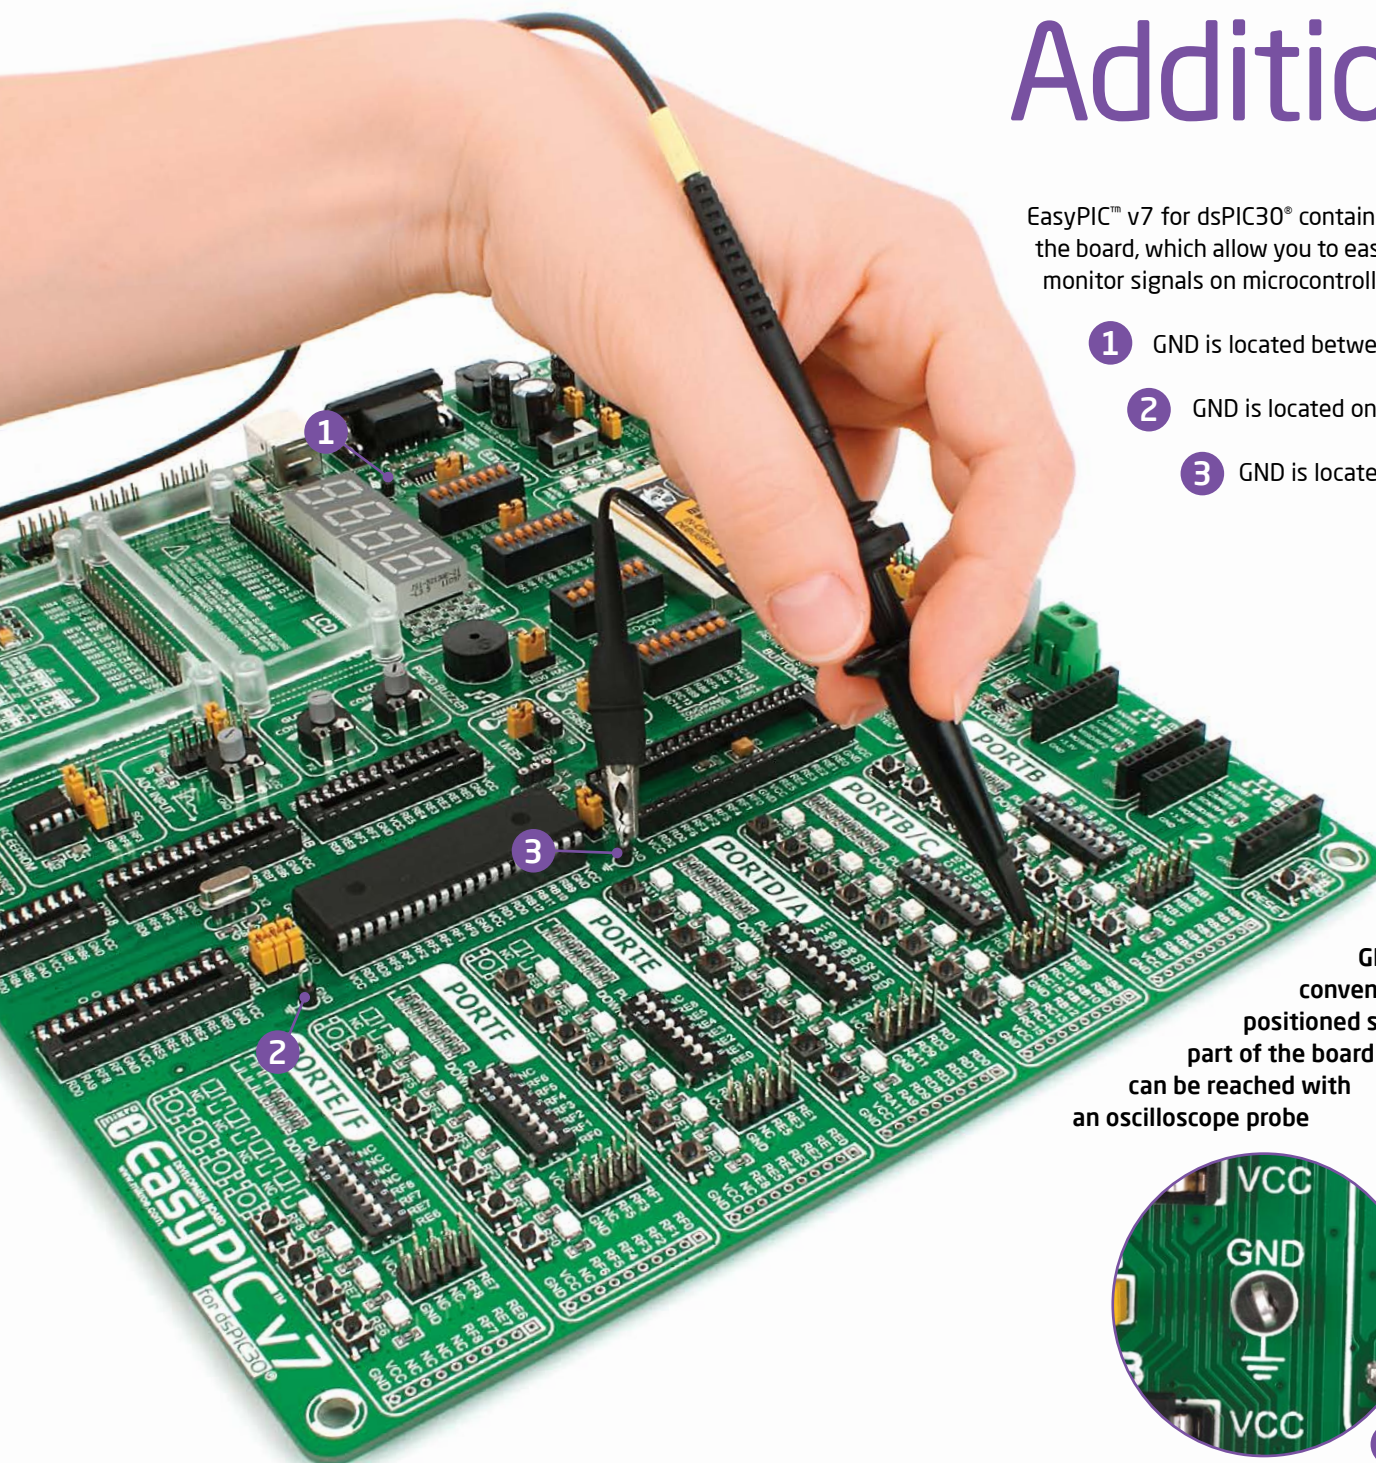


1

Figure 20-1:
3 oscilloscope
GND pins are
conveniently
positioned so each
part of the board
can be reached with
an oscilloscope probe



2

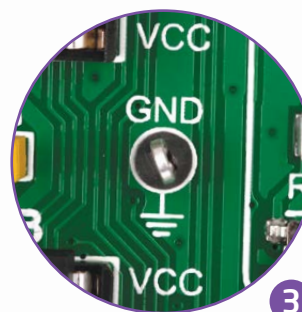

3

What's Next?

You have now completed the journey through each and every feature of **EasyPIC™ v7 for dsPIC30® board**. You got to know its modules, organization, supported microcontrollers, programmer and debugger. Now you are ready to start using your new board. We are suggesting several steps which are probably the best way to begin. We invite you to join thousands of users of EasyPIC™ brand. You will find very useful projects and tutorials and can get help from a large ecosystem of users. Welcome!

1

Compiler

You still don't have an appropriate compiler? Locate **dsPIC® compiler** that suits you best on our website:



www.mikroe.com/dspic/compilers/

Choose between **mikroC™**, **mikroBasic™** and **mikroPascal™**, and download fully functional demo version, so you can begin building your dsPIC® applications.



2

Projects

Once you have chosen your compiler, and since you already got the board, you are ready to start writing your first projects. We have equipped our compilers with dozens of examples that demonstrate the use of each and every feature of the **EasyPIC™ v7 for dsPIC30® board**, and all of our accessory boards as well. This makes an excellent starting point for your future projects. Just load the example, read well commented code, and see how it works on hardware. Browse through the compiler **Examples** path to find the following folder:



www.mikroe.com/easypic-dspic30/

3

Community

If you want to find answers to your questions on many interesting topics we invite you to visit our forum at <http://www.mikroe.com/forum> and browse through more than 150 thousand posts. You are likely to find just the right information for you. On the other hand, if you want to download free projects and libraries, or share your own code, please visit the **Libstock™ web site**. With user profiles, you can get to know other programmers, and subscribe to receive notifications on their code.



www.libstock.com/

4

Support

We all know how important it is that we can rely on someone in moments when we are stuck with our projects, facing a deadline, or when we just want to ask a simple, basic question, that's pulling us back for a while. We do understand how important this is to people and therefore our Support Department is one of the pillars upon which our company is based. MikroElektronika offers **Free Tech Support** to the end of product lifetime, so if something goes wrong, we are ready and willing to help!



www.mikroe.com/support/

DISCLAIMER

All the products owned by MikroElektronika are protected by copyright law and international copyright treaty. Therefore, this manual is to be treated as any other copyright material. No part of this manual, including product and software described herein, must be reproduced, stored in a retrieval system, translated or transmitted in any form or by any means, without the prior written permission of MikroElektronika. The manual PDF edition can be printed for private or local use, but not for distribution. Any modification of this manual is prohibited.

MikroElektronika provides this manual 'as is' without warranty of any kind, either expressed or implied, including, but not limited to, the implied warranties or conditions of merchantability or fitness for a particular purpose.

MikroElektronika shall assume no responsibility or liability for any errors, omissions and inaccuracies that may appear in this manual. In no event shall MikroElektronika, its directors, officers, employees or distributors be liable for any indirect, specific, incidental or consequential damages (including damages for loss of business profits and business information, business interruption or any other pecuniary loss) arising out of the use of this manual or product, even if MikroElektronika has been advised of the possibility of such damages. MikroElektronika reserves the right to change information contained in this manual at any time without prior notice, if necessary.


HIGH RISK ACTIVITIES

The products of MikroElektronika are not fault-tolerant nor designed, manufactured or intended for use or resale as on-line control equipment in hazardous environments requiring fail-safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines or weapons systems in which the failure of Software could lead directly to death, personal injury or severe physical or environmental damage ('High Risk Activities'). MikroElektronika and its suppliers specifically disclaim any expressed or implied warranty of fitness for High Risk Activities.

TRADEMARKS

The MikroElektronika name and logo, the MikroElektronika logo, mikroC™, mikroBasic™, mikroPascal™, mikroProg™, mikromedia™, EasyPIC™, EasyPIC PRO™, mikroBUS™ and Click boards™ are trademarks of MikroElektronika. All other trademarks mentioned herein are property of their respective companies.

All other product and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are only used for identification or explanation and to the owners' benefit, with no intent to infringe.

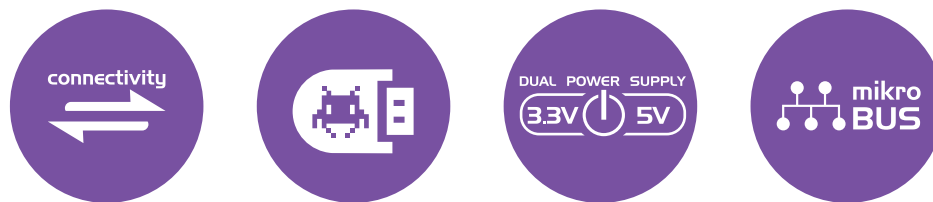

If you want to learn more about our products, please visit our web site at www.mikroe.com

If you are experiencing some problems with any of our products or just need additional information, please place your ticket at www.mikroe.com/support/

If you have any questions, comments or business proposals,
do not hesitate to contact us at office@mikroe.com

EasyPIC v7 for dsPIC30 Manual
ver. 1.01a



0 100000 025956



**Стандарт
Электрон
Связь**

Мы молодая и активно развивающаяся компания в области поставок электронных компонентов. Мы поставляем электронные компоненты отечественного и импортного производства напрямую от производителей и с крупнейших складов мира.

Благодаря сотрудничеству с мировыми поставщиками мы осуществляем комплексные и плановые поставки широчайшего спектра электронных компонентов.

Собственная эффективная логистика и склад в обеспечивает надежную поставку продукции в точно указанные сроки по всей России.

Мы осуществляем техническую поддержку нашим клиентам и предпродажную проверку качества продукции. На все поставляемые продукты мы предоставляем гарантию .

Осуществляем поставки продукции под контролем ВП МО РФ на предприятия военно-промышленного комплекса России , а также работаем в рамках 275 ФЗ с открытием отдельных счетов в уполномоченном банке. Система менеджмента качества компании соответствует требованиям ГОСТ ISO 9001.

Минимальные сроки поставки, гибкие цены, неограниченный ассортимент и индивидуальный подход к клиентам являются основой для выстраивания долгосрочного и эффективного сотрудничества с предприятиями радиоэлектронной промышленности, предприятиями ВПК и научно-исследовательскими институтами России.

С нами вы становитесь еще успешнее!

Наши контакты:

Телефон: +7 812 627 14 35

Электронная почта: sales@st-electron.ru

Адрес: 198099, Санкт-Петербург,
Промышленная ул, дом № 19, литера Н,
помещение 100-Н Офис 331