

# BWA SERIES RF CO-AXIAL CONNECTORS

The BWA series are converter adapters used for connecting connectors of different series.

- (1) Has mating portions compatible in materials and finish with the respective series.
- (2) Conforms in performance to the lower series of the two connectors to be connected.

## Converter adapter list

Mating portion 1		Mating portion 2		Part No.	CL No.	Remarks	Shape
Series name	Mating portion	Series name	Mating portion				
N	P	BNC	P	NP-BNCP(40)	311-0050-7-40		Fig.1
			J	JUG-201A/U(40)	311-0007-8-40		Fig.2
		M	J	NP-MJ(40)	311-0019-7-40		Fig.3
		S	J	N.P-S.J(40)	311-0245-6-40		Fig.4
		HRM	P	HRM-555S(40)	311-0125-4-40		Fig.5
			J	HRM-554S(40)	311-0123-9-40		Fig.6
	J	BNC	P	UG-349/U(40)	311-0004-0-40		Fig.7
			J	NJ-BNCJ(40)	311-0005-2-40		Fig.8
				NJ-BNCJ-PA(40)	311-0014-3-40	Panel-mount type	Fig.9
		M	P	NJ-MP(40)	311-0018-4-40		Fig.10
			J	NJ-MJ(40)	311-0011-5-40		Fig.11
		TNC	P	N.J-TNC.P(40)	311-0225-9-40		Fig.12
		HRM	P	HRM-553S	311-0121-3		Fig.13
			J	HRM-552S	311-0119-1		Fig.15
		BNC	P	M	P	BNCP-MP(40)	311-0062-6-40
J	BNCP-MJ(40)				311-0008-0-40		Fig.18
S	P			SP-BNCP(40)	311-0055-0-40		Fig.19
	J			SJ-BNCP(40)	311-0060-0-40		Fig.20
UM	J			BNCP-UMJ(40)	311-0065-4-40		Fig.21
MSS	P			BNCP-MSSP(40)	311-0107-2-40		Fig.22
	J			BNCP-MSSJ(40)	311-0082-3-40		Fig.23
HRM	P			HRM-519(40)	311-0101-6-40		Fig.24
	J			HRM-518(40)	311-0100-3-40		Fig.25
J	UHF			P	UG-273/U(40)	311-0003-7-40	
	M		P	BNCJ-MP(40)	311-0009-3-40		Fig.27
			J	MJ-BNCJ(40)	311-0020-6-40		Fig.28
	S		P	SP-BNCJ(40)	311-0058-9-40		Fig.29
			J	SJ-BNCJ(40)	311-0054-8-40		Fig.30
	SJ-BNCJ-PA(40)			311-0108-5-40	Panel-mount type	Fig.31	
	TNC		J	BNC.J-TNC.J(40)	311-0194-7-40		Fig.32
	UM		P	BNCJ-UMP(40)	311-0052-2-40		Fig.33
			J	BNCJ-UMJ(40)	311-0053-5-40		Fig.34
	BNCJ-UMJ-PA(40)			311-0103-1-40	Panel-mount type	Fig.35	
	MSS		P	BNCJ-MSSP(40)	311-0081-0-40		Fig.36
J			BNCJ-MSSJ(40)	311-0066-7-40		Fig.37	

# BWA SERIES RF CO-AXIAL CONNECTORS

Mating portion 1		Mating portion 2		Part No.	CL No.	Remarks	Shape	
Series name	Mating portion	Series name	Mating portion					
BNC	J	HRM	P	HRM-517(40)	311-0099-6-40		Fig.38	
			J	HRM-516(40)	311-0102-9-40		Fig.39	
		POD	P	BNCJ-PODP(40)	311-0160-5-40		Fig.40	
			J	BNCJ-PODJ(40)	311-0161-8-40		Fig.41	
		PO6	J	BNCJ-PO6J(40)	311-0167-4-40		Fig.42	
S	P	HRM	P	HRM-509(40)	311-0093-0-40		Fig.43	
			J	HRM-508(40)	311-0092-7-40		Fig.44	
	J	HRM	P		HRM-507(40)	311-0091-4-40		Fig.45
					HRM-512(40)	311-0098-3-40	Panel-mount type	Fig.46
				HRM-512S(40)	311-0144-9-40	Panel-mount type, S type	Fig.46	
			J		HRM-506(40)	311-0090-1-40		Fig.47
					HRM-511(40)	311-0094-2-40	Panel-mount type	Fig.48
					HRM-511S(40)	311-0143-6-40	Panel-mount type, S type	Fig.48
TNC	J	HRM	J	HRMJ-TNCJ-PA(40)	311-0202-3-40	Panel-mount type	Fig.49	
UM	P	HRM	J	UM.P-HRM.J(40)	311-0176-5-40		Fig.50	
	J	HRM	J	HRMJ-UMJ(40)	311-0164-6-40		Fig.51	
HRM	P	POB	P	HRMP-POBP-1(40)	311-0169-0-40		Fig.52	
			J	HRMP-POBJ	311-0152-7		Fig.53	
		POD	J	HRM.P-POD.J(40)	311-0177-8-40		Fig.54	
		POD1	J	HRMP-POD1J(40)	311-0253-4-40		Fig.55	
		PO6	J	HRMP-PO6J(40)	311-0172-4-40		Fig.56	
		S,FL	J	HRMP-S.FLJ-2(40)	311-0249-7-40	For inspecting harnesses parts	Fig.57	
		H,FL	J	HRMP-H.FLJ(40)	311-0232-4-40	For inspecting harnesses parts	Fig.58	
		HRMM	P		HRMP-HRMMJ(40)	311-0250-6-40		Fig.59
					HRMP-HRMMJ	311-0243-0		Fig.60
				J	HRMP-HRMMJ-LA(40)	311-0226-1-40		Fig.61
		J	POB	P		HRMJ-POBP(40)	311-0151-4-40	
					HRMJ-POBP-PA(40)	311-0206-4-40		Fig.63
	J				HRMJ-POBJ(40)	311-0149-2-40		Fig.64
					HRMJ-POBJ-PA(40)	311-0150-1-40		Fig.65
	POD		P	HRMJ-PODP(40)	311-0157-0-40		Fig.66	
	POD1		P	HRMJ-POD1P-1(40)	311-0254-7-40		Fig.67	
	PO6		P	HRMJ-PO6P(40)	311-0173-7-40		Fig.68	
	PO51		P	HRMJ-PO51P(40)	311-0231-1-40		Fig.69	
	FL		P	HRMJ-FLP-1(40)	311-0195-0-40		Fig.70	
			J	HRMJ-FLJ(40)	311-0179-3-40		Fig.71	
	S,FL		P	HRMJ-S.FLP(40)	311-0218-3-40		Fig.72	
	H,FL		P	HRMJ-H.FLP-3(40)	311-0264-0-40		Fig.73	
	HRMM	P		HRMJ-HRMMJ-2	311-0221-8		Fig.74	
			HRMJ-HRMMJ-LA(40)	311-0227-4-40		Fig.75		
J		HRMJ-HRMMJ	311-0220-5		Fig.76			


- Note 1. Part No. NP-BNCP of Fig.1 is shown that series name N, coupling part p (plug) for connecting part 1 and series name BNC, coupling part P (plug) for connecting part 2.
2. Series name of each connecting parts are shown in order to HIROSE's CL numbers.

# BWA SERIES RF CO-AXIAL CONNECTORS

<p>Fig.1</p> <p>NP-BNCP(40)</p>	<p>Fig.2</p> <p>UG-201A/U(40)</p>
<p>Fig.3</p> <p>NP-MJ(40)</p>	<p>Fig.4</p> <p>N.P-S.J(40)</p>
<p>Fig.5</p> <p>HRM-555S(40)</p>	<p>Fig.6</p> <p>HRM-554S(40)</p>
<p>Fig.7</p> <p>UG-349/U(40)</p>	<p>Fig.8</p> <p>NJ-BNCJ(40)</p>


# BWA SERIES RF CO-AXIAL CONNECTORS

Fig.9

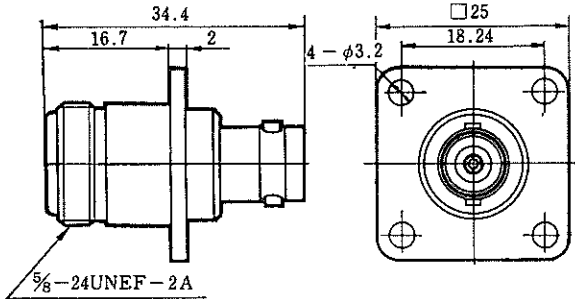


NJ-BNCJ-PA(40)

Fig.10

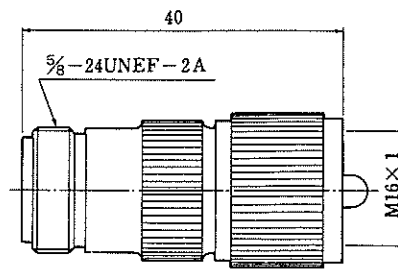


NJ-MP(40)

Fig.11

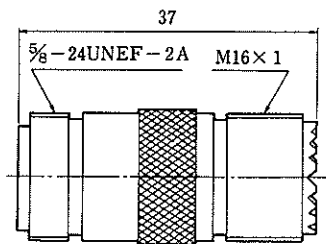


NJ-MJ(40)

Fig.12

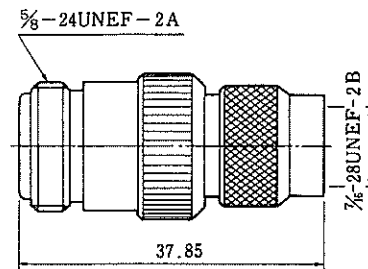


NJ-TNC.P(40)

Fig.13

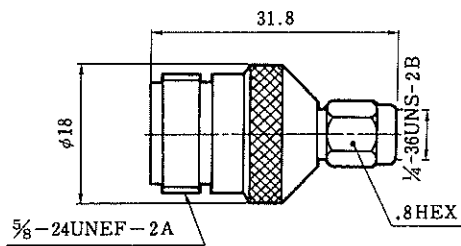

HRM-553S


Fig.15

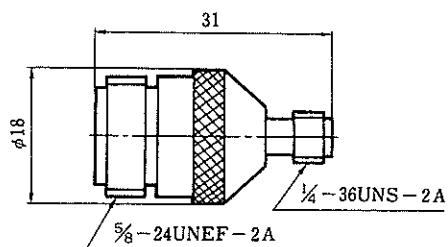

HRM-552S


# BWA SERIES RF CO-AXIAL CONNECTORS

Fig.17

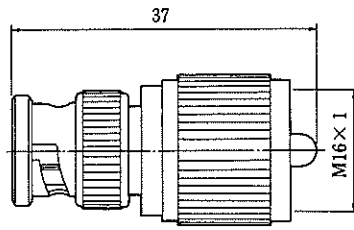


BNCP-MP(40)

Fig.18

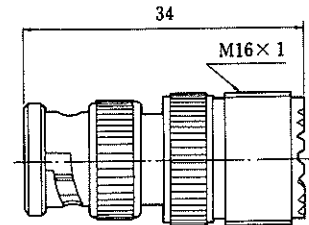


BNCP-MJ(40)

Fig.19

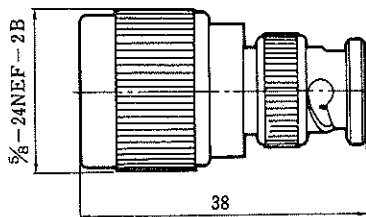


SP-BNCP(40)

Fig.20

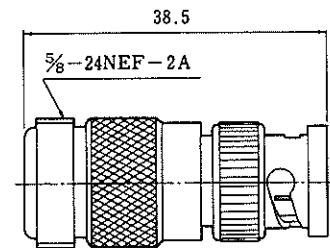


SJ-BNCP(40)

Fig.21

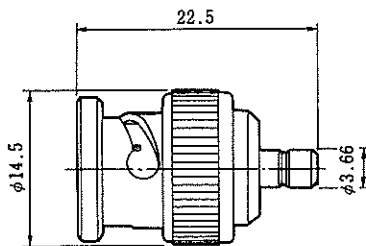


BNCP-UMJ(40)

Fig.22

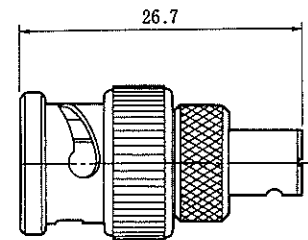


BNCP-MSSP(40)

Fig.23

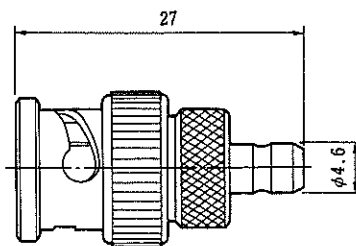

BNCP-MSSJ(40)


Fig.24

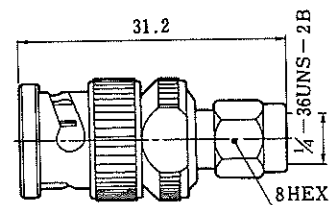

HRM-519(40)


# BWA SERIES RF CO-AXIAL CONNECTORS

Fig.25

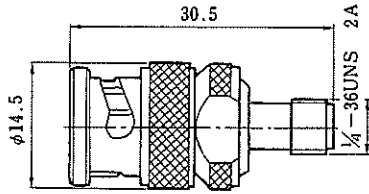


HRM-518(40)

Fig.26

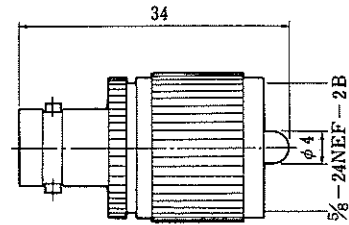


UG-273/U(40)

Fig.27

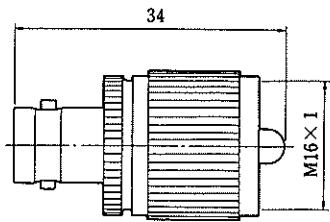


BNCJ-MP(40)

Fig.28

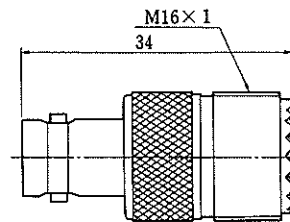


MJ-BNCJ(40)

Fig.29

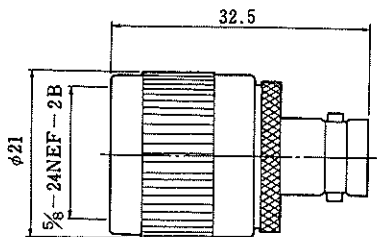


SP-BNCJ(40)

Fig.30

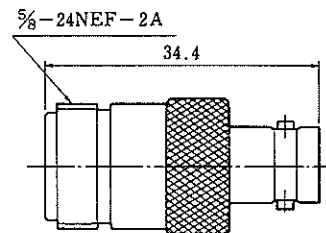


SJ-BNCJ(40)

Fig.31

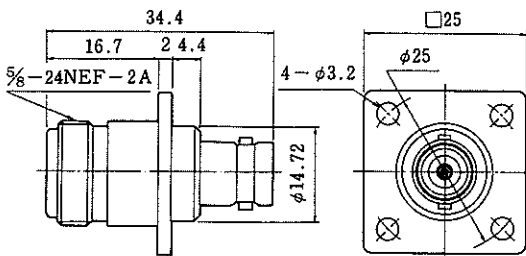

SJ-BNCJ-PA(40)


Fig.32

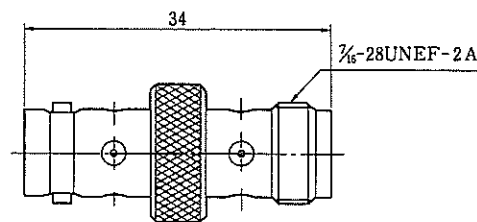

BNCJ-TNCJ(40)


# BWA SERIES RF CO-AXIAL CONNECTORS

Fig.33

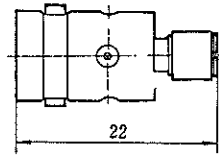


BNCJ-UMP(40)

Fig.34

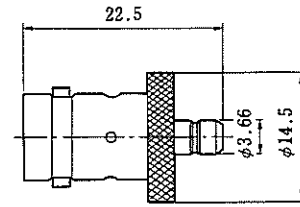


BNCJ-UMJ(40)

Fig.35

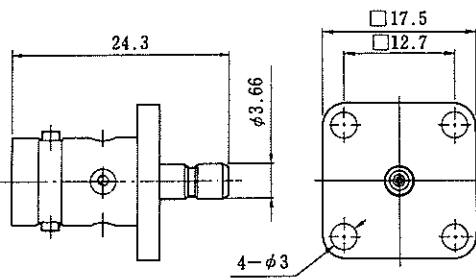


BNCJ-UMJ-PA(40)

Fig.36

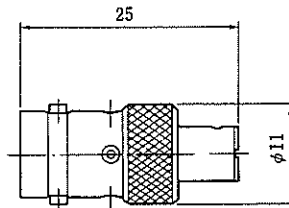


BNCJ-MSSP(40)

Fig.37

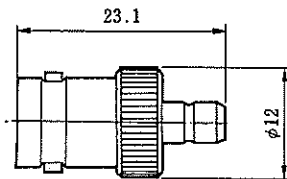


BNCJ-MSSJ(40)

Fig.38

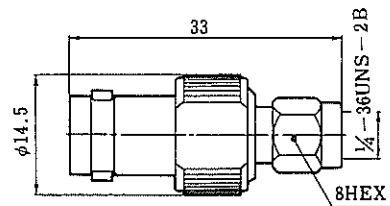


HRM-517(40)

Fig.39

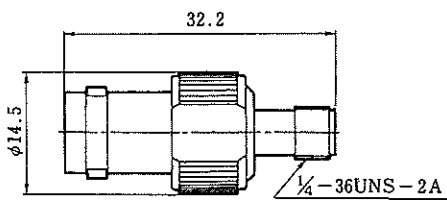

HRM-516(40)


Fig.40

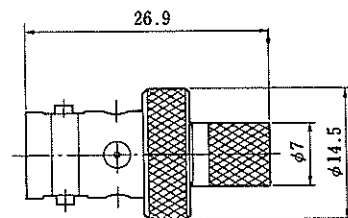

BNCJ-PODP(40)


# BWA SERIES RF CO-AXIAL CONNECTORS

Fig.41

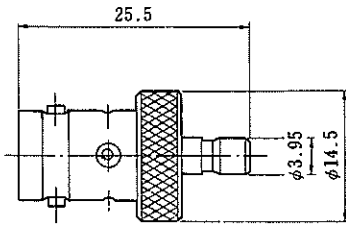


BNCJ-PODJ(40)

Fig.42

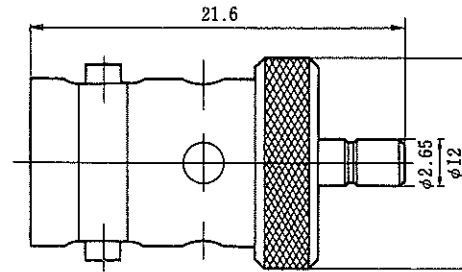


BNCJ-PO6J(40)

Fig.43

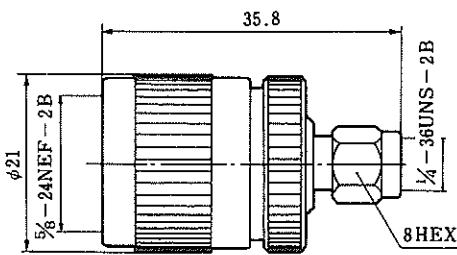


HRM-509(40)

Fig.44

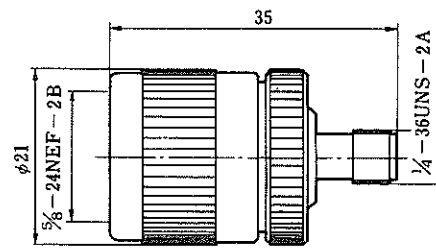


HRM-508(40)

Fig.45

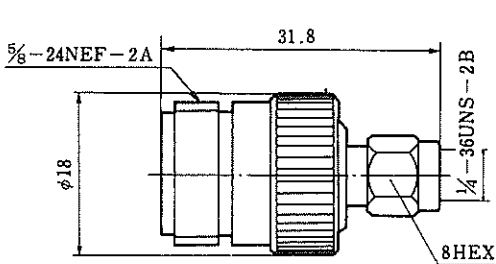


HRM-507(40)

Fig.46

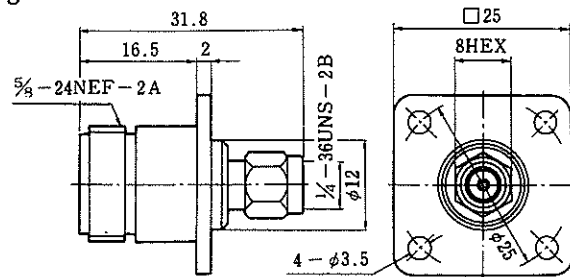


HRM-512(40) HRM-512S(40)

Fig.47

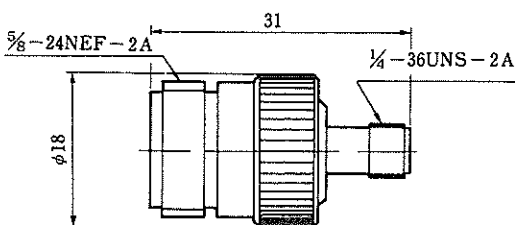

HRM-506(40)

Fig.48

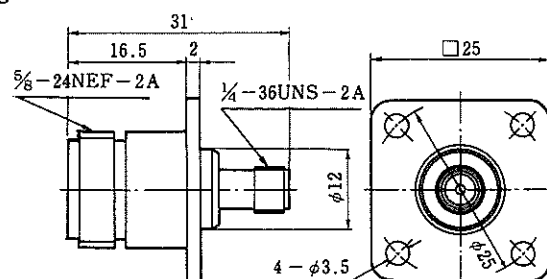


HRM-511(40) HRM-511S(40)




# BWA SERIES RF CO-AXIAL CONNECTORS

Fig.49

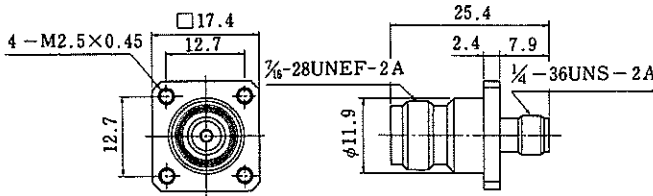


HRMJ-TNCJ-PA(40)

Fig.50

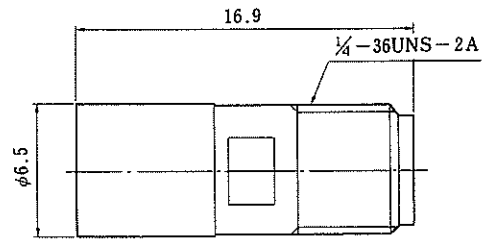


UM.P-HRMJ(40)

Fig.51

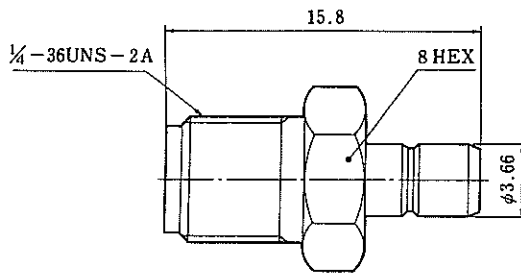


HRMJ-UMJ(40)

Fig.52

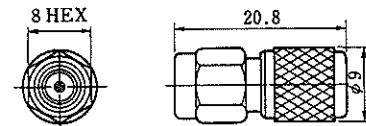


HRMP-POBP-1(40)

Fig.53

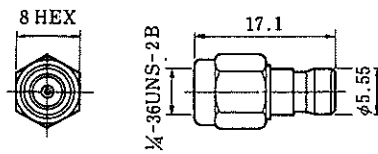


HRMP-POBJ

Fig.54

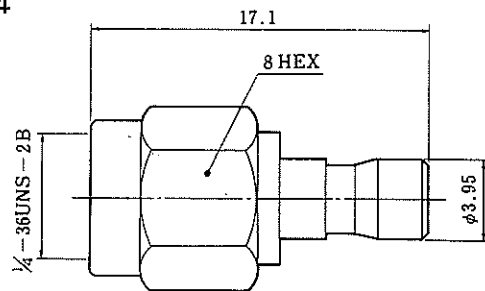


HRM.P-POD.J(40)

Fig.55

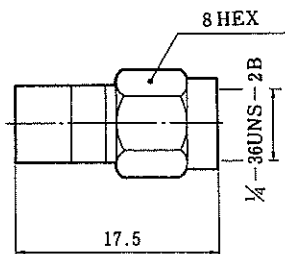

HRMP-POD1J(40)


Fig.56

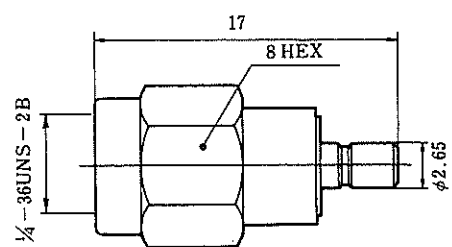

HRMP-PO6J(40)

# BWA SERIES RF CO-AXIAL CONNECTORS


Fig.57

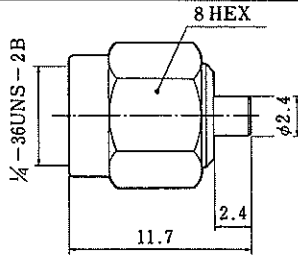

Note : The mating portion on the S. FL side mates with the S. FL and S. FL2 plugs.  
 Having no locking mechanism, however, the S. FL side mating portion can be used only for performance measurement.

HRMP-S.FLJ-2(40)


Fig.58

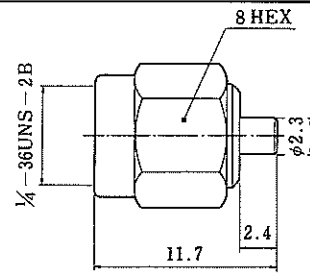

Note : Having no locking mechanism, however, the S. FL side mating portion can be used only for performance measurement.


HRMP-H.FLJ(40)

Fig.59

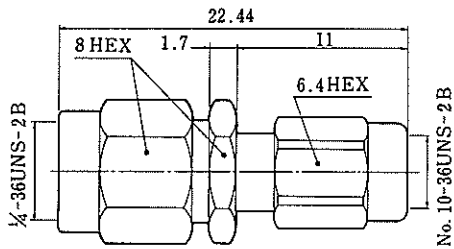


HRMP-HRMP(40)

Fig.60

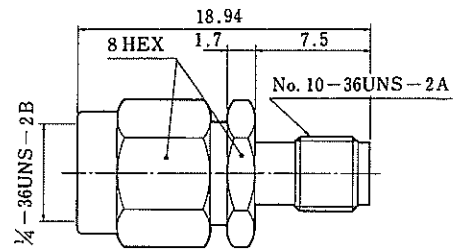


HRMP-HRMM(40)

Fig.61

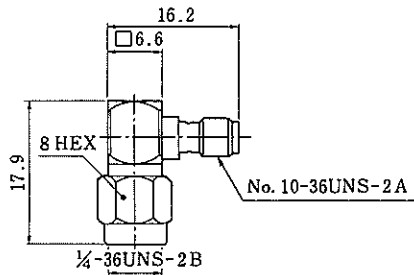


HRMP-HRMMJ-LA(40)

Fig.62

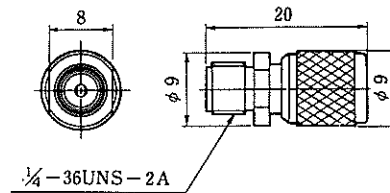


HRMJ-POBP(40)

Fig.63

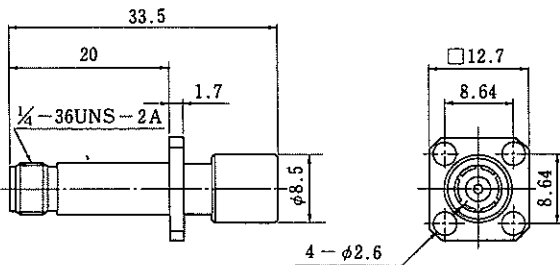

HRMJ-POBP-PA(40)


Fig.64

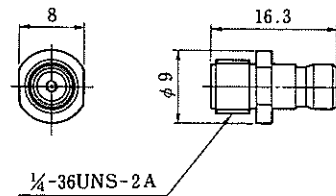

HRMJ-POBJ(40)


# BWA SERIES RF CO-AXIAL CONNECTORS

Fig.65

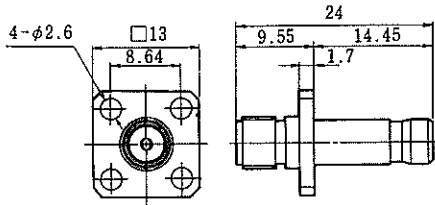


HRMJ-POBJ-PA(40)

Fig.66

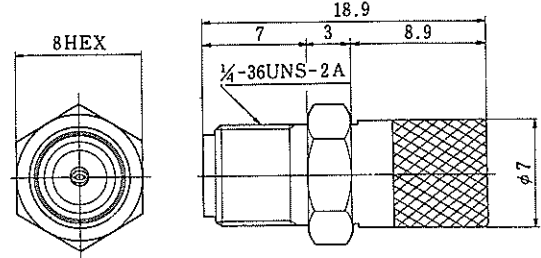


HRMJ-PODP(40)

Fig.67

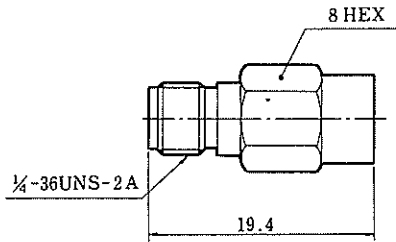


HRMJ-POD1P-1(40)

Fig.68

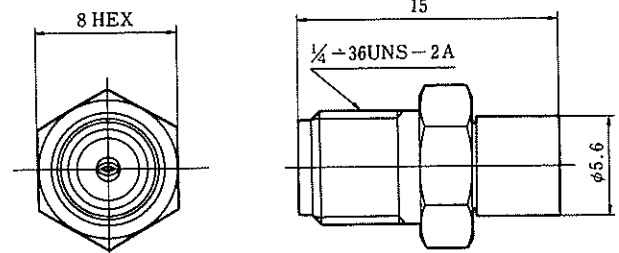


HRMJ-PO6P(40)

Fig.69

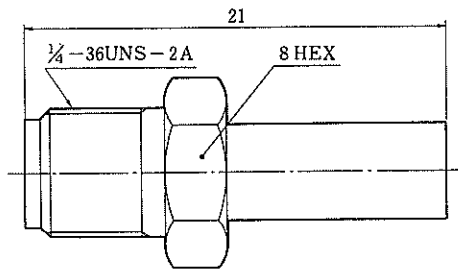


HRMJ-PO51P(40)

Fig.70

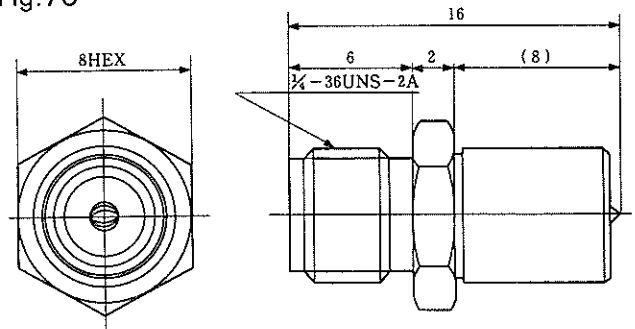

HRMJ-FLP-1(40)


Fig.71

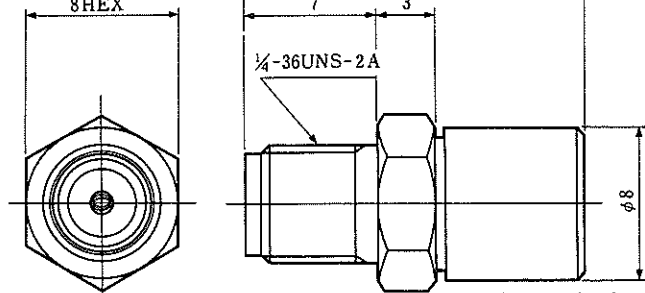

HRMJ-FLJ(40)

Note: Having no locking mechanism, however, the FL side mating portion can be used only for performance measurement.

Fig.72

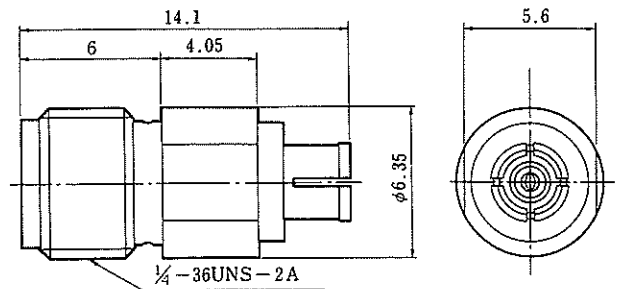


HRMJ-S.FLP(40)

Note: Compatible with S. FL and S. FL2.


# BWA SERIES RF CO-AXIAL CONNECTORS

Fig. 73

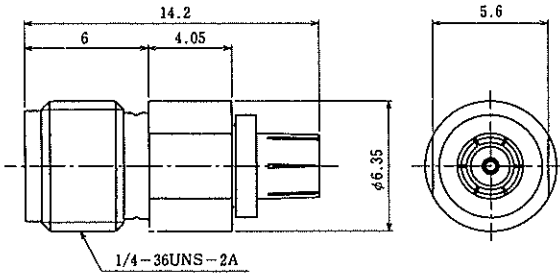


HRMJ-H.FLP-3(40)

Fig. 74

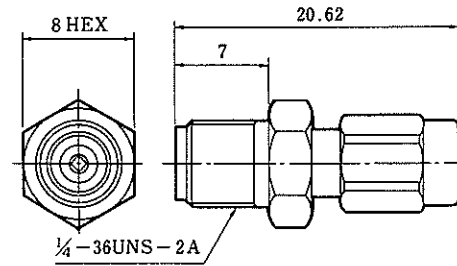


HRMJ-HRMMP-2

Fig. 75

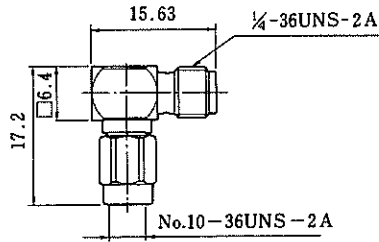

HRMJ-HRMMP-LA(40)

Fig. 76

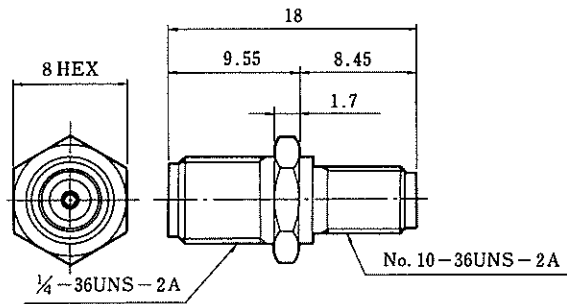

HRMJ-HRMMJ



## Стандарт Электрон Связь

Мы молодая и активно развивающаяся компания в области поставок электронных компонентов. Мы поставляем электронные компоненты отечественного и импортного производства напрямую от производителей и с крупнейших складов мира.

Благодаря сотрудничеству с мировыми поставщиками мы осуществляем комплексные и плановые поставки широчайшего спектра электронных компонентов.

Собственная эффективная логистика и склад в обеспечивает надежную поставку продукции в точно указанные сроки по всей России.

Мы осуществляем техническую поддержку нашим клиентам и предпродажную проверку качества продукции. На все поставляемые продукты мы предоставляем гарантию .

Осуществляем поставки продукции под контролем ВП МО РФ на предприятия военно-промышленного комплекса России , а также работаем в рамках 275 ФЗ с открытием отдельных счетов в уполномоченном банке. Система менеджмента качества компании соответствует требованиям ГОСТ ISO 9001.

Минимальные сроки поставки, гибкие цены, неограниченный ассортимент и индивидуальный подход к клиентам являются основой для выстраивания долгосрочного и эффективного сотрудничества с предприятиями радиоэлектронной промышленности, предприятиями ВПК и научно-исследовательскими институтами России.

С нами вы становитесь еще успешнее!

### Наши контакты:

**Телефон:** +7 812 627 14 35

**Электронная почта:** [sales@st-electron.ru](mailto:sales@st-electron.ru)

**Адрес:** 198099, Санкт-Петербург,  
Промышленная ул, дом № 19, литера Н,  
помещение 100-Н Офис 331