

Technical Summary for

USB Multilink Universal, Rev. B (PART# USB-ML-UNIVERSAL) and USB Multilink Universal **FX**, Rev. A (PART# USB-ML-UNIVERSAL-FX)

Support for Freescale Kinetis® · Qorivva® MPC5xxx · ColdFire® V1/ColdFire+ V1 · ColdFire V2-4
PX Series · HCS08 · RS08 · HC(S)12(X) · S12Z · DSC · HC16/683xx (**FX only**)

Document# PE4576, Version 1.01

1. Introduction
2. Usage
3. Driver Installation
4. Connecting To The Target
5. Troubleshooting - Startup Reset Sequence
6. Firmware Updates/Architecture Selection
7. Interface Libraries
8. Compatible Software
9. Transition To Production Programming



1 Introduction

USB Multilink Universal & USB Multilink Universal FX

The USB Multilink Universal and Universal FX are all-in-one debug interfaces which accelerate the debug and flash programming process, saving valuable development time. Both Multilinks provide access to debug modes on a wide range of Freescale microcontroller families by communicating between the target device and a laptop/PC via the target's standard debug header and the laptop/PC's USB port.

FX Note: In addition, the USB Multilink Universal FX offers up to 10X faster download speeds and can provide target power.

Each of the supported families of Freescale microcontrollers are represented by headers located inside the unit. The headers for Ports A-D & **Port H (FX only)** are dual-row with a .100" pitch, and the headers for Ports F-G are dual-row with a .050" pitch. The pin-outs for these connections and the families that they support are shown below. Port E, the 16-pin JTAG/COP connector, is not currently supported.

PORT A - JTAG/ONCE	PORT B - STANDARD ARM	PORT C - BDM	PORT D - COLDFIRE BDM
Qorivva MPC5xxx, DSC, PX Series	Kinetis	RS08, HCS08, HC(S)12(X), S12Z, ColdFire+ V1/ColdFire V1	ColdFire V2-4
<div> <div>TDI 1 • • 2 GND</div> <div>TDO 3 • • 4 GND</div> <div>TCK 5 • • 6 GND</div> <div>NC 7 • • 8 NC/KEY*</div> <div>RESET 9 • • 10 TMS</div> <div>TVCC 11 • • 12 GND</div> <div>RDY/NC* 13 • • 14 JCOMP/TRST*</div> </div> <div>*DSC ONLY</div>	<div> <div>TVCC 1 • • 2 NC</div> <div>TRST 3 • • 4 GND</div> <div>TDI 5 • • 6 GND</div> <div>TMS/SWD_DIO 7 • • 8 GND</div> <div>TCK/SWD_CLK 9 • • 10 GND</div> <div>NC 11 • • 12 GND</div> <div>TDO 13 • • 14 GND</div> <div>RESET 15 • • 16 GND</div> <div>NC 17 • • 18 GND</div> <div>NC 19 • • 20 GND</div> </div>	<div> <div>BGND 1 • • 2 GND</div> <div>NC/PDO* 3 • • 4 RESET</div> <div>NC/PDOCLK* 5 • • 6 TVCC</div> </div> <div>*S12Z ONLY</div>	<div> <div>NC 1 • • 2 BKPT</div> <div>GND 3 • • 4 DSCLK</div> <div>GND 5 • • 6 TCK</div> <div>RESET 7 • • 8 DSI</div> <div>TVCC 9 • • 10 DSO</div> <div>GND 11 • • 12 PST3/PSTDDATA7</div> <div>PST2/PSTDDATA6 13 • • 14 PST1/PSTDDATA5</div> <div>PST0/PSTDDATA4 15 • • 16 DDATA1/PSTDDATA3</div> <div>DDATA2/PSTDDATA2 17 • • 18 DDATA1/PSTDDATA1</div> <div>DDATA0/PSTDDATA0 19 • • 20 GND</div> <div>NC 21 • • 22 NC</div> <div>GND 23 • • 24 PSTCLK</div> <div>TVCC 25 • • 26 TA</div> </div>

Universal/Universal FX Pin-Outs, Ports A-D

PORT F - MINI-20			PORT G - MINI-10			PORT H - BDM		
Kinetis			Kinetis			HC16/683xx FX ONLY		
TVCC 1	• •	2 TMS/SWD_DIO	TVCC 1	• •	2 TMS/SWD_DIO	DS 1	• •	2 BERR
GND 3	• •	4 TCK/SWD_CLK	GND 3	• •	4 TCK/SWD_CLK	GND 3	• •	4 BKPT/DSCLK
GND 5	• •	6 TDO	GND 5	• •	6 TDO	GND 5	• •	6 FREEZE
NC 7	• •	8 TDI	NC 7	• •	8 TDI	RESET 7	• •	8 IFETCH/DSI
GND 9	• •	10 RESET	GND 9	• •	10 RESET	TVCC 9	• •	10 IPIPE/DSO
NC 11	• •	12 TRACE_CLKOUT						
NC 13	• •	14 TRACE_D0						
GND 15	• •	16 TRACE_D1						
GND 17	• •	18 TRACE_D2						
GND 19	• •	20 TRACE_D3						

Universal/Universal FX Pin-Outs, Ports F-H

The user can take advantage of debug modes to halt normal processor execution and use a computer to control the processor. The user can then directly control the target's execution, read/write registers and memory values, debug code on the processor, and program internal or external FLASH memory devices.



FX Note: The USB Multilink Universal FX is capable of providing power (5V or 3.3V) directly to the target processor via the TVCC pin. This removes the need for an external power supply for systems requiring 200mA of current or less.

2 Usage

The USB Multilink Universal and Universal FX can communicate with Kinetis (including L-Series devices), Qorivva MPC5xxx, ColdFire V1/V2/V3/V4, Power Architecture PX Series, RS08, HCS08, HC(S)12(X), S12Z, DSC, and **HC16/683xx (FX only)** microprocessors by connecting a ribbon cable between the target's debug header and one of the multiple ports on the Multilink. Do not attempt to use multiple ports at once, as this may damage both the target processors as well as the Multilink.

The USB Multilink Universal and Universal FX interfaces will work with targets whose processor power supply is in the range of 1.8V to 5V.

On the Universal FX, if the user wishes to provide power to the target, the **JP10 Jumper (FX only)** is used to enable this option and select the voltage. A shunt at position 1-2 enables 5V, while a shunt at position 2-3 enables 3.3V. The USB Multilink Universal and Universal FX have a female type B USB connector. Use a Type A to Type B male-to-male USB cable to connect the interface to the PC.

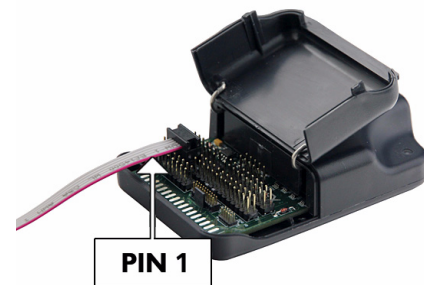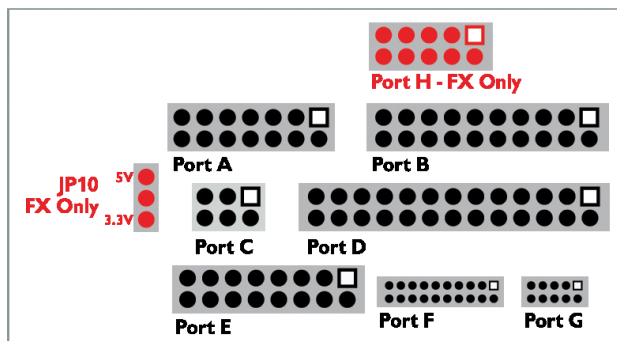

Universal/Universal FX Header Layout (Pin 1 Highlighted)

There are two LEDs on the Multilink interface. The blue LED indicates that the interface is powered and running. The yellow LED indicates that target power has been detected.

Note: If connecting to a ColdFire V2-4 processor which requires synchronous communication, such as the MCF5272 and MCF5206(E), a CABLE-CF-ADAPTER (sold separately) is required.

Note: To avoid improper connections, the red stripe of the ribbon cable should always be oriented towards Pin 1, both on the Multilink port and the target processor header.

The USB Multilink Universal and Universal FX are USB devices. If a USB Hub is used, it must be a self-powered hub (i.e. with its own power supply). By default, the USB protocol used is USB 2.0.

3 Driver Installation

Before connecting the Multilink to the PC, the appropriate drivers need to be installed on the PC. The Multilink drivers are supported on Windows XP, 2000, 2003, Vista, and 7. These drivers are automatically installed when installing Freescale's CodeWarrior or any of P&E's recent software development packages. If you have installed a recent version of these then the instructions for manual installation that follow are not necessary. However, Windows 7 users who are installing software distributed before December 28, 2009 will need to obtain the latest version of the drivers and install them manually. A copy of the driver installation program may be downloaded from the "Downloads" section of P&E's "Support Center" located at <http://www.pemicro.com>. If you are using third-party software, make sure you have a version which supports your specific interface (Universal/FX). Once you have obtained the latest version of the driver installation program, please use the instructions below to manually install the drivers.

When the cable is plugged in, the operating system should indicate that it has found a driver for the attached interface. Follow the instructions in the "Found New Hardware Wizard" dialog for having Windows automatically install the driver.

If you connected the Multilink interface prior to installing the drivers, Windows will not have been able to find the appropriate driver and may have disabled the device. If you unplug the device and then plug it in again, Windows will automatically disable it even if you have installed the drivers. To force Windows to attempt to load the driver again, perform the following steps while the Multilink interface is plugged into the computer:

1. Open the Control Panel: Start Button [->Settings] ->Control Panel. (You will not need to select "Settings" on Vista and Windows 7).
2. Double Click the "System" Icon. (Windows 7: "System and Security")
3. Select the "Hardware" Tab. (Windows 7: "Hardware and Sound", Windows Vista: skip this step)
4. Click the "Device Manager" Button. (Windows 7: "Devices and Printers -> Device Manager")
5. The "USB Multilink 2.0" device will be shown with an exclamation point next to it. Double-click this device.
6. Click the "Reinstall Driver..." button and follow the dialog instructions to have Windows automatically install the driver. (Windows 7: First click the "Driver" tab, then select "Update Driver...")
7. If the hardware still has a yellow exclamation mark next to it, right click on it and select uninstall. The USB Multilink should disappear from the list. Unplug the USB Multilink and then plug it into the PC again. A new Hardware Found dialog will pop up; follow the dialog instructions and have Windows automatically install the driver.

4 Connecting To The Target

The following is the proper connection sequence to connect the PC to the target system via the Multilink interface:

1. Make sure the target power is OFF and the USB Multilink Universal or Universal FX is not connected to either the target or the PC
2. Open the Multilink and connect a ribbon cable from the correct Multilink port to the target. Make sure that the ribbon cable is plugged into the target with the proper orientation. PIN 1 is indicated by a 1 next to the port.
3. Connect the Multilink to the PC via a USB cable. The Blue LED on the Multilink should illuminate.
4. Turn the target power on. The Yellow LED on the Multilink should illuminate.

Before disconnecting the setup, turn the target power off.

5 Troubleshooting - Startup Reset Sequence

Note that if the Multilink does not enter debug mode, the program issues the error message "Cannot enter background mode." If you receive this message you should check your hardware with a scope, logic analyzer or logic probe. First check for power on, then check to make sure the processor oscillator is running. Finally, look for the startup sequence for your microprocessor that is listed below.

Port A – JTAG/ONCE – Qorivva MPC5xxx, Power Architecture PX Series, DSC

- a. RESET (Pin-9) is driven low (to processor).
- b. Activity appears on TCK (Pin-5), TDI (Pin-1) and TDO (Pin-3). (PC software instructs the processor to enable debug mode).
- c. RESET (Pin-9) is released by the interface and will go high.
- d. Activity appears on TCK (Pin-5), TDI (Pin-1) and TDO (Pin-3). (Debug activity).

Ports B, F, G – ARM JTAG - Kinetis

- a. RESET is driven low (to processor).
- b. Activity appears on TCK, TDI and TDO (PC software instructs the processor to enable debug mode).
- c. RESET is released by the interface and will go high.
- d. Activity appears on TCK, TDI and TDO (Debug activity).

Port C – BDM

RS08, HCS08, S12Z, ColdFire V1

- Debug activity is seen on BKGD (Pin-1).

HC(S)12(X)

- BKGD (Pin-1) and RESET (Pin-4) are pulled low by the interface.
- After 5 milliseconds, RESET (Pin-4) is released and goes high.
- After 10 milliseconds, BKGD (Pin-1) is released and goes high.
- After 20 more milliseconds, debug activity is seen on BKGD (Pin-1).

Port D – Coldfire V2/V3/V4

- BKPT (Pin-2), DSI (Pin-8), and DSCLK (Pin-4) signals are driven low.
- RESET (Pin-7) is driven low for 20+ milliseconds and released.
- After RESET is released and if the processor has correctly entered background mode, the PST0 (Pin-15), PST1 (Pin-14), PST2 (Pin-13) and PST3 (Pin-12) lines should all be driven high by the processor.
- Activity (changing signals) is seen on the DSI, DSO, and DSCLK signals. The activity on the DSCLK and DSI lines is generated by the PC and the activity on the DSO line is generated by the processor.

Port E – JTAG/COP (Not yet supported)

Port H - HC16/683XX (FX Only)

- BKPT/DSCLK is pulled low (to processor).
- Delay ~1ms.
- RESET is pulled low (to processor).
- Delay ~20ms.
- RESET is released (tri state, should be pulled up on target).
- Wait for FREEZE (out of processor).
- Shifting activity appears on DSCLK, DSI and DSO.

6 Firmware Updates/Architecture Selection

The Multilink Universal and Universal FX use firmware updates to change between modes of operation to support different families of Freescale microcontrollers. Older versions of P&E's software and third-party software are not able to automatically configure these Multilinks when the target is switched to a different family of microcontrollers. If you are not using the latest version of P&E software, please contact us to determine if you are eligible for a discounted upgrade to the latest version of your software. You may also download a manual configuration utility for the Multilink from the Support Center or corresponding product page on our website:

http://www.pemicro.com/support/downloads_find.cfm

7 Interface Libraries

P&E produces a set of interface libraries which allow the user to directly control the USB Multilink Universal or Universal FX from any Windows Development environment which can interact with a DLL. The interface libraries come with examples for controlling the Multilink interface from Microsoft Visual C as well as Borland Delphi. More details can be found on the Interface Libraries page on the P&E website:

http://www.pemicro.com/products/product_processor.cfm?category=9

8 Compatible Software

The USB Multilink Universal and Universal FX are supported by recent versions of Freescale's CodeWarrior (10.x) as well as third-party toolchains from IAR, Keil, Cosmic, and Mentor Graphics. It is recommended that you check with the vendor regarding support for your specific part. Information on compatible P&E software can be found in the "Products" section of www.pemicro.com.

9 Transition To Production Programming

The USB Multilink Universal and Universal FX are intended for development and are not designed to accommodate the demands of production programming. However, P&E's Cyclone programmers are specifically engineered to withstand the rigors of a production environment and will provide a seamless transition from the Multilink. More information is available online at pemicro.com/cyclonepro and pemicro.com/cyclonemax.



Cyclone PRO & Cyclone MAX



**Стандарт
Электрон
Связь**

Мы молодая и активно развивающаяся компания в области поставок электронных компонентов. Мы поставляем электронные компоненты отечественного и импортного производства напрямую от производителей и с крупнейших складов мира.

Благодаря сотрудничеству с мировыми поставщиками мы осуществляем комплексные и плановые поставки широчайшего спектра электронных компонентов.

Собственная эффективная логистика и склад в обеспечивает надежную поставку продукции в точно указанные сроки по всей России.

Мы осуществляем техническую поддержку нашим клиентам и предпродажную проверку качества продукции. На все поставляемые продукты мы предоставляем гарантию .

Осуществляем поставки продукции под контролем ВП МО РФ на предприятия военно-промышленного комплекса России , а также работаем в рамках 275 ФЗ с открытием отдельных счетов в уполномоченном банке. Система менеджмента качества компании соответствует требованиям ГОСТ ISO 9001.

Минимальные сроки поставки, гибкие цены, неограниченный ассортимент и индивидуальный подход к клиентам являются основой для выстраивания долгосрочного и эффективного сотрудничества с предприятиями радиоэлектронной промышленности, предприятиями ВПК и научно-исследовательскими институтами России.

С нами вы становитесь еще успешнее!

Наши контакты:

Телефон: +7 812 627 14 35

Электронная почта: sales@st-electron.ru

Адрес: 198099, Санкт-Петербург,
Промышленная ул, дом № 19, литера Н,
помещение 100-Н Офис 331