

FIGURE 1

1. These instructions cover the A-MP 160 Position Series "M" Connector (see Figure 1) and its Accessories. Assembly instructions for Accessories are packaged with the items. Read these instructions and those packaged with the Accessories before assembling Connectors.

2. CONTACT SELECTION

- (a) Size 16 Type II, III and III Plus Pin and Socket Contacts may be used in either Block of this Connector. Select and crimp these Contacts for use in an M-DM (Deep Male Block) combination according to AMP Instruction Sheet No. 1379.
- (b) Subminiature COAXICON* Pin and Socket Contacts may be used in either Block of this Connector. Select and crimp these Contacts according to AMP Instruction Sheet No. 7318.

3. ENGAGEMENT ACCESSORIES

The following Accessories may be used to help engage a pair of Connector Blocks.


- (a) GUIDE PINS AND SOCKETS are used to align Connector Blocks during engagement, to polarize Connector Blocks and to attach other Accessories to Connectors. They may be used in both Blocks. See Figure 2.

- (b) KEYING PLUGS, when inserted into Contact Cavities in a Connector Block. Key this block to mate only with another Block in which the opposite Cavities have been left vacant. See Figure 3.

4. PROTECTIVE ACCESSORIES

Each of the following Accessories protects the Connector Blocks, the Contacts or the Wire.

- (a) STRAIN RELIEF CLAMPS relieve strain on Contacts caused by free-hanging Wires. These clamps may be used for both straight and right angle Cable routing. See Figure 4. The Clamps may be used only on Female Blocks (Part No. 202800) and should be attached to Blocks using either guide pins and sockets or two 6-32 x 3/8" machine screws, nuts and lock-washers.
- (b) SHIELDS protect the Wires where they protrude from the rear of the Connector Block and relieve strain on the Contacts caused by free-hanging Wires. A 45° two-piece Shield for use with Male Blocks (Part No. 202799) is available. See Figure 5. These Shields should be attached to Blocks using either guide pins and sockets or four 6-32 x 3/8" machine screws.

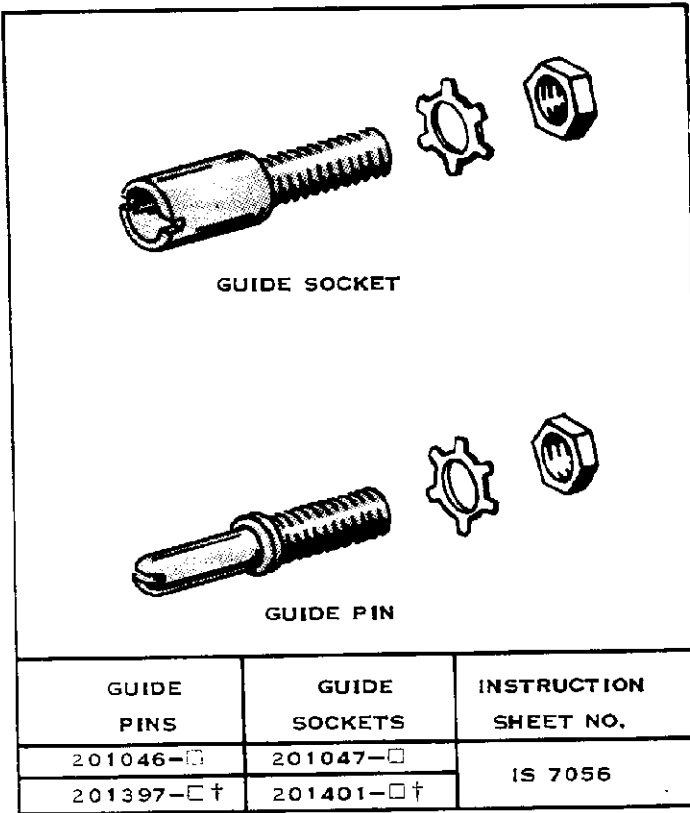

† THESE ASSEMBLIES CONTAIN A LOCK NUT IN PLACE OF A NUT AND LOCKWASHER.

FIGURE 2

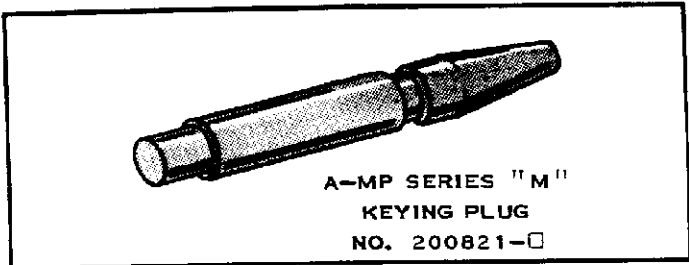


FIGURE 3

(c) BUSHINGS may be used with the 45° Shield. The Bushings protect the Wires where they protrude from the rear of the Shield and they allow small diameter Wires to fit snugly into the Clamp portion of the Shield. See Figure 6.

5. CONNECTOR ASSEMBLY

The following steps show the proper sequence for attaching the Accessories to the Connector Blocks.

(a) If Bushings are used, slide them over Wires (preferably before crimping the Contacts onto the Wires), with Flange toward Connector Block.

(b) Push Crimped Contacts all the way into Connector Block. Pull back lightly on Wires to make sure Contacts are properly inserted.

NOTE: When inserting Contacts which are crimped to small flexible Wire, use A-MP Insertion Tool No. 91002-

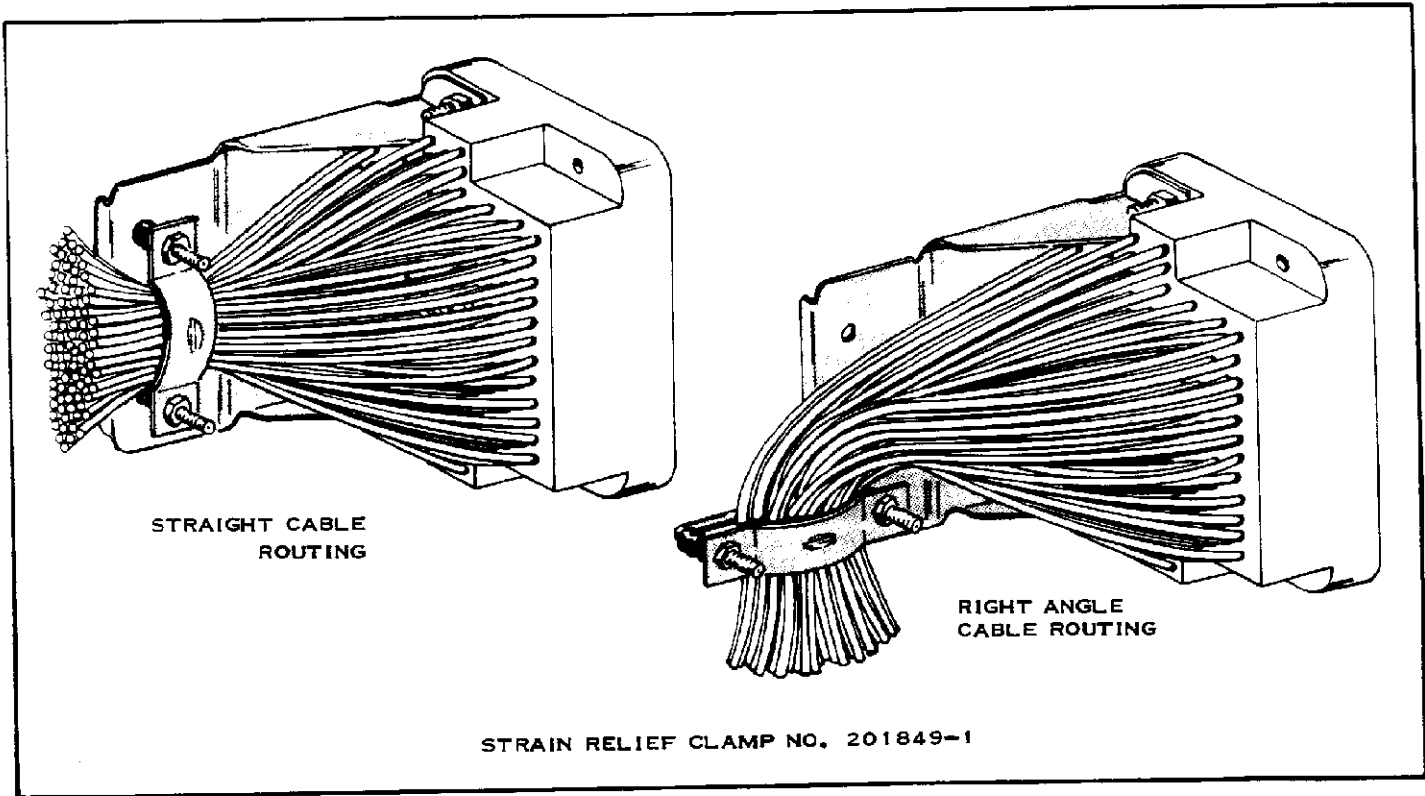


FIGURE 4

- (c) Attach Strain Relief Clamp to Female Block and Shield to Male Block using machine screws or guide pins and sockets.
 (d) Mate the Connector Blocks by tightening the Jackscrew.

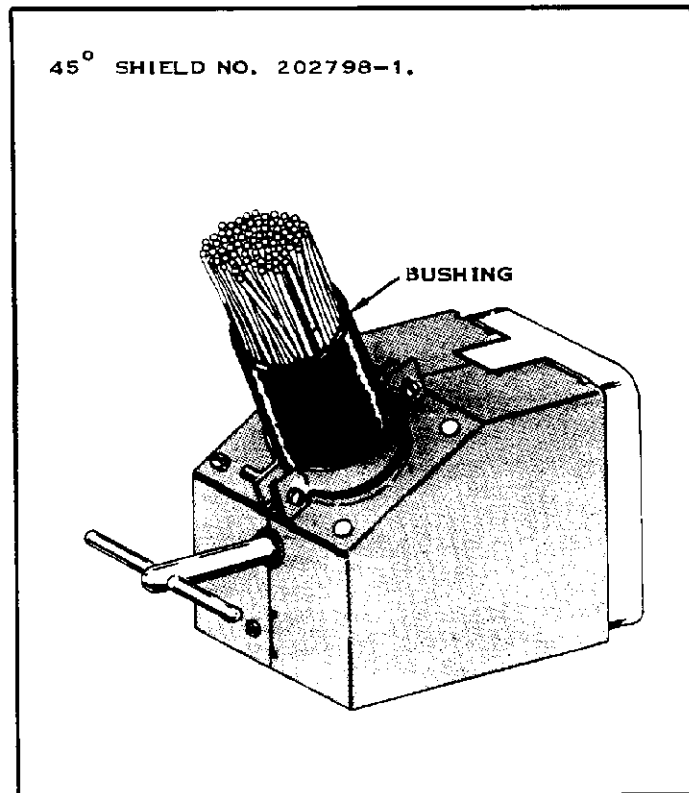


FIGURE 5

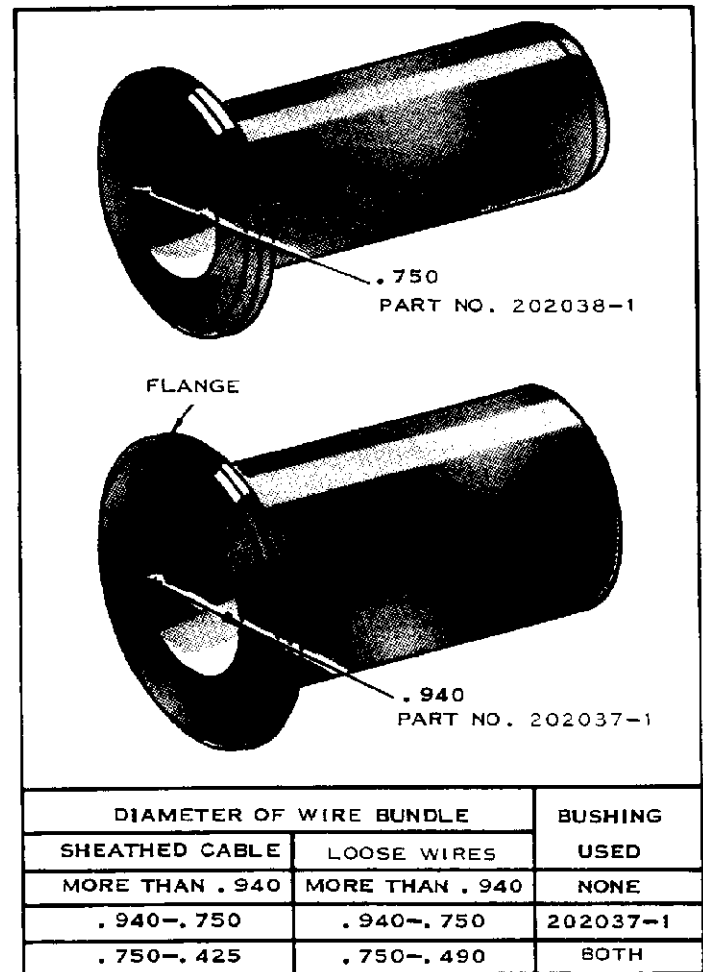


FIGURE 6

6. PANEL MOUNTING

- (a) Make a cutout in the Panel using the dimensions in Figure 7.
 (b) Mount Block to Panel using #4-40 machine screws or guide pins and sockets. A panel mounted Connector Block is shown in Figure 8.

7. CONTACT EXTRACTION

To remove Contacts from Connector Block, use A-MP Extraction Tool No. 305183.

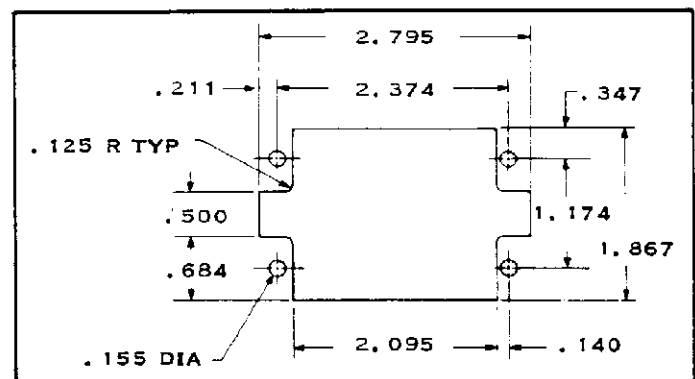


FIGURE 7

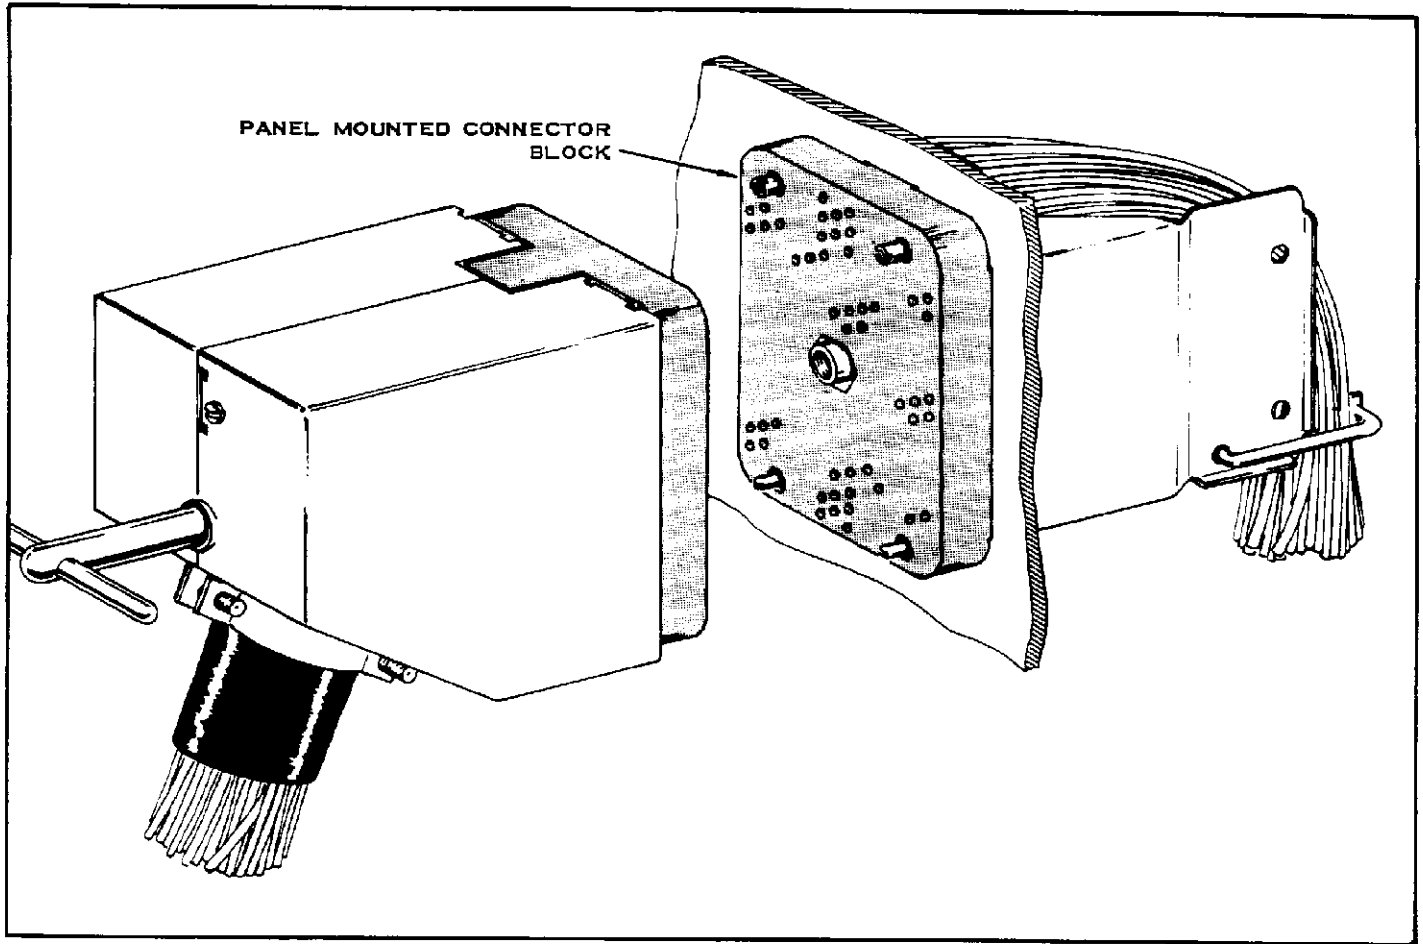


FIGURE 8



**Стандарт
Электрон
Связь**

Мы молодая и активно развивающаяся компания в области поставок электронных компонентов. Мы поставляем электронные компоненты отечественного и импортного производства напрямую от производителей и с крупнейших складов мира.

Благодаря сотрудничеству с мировыми поставщиками мы осуществляем комплексные и плановые поставки широчайшего спектра электронных компонентов.

Собственная эффективная логистика и склад в обеспечивает надежную поставку продукции в точно указанные сроки по всей России.

Мы осуществляем техническую поддержку нашим клиентам и предпродажную проверку качества продукции. На все поставляемые продукты мы предоставляем гарантию .

Осуществляем поставки продукции под контролем ВП МО РФ на предприятия военно-промышленного комплекса России , а также работаем в рамках 275 ФЗ с открытием отдельных счетов в уполномоченном банке. Система менеджмента качества компании соответствует требованиям ГОСТ ISO 9001.

Минимальные сроки поставки, гибкие цены, неограниченный ассортимент и индивидуальный подход к клиентам являются основой для выстраивания долгосрочного и эффективного сотрудничества с предприятиями радиоэлектронной промышленности, предприятиями ВПК и научно-исследовательскими институтами России.

С нами вы становитесь еще успешнее!

Наши контакты:

Телефон: +7 812 627 14 35

Электронная почта: sales@st-electron.ru

Адрес: 198099, Санкт-Петербург,
Промышленная ул, дом № 19, литера Н,
помещение 100-Н Офис 331