



Hexagon Application Kit

For XMC4000 Family

CPU_44A-V2

CPU Board XMC4400 General Purpose

Board User's Manual

Revision 1.0, 2013-02-19

Microcontroller

Edition 2013-02-19

**Published by
Infineon Technologies AG
81726 Munich, Germany**

**© 2013 Infineon Technologies AG
All Rights Reserved.**

Legal Disclaimer

The information given in this document shall in no event be regarded as a guarantee of conditions or characteristics. With respect to any examples or hints given herein, any typical values stated herein and/or any information regarding the application of the device, Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind, including without limitation, warranties of non-infringement of intellectual property rights of any third party.

Information

For further information on technology, delivery terms and conditions and prices, please contact the nearest Infineon Technologies Office (www.infineon.com).

Warnings

Due to technical requirements, components may contain dangerous substances. For information on the types in question, please contact the nearest Infineon Technologies Office.

Infineon Technologies components may be used in life-support devices or systems only with the express written approval of Infineon Technologies, if a failure of such components can reasonably be expected to cause the failure of that life-support device or system or to affect the safety or effectiveness of that device or system. Life support devices or systems are intended to be implanted in the human body or to support and/or maintain and sustain and/or protect human life. If they fail, it is reasonable to assume that the health of the user or other persons may be endangered.

Revision History

Page or Item	Subjects (major changes since previous revision)
Revision 1.0, 2013-02-19	Initial release

Trademarks of Infineon Technologies AG

AURIX™, C166™, CanPAK™, CIPOS™, CIPURSE™, EconoPACK™, CoolMOS™, CoolSET™, CORECONTROL™, CROSSAVE™, DAVE™, EasyPIM™, EconoBRIDGE™, EconoDUAL™, EconoPIM™, EiceDRIVER™, eupec™, FCOS™, HITFET™, HybridPACK™, I²RF™, ISOFACE™, IsoPACK™, MIPAQ™, ModSTACK™, my-d™, NovalithIC™, OptiMOS™, ORIGA™, PRIMARION™, PrimePACK™, PrimeSTACK™, PRO-SIL™, PROFET™, RASIC™, ReverSave™, SatRIC™, SIEGET™, SINDRION™, SIPMOS™, SmartLEWIS™, SOLID FLASH™, TEMPFET™, thinQ!™, TRENCHSTOP™, TriCore™.

Other Trademarks

Advance Design System™ (ADS) of Agilent Technologies, AMBA™, ARM™, MULTI-ICE™, KEIL™, PRIMECELL™, REALVIEW™, THUMB™, μVision™ of ARM Limited, UK. AUTOSAR™ is licensed by AUTOSAR development partnership. Bluetooth™ of Bluetooth SIG Inc. CAT-iq™ of DECT Forum. COLOSSUS™, FirstGPS™ of Trimble Navigation Ltd. EMV™ of EMVCo, LLC (Visa Holdings Inc.). EPCOS™ of Epcos AG. FLEXGO™ of Microsoft Corporation. FlexRay™ is licensed by FlexRay Consortium. HYPERTERMINAL™ of Hilgraeve Incorporated. IEC™ of Commission Electrotechnique Internationale. IrDA™ of Infrared Data Association Corporation. ISO™ of INTERNATIONAL ORGANIZATION FOR STANDARDIZATION. MATLAB™ of MathWorks, Inc. MAXIM™ of Maxim Integrated Products, Inc. MICROTEC™, NUCLEUS™ of Mentor Graphics Corporation. Mifare™ of NXP. MIPI™ of MIPI Alliance, Inc. MIPS™ of MIPS Technologies, Inc., USA. muRata™ of MURATA MANUFACTURING CO., MICROWAVE OFFICE™ (MWO) of Applied Wave Research Inc., OmniVision™ of OmniVision Technologies, Inc. Openwave™ Openwave Systems Inc. RED HAT™ Red Hat, Inc. RFMD™ RF Micro Devices, Inc. SIRIUS™ of Sirius Satellite Radio Inc. SOLARIS™ of Sun Microsystems, Inc. SPANSION™ of Spansion LLC Ltd. Symbian™ of Symbian Software Limited. TAIYO YUDEN™ of Taiyo Yuden Co. TEAKLITE™ of CEVA, Inc. TEKTRONIX™ of Tektronix Inc. TOKO™ of TOKO KABUSHIKI KAISHA TA. UNIX™ of X/Open Company Limited. VERILOG™, PALLADIUM™ of Cadence Design Systems, Inc. VLYNQ™ of Texas Instruments Incorporated. VXWORKS™, WIND RIVER™ of WIND RIVER SYSTEMS, INC. ZETEX™ of Diodes Zetex Limited.

Last Trademarks Update 2011-02-24

Table of Contents

Introduction	7
1 Overview	7
1.1 Key Features	7
1.2 Block Diagram	8
2 Hardware Description	9
2.1 Power Supply	9
2.2 Reset	12
2.3 Clock Generation.....	13
2.4 Boot Option	13
2.5 Debug Interface.....	14
2.5.1 On-board USB Debugger.....	15
2.5.2 Cortex Debug Connector (10-pin).....	16
2.5.3 Cortex Debug+ETM Connector (20-pin)	17
2.6 RGB LED.....	19
2.7 USB	19
2.8 RTC	21
2.9 User LEDs and User Buttons	22
2.10 Potentiometer	22
2.11 Satellite Connectors	23
2.11.1 COM Connector	24
2.11.2 HMI Connector	25
2.11.3 ACT Satellite Connector.....	26
3 Production Data	26
3.1 Schematics.....	26
3.2 Component Placement and Geometry.....	31
3.3 Bill of Material (BOM)	32

List of Figures

Figure 1	CPU_44A-V2 Board Block Diagram.....	8
Figure 2	CPU Board XMC4400 General Purpose (CPU_44A-V2).....	9
Figure 3	Powering Option.....	10
Figure 4	Block Diagram Of Power Supply.....	10
Figure 5	Reset Circuit.....	12
Figure 6	Reset LED and Reset Button	12
Figure 7	Clock Generation.....	13
Figure 8	Boot Options Switch	13
Figure 9	Installation of Serial Port Driver.....	15
Figure 10	On-Board USB Debugger	15
Figure 11	Cortex Debug Connector (10-pin).....	16
Figure 12	Cortex Debug Connector (10-pin) Layout	16
Figure 13	Cortex Debug+ETM Connector (20-pin)	17
Figure 14	Cortex Debug+ETM Connector (20-pin) Layout	18
Figure 15	RGB LED.....	19
Figure 16	USB Connector	19
Figure 17	USB power generation - Host/OTG mode	20
Figure 18	Battery Holder for Coin Cells.....	21
Figure 19	XMC4400 Power Domains and Real Time Clock	21
Figure 20	User LEDs and User Buttons	22
Figure 21	Satellite Connectors	23
Figure 22	Satellite Connector Type COM	24
Figure 23	Satellite Connector Type HMI	25
Figure 24	Satellite Connector Type ACT.....	26
Figure 25	Satellite Connectors, USB-OTG.....	27
Figure 26	XMC4400	28
Figure 27	Power, Debug Connectors, Reset.....	29
Figure 28	On-board Debugger	30
Figure 29	Component Placement and Geometry.....	31

List of Tables

Table 1	Power status LED's	10
Table 2	Power Measurement	11
Table 3	Boot Options Settings	13
Table 4	Cortex Debug Connector (10 Pin)	16
Table 5	Cortex Debug+ETM Connector (20 Pin)	17
Table 6	RGB LED Connections	19
Table 7	USB micro AB connector Pinot	20
Table 8	User LEDs	22
Table 9	User Buttons.....	22
Table 10	Potentiometer	22
Table 11	BOM of CPU_44A-V2 Board.....	32

Introduction

This document describes the features and hardware details of the CPU Board XMC4400 General Purpose (CPU_44A-V2) designed to work with Infineon's XMC4400 Microcontroller. This board is part of Infineon's Hexagon Application Kits.

1 Overview

The CPU board CPU_44A-V2 houses the XMC4400 Microcontroller and three satellite connectors (HMI, COM, ACT) for application expansion. The board along with satellite cards (e.g. HMI_OLED-V1, COM_ETH-V1, AUT_ISO-V1 boards) demonstrates the capabilities of the XMC4400. The main use case for this board is to demonstrate the generic features of the XMC4400 device including tool chain. The focus is safe operation under evaluation conditions. The board is neither cost nor size optimized and does not serve as a reference design.

1.1 Key Features

The CPU_44A-V2 board is equipped with the following features

- XMC4400 (ARM[®] Cortex™-M4-based) Microcontroller, 512 kByte on-chip Flash, LQFP-100
- Connection to satellite cards via the satellite connectors COM, HMI and ACT
- USB OTG Host/Device support via micro USB connector
- Debug options
 - On-board Debugger via the Debug USB connector
 - Cortex Debug connector 10-pin (0.05")
 - Cortex Debug+ETM connector 20-pin (0.05")
- Reset push button
- RGB LED connected to GPIOs P1.10, P1.11 and P5.7
- Boot option switch
- PowerScale Connector: Ready for power consumption analysis
- 7 LED's
 - 3 Power indicating LEDs
 - 2 User LEDs (P5.2 and P1.8)
 - 1 RESET LED
 - 1 Debug LED
- Two User Buttons connected to HIB_IO_0 and P0.10
- Potentiometer, connected to analog input P14.1
- Power supply
 - Via Micro-USB connector in USB device mode
 - Via satellite connector pins (COM/ACT satellites cards can supply power to CPU board)
 - Via Debug USB connector
 - RTC backup battery

1.2 Block Diagram

Figure 1 shows the functional block diagram of the CPU_44A-V2 board. For more information about the power supply please refer to chapter 2.1.

The CPU board has got the following building blocks:

- 3 Satellite Connectors (COM, HMI ACT)
- 2 User LEDs connected to GPIOs P5.2 and P1.8
- 2 User Buttons connected to HIB_IO_0 and P0.10
- RGB LED connected to GPIOs P1.10, P1.11 and P5.7
- 2 Cortex Debug Connectors
- Variable resistor (POTI) connected to GPIO P14.1
- USB On-The-Go Connector (Micro-USB)
- On-board Debugger via Debug USB connector (Micro-USB)

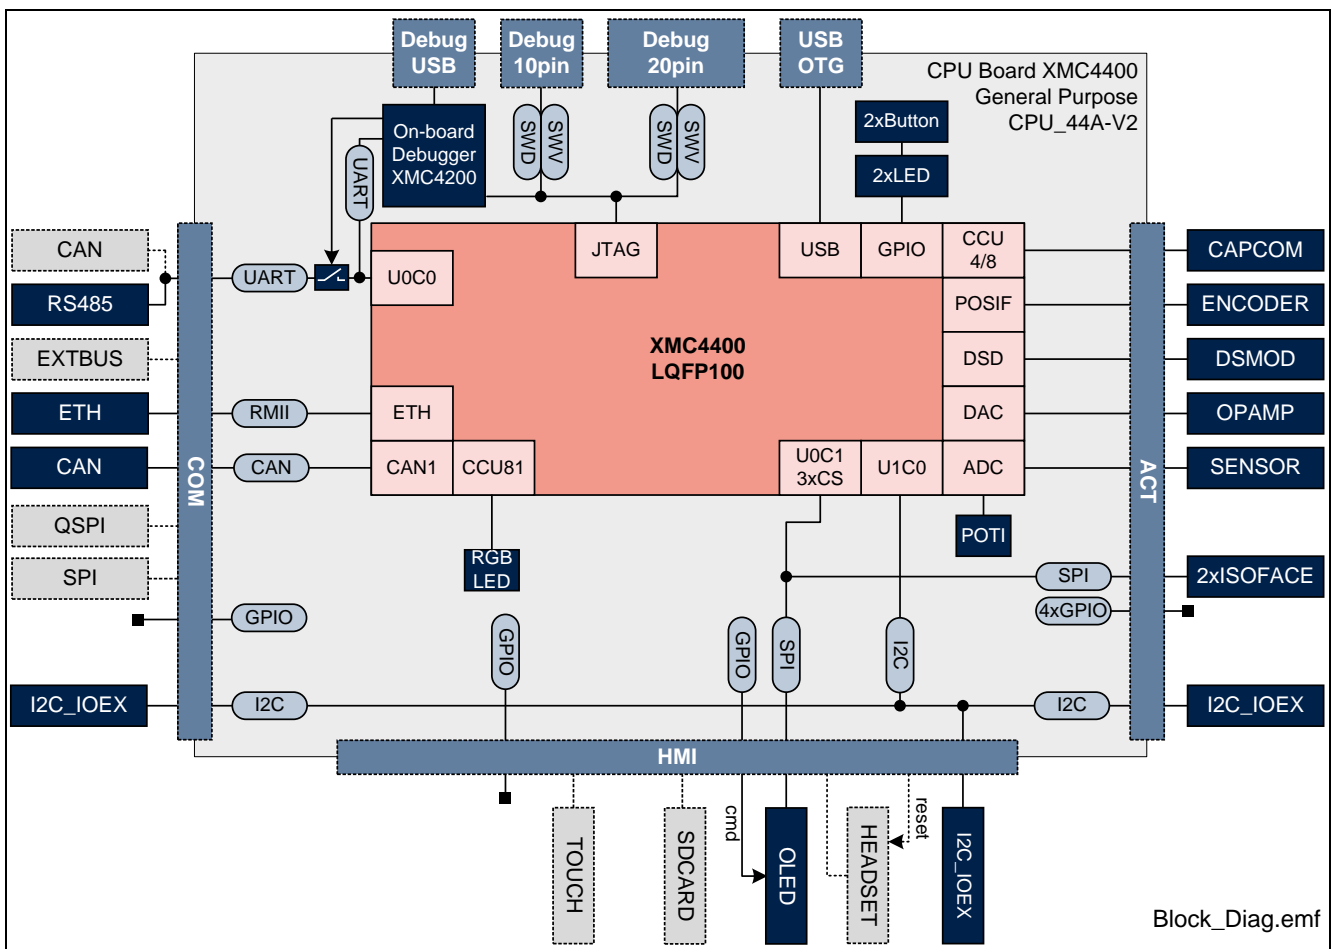


Figure 1 CPU_44A-V2 Board Block Diagram

2 Hardware Description

The following sections give a detailed description of the hardware and how it can be used.

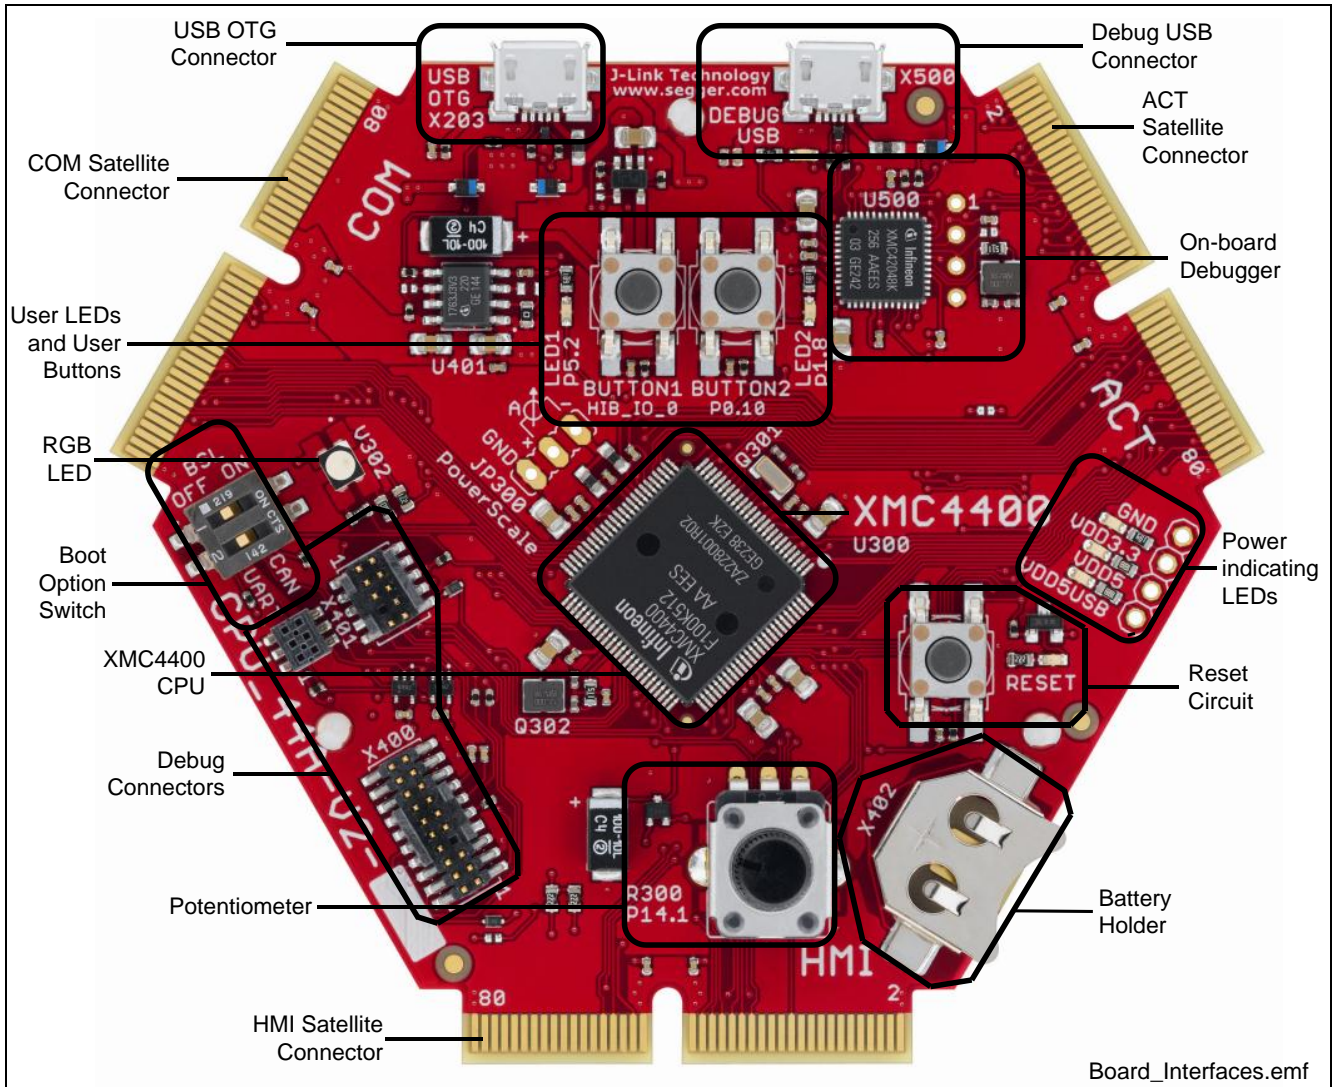


Figure 2 CPU Board XMC4400 General Purpose (CPU_44A-V2)

2.1 Power Supply

The CPU_44A-V2 board can be powered via either of the USB plugs (5 V); however, there is a current limit that can be drawn from the host PC through USB. If the CPU_44A-V2 board is used to drive other satellite cards e.g. MOT_GPDLV-V2 and the total system current required exceeds 500 mA, then the CPU_44A-V2 board needs to be powered by a satellite cards. These satellite cards support external power supply.

The typical current drawn by the CPU board without any satellite cards connected is about 190 mA (@5 V).

For powering the board through an USB interface, connect the USB cable provided with the kit to either of the Micro-USB connector on board as shown in Figure 3.

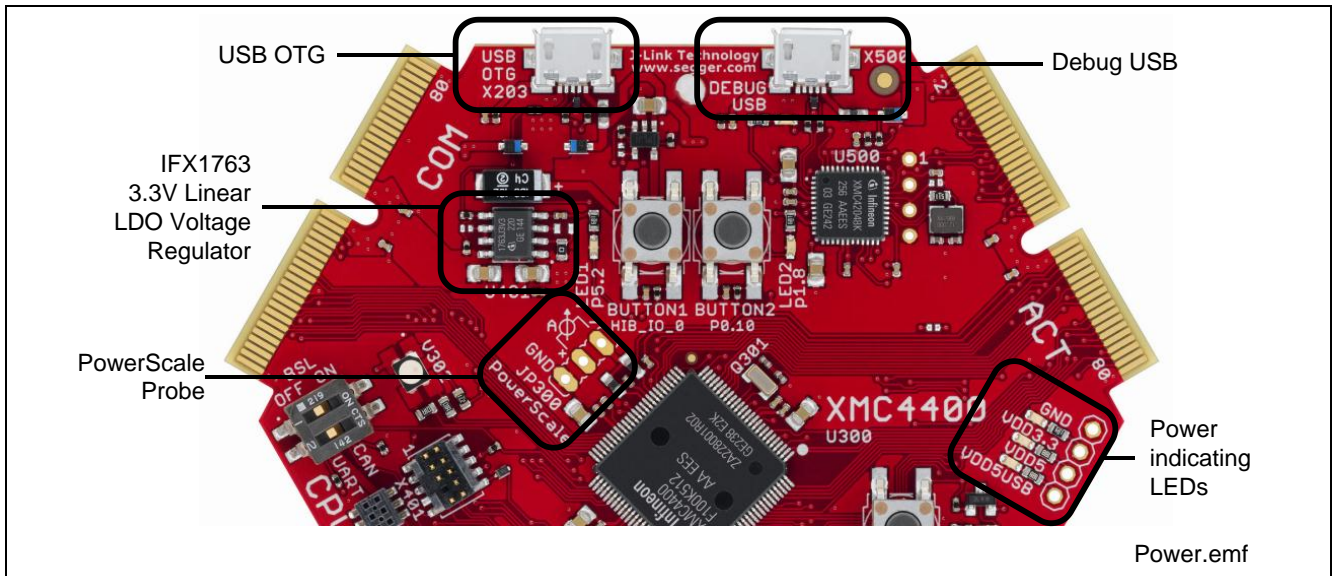


Figure 3 Powering Option

To indicate the power status of the CPU_44A-V2 board three power indicating LED's are provided on board (see Figure 3). The LED will be "ON" when the corresponding power rail is powered.

Table 1 Power status LED's

LED Reference	Power Rail	Voltage	Note
V401	VDD5	5 V	Must always be "ON"
V402	VDD5USB	5 V	"ON" if powered by USB OTG connector X203 "OFF" in all other supply cases
V403	VDD3.3	3.3 V	Must always be "ON"

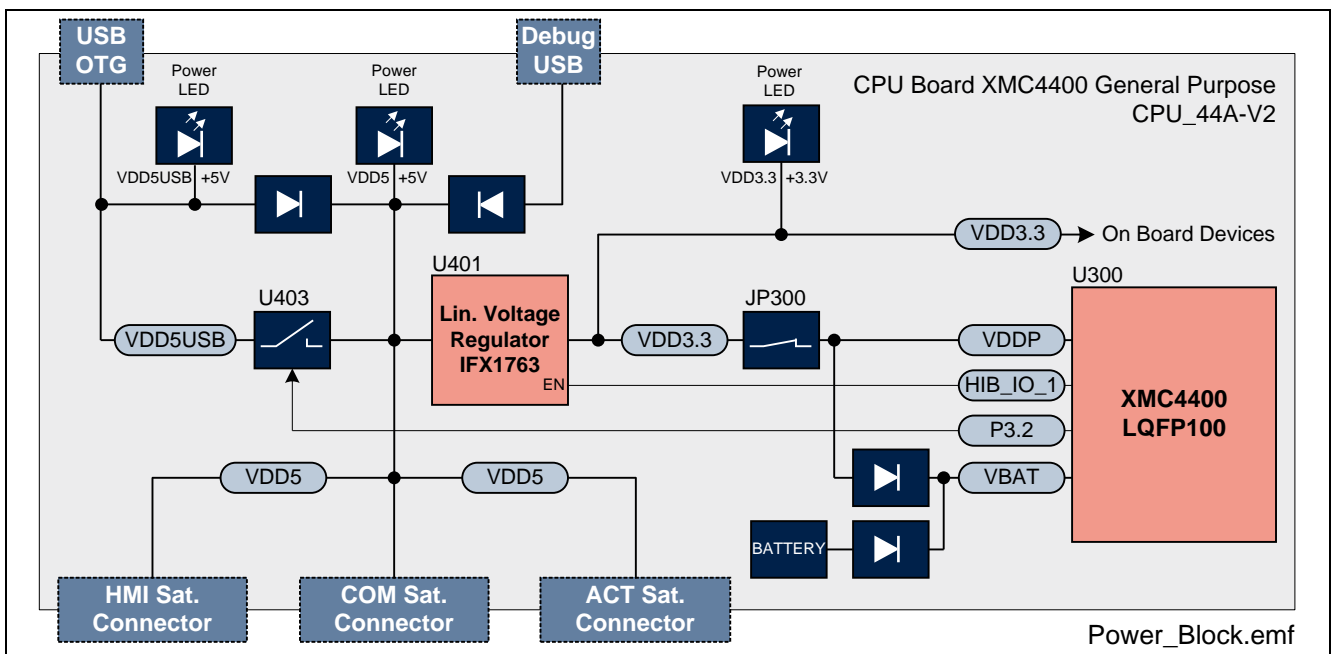


Figure 4 Block Diagram Of Power Supply

Hitex PowerScale probe is provided on the CPU_44A-V2 board to measure the power consumption of the XMC4400 device.

Table 2 Power Measurement

Jumper	Function	Description
JP300	PowerScale	A Hitex PowerScale probe can be connected for current sensing the VDD3.3 (CPU power source). Default: pos. 1-2 (closed) <i>Note: On the PCB there is a shorting trace between pin 1-2. This trace has to be cut first, before using PowerScale. Pin 3 is GND.</i>

2.2 Reset

A reset signal connected to the low-active PORST# pin of the target CPU (U300) can be issued by

- an on-board Reset Button (SW400, RESET)
- an on-board debug device (U500)
- an external debugger connected to either Cortex Debug connector X400 or X401

The RESET signal is routed to all satellite connectors. The reset circuit includes a red LED (V407) to indicate the reset status: The Reset LED (V407) will be "ON" during active reset state and will be "OFF" if reset is not active.

Be aware that PORST# is a bidirectional reset pin of the XMC4000 family which can also be pulled low by the XMC4000 device itself.

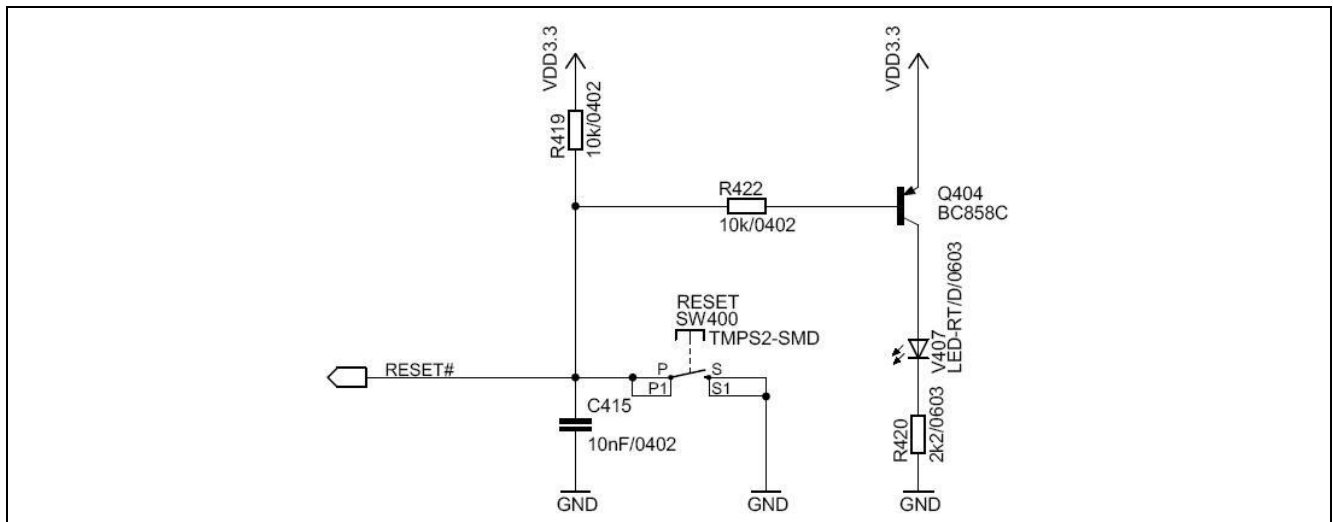


Figure 5 Reset Circuit

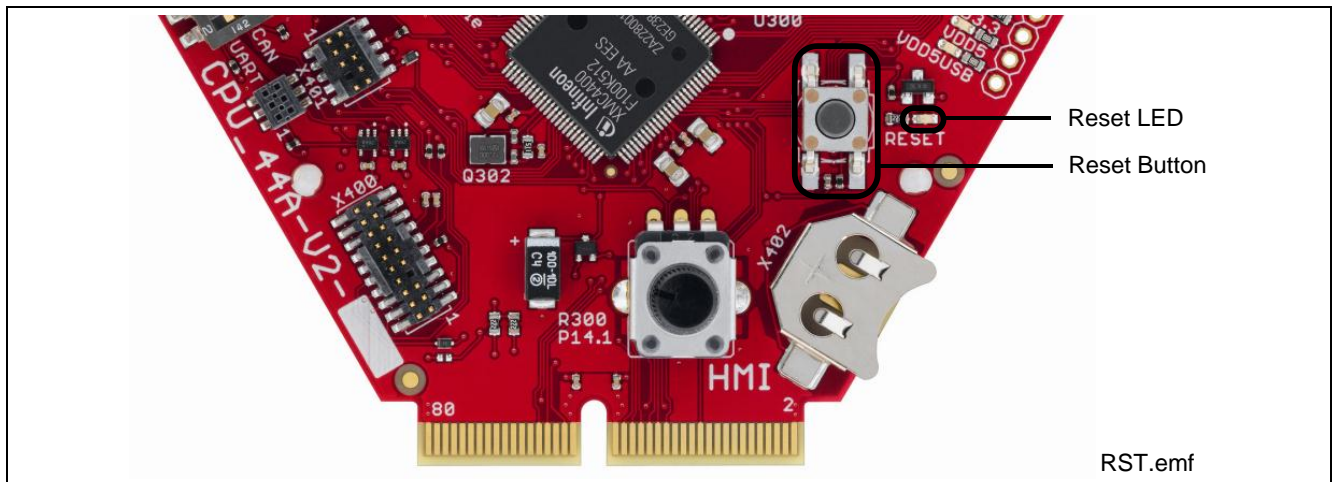


Figure 6 Reset LED and Reset Button

2.3 Clock Generation

An external 12 MHz crystal provides the clock signal to the XMC4400 microcontroller. The drive strength of the oscillator is set to maximum by software, in order to ensure a safe start-up of the oscillator even under worst case conditions. Therefore a serial 510 Ohm resistor will attenuate the oscillations during operations.

For the RTC clock a separate external 32.768 kHz crystal is used on board.

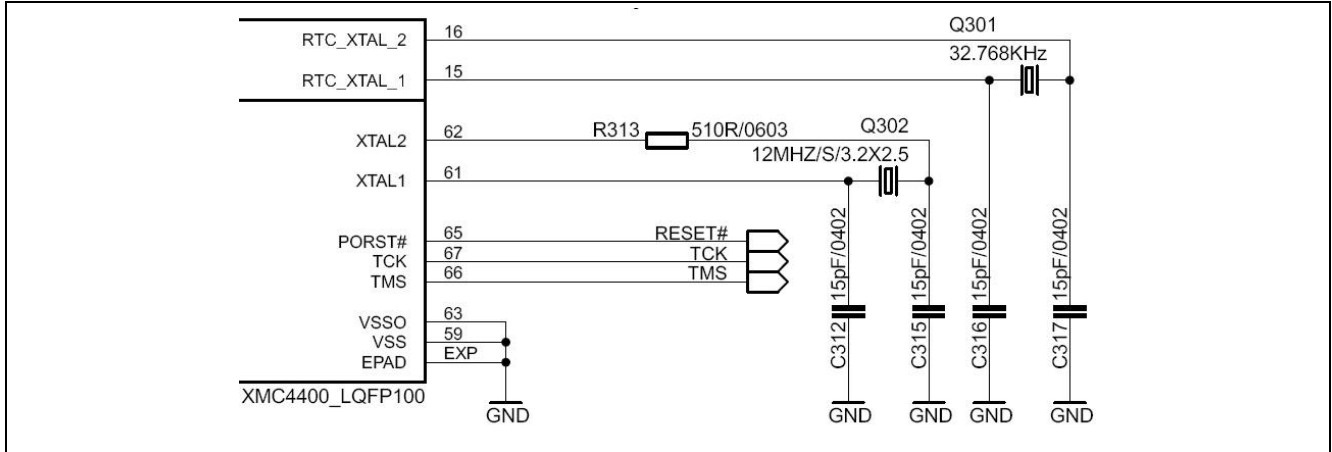


Figure 7 Clock Generation

2.4 Boot Option

During power-on-reset the XMC4400 latches the dip switch SW300 settings via the TCK and the TMS pin. Based on the values latched different boot options are possible.

Table 3 Boot Options Settings

BSL (TMS)	CAN/UART (TCK)	Boot Option
OFF (1)	UART (0)	Normal Mode (Boot from flash)
ON (0)	UART (0)	ASC BSL Enabled (Boot from UART)
OFF (1)	CAN (1)	BMI Customized Boot Enabled
ON (0)	CAN (1)	CAN BSL Enabled (Boot from CAN)

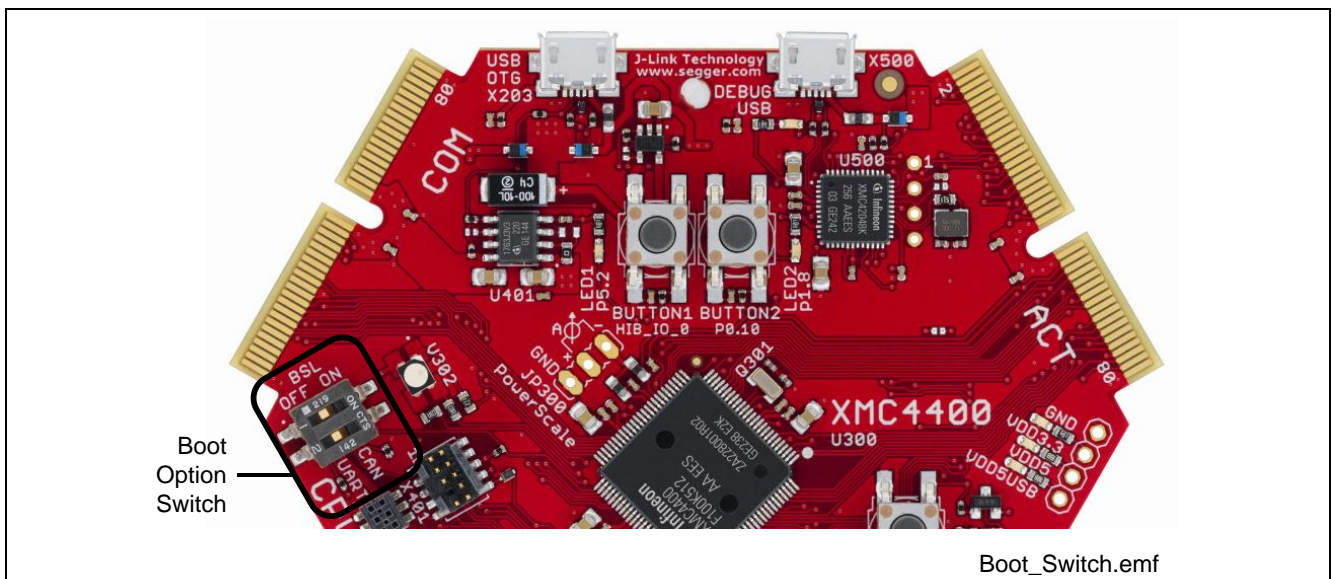


Figure 8 Boot Options Switch

2.5 Debug Interface

The CPU_44A-V2 board supports debugging via 3 different channels:

- On-board Debugger
- Cortex Debug Connector (10-pin)
- Cortex Debug+ETM Connector (20-pin)

The Hexagon Application Boards are designed to use “Serial Wire Debug” as debug interface. JTAG debug is not supported by default because the GPIO P0.7, where the required TDI function is mapped to also, is used by various Actuator boards connected to the ACT satellite connector.

Note: It is strongly recommended not to use JTAG debug mode, especially if satellites boards are connected, which uses the GPIO 0.7. For the same reason also do not use the on-board debugger in JTAG mode.

If you want to use the JTAG debug mode through the cortex debug connectors (X400, X401) anyway, enable the JTAG interface of the XMC device by assembling the pull-up resistor R427 (4k7 Ohm) and the resistor R410 (0 - 33 Ohm).

2.5.1 On-board USB Debugger

The on-board debugger [1] supports

- Serial Wire Debug
- Serial Wire Viewer
- Full Duplex UART communication via a USB Virtual COM

[1] Attention: Newer firmware versions of the on-board debugger require the latest J-Link driver (V4.62 or higher) and a Serial Port Driver (CDC driver) installed on your computer. Please check “Install J-Link Serial Port Driver” when installing the latest J-Link driver (see Figure 9)

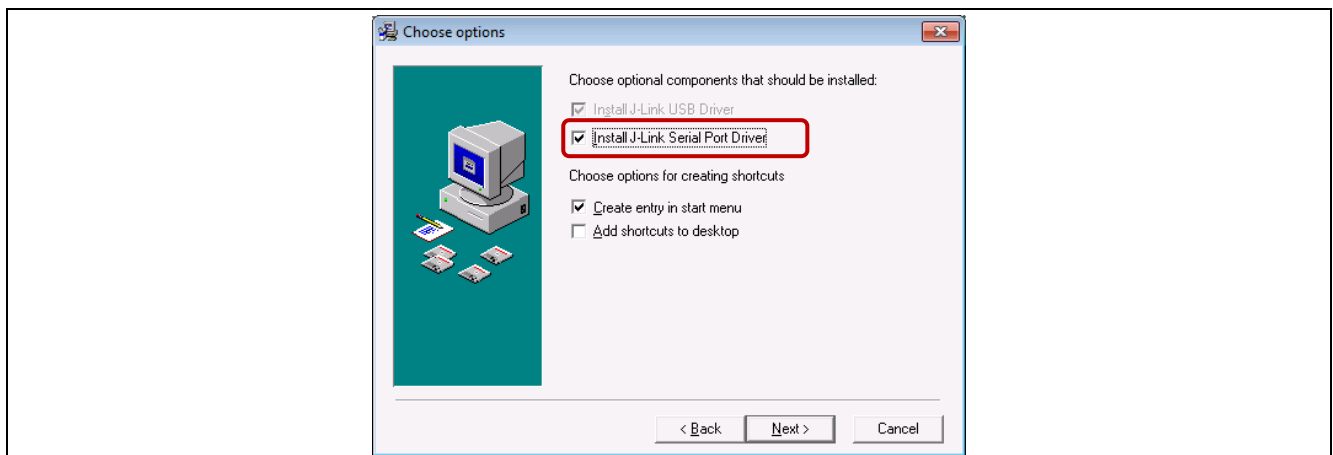


Figure 9 Installation of Serial Port Driver

The on-board debugger can be accessed through the Debug USB connector shown in Figure 10. The Debug LED V502 shows the status during debugging.

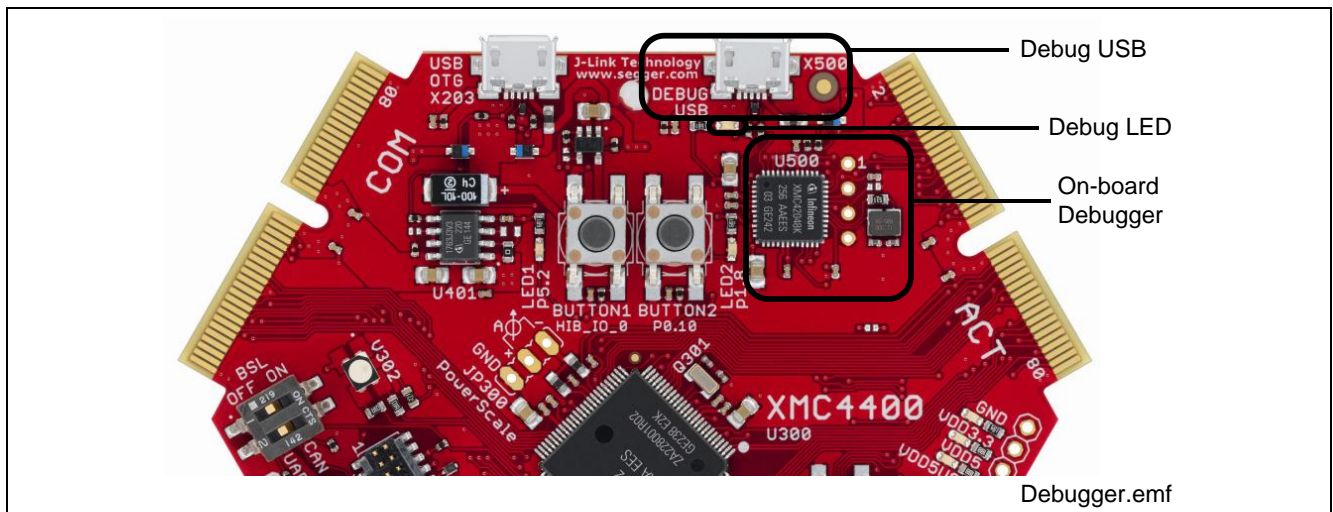


Figure 10 On-Board USB Debugger

When using an external debugger connected to the 10pin/20pin Cortex Debug Connector, the on-board debugger is switched off.

When using the USB virtual COM port function of the on-board debugger the UART interface to the COM satellite is disabled through the switches U301 and U303.

2.5.2 Cortex Debug Connector (10-pin)

The CPU_44A-V2 board supports Serial Wire Debug operation and Serial Wire Viewer operation (via the SWO signal when Serial Wire Debug mode is used) through the 10-pin Cortex Debug Connector.

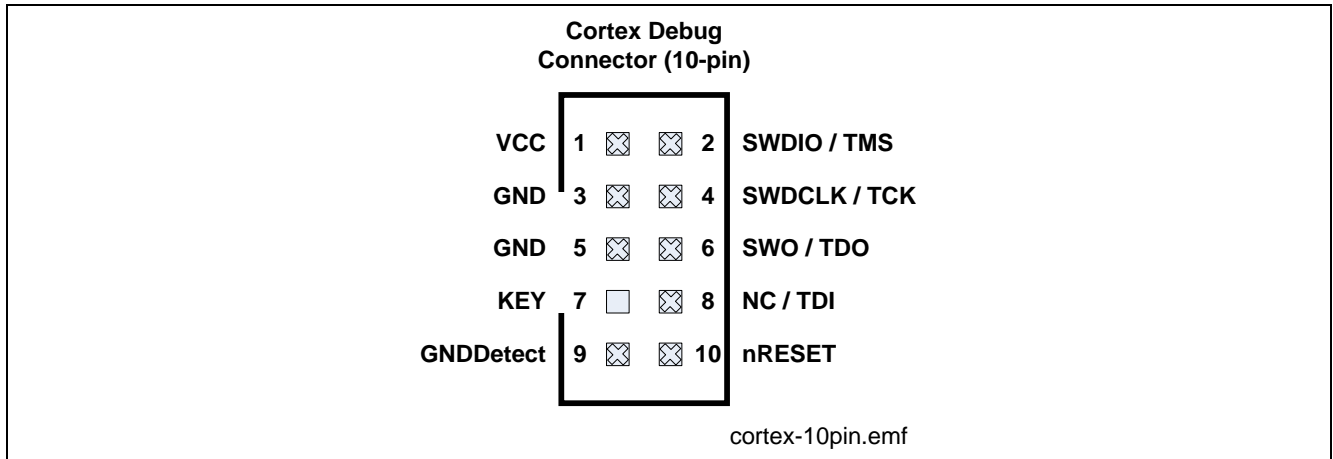


Figure 11 Cortex Debug Connector (10-pin)

Table 4 Cortex Debug Connector (10 Pin)

Pin No.	Signal Name	Serial Wire Debug	JTAG Debug
1	VCC	+3.3 V	+3.3 V
2	SWDIO / TMS	Serial Wire Data I/O	Test Mode Select
3	GND	Ground	Ground
4	SWDCLK / TCK	Serial Wire Clock	Test Clock
5	GND	Ground	Ground
6	SWO / TDO	Trace Data OUT	Test Data OUT
7	KEY	KEY	KEY
8	NC / TDI	Not connected	Test Data IN
9	GNDDetect	Ground Detect	Ground Detect
10	nRESET	Reset (Active Low)	Reset (Active Low)

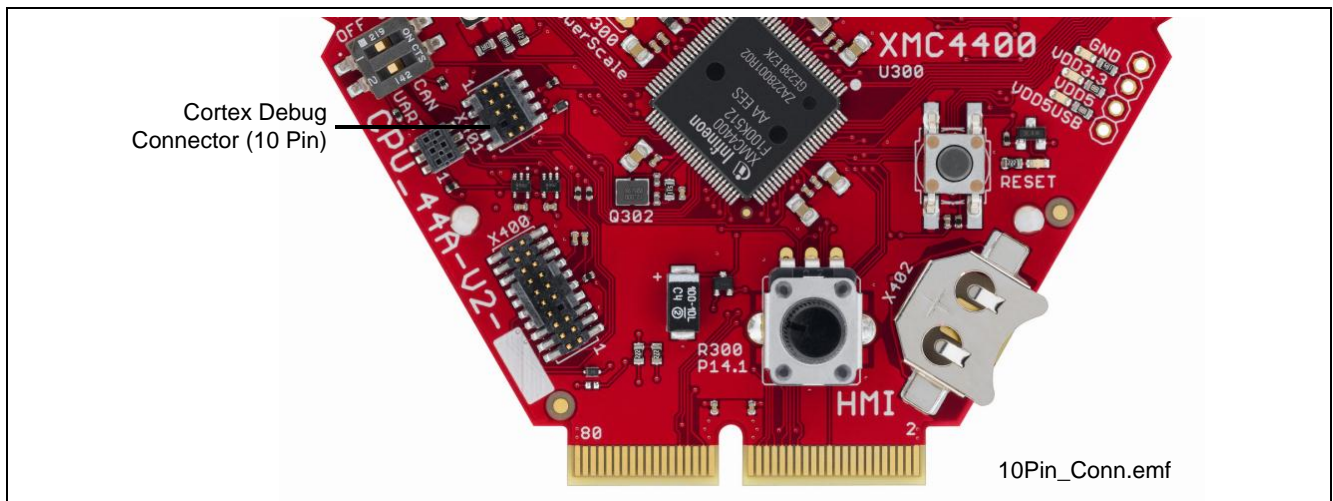


Figure 12 Cortex Debug Connector (10-pin) Layout

2.5.3 Cortex Debug+ETM Connector (20-pin)

The CPU_44A-V2 board supports Serial Wire Debug operation, Serial Wire Viewer operation (via SWO connection when Serial Wire Debug mode is used) through the 20-pin Cortex Debug+ETM Connector. The board does not support the Instruction Trace operation.

JTAG Debug operation additionally would require the TDI (P0.7) signal. By default the TDI signal is disconnected from the Cortex Debug Connectors by a not assembled resistor R410, because the pin P0.7 is used by some Actuator boards connected to the ACT satellite connector.

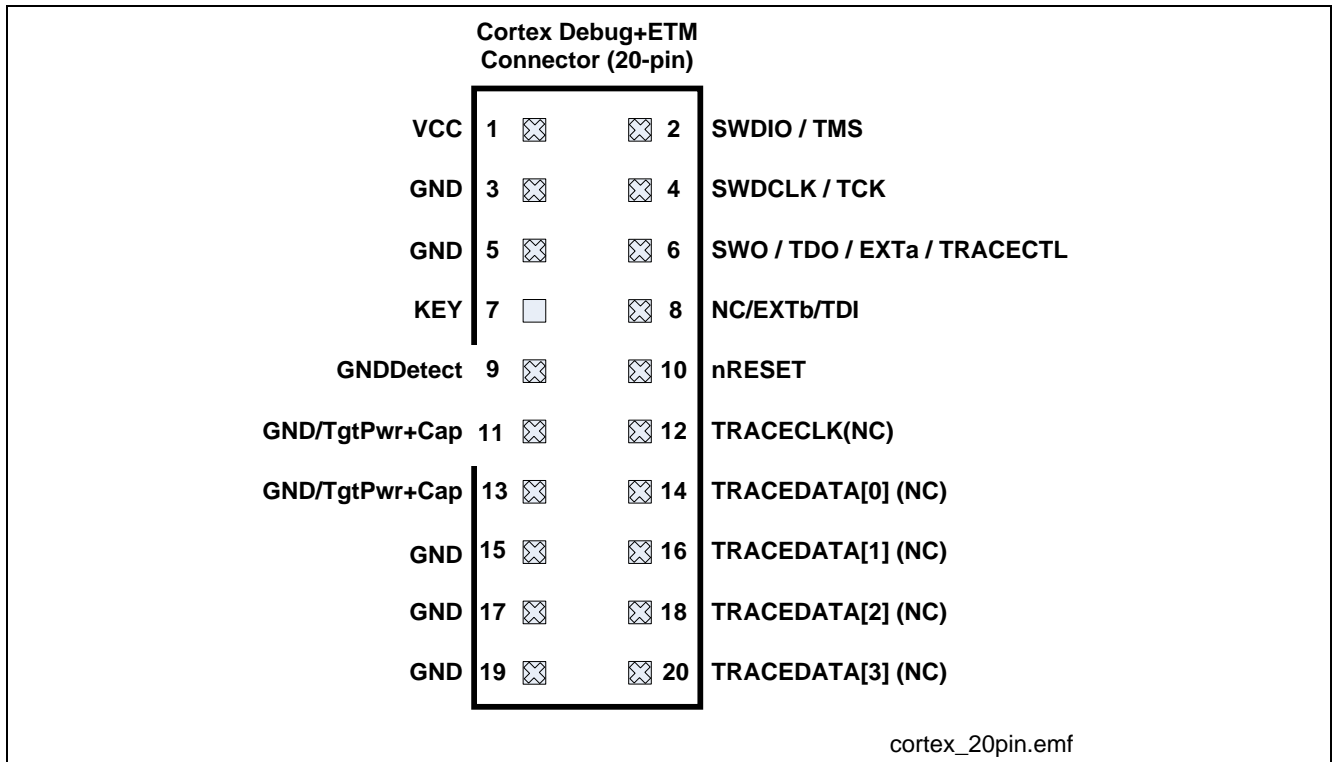


Figure 13 Cortex Debug+ETM Connector (20-pin)

Table 5 Cortex Debug+ETM Connector (20 Pin)

Pin No.	Signal Name	Serial Wire Debug	JTAG Debug
1	VCC	+3.3 V	+3.3 V
2	SWDIO / TMS	Serial Wire Data I/O	Test Mode Select
3	GND	Ground	Ground
4	SWDCLK / TCK	Serial Wire Clock	Test Clock
5	GND	Ground	Ground
6	SWO / TDO	Trace Data OUT	Test Data OUT
7	KEY	KEY	KEY
8	NC / TDI	Not connected	Test Data IN
9	GNDDetect	Ground Detect	Ground Detect
10	nRESET	Reset (Active Low)	Reset (Active Low)
11	GND/TgtPwr+Cap	Ground	Ground
12	TRACECLK*	TRACECLK*	TRACECLK*
13	GND/TgtPwr+Cap	Ground	Ground
14	TRACEDATA[0]*	TRACEDATA[0]*	TRACEDATA[0]*
15	GND	Ground	Ground

Table 5 Cortex Debug+ETM Connector (20 Pin)

Pin No.	Signal Name	Serial Wire Debug	JTAG Debug
16	TRACEDATA[1]*	TRACEDATA[1]*	TRACEDATA[1]*
17	GND	Ground	Ground
18	TRACEDATA[2]*	TRACEDATA[2]*	TRACEDATA[2]*
19	GND	Ground	Ground
20	TRACEDATA[3]*	TRACEDATA[3]*	TRACEDATA[3]*

Note: * Not connected on the CPU_44A-V2 board.

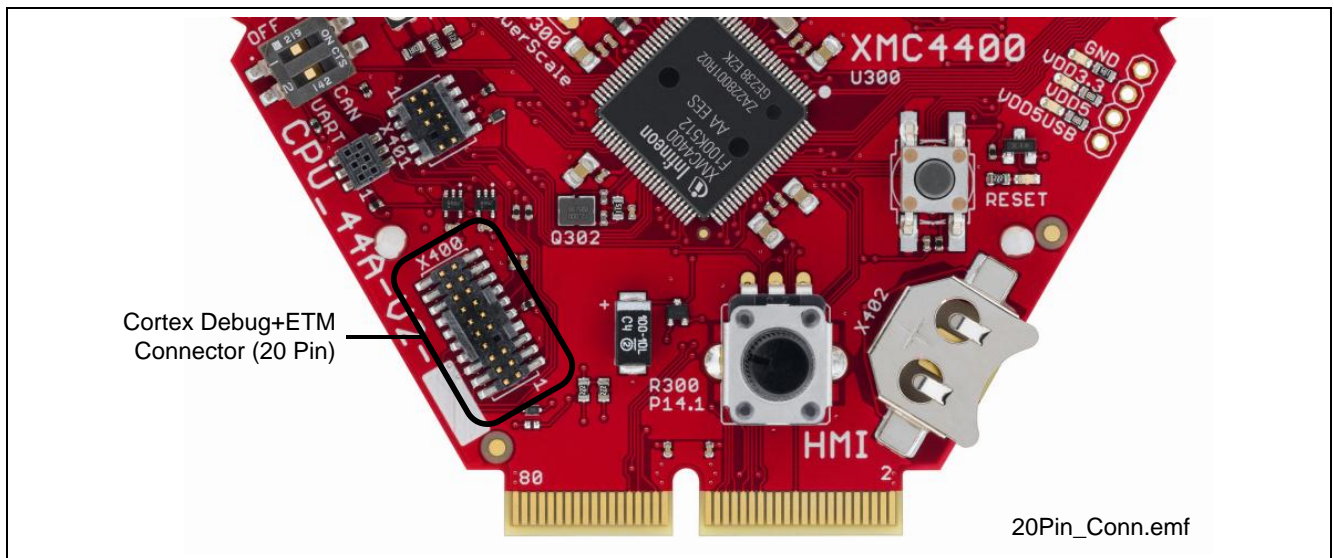


Figure 14 Cortex Debug+ETM Connector (20-pin) Layout

2.6 RGB LED

The CPU_44A-V2 board has a tricolored LED. The LED glows with either Red/Blue/Green colors as controlled by the GPIO pins given below.

Table 6 RGB LED Connections

Pin No. / Function	LED Color
P5.7 / CCU81.OUT02	RED
P1.11 / CCU81.OUT11	GREEN
P1.10 / CCU81.OUT21	BLUE

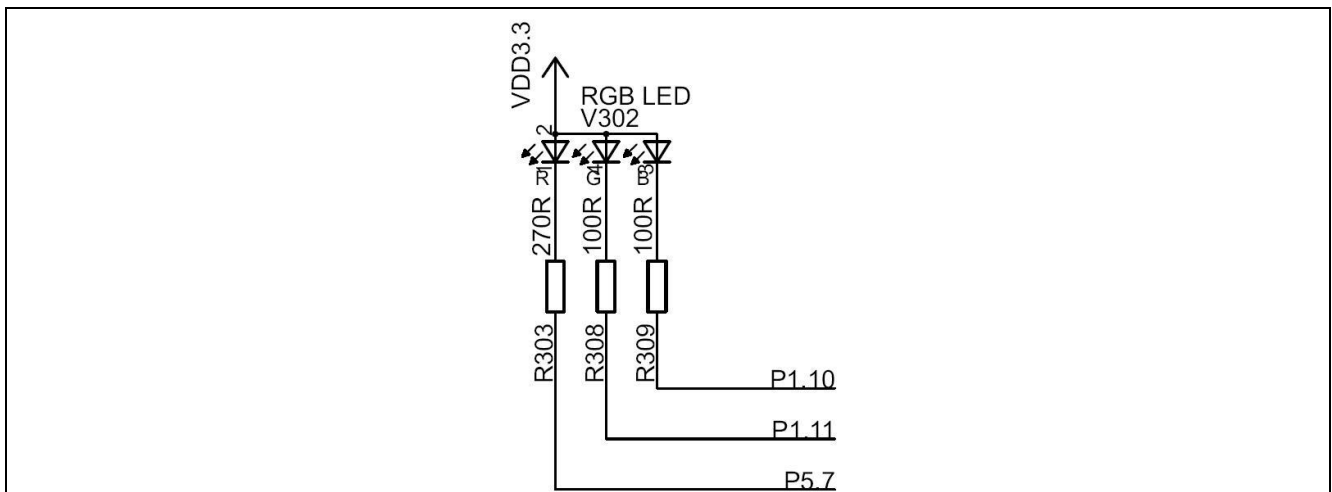


Figure 15 RGB LED

2.7 USB

The XMC4400 supports USB interface in host only mode, device only mode or as an OTG Dual Role Device (DRD). In USB device mode, power is expected through VBUS (pin 1 of X203C) from an external host (e.g. PC). When the current consumption of the application running on the Hexagon Application system is higher than 500 mA, power from an external source through satellite cards shall be used.

Note: Some PCs, notebooks or hubs have a weak USB supply which is not sufficient for proper supply. In this case use an external 5 Volt power supply or a powered USB hub.

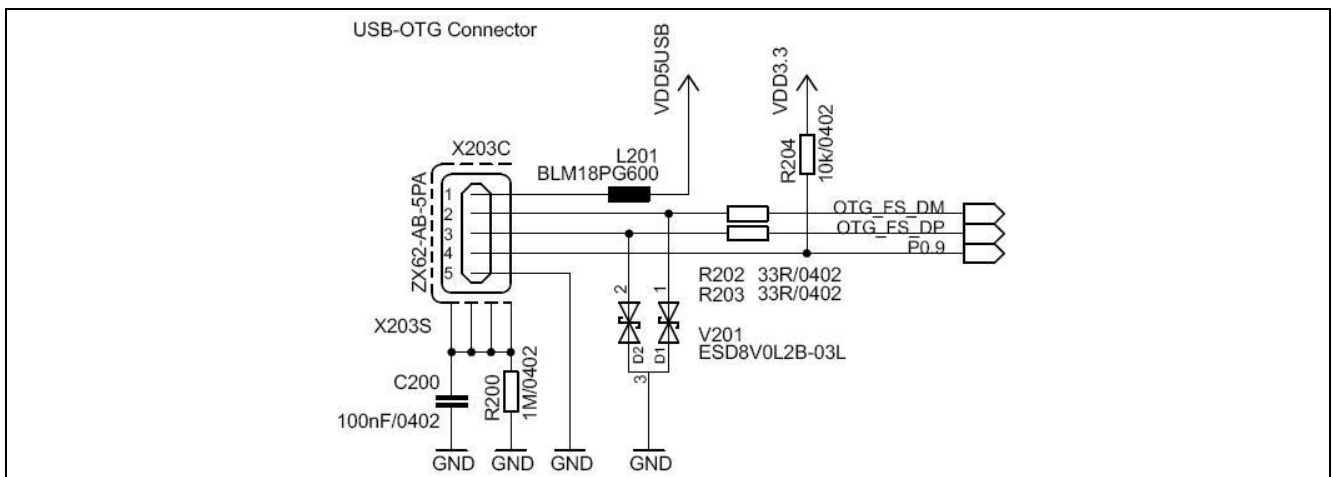


Figure 16 USB Connector

USB ID pin of the USB connector (pin 4 of X203C) is connected to the port pin P0.9 of the XMC4400. On this port pin the USD identification signal (USB.ID) of XMC4000 USB module is mapped to. An OTG device will detect whether a USB Micro-A or Micro-B plug is inserted by checking the ID pin. When the ID = FALSE a Micro-A connector is plugged in and when ID = TRUE a Micro-B connector is plugged in. When the ID is true the XMC4400 acts as a USB host else as a USB device.

Table 7 USB micro AB connector Pinot

Pin No.	Pin Name	Pin Description
1	VBUS	5 V
2	D-	Data Minus
3	D+	Data Plus
4	ID	Identification
5	GND	Ground

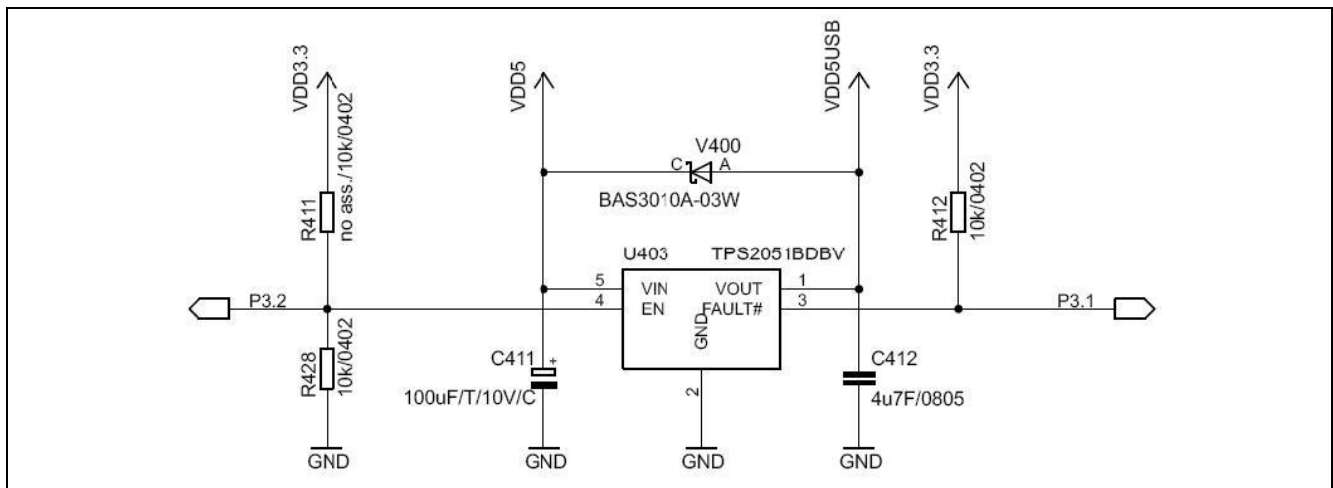


Figure 17 USB power generation - Host/OTG mode

In the host only mode and OTG mode the CPU_44A-V2 board is capable of supplying power to the connected device (e.g. USB mouse). The board has a power-switch which is controlled by the USB.BUSDRIVE signal of the XMC4400. The USB.BUSDRIVE signal is mapped to port pin P3.2 (active high).

In the Host/OTG mode a low active FAULT signal indicates to the port pin P3.1 of the XMC4400, if more than 500 mA current is drawn by the external device.

Diode V400 will allow powering the board through USB in all USB modes via e.g. a PC.

2.8 RTC

The XMC4400 CPU has two power domains, the Core Domain and Hibernate Domain.

The Core Domain (VDDP pins) is connected to the VDD3.3 rail. An on-board LDO voltage regulator generates VDD3.3 (3.3 V) from VDD5 (5 V).

The Hibernate Domain is powered via the auxiliary supply pin VBAT, which is supplied by either a 3 V coin cell (size 1216, 1220, 1225) plugged into the battery holder or 3.3 V (VDD3.3) generated by the on-board voltage regulator.



Figure 18 Battery Holder for Coin Cells

The Real Time Clock (RTC) is located in the hibernate domain. The XMC4400 uses the HIB_IO_1 signal (active low) to shut down the external LDO voltage regulator which generates the VDD3.3 (Core Domain). Even if the Core Domain is not powered the Hibernate Domain will operate if VBAT is available. The RTC keeps running as long as the Hibernate Domain is powered via the auxiliary supply VBAT. The RTC is capable to wake-up the whole system from Hibernate mode by setting HIB_IO_1 to high.

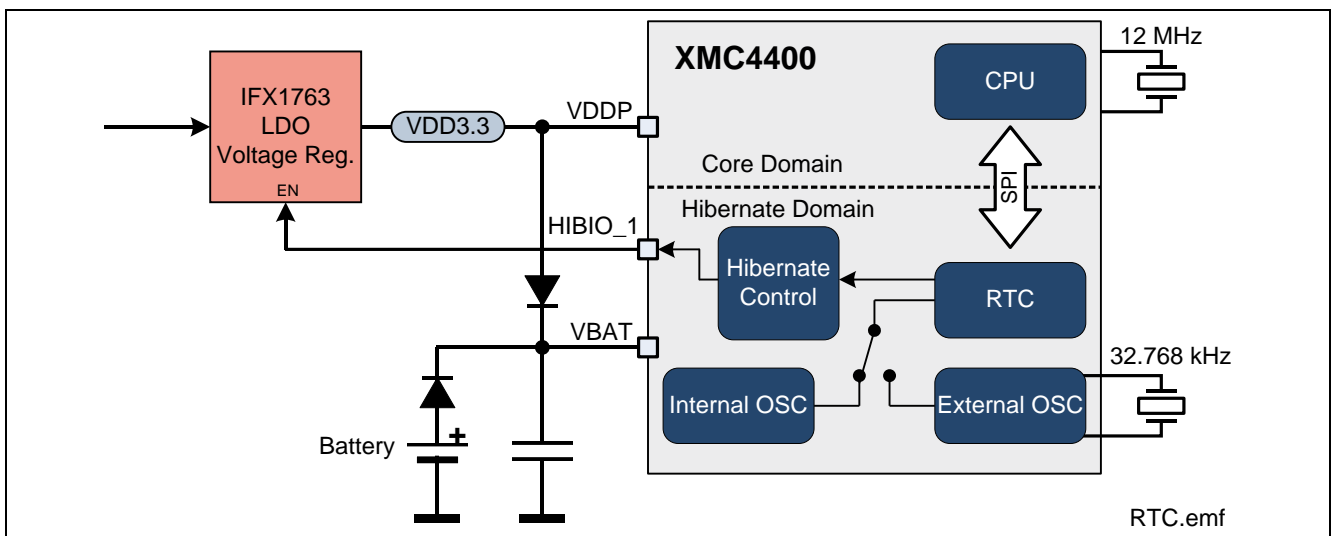


Figure 19 XMC4400 Power Domains and Real Time Clock

2.9 User LEDs and User Buttons

The port pins P5.2 and P1.8 of the XMC4400 are connected to the LEDs V300 and V301 respectively. More User LED's are available through the I2C GPIO expander on most of the satellite cards.

Table 8 User LEDs

LED	Connected to Port Pin
V300	GPIO P5.2
V301	GPIO P1.8

Two User Buttons, SW301 and SW302 are connected to P0.10 and HIB_IO_0 of XMC4400.

Table 9 User Buttons

Button	Connected to Port Pin
BUTTON1 / SW301	HIB_IO_0
BUTTON2 / SW302	P0.10

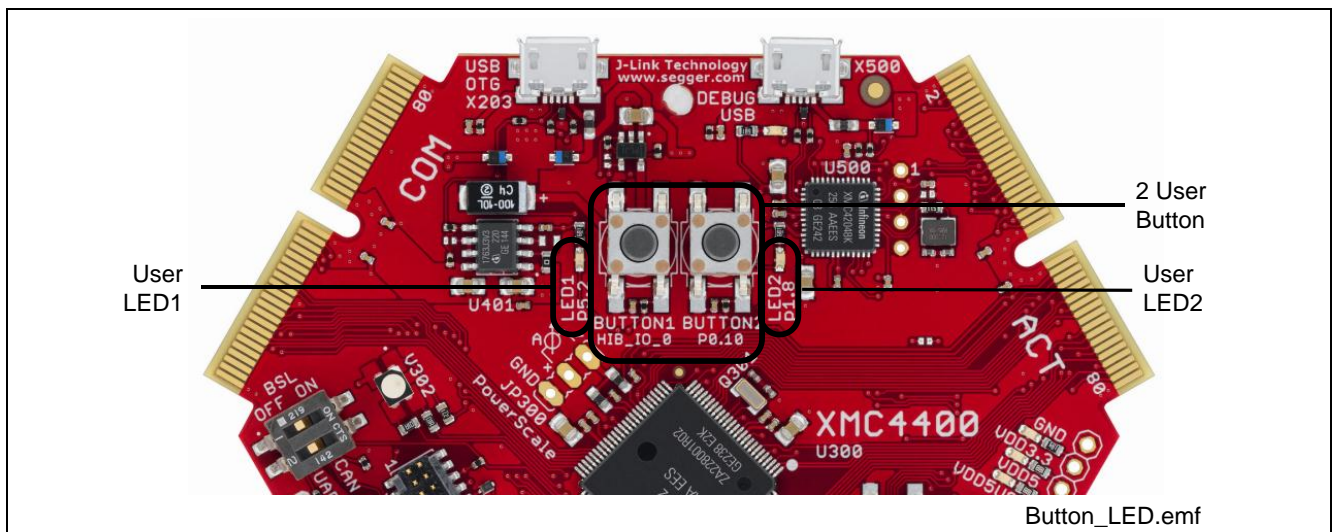


Figure 20 User LEDs and User Buttons

2.10 Potentiometer

The CPU_44A-V2 board provides a potentiometer POT1 for ease of use and testing of the on-chip analog to digital converter. The potentiometer is connected to the analog input G0_CH1 (P14.1). The analog output of the potentiometer ranges from 0 V to 3.3 V.

Table 10 Potentiometer

Potentiometer	Connected to Port Pin
R300	P14.1 / G0_CH1 (Group 0, channel 1)

2.11 Satellite Connectors

The CPU_44A-V2 board provides three satellite connectors for application extension by satellite cards:

- COM satellite connector (Communication)
- HMI satellite connector (Human Machine Interface)
- ACT satellite connector (Actuator)

Note: Satellite cards shall be connected to their matching satellite connectors only. (For e.g. COM satellite cards shall be connected to COM satellite connector only)

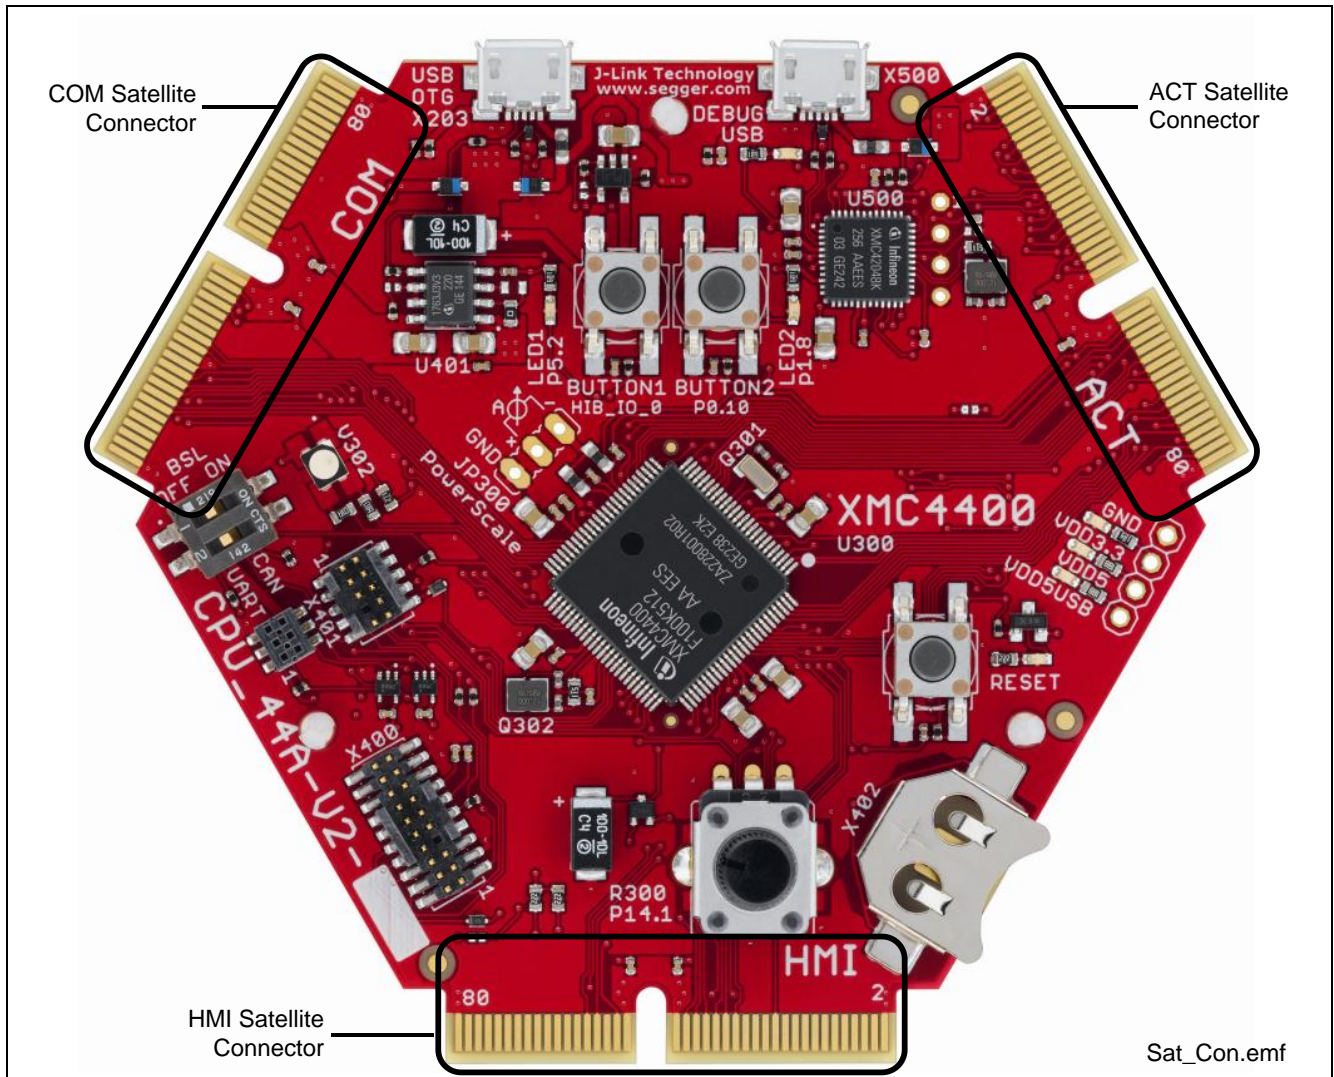


Figure 21 Satellite Connectors

2.11.1 COM Connector

The COM satellite connector on the CPU_44A-V2 board allows interface expansion through COM satellite cards (e.g. COM_ETH-V1)

CPU_44A-V2		Satellite Connector		CPU_44A-V2	
XMC Pin	XMC Function	Pin	Function	XMC Pin	XMC Function
		COM			
		1	GND		
		2	GND		
		3	qSPI_D0		
		4	qSPI_D1		
		5	qSPI_CS		
		6	qSPI_D2		
		7	qSPI_D3		
		8	qSPI_CS		
		9	RSVD		
		10	RSVD		
		11	RSVD		
		12	RSVD		
		13	ETH_RMII		
		14	ETH_RMII		
P2.9	ETHO_TXD1	15	ETH_RMII		
P2.8	ETHO_TXD0	16	ETH_RMII		
P15.9	ETHO_CRS_DVC	17	ETH_RMII		
P2.4	ETHO_RXERA	18	ETH_RMII		
P15.8	ETHO_CLK_RMII	19	ETH_RMII		
		20	ETH_RMII		
		21	ETH_RMII		
		22	ETH_RMII		
		23	GND		
		24	RSVD		
		25	RSVD		
		26	ASC_DIR		
		27	ASC_RXD		
P1.12	CAN_N1_TXD	28	ASC_TXD		
P1.4	CAN_N1_RXDC	29	ASC_TXD		
		30	CAN_RXD		
		31	SPI_MTSR		
		32	SPI_CS0		
		33	SPI_CS1		
		34	SPI_MRST		
		35	SPI_CS2		
		36	SPI_SCLK		
		37	I2C_SDA		
P0.11	U1CO_SCLKOUT	38	I2C_SCL		
P0.6	P0.6	39	COM_GPI01		
PO.6	RESET#	40	COM_GPI00		
PO.6	RESET#	41	COM_GPI00		
		42	RESET		
		43	VDD5		
		44	VDD5		
		COM			
		45	VDD5		
		46	VDD5		
		47	EBU_ADV		
		48	EBU_AD		
		49	EBU_WR		
		50	EBU_RD		
		51	EBU_AD		
		52	EBU_AD		
		53	EBU_AD		
		54	EBU_BC		
		55	EBU_AD		
		56	EBU_AD		
		57	EBU_CS		
		58	EBU_CS		
		59	EBU_CS		
		60	EBU_CS		
		61	GND		
		62	EBU_AD		
		63	EBU_AD		
		64	EBU_AD		
		65	EBU_A		
		66	EBU_A		
		67	EBU_A		
		68	EBU_A		
		69	EBU_A		
		70	EBU_A		
		71	EBU_A		
		72	EBU_A		
		73	EBU_A		
		74	EBU_A		
		75	EBU_A		
		76	EBU_A		
		77	EBU_A		
		78	EBU_A		
		79	GND		
		80	GND		
		COM			
		81	GND		
		82	GND		
		83	GND		
		84	GND		
		85	GND		
		86	GND		
		87	GND		
		88	GND		
		89	GND		
		90	GND		
		91	GND		
		92	GND		
		93	GND		
		94	GND		
		95	GND		
		96	GND		
		97	GND		
		98	GND		
		99	GND		
		100	GND		
		101	GND		
		102	GND		
		103	GND		
		104	GND		
		105	GND		
		106	GND		
		107	GND		
		108	GND		
		109	GND		
		110	GND		
		111	GND		
		112	GND		
		113	GND		
		114	GND		
		115	GND		
		116	GND		
		117	GND		
		118	GND		
		119	GND		
		120	GND		
		121	GND		
		122	GND		
		123	GND		
		124	GND		
		125	GND		
		126	GND		
		127	GND		
		128	GND		
		129	GND		
		130	GND		
		131	GND		
		132	GND		
		133	GND		
		134	GND		
		135	GND		
		136	GND		
		137	GND		
		138	GND		
		139	GND		
		140	GND		
		141	GND		
		142	GND		
		143	GND		
		144	GND		
		145	GND		
		146	GND		
		147	GND		
		148	GND		
		149	GND		
		150	GND		
		151	GND		
		152	GND		
		153	GND		
		154	GND		
		155	GND		
		156	GND		
		157	GND		
		158	GND		
		159	GND		
		160	GND		
		161	GND		
		162	GND		
		163	GND		
		164	GND		
		165	GND		
		166	GND		
		167	GND		
		168	GND		
		169	GND		
		170	GND		
		171	GND		
		172	GND		
		173	GND		
		174	GND		
		175	GND		
		176	GND		
		177	GND		
		178	GND		
		179	GND		
		180	GND		
		181	GND		
		182	GND		
		183	GND		
		184	GND		
		185	GND		
		186	GND		
		187	GND		
		188	GND		
		189	GND		
		190	GND		
		191	GND		
		192	GND		
		193	GND		
		194	GND		
		195	GND		
		196	GND		
		197	GND		
		198	GND		
		199	GND		
		200	GND		
		201	GND		
		202	GND		
		203	GND		
		204	GND		
		205	GND		
		206	GND		
		207	GND		
		208	GND		
		209	GND		
		210	GND		
		211	GND		
		212	GND		
		213	GND		
		214	GND		
		215	GND		
		216	GND		
		217	GND		
		218	GND		
		219	GND		
		220	GND		
		221	GND		
		222	GND		
		223	GND		
		224	GND		
		225	GND		
		226	GND		
		227	GND		
		228	GND		
		229	GND		
		230	GND		
		231	GND		
		232	GND		
		233	GND		
		234	GND		
		235	GND		
		236	GND		
		237	GND		
		238	GND		
		239	GND		
		240	GND		
		241	GND		
		242	GND		
		243	GND		
		244	GND		
		245	GND		
		246	GND		
		247	GND		
		248	GND		
		249	GND		
		250	GND		
		251	GND		
		252	GND		
		253	GND		
		254	GND		
		255	GND		
		256	GND		
		257	GND		
		258	GND		
		259	GND		
		260	GND		
		261	GND		
		262	GND		
		263	GND		
		264	GND		
		265	GND		
		266	GND		
		267	GND		
		268	GND		
		269	GND		
		270	GND		
		271	GND		
		272	GND		

2.11.2 HMI Connector

The HMI satellite connector on the CPU_44A-V2 board allows interface expansion through HMI satellite cards.

CPU_44A-V2		Satellite Connector		CPU_44A-V2	
XMC Pin	XMC Function	Pin	Function	XMC Pin	XMC Function
VSS	GND	1	GND	VSS	VSS
nc	nc	2	MMC_CLK	nc	nc
nc	nc	3	MMC_rRST	nc	nc
nc	nc	4	MMC_DATA0	nc	nc
nc	nc	5	MMC_DATA1	nc	nc
nc	nc	6	MMC_DATA2	nc	nc
nc	nc	7	MMC_DATA3	nc	nc
nc	nc	8	MMC_DATA4	nc	nc
nc	nc	9	MMC_DATA5	nc	nc
nc	nc	10	MMC_DATA6	nc	nc
nc	nc	11	MMC_DATA7	nc	nc
nc	nc	12	MMC_CMD	nc	nc
nc	nc	13	MMC_BUSPOW	nc	nc
nc	nc	14	MMC_nSDCD	nc	nc
nc	nc	15	MMC_LED	nc	nc
nc	nc	16	MMC_SDWC	nc	nc
nc	nc	17	RSVD	nc	nc
nc	nc	18	RSVD	nc	nc
nc	nc	19	RSVD	nc	nc
nc	nc	20	RSVD	nc	nc
nc	nc	21	RSVD	nc	nc
nc	nc	22	RSVD	nc	nc
nc	nc	23	AudioRST	nc	nc
nc	nc	24	OLED_CMD	P0.12/OLED_RS	P0.12/OLED_RS
nc	nc	25	I2S_WA	nc	nc
nc	nc	26	I2S_MTSR	nc	nc
nc	nc	27	I2S_MCLK	nc	nc
nc	nc	28	I2S_MRST	nc	nc
nc	nc	29	I2S_SCLK	nc	nc
P1.13	U0C1_SELO3	30	I2S_SYNCCLK	nc	nc
nc	nc	31	SPI_CSH0	U0C1_DOUT0	P3.5
nc	nc	32	SPI_CSH1	U0C1_DX0E	P4.0
nc	nc	33	SPI_CSH2	U0C1_SCLKOUT	P3.6
nc	nc	34	SPI_CSH3	U0C1_SCLKOUT	P3.6
P2.14	U1CO_DX0D/DOUT0	35	SPI_SCLK	U1CO_SCLKOUT	P0.11
nc	nc	36	I2C_SDA	U1CO_SCLKOUT	P0.11
nc	nc	37	I2C_SCL	P0.6	P0.6
nc	nc	38	HMI_GPIO1	RESET#	PORST
nc	nc	39	HMI_GPIO0	RESET#	PORST
nc	nc	40	HMI_GPIO0	RESET#	PORST
nc	nc	41	HMI_GPIO0	RESET#	PORST
nc	nc	42	HMI_GPIO0	RESET#	PORST
nc	nc	43	VDD5	VDD5	VDD5
VAGND	AGND	45	VDD5	VDD5	VDD5
nc	nc	46	AGND	VDD5	VDD5
nc	nc	47	DAC0/ADC1	AREF	VAREF
nc	nc	48	ADC3/ORC0	DAC1/ADCO	VAREF
P14.12	VADC_G1CH4	49	ADC3/ORC0	DAC2/DACREF	nc
nc	nc	50	ADC15	ADC14	VADC_G0CH4 P14.4
nc	nc	51	ADC17	ADC16	VADC_G0CH3 P14.3
nc	nc	52	ADC19	ADC18	nc
nc	nc	53	RSVD	RSVD	nc
nc	nc	54	RSVD	RSVD	nc
nc	nc	55	RSVD	RSVD	nc
nc	nc	56	TPx1	TP7	nc
nc	nc	57	TPx0	TP6	nc
nc	nc	58	COL3	TP5	nc
nc	nc	59	COL2	TP4	nc
nc	nc	60	COL1	TP3	nc
nc	nc	61	COL0	TP2	nc
nc	nc	62	nc	TP1	nc
nc	nc	63	nc	TP0	nc
nc	nc	64	nc	nc	nc
nc	nc	65	nc	nc	nc
nc	nc	66	nc	nc	nc
nc	nc	67	nc	nc	nc
nc	nc	68	nc	nc	nc
nc	nc	69	nc	nc	nc
nc	nc	70	nc	nc	nc
nc	nc	71	nc	nc	nc
nc	nc	72	nc	nc	nc
nc	nc	73	nc	nc	nc
nc	nc	74	nc	nc	nc
nc	nc	75	nc	nc	nc
nc	nc	76	nc	nc	nc
nc	nc	77	nc	nc	nc
VSS	GND	79	GND	GND	VSS
		80	GND	GND	VSS

Figure 23 Satellite Connector Type HMI

2.11.3 ACT Satellite Connector

The ACT satellite connector on the CPU_44A-V2 board allows interface expansion through ACT satellite cards.

CPU_44A-V2		Satellite Connector		CPU_44A-V2	
XMC Pin	XMC Function	Function	Pin	Function	XMC Pin
VSS	GND	GND	1	GND	VSS
P14.7	PIFO_IN0B	PIFOIN1	2	PIFOIN1	P14.7
P14.6	PIFO_IN1B	PIFOIN2	4	PIFOIN2	P14.6
P14.5	PIFO_IN2B	PIFOIN3	5	PIFOIN3	P14.5
nc	nc	DSDIN0	6	DSDIN0	nc
P5.0	PWMN	PWMP	7	PWMP	P5.0
P5.1	PWMP	PWMP	8	PWMP	P5.1
nc	nc	DSDIN1	9	DSDIN1	nc
P1.9	DSD_MCLK0	DSDCLK0	10	DSDCLK0	P1.9
nc	nc	DSDIN2	11	DSDIN2	nc
nc	nc	DSDIN3	12	DSDIN3	nc
nc	nc	RSVD	13	RSVD	nc
nc	nc	RSVD	14	RSVD	nc
nc	nc	CC_IN0	15	CC_IN0	nc
nc	nc	CC_IN1	16	CC_IN1	nc
nc	nc	CC_IN2	17	CC_IN2	nc
nc	nc	ENA_A	18	ENA_A	nc
P0.7 (L16)	CCU80_IN0A	TRAP_A	19	TRAP_A	P0.7 (L16)
P1.3	CCU40_IN0A	TRAP_B	20	TRAP_B	P1.3
P3.4	CCU42_IN2A	TRAP_X	21	TRAP_X	P3.4
P1.14	U0C1_SELO2	SPI_CS_A0	22	SPI_CS_A0	P1.14
P4.1	U0C1_SELO0	SPI_CS_A1	23	SPI_CS_A1	P4.1
nc	nc	SPI_CS_A2	24	SPI_CS_A2	nc
P2.14	U1C0_DX0C/DOU0	I2C_SDA	25	I2C_SDA	P2.14
nc	nc	ACT_GPI01	26	ACT_GPI01	nc
nc	nc	ACT_GPI00	27	ACT_GPI00	nc
nc	nc	VDD5	28	VDD5	nc
VAGND	AGND	VDD5	29	VDD5	VAGND
P14.9	VADC_G1CH1	AGND	30	AGND	P14.9
nc	nc	DAC0/ADC1	31	DAC0/ADC1	nc
P14.0	VADC_G0CH0 (4)	ADC3/ORC0	32	ADC3/ORC0	P14.0
P14.14	VADC_G1CH6	ADC5/ORC2	33	ADC5/ORC2	P14.14
P15.3	VADC_G2CH3	ADC7	34	ADC7	P15.3
P14.13	VADC_G1CH5	ADC9	35	ADC9	P14.13
nc	nc	ADC11	36	ADC11	nc
nc	nc	ADC13	37	ADC13	nc
nc	nc	PWM80_H	38	PWM80_H	nc
nc	nc	PWM80_L	39	PWM80_L	nc
nc	nc	PWM81_H	40	PWM81_H	nc
nc	nc	PWM81_L	41	PWM81_L	nc
nc	nc	PWM82_H	42	PWM82_H	nc
nc	nc	PWM82_L	43	PWM82_L	nc
nc	nc	PWM83	44	PWM83	nc
VSS	GND	GND	45	GND	VSS
VAREF	VAREF	VAREF	46	VAREF	VAREF
P14.8	VADC_G1CH0	DAC1/ADC0	47	DAC1/ADC0	P14.8
P14.4	VADC_G0CH4	ADC2/DACREF	48	ADC2/DACREF	P14.4
nc	nc	ADC4/ORC1	49	ADC4/ORC1	nc
P14.15	VADC_G1CH7	ADC6/ORC3	50	ADC6/ORC3	P14.15
P14.2	VADC_G0CH2	ADC8	51	ADC8	P14.2
P15.2	VADC_G2CH2	ADC10	52	ADC10	P15.2
nc	nc	ADC12	53	ADC12	nc
P0.5 (6)	CCU80_OUT00	PWM80_H	54	PWM80_H	P0.5 (6)
P0.2 (6)	CCU80_OUT01	PWM80_L	55	PWM80_L	P0.2 (6)
P0.4 (6)	CCU80_OUT10	PWM81_H	56	PWM81_H	P0.4 (6)
P0.1	CCU80_OUT11	PWM81_L	57	PWM81_L	P0.1
P0.3 (6)	CCU80_OUT20	PWM82_H	58	PWM82_H	P0.3 (6)
P0.0	CCU80_OUT21	PWM82_L	59	PWM82_L	P0.0
P3.3	CCU42_OUTF3	PWM83	60	PWM83	P3.3
P3.0	CCU42_OUT0	PWMX1	61	PWMX1	P3.0
VSS	GND	GND	62	GND	VSS

Figure 24 Satellite Connector Type ACT

- (1) P0.7 can also be used for JTAG Debugging (TDI)
- (2) P0.8 is used as TRST in order to enable JTAG Debug
- (3) This pin is connected with the satellite connector via an analog switch
- (4) This ADC input does not support "Out of Range Detection"
- (5) This pin must be "enabled" by a solder jump.
- (6) Support High Resolution PWM


3 Production Data

3.1 Schematics

This chapter contains the schematics for the CPU board:

- Satellite Connectors, USB-OTG
- XMC4400
- Power, Debug Connectors, Reset
- On-board Debugger

The board has been designed with Eagle. The full PCB design data of this board can also be downloaded from www.infineon.com/xmc-dev.

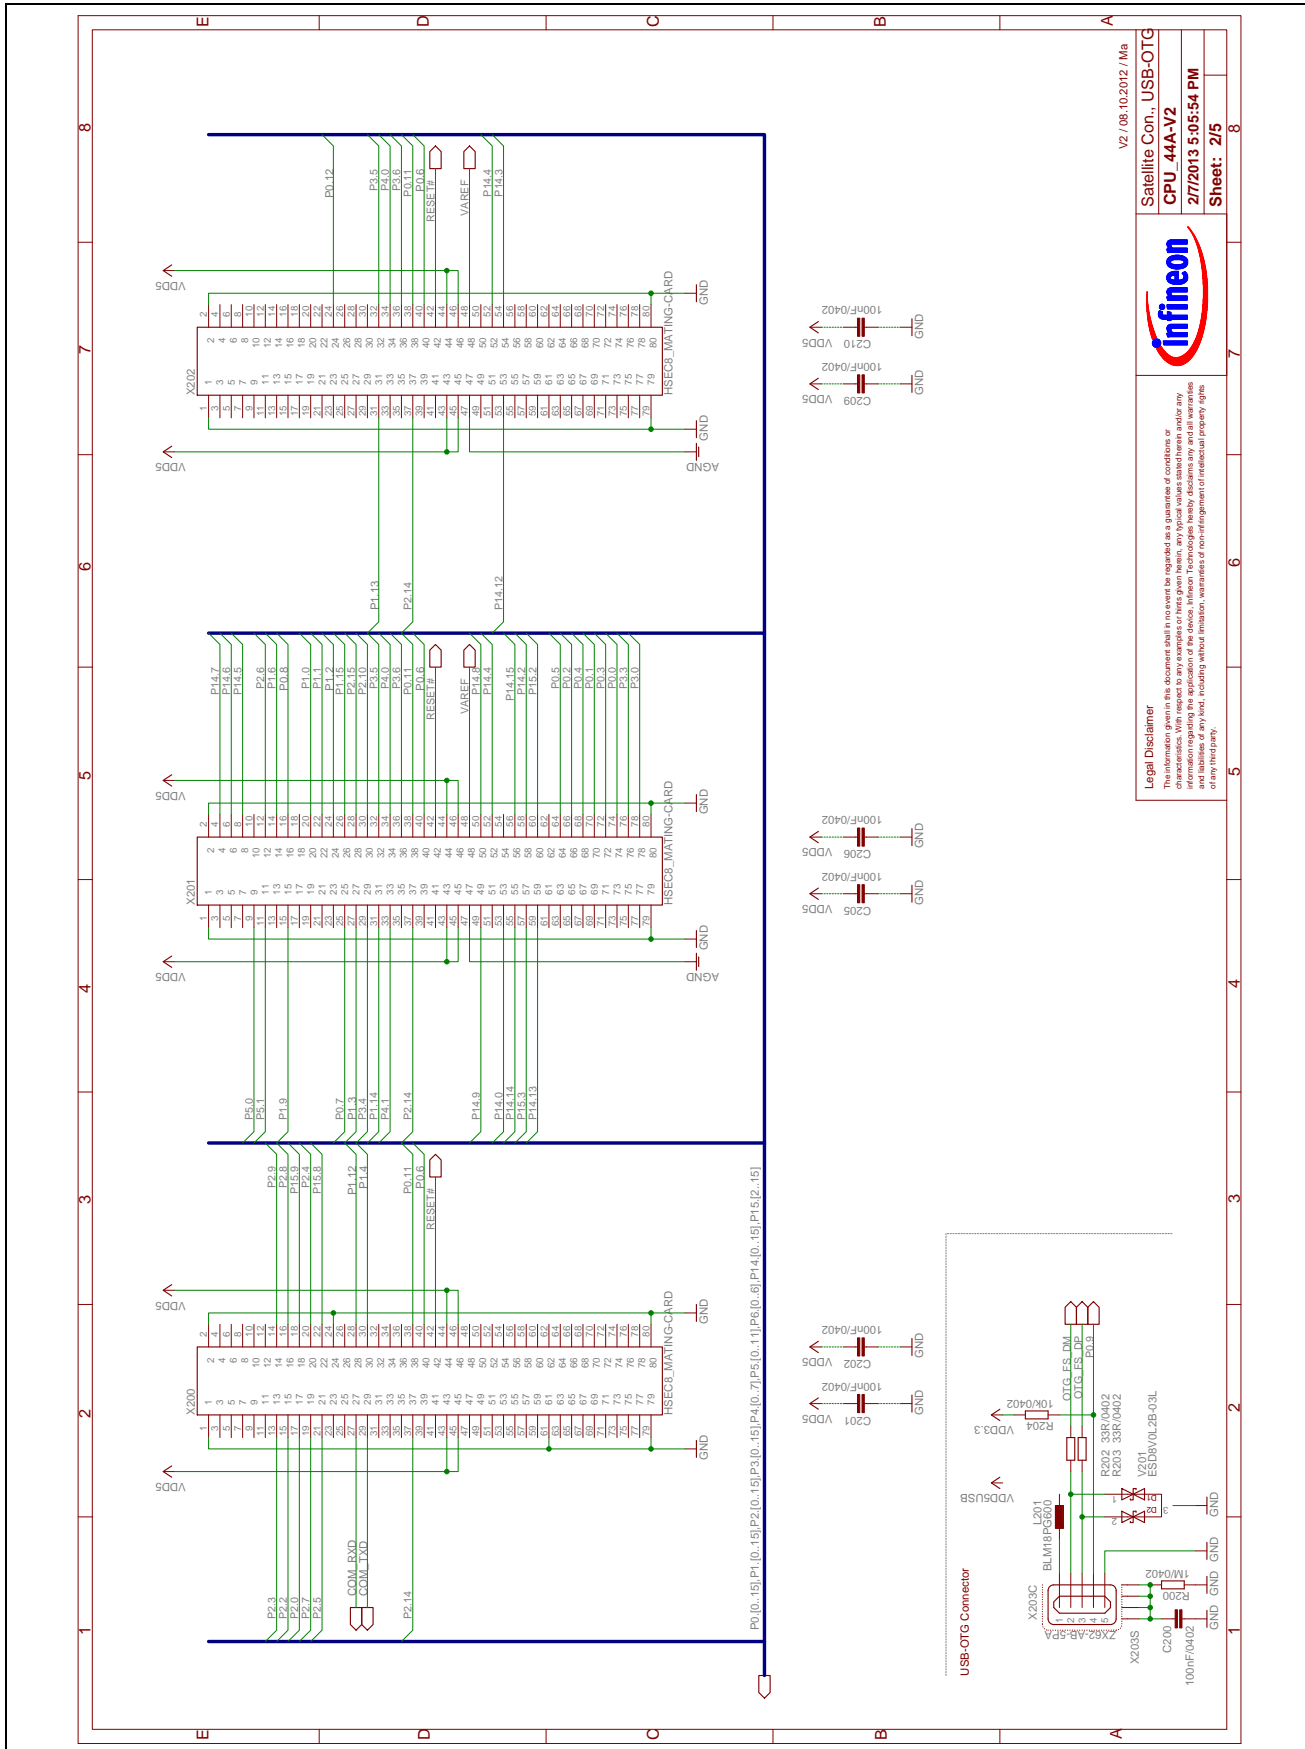

V2 / 08.10.2012 / Ma

Satellite Con., USB-OTG


CPU_44A-V2

27/2013 5:05:54 PM

Sheet: 2/5

Legal Disclaimer
The information given in this document shall in no event be regarded as a guarantee of conditions or characteristics. With respect to any examples or third party names, any typical values stated herein and/or any other information, Infineon does not assume any liability, including without limitation, warranties of non-infringement of intellectual property rights of any third party.

Figure 25 Satellite Connectors, USB-OTG

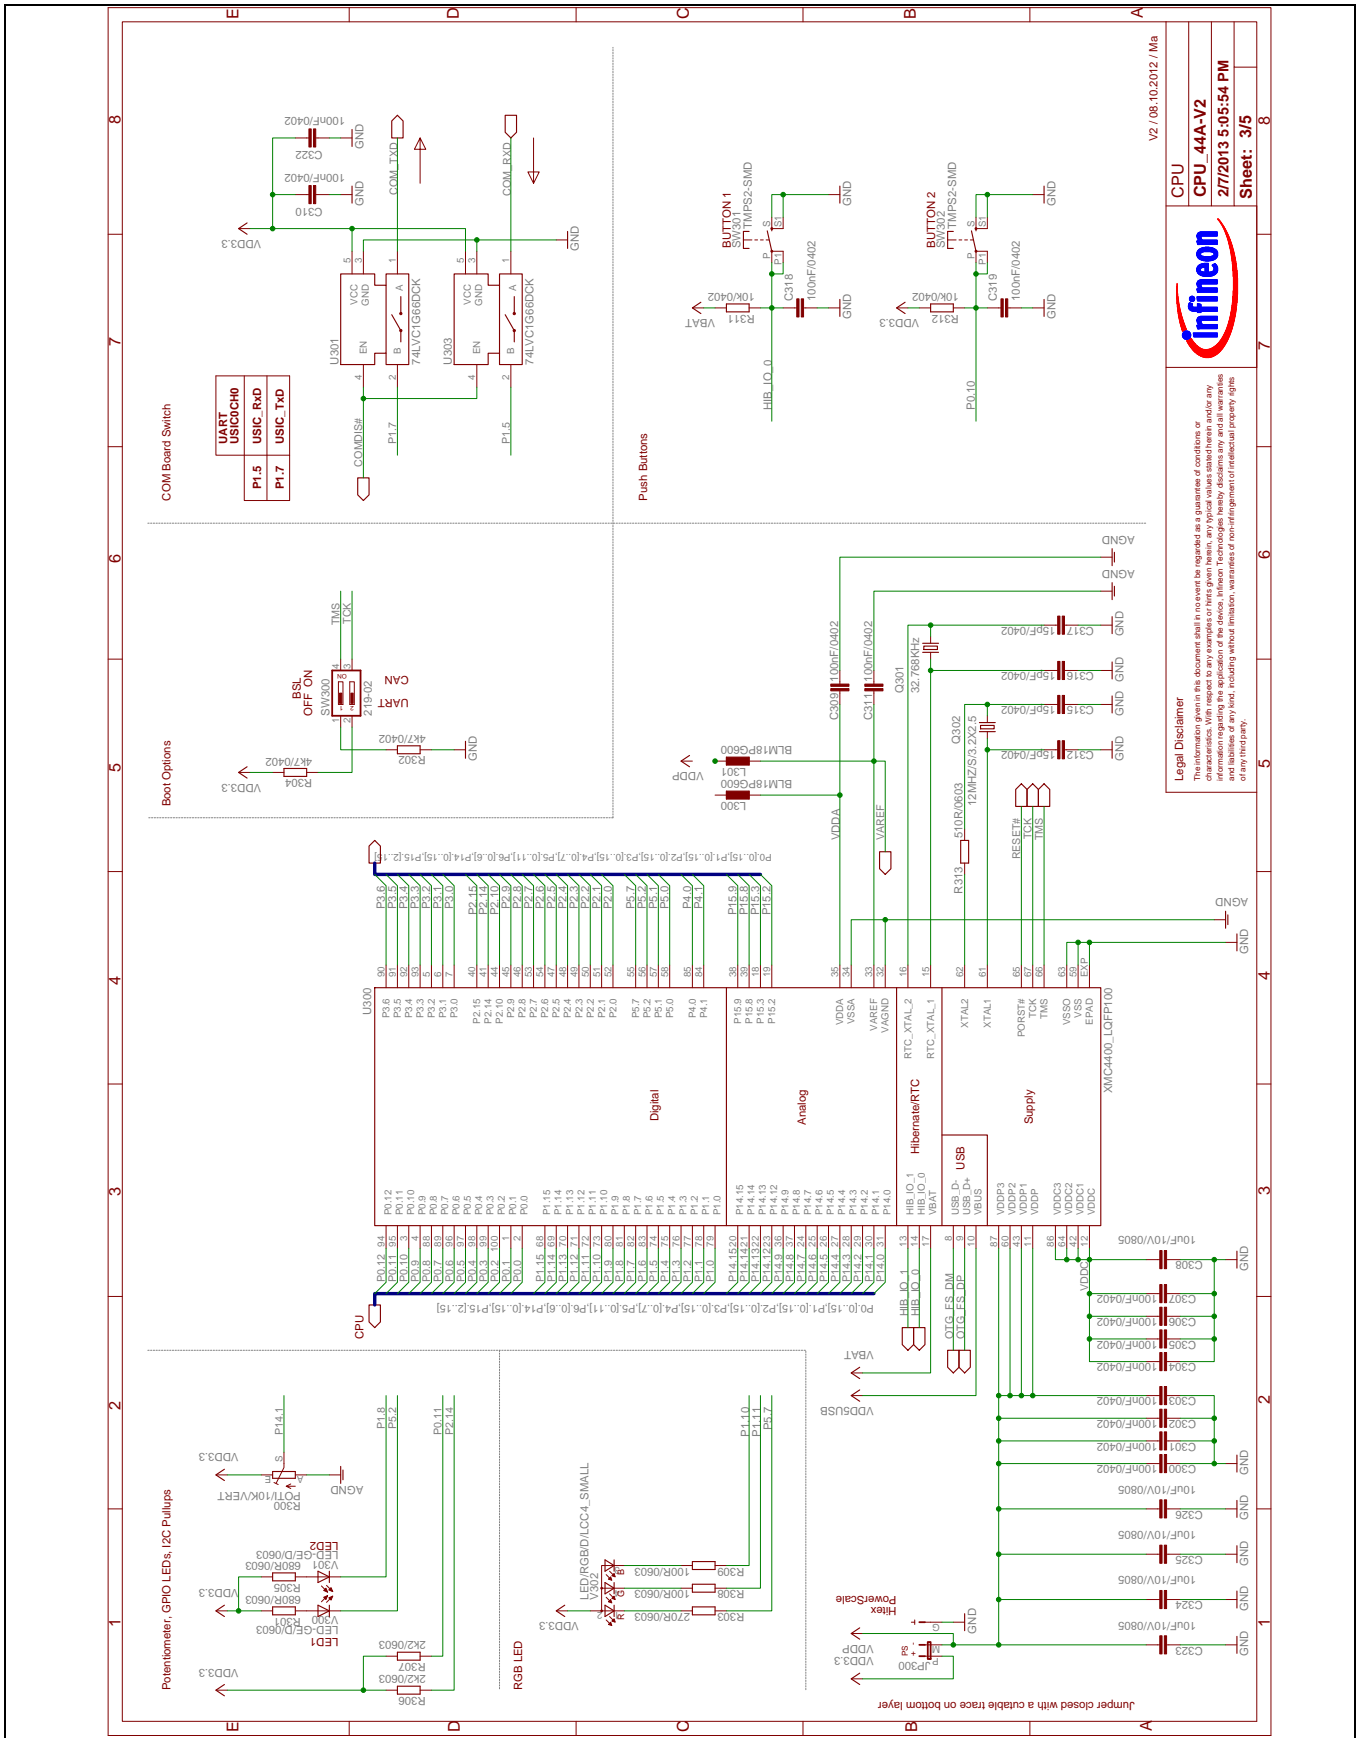

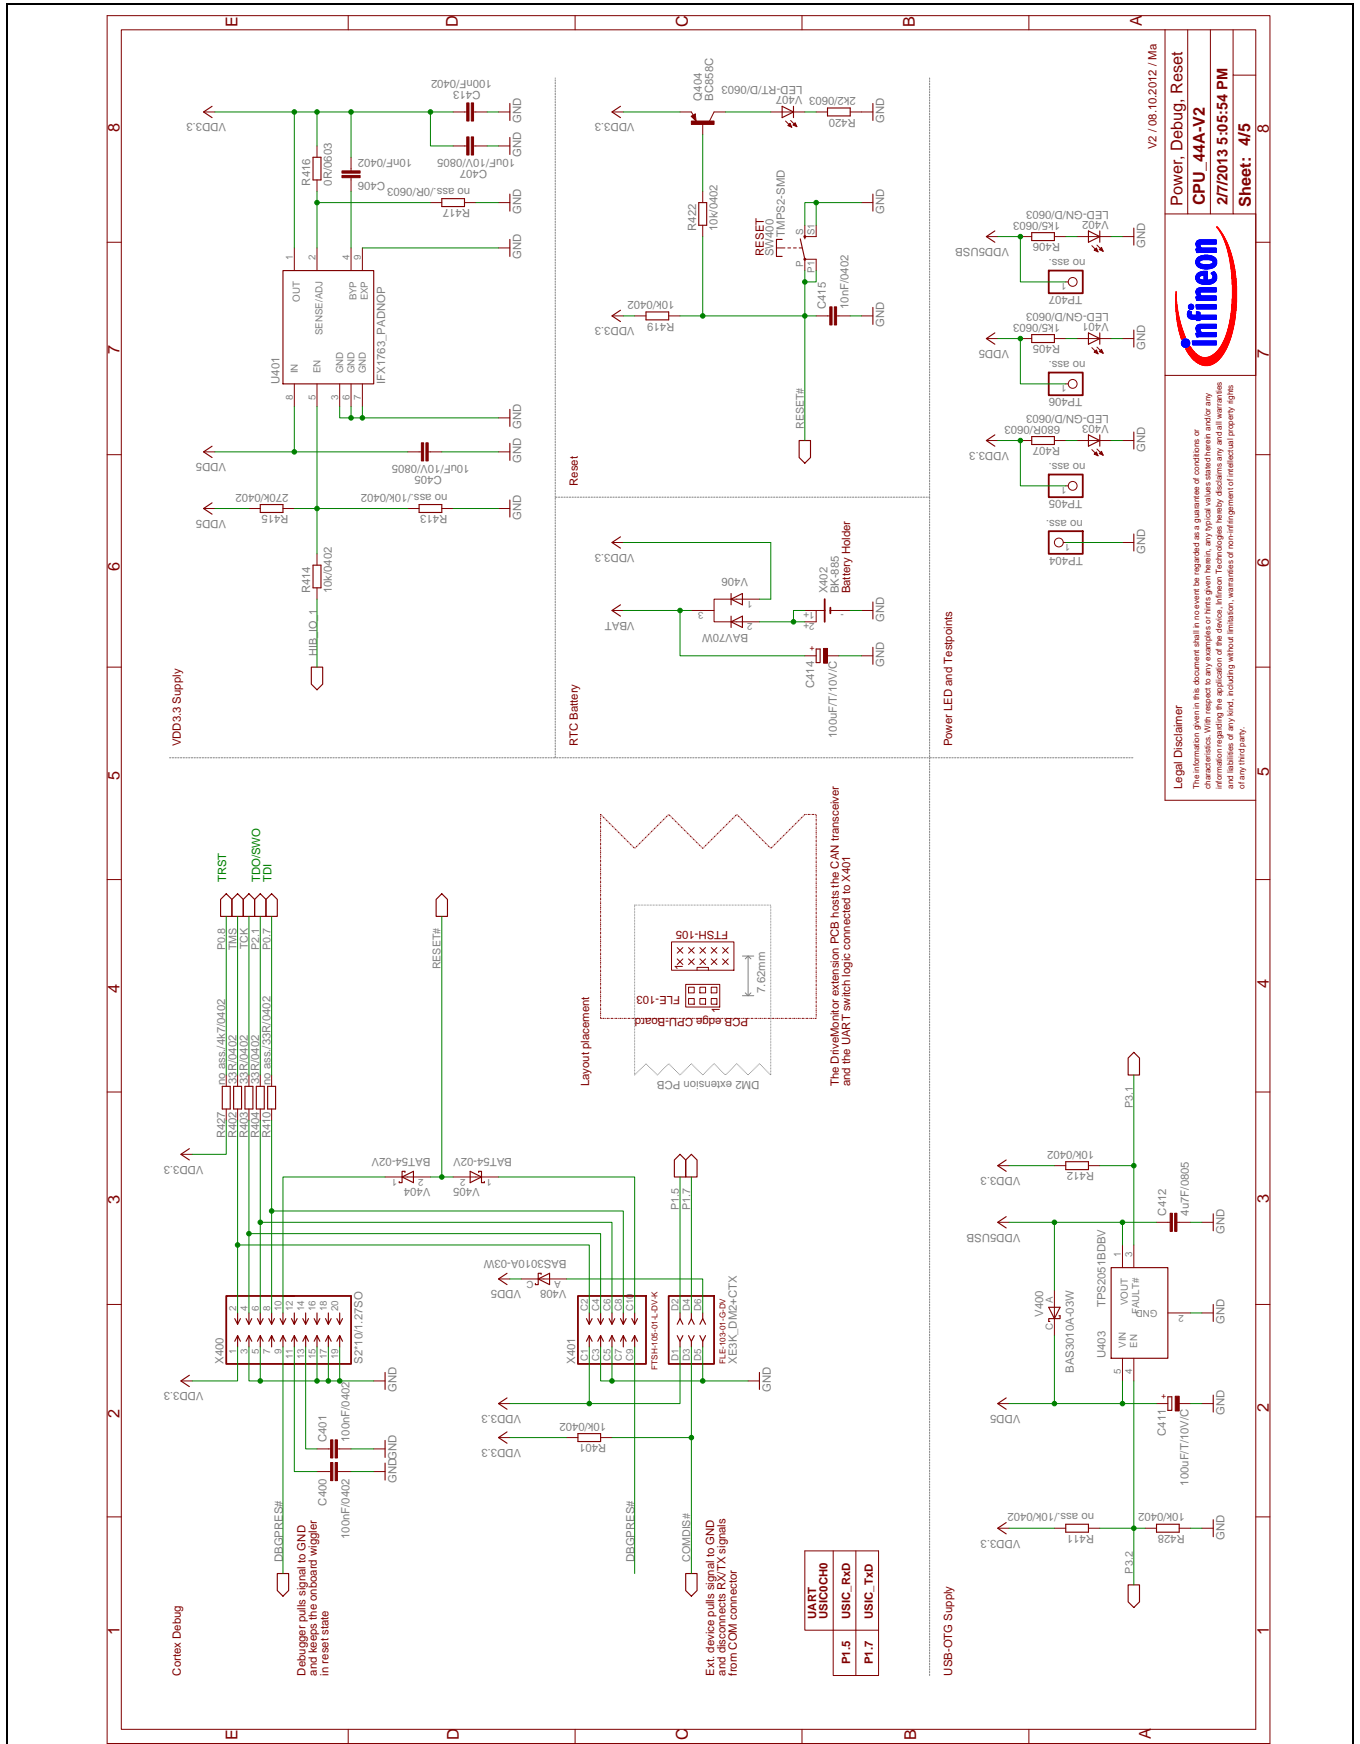


Figure 27 Power, Debug Connectors, Reset

3.3 Bill of Material (BOM)

Table 11 BOM of CPU_44A-V2 Board

Pos. No.	Qty	Value	Device	Reference Des.
1	1	0R/0603	Resistor	R416
2	2	1M/0402	Resistor	R200, R505
3	2	1k5/0603	Resistor	R405, R406
4	3	2k2/0603	Resistor	R306, R307, R420
5	3	4k7/0402	Resistor	R302, R304, R506
6	1	4u7F/0805	Capacitor, ceramic	C412
7	11	10k/0402	Resistor	R204, R311, R312, R401, R412, R414, R419, R422, R428, R503, R507
8	2	10nF/0402	Capacitor	C406, C415
9	9	10uF/10V/0805	Capacitor, ceramic	C308, C323, C324, C325, C326, C405, C407, C506, C510
10	2	12MHZ/S/3.2X2.5	Crystal, NX3225GD, NDK	Q302, Q500
11	6	15pF/0402	Capacitor	C312, C315, C316, C317, C500, C501
12	1	32.768KHz	Crystal, NX3215SA, NDK	Q301
13	5	33R/0402	Resistor	R402, R403, R404, R501, R502
14	2	33R/0402	Resistor	R202, R203
15	2	74LVC1G66DCK	IC, Single Analog Switch	U301, U303
16	2	100R/0603	Resistor	R308, R309
17	31	100nF/0402	Capacitor	C200, C201, C202, C205, C206, C209, C210, C300, C301, C302, C303, C304, C305, C306, C307, C309, C310, C311, C318, C319, C322, C400, C401, C413, C502, C504, C505, C507, C508, C509, C511
18	2	100uF/T/10V/C	Capacitor, bipolar	C411, C414
19	1	219-02	Dual DIP-Switch, 0.1" SMD	SW300
20	1	270R/0603	Resistor	R303
21	1	270k/0402	Resistor	R415
22	2	510R/0603	Resistor	R313, R500
23	4	680R/0603	Resistor	R301, R305, R407, R504
24	3	BAS3010A-03W	Diode, SOD323, Infineon	V400, V408, V501
25	2	BAT54-02V	Diode, SC79, Infineon	V404, V405
26	1	BAV70W	Diode, SOT323, Infineon	V406
27	1	BC858C	Transistor, SOT23-3, Infineon	Q404
28	1	BK-885	Battery Holder, 12mm Coin Cell	X402
29	4	BLM18PG600	Ferrite Bead, 0603, Murata	L201, L300, L301, L500
30	2	ESD8V0L2B-03L	Diode, TSLP-3-1, Infineon	V201, V500
31	3	FIDUCIAL	FIDUCIAL	ADJ_1, ADJ_2, ADJ_3
32	3	HSEC8_MATING-CARD	Connector, Edgecard, Samtec	X200, X201, X202
33	1	IFX1763-3.3	Voltage Regulator, 3.3V LDO, Infineon	U401
34	2	LED-GE/D/0603	LED, yellow	V300, V301
35	4	LED-GN/D/0603	LED, green	V401, V402, V403, V502
36	1	LED-RT/D/0603	LED, red	V407
37	1	LED/RGB/D/LCC4_SMALL	LED, RGB, LCC4_SMALL	V302
38	1	POTI/10K/VERT	Potentiometer, K09K1130A8G, ALPS	R300
39	1	S2*10/1.27SO	Connector, FTSH-110-01-L-DV-K-P, Samtec	X400

Table 11 BOM of CPU_44A-V2 Board

Pos. No.	Qty	Value	Device	Reference Des.
40	3	TMPS2-SMD	Switch, tactile	SW301, SW302, SW400
41	1	TPS2051BDBV	IC, Power Switch	U403
42	1	XE3K_DM2+CTX	Connector, FTSH-105-01-LM-DV-K, without pin 7, Samtec Connector, FLE-103-01-G-DV, Samtec	X401
43	1	XMC4200_QFN48	IC, XMC4200, QFN48, Infineon	U500
44	1	XMC4400_LQFP100	IC, XMC4400, LQFP100, Infineon	U300
45	2	ZX62-AB-5PA	Connector, Micro-USB, Hirose	X203, X500
46	1	no ass.	Pinheader, 4-pin, 0.1" TH	X501
47	4	no ass.	Pinheader, 1-pin, 0.1" TH	TP404, TP405, TP406, TP407
48	1	no ass./0R/0603	Resistor	R417
49	1	no ass./4k7/0402	Resistor	R427
50	2	no ass./10k/0402	Resistor	R411, R413
51	1	no ass./10nF/0402	Capacitor	C503
52	1	no ass./33R/0402	Resistor	R410
53	1	no ass.	Pinheader, 3-pin, 0.1" TH, Hitex PowerScale	JP300

www.infineon.com

Published by Infineon Technologies AG



Стандарт Электрон Связь

Мы молодая и активно развивающаяся компания в области поставок электронных компонентов. Мы поставляем электронные компоненты отечественного и импортного производства напрямую от производителей и с крупнейших складов мира.

Благодаря сотрудничеству с мировыми поставщиками мы осуществляем комплексные и плановые поставки широчайшего спектра электронных компонентов.

Собственная эффективная логистика и склад в обеспечивает надежную поставку продукции в точно указанные сроки по всей России.

Мы осуществляем техническую поддержку нашим клиентам и предпродажную проверку качества продукции. На все поставляемые продукты мы предоставляем гарантию .

Осуществляем поставки продукции под контролем ВП МО РФ на предприятия военно-промышленного комплекса России , а также работаем в рамках 275 ФЗ с открытием отдельных счетов в уполномоченном банке. Система менеджмента качества компании соответствует требованиям ГОСТ ISO 9001.

Минимальные сроки поставки, гибкие цены, неограниченный ассортимент и индивидуальный подход к клиентам являются основой для выстраивания долгосрочного и эффективного сотрудничества с предприятиями радиоэлектронной промышленности, предприятиями ВПК и научно-исследовательскими институтами России.

С нами вы становитесь еще успешнее!

Наши контакты:

Телефон: +7 812 627 14 35

Электронная почта: sales@st-electron.ru

Адрес: 198099, Санкт-Петербург,
Промышленная ул, дом № 19, литера Н,
помещение 100-Н Офис 331