

PROPER USE GUIDELINES

Cumulative Trauma Disorders can result from the prolonged use of manually powered hand tools. Hand tools are intended for occasional use and low volume applications. A wide selection of powered application equipment for extended-use, production operations is available.

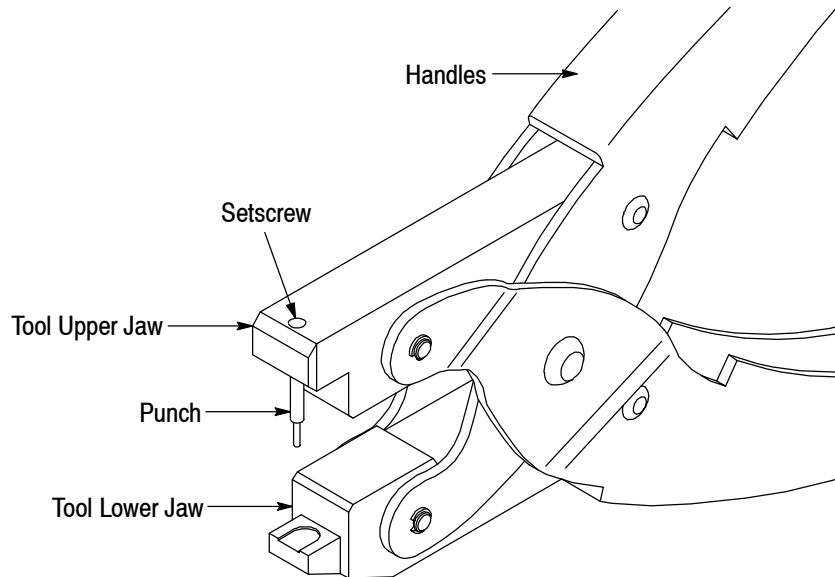


Figure 1

1. INTRODUCTION

Clinching Tool 91117-6 is designed to install external keys into Mini-Box pin headers to provide polarization of mating connectors. Read these instructions thoroughly before using the tool.

NOTE



Dimensions in this instruction sheet are in metric units [with U.S. customary units in brackets]. Figures are not drawn to scale.

Reasons for reissue of this instruction sheet are provided in Section 6, REVISION SUMMARY.

handles and measure the distance between the punch tip and the lower jaw. If necessary, adjust the setscrew to obtain a clearance of 0.508 mm [.020 in.]. See Figure 2.

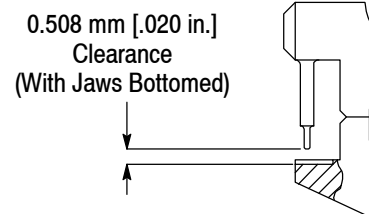


Figure 2

2. DESCRIPTION (Figure 1)

The clinching tool features an upper jaw and a lower jaw. The upper jaw contains a replaceable punch which clinches the key in the pin header. The lower jaw supports the rivet and header when the tool handles are closed.

3. CLINCHING PROCEDURE

Before starting, be sure that the pin header and external key are compatible. Also, close the tool

Refer to Figure 3, and proceed as follows:

1. Determine the keying position required.
2. Place key into cavity at desired position.

CAUTION



The clinching tool can be used for simultaneous installation of key and rivet into brown pin headers. However, for black or gray pin headers, the key must be inserted using Clinching Tool 91117-2 (see 408-7894), before securing key with rivet using this clinching tool.

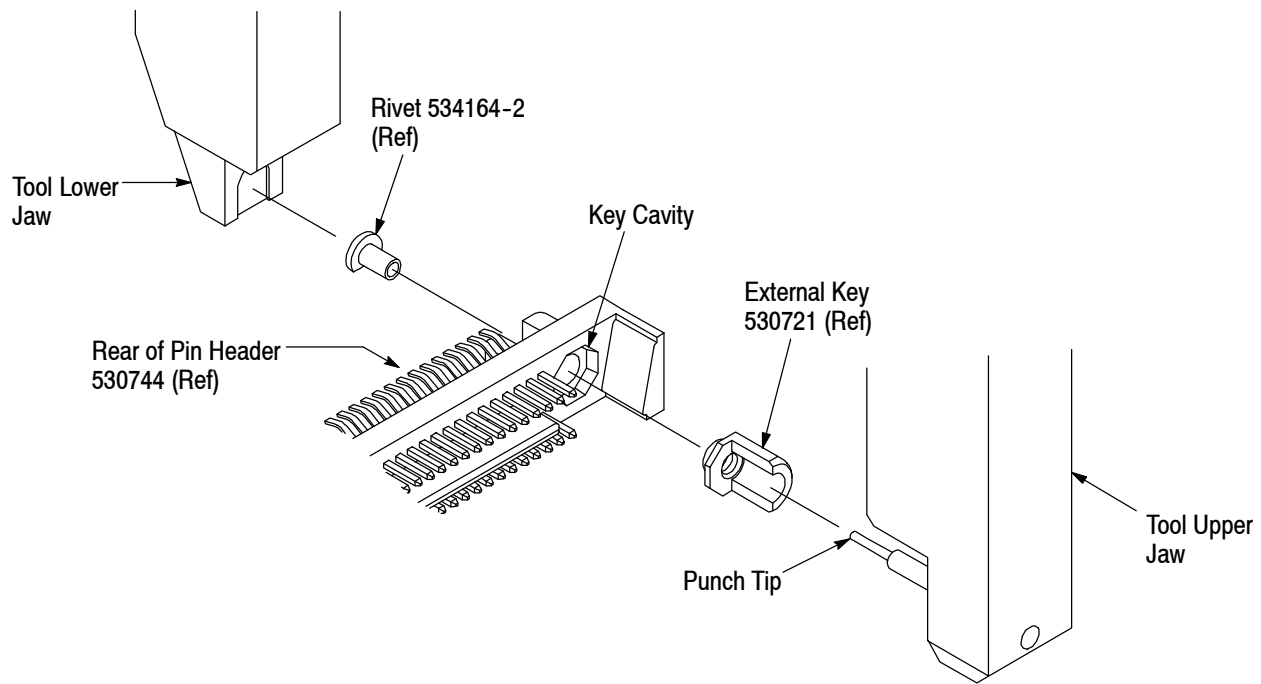


Figure 3

3. Open tool handles and position tool perpendicular to pin header.
4. Place lower jaw against rivet and rear of header, and close tool punch tip through key mounting hole.
5. Squeeze tool handles together until key presses into cavity and jaws are bottomed.
6. Remove tool and, if required, repeat these procedures on the other end of header. *Be sure that the key is properly oriented.*

4. MAINTENANCE AND INSPECTION

The clinching tool should be inspected immediately upon arrival at your facility to ensure that the tool has not been damaged during handling. The tool should also be inspected at regularly scheduled intervals to ensure proper operation of the tool.

4.1. Daily Maintenance

It is recommended that each operator of the tool be made aware of—and responsible for—the following steps of daily maintenance.

1. Remove dust, moisture, and other contaminants with a clean brush, or a soft lint-free cloth.
2. Make sure that the proper retaining pins are in place and secured with the proper retaining rings.

3. Be sure all pins, pivot points, and bearing surfaces are protected with a THIN coat of SAE 20 motor oil. DO NOT oil excessively.

5. REPLACEMENT AND REPAIR

Customer-replaceable parts are listed in Figure 4. A complete inventory should be stocked and controlled to prevent lost time when replacement of parts is necessary. Parts other than those listed should be replaced by Tyco Electronics to ensure quality and reliability. Order replacement parts through your representative, or call 1-800-526-5142, or send a facsimile of your purchase order to 717-986-7605, or write to:


CUSTOMER SERVICE (038-035)
 TYCO ELECTRONICS CORPORATION
 PO BOX 3608
 HARRISBURG PA 17105-3608

For customer repair service, call 1-800-526-5136.

6. REVISION SUMMARY

Revisions to this instruction sheet include:

- Updated document to corporate requirements

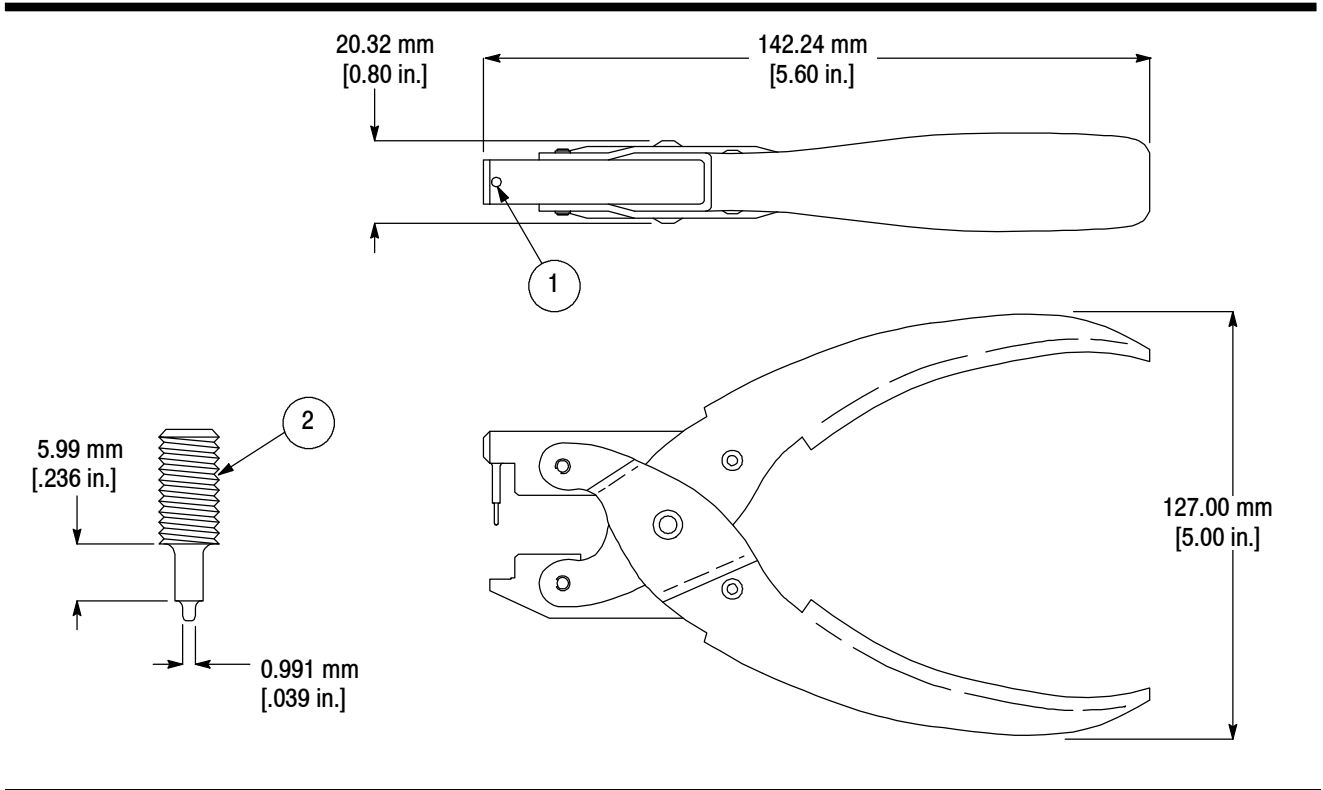

CUSTOMER-REPLACEABLE PARTS			
ITEM	PART NUMBER	DESCRIPTION	QTY PER TOOL
1	2-21006-7	SETSCREW, Socket Head, 6-32	1
2	313497-1	PUNCH	1

Figure 4



**Стандарт
Электрон
Связь**

Мы молодая и активно развивающаяся компания в области поставок электронных компонентов. Мы поставляем электронные компоненты отечественного и импортного производства напрямую от производителей и с крупнейших складов мира.

Благодаря сотрудничеству с мировыми поставщиками мы осуществляем комплексные и плановые поставки широчайшего спектра электронных компонентов.

Собственная эффективная логистика и склад в обеспечивает надежную поставку продукции в точно указанные сроки по всей России.

Мы осуществляем техническую поддержку нашим клиентам и предпродажную проверку качества продукции. На все поставляемые продукты мы предоставляем гарантию .

Осуществляем поставки продукции под контролем ВП МО РФ на предприятия военно-промышленного комплекса России , а также работаем в рамках 275 ФЗ с открытием отдельных счетов в уполномоченном банке. Система менеджмента качества компании соответствует требованиям ГОСТ ISO 9001.

Минимальные сроки поставки, гибкие цены, неограниченный ассортимент и индивидуальный подход к клиентам являются основой для выстраивания долгосрочного и эффективного сотрудничества с предприятиями радиоэлектронной промышленности, предприятиями ВПК и научно-исследовательскими институтами России.

С нами вы становитесь еще успешнее!

Наши контакты:

Телефон: +7 812 627 14 35

Электронная почта: sales@st-electron.ru

Адрес: 198099, Санкт-Петербург,
Промышленная ул, дом № 19, литера Н,
помещение 100-Н Офис 331