



# ***TransPort<sup>®</sup>WR41***

*Wireless Routers*

---

## *Installation Guide*

February 8, 2012

## Disclaimer

Digi International makes no representations or warranties with respect to the contents or use of this manual, any software drivers or associated application software provided with this product and specifically disclaims any expressed or implied warranties of merchantability or fitness for any particular purpose.

Digi International reserves the right to modify or revise all or part of this document, its contents, and any products described herein at any time without prior notification and shall not be responsible for any loss, cost or damage, including consequential damage, caused by reliance on these materials.

## Digi Technical Support Contact Information

|                  |                                     |
|------------------|-------------------------------------|
| United States:   | (952) 912-3444 or (877) 912-3444    |
| Other Locations: | +1 (952) 912-3444 or (877) 912-3444 |
| EMEA             | +44 870 35 000 35                   |

## Safety Notices

1. Please read all instructions before installing and powering the unit. You should keep these instructions in a safe place for future reference.
2. If the power supply shows signs of damage or malfunction, stop using it immediately, turn off the power and disconnect the power supply before contacting your supplier for a repair or replacement.
3. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Use only the accessories, attachments, and power supplies provided by the manufacturer – connecting non-approved antennas or power supplies may damage the unit, cause interference or create an electric shock hazard, and will void the warranty.
4. Do not attempt to repair the product. The unit contains no electronic components that can be serviced or replaced by the user. Any attempt to service or repair the unit by the user will void the product warranty.
5. Products in the TransPort WR® family are designed for indoor use (except for the WR44 R) and should be used in an environment that is suitable for computers and other electronic equipment.
6. Ports that are capable of connecting to other apparatus are defined as SELV ports. To ensure conformity with IEC60950 ensure that these ports are only connected to ports of the same type on other apparatus.

## Special notes on safety for wireless routers

Digi International products are designed to the highest standards of safety and international standards compliance for the markets in which they are sold. However, cellular-based products contain radio devices which require specific consideration. Please take the time to read and understand the following guidance. Digi International assumes no liability for an end user's failure to comply with these precautions.



Wireless routers incorporate a wireless radio module. Users should ensure that the antenna(s) is (are) positioned at least 1 meter away from themselves and other persons in normal operation.

When in a hospital or other health care facility, observe the restrictions on the use of mobile phones. Do not use the unit in areas where guidelines posted in sensitive areas instruct users to switch off mobile phones. Medical equipment may be sensitive to RF energy.

The operation of cardiac pacemakers, other implanted medical equipment and hearing aids can be affected by interference from cellular terminals such as the wireless routers when placed close to the device. If in doubt about potential danger, contact the physician or the manufacturer of the device to verify that the equipment is properly shielded. Pacemaker patients are advised to keep the wireless router away from the pacemaker while it is on.



Wireless routers must NOT be operated on aircraft. The operation of wireless appliances in an aircraft is forbidden to prevent interference with communications systems. Failure to observe these instructions may lead to the suspension or denial of cellular services to the offender, legal action, or both.



As with any electrical equipment, do not operate the unit in the presence of flammable gases, fumes or potentially explosive atmospheres. Radio devices should not be used anywhere that blasting operations are taking place.



Wireless routers receive and transmit radio frequency energy when power is on. Interference can occur if used close to TV sets, radios, computers or inadequately shielded equipment. Follow any special regulations and always power off your unit wherever forbidden or when it may cause interference or danger.



**SOS IMPORTANT!** - Wireless routers operate using radio signals and cellular networks cannot be guaranteed to connect in all possible conditions. Therefore, never rely solely upon any wireless device for life critical communications.

## Table of Contents

|          |  |           |
|----------|--|-----------|
| <b>1</b> | <b>Package Contents</b>                          | <b>5</b>  |
| <b>2</b> | <b>Introduction</b>                              | <b>6</b>  |
| 2.1      | Front Panel Features                             | 7         |
| 2.2      | Rear Panel Features                              | 8         |
| 2.3      | Under Unit Features                              | 9         |
| 2.4      | Additional Hardware Features                     | 10        |
| <b>3</b> | <b>Installation</b>                              | <b>12</b> |
| <b>4</b> | <b>Configuration</b>                             | <b>14</b> |
| 4.1      | Network Settings                                 | 14        |
| 4.2      | Web Interface                                    | 14        |
| 4.3      | Command Line Interface (CLI)                     | 17        |
| <b>5</b> | <b>Troubleshooting</b>                           | <b>19</b> |
| 5.1      | Troubleshooting Resources                        | 19        |
| 5.2      | Unable to open the Web Interface                 | 19        |
| 5.3      | Unable to log in to the Web Interface            | 19        |
| <b>6</b> | <b>Specifications</b>                            | <b>20</b> |
| <b>7</b> | <b>Accessories</b>                               | <b>21</b> |
|          | <b>Appendix A: SERIAL 0 Port Pin-out Diagram</b> | <b>23</b> |


## 1 Package Contents




TransPort WR41




Installation Guide

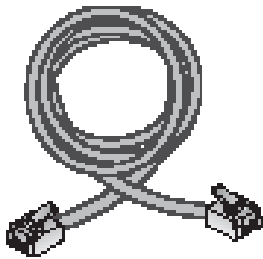

Ethernet Cable

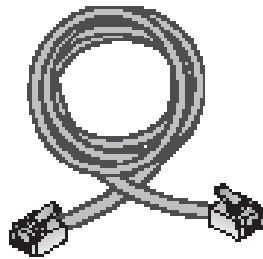

PSTN Cable  
[PSTN & DialServ models only]

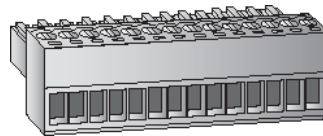


Telemetry Connector  
[Telemetry models only]



Cellular  
Antenna(s)



Power Supply Adapters  
[Non-US models only]

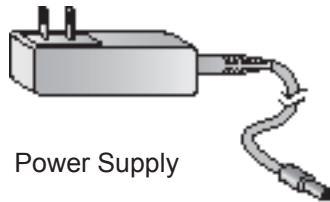

Power Supply


(some models may include a DC Power  
Cord or have no Power Supply)




GPS Antenna  
[GPS models only]



Wi-Fi Antenna  
[Wi-Fi models only]

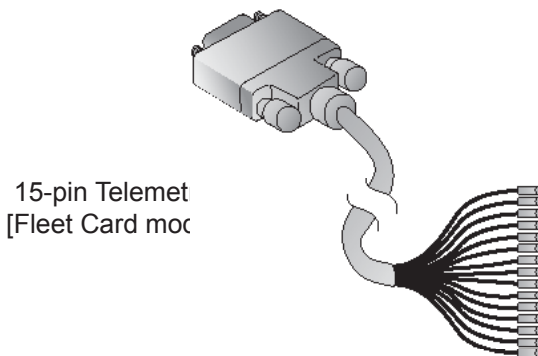

15-pin Telemet  
[Fleet Card mod]

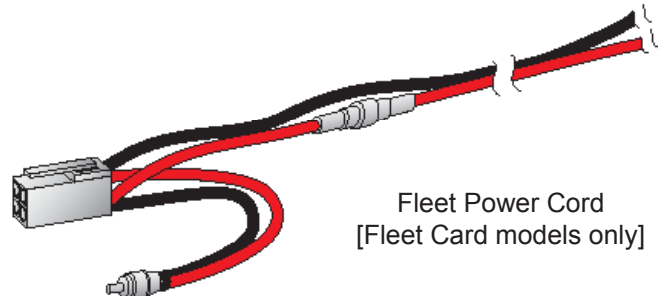

Fleet Power Cord  
[Fleet Card models only]

If any item is missing or damaged, please contact your supplier. Also, make a record of any damage that may have occurred during shipping and report it to the carrier.

Depending on model and configuration, the package will also contain additional cables/antennas as appropriate.

## Preface

This guide describes the installation procedure for the TransPort WR family of routers. It is intended to provide sufficient information to be able to connect the unit to terminal equipment and power-on the unit. A complete reference guide to the software features that are available on the product is available separately in PDF format and can be downloaded from the Digi International web site ([www.digi.com](http://www.digi.com)).

## 2 Introduction

The Digi TransPort WR family of cellular routers offers an all-in-one mobile communications solution with true enterprise class routing, security and firewall. These multifunction cellular routers feature a flexible design with an optional integrated Wi-Fi access point (with multi SSID) / Client, USB, serial, and Ethernet, as well as a variety of configuration options including multiple serial ports (async or sync), GPS or I/O telemetry modules.


The Digi TransPort family also offers an advanced routing, security and firewall feature set including stateful inspection firewall and integrated VPN. Enterprise class protocols incorporate BGP, OSPF and VRRP+, a patented technology built upon the popular VRRP failover standard providing true auto sensing, auto failure and auto recovery of any line drop.

Digi TransPort WR routers are ideal for transportation and mobile applications. Flexible power options include AC, DC and 4-pin Molex connectors for direct integration into vehicle applications. Also available is the Digi Remote Manager™ which provides easy setup, configuration and maintenance of large installations of Digi TransPort devices.

Digi TransPort WR routers are available on the following networks:

|              |                | GPRS | EDGE | UMTS | HSUPA | EVDO / 1xRTT |
|--------------|----------------|------|------|------|-------|--------------|
| <b>Model</b> | <b>WR41-E</b>  | ✓    | ✓    |      |       |              |
|              | <b>WR41-G</b>  | ✓    |      |      |       |              |
|              | <b>WR41-U</b>  | ✓    | ✓    | ✓    | ✓     |              |
|              | <b>WR41-C</b>  |      |      |      |       | ✓            |
|              | <b>WR41-U5</b> | ✓    | ✓    | ✓    | ✓     | ✓            |


## 2.1 Front Panel Features

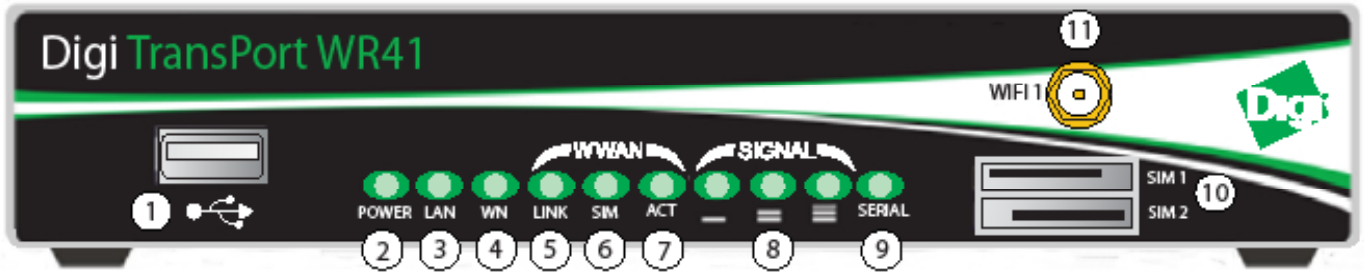

1. USB Host Connector - The USB host connector may be used to connect compatible USB 2.0 client devices such as memory sticks, and serial adapters. The total current available to power USB devices is 0.5A.
2. LED Status Indicator - POWER - Illuminates steady when power is connected.
3. LED Status Indicator - LAN - Illuminates steady when there is a network connection to the LAN port and flashes when data is transmitted or received.
4. LED Status Indicator - WN (Wireless Network).
  - a. Wi-Fi models: Illuminates steady if Wi-Fi activity is present.
  - b. Non-Wi-Fi models: Flashes to show which network mode the unit is operating in:
    - Off - no service
    - 1 blink - GPRS mode
    - 2 blinks - EDGE mode
    - 3 blinks - UMTS mode
    - 4 blinks - HSDPA mode
    - 5 blinks - HSUPA mode
    - On steady - CDMA mode
5. LED Status Indicator - LINK - Illuminates steady when a wireless data connection has been established.
6. LED Status Indicator - SIM - Illuminates steady when a valid SIM card is installed.
7. LED Status Indicator - ACT - Flashes to indicate that data is being transferred over the wireless network.
8. LED Status Indicator - SIGNAL.
  - a. WR41-G, -E and -U models: signal strengths are as follows:
    - 0 LEDs illuminated: < -113 dBm (effectively no signal)
    - 1 LED illuminated: >= -112 dBm and <= -87 dBm (weak)
    - 2 LEDs illuminated: >= -86 dBm and <= -71 dBm (medium)
    - 3 LEDs illuminated: >= -70 dBm and <= -51 dBm (strong)
  - b. WR41-C models: signal strengths are as follows:
    - 0 LEDs illuminated: < -116 dBm (effectively no signal)
    - 1 LED illuminated: >= -115 dBm and <= -104 dBm (weak)
    - 2 LEDs illuminated: >= -103 dBm and <= -94 dBm (medium)
    - 3 LEDs illuminated: >= -93 dBm and <= -83 dBm (strong)
9. LED Status Indicator - SERIAL - Illuminates steady if a terminal is connected to the SERIAL 0 port and the DTR signal is on. Flashes when data is transmitted or received.

10. SIM / R-UIM Sockets (SIM card models only) - SIM 1 and SIM 2 are for use with the Subscriber Identification Module(s) (SIMs) or Removable User Identification Module(s) (R-UIMs).
11. WiFi 1 Antenna Connector (Wi-Fi models only) - This SMA connector is used to connect the unit's primary Wi-Fi antenna.

## 2.2 Rear Panel Features

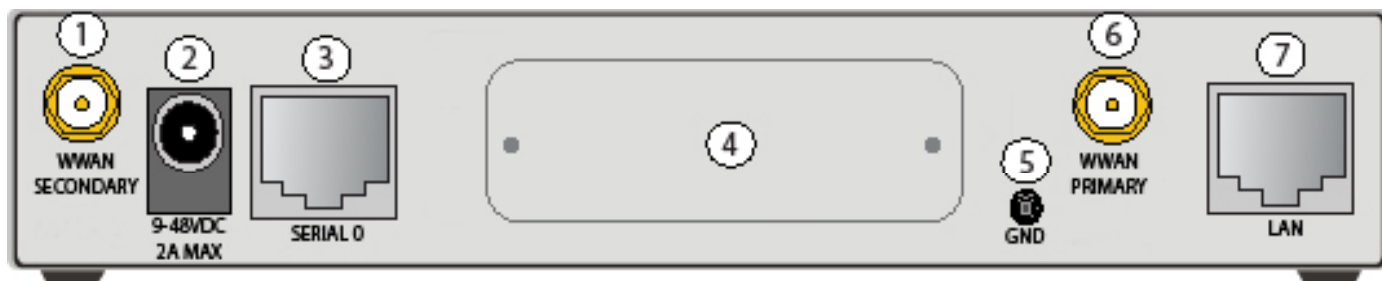


1. Secondary Cellular (WWAN) Antenna Connector (WR41-U and WR41-C models) - This SMA female connector is used to connect the unit's secondary cellular antenna. It is highly recommended to use the secondary antenna for diversity. In most circumstances, dual antennas will provide improved signal strength thus better performance.
2. Power Cord Input - This socket is used to connect the unit to a power source.

**Note:** The power supply has a twist-lock connector which can be secured by rotating it 90 degrees once installed into the TransPort unit.

3. SERIAL 0 Port - This RJ45 port provides an asynchronous RS232 serial port which may be used to connect the unit to a compatible serial device. This is a DCE serial port and allows CLI access to the device by default; the baud rate is 115200. A pinout diagram is available in Appendix A: SERIAL 0 Port Pin-out Diagram on page 23.
4. Hardware Expansion Port - Various hardware upgrades are available for this unit and are populated via this expansion port. See the Additional Hardware Features section on page 10 for further information.
5. Case Ground - This connector is used to connect an additional case ground if necessary.
6. Primary Cellular (WWAN) Antenna Connector - This SMA female connector is used to connect the unit's primary cellular antenna.
7. LAN Port - This RJ45 port is used to connect the unit to a 10/100 base-T LAN. The port is auto-sensing for speed and wiring (straight-through or cross-over).

## 2.3 Under Unit Features



[Rear of Unit]

### 2.3.1 Reset button

The reset button allows the user to return the unit to its factory default settings. It is recessed [to avoid accidental reset], and can be accessed via a small 2.5mm hole located on the underside of the unit.

### 2.3.2 Reset instructions


**Step 1)** Turn the unit on and wait 15 seconds for the unit to complete its initialization process.

**Step 2)** Press and hold the reset button gently for 5 seconds. After this time, the unit will automatically re-boot and display a pattern of alternating LEDs flashing followed by the normal boot sequence.

**Note:** Do not remove power from the unit during this operation as corruption of the flash memory may occur.

## 2.4 Additional Hardware Features

The TransPort WR41 is available with various hardware options, as shown below:

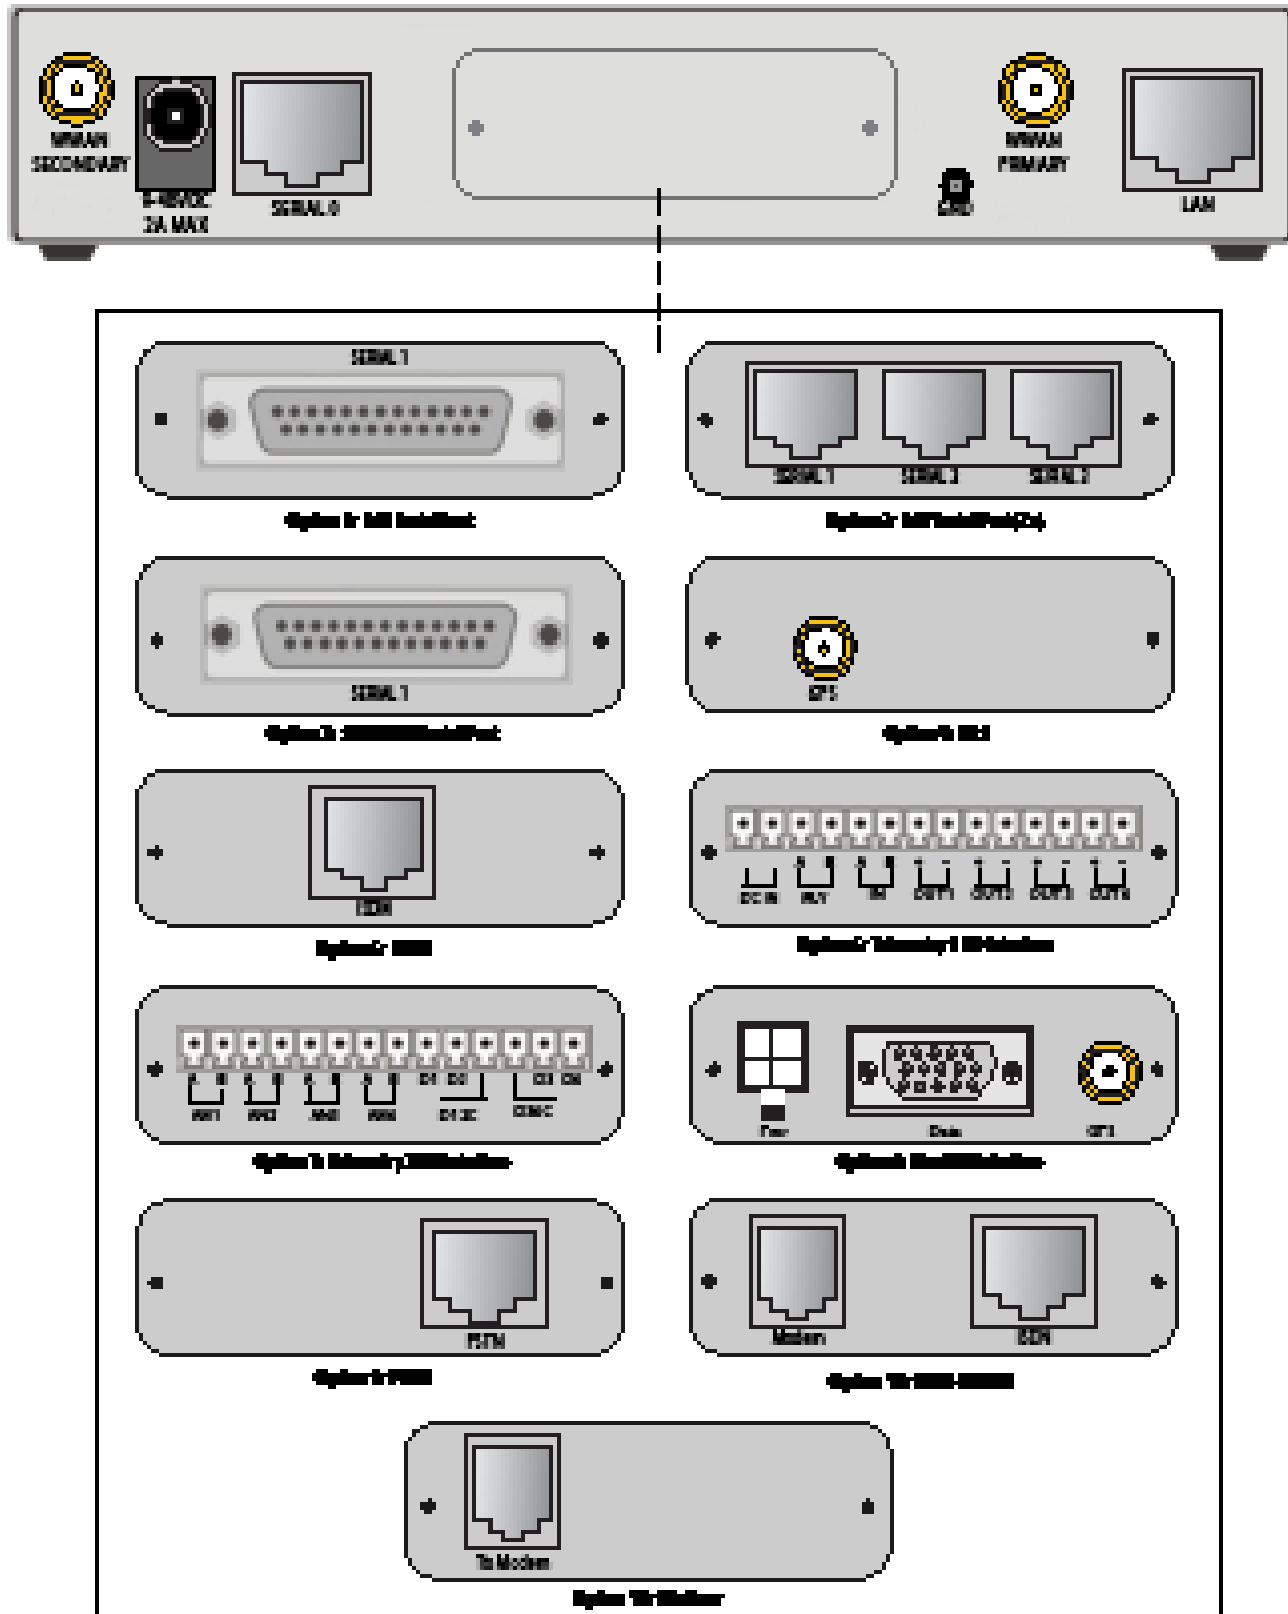


1. ASY Serial Port - Provides an additional asynchronous RS232 serial port using a DB25 connector.
2. ASY Serial Port (3x) - Provides three additional asynchronous RS232 serial ports using RJ45 connectors.
3. SYN/ASYN Serial Port - Provides an X.21/RS422/RS232 synchronous / asynchronous serial port using a DB25 connector.
4. GPS - Provides GPS capabilities using an SMA male connector.
5. ISDN - Provides an ISDN Basic Rate Interface (BRI) via an RJ45 port. This can be configured either as a TE (terminal endpoint) or as NT-1 (network termination). The option also includes an additional asynchronous serial port via a second RJ45 port.
6. Telemetry 1 I/O Interface - Provides 4 opto-isolated digital input ports and 1 opto-isolated digital output port. It also provides a relay I/O port, a voltage monitoring port, and internal temperature monitoring.
7. Telemetry 2 I/O Interface - Provides 4 isolated analog I/O ports and 4 non-isolated digital I/O ports.
8. Fleet I/O Interface - Provides CAN and J1708 interface, GPS, 4 non-isolated digital I/O ports, ignition sense port, and a 3 axis accelerometer.
9. PSTN - Provides a PSTN interface via an RJ45 connector that can be used to dial out and receive calls.
10. ISDN-U/PSTN - Provides an ISDN-U interface suitable for the USA plus PSTN interface. It can be configured for Bell-103 modulation in leased line mode as well as a normal PSTN interface.
11. DialServ - This RJ11/FXS connection converts a PSTN analog modem to a RS-232 serial signal.

For more information on the Telemetry 1, Telemetry 2, and the Fleet I/O Interfaces please see the product specific user's guides which can be found at: <http://ftp1.digi.com/support/documentation/transport/technicalnotes.htm>.

### 3 Installation

#### Mounting Tips

The TransPort WR41 should be positioned on a flat, level surface or via a wall-mount, rackmount, or DIN rail mounting brackets (see the Accessories section on page 21 for all options). The unit is designed for indoor use and should be mounted in a location with adequate ventilation. Also, do not expose the unit to extremes of heat or cold, strong magnetic fields, or liquids.

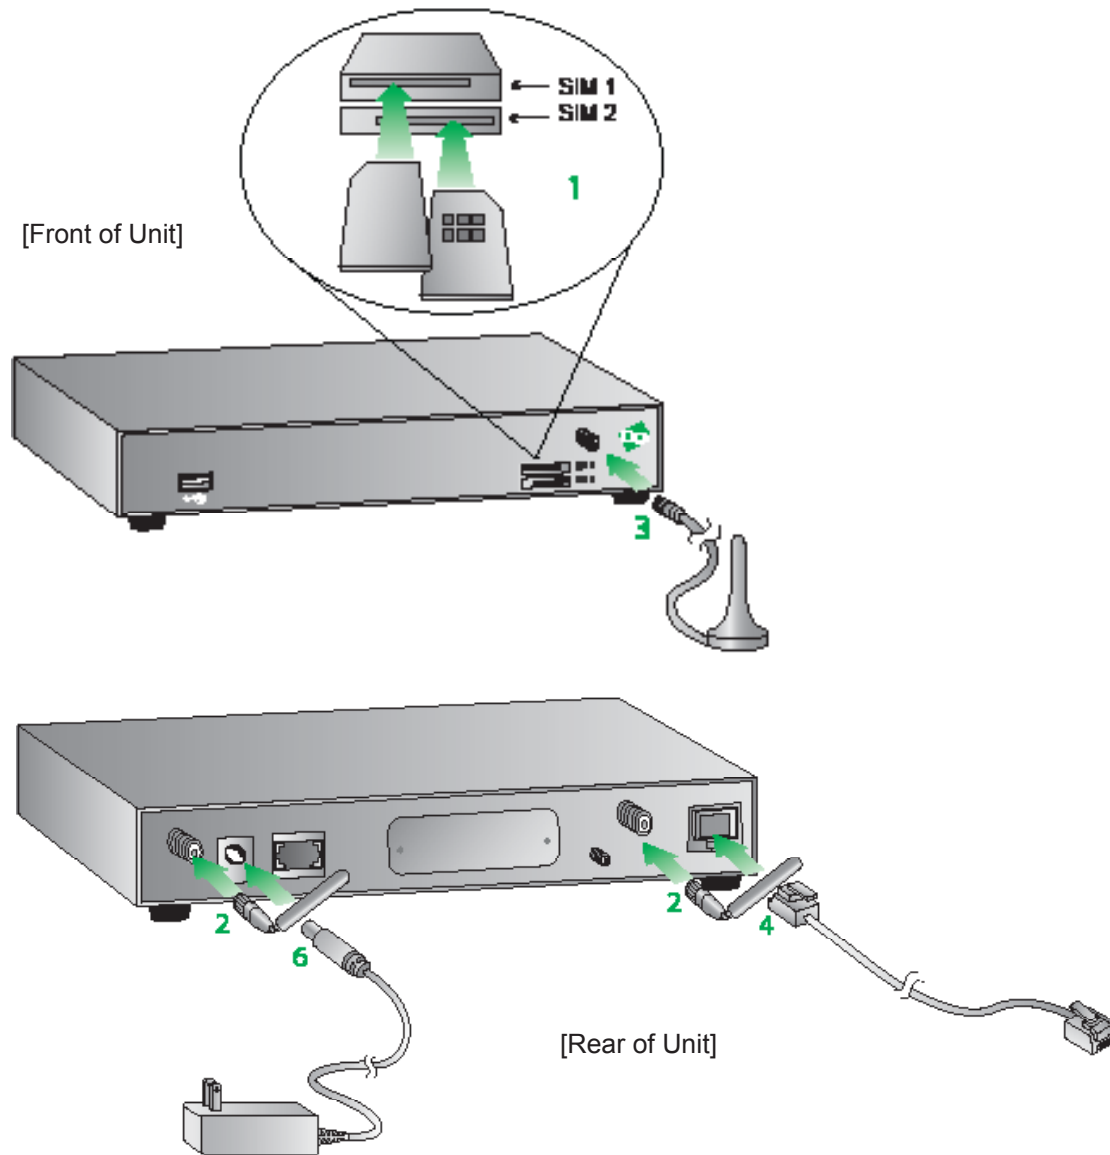

**Step 1) (SIM card models only) - Install the SIM card(s):** SIM card(s) should be inserted into SIM Sockets as illustrated in the above Front View image. For SIM 1, the contacts should be face down. For SIM 2, the contacts should be face up. In both cases, the end of the SIM card with the chamfered corner should be inserted first.

**Note:** For WR41-C models, not all networks require/support the use of Removable User Identity Modules (R-UIM's). If your service provider does not support R-UIMS, the unit may have been "provisioned" for use on your chosen network before you receive it and this step of the installation procedure will not be required. If the unit has not been provisioned, you will need to contact your service provider to obtain an "IMSI" and "NAI" in order to provision the unit manually.

The TransPort WR41 also allows for dual network installations where one wireless service can be used as a back-up in the event that the primary service fails. These installations cannot be used to access two networks simultaneously. By default, SIM 1 is used for access to the primary network and SIM 2 is used for the back-up network.

For added security, Digi offers a “SIM Slot Cover Plate” that can be installed on the unit to deter theft or tampering of the SIM cards, (see the Accessories section on page 21 for more information).

**Step 2) Connect the Cellular (WWAN) Antenna(s):** Connect the cellular antenna to the “WWAN PRIMARY” connector (SMA Female) on the unit. If the unit is equipped with a secondary cellular antenna connector (WWAN SECONDARY), it is highly recommended to connect an additional antenna to this connector for diversification. Dual antennas will provide improved signal strength thus better performance.

***Note:** For most applications, the antenna(s) included with the unit will provide suitable reception, but some circumstances/environments may require a higher quality antenna or one mounted in a different location. If this is the case, Digi has many antenna options to chose from -- please contact us or visit [www.digi.com](http://www.digi.com). If antennas other than the supplied antenna(s) are used, the separation between the two should be no less than five inches (5”).*

**Step 3) (Wi-Fi models only) – Connect the Wi-Fi Antennas:** Connect the Wi-Fi antennas to the ‘WIFI PRIMARY and WIFI SECONDARY’ antenna connectors (SMA Male).

**Step 4) Connect the LAN Cable:** Connect one end of the Ethernet cable to the “LAN” port on the unit and the other end to a LAN port on a PC.

**Step 5) Connect the Serial Cable (optional):** Connect one end of the serial cable (not included) to the “SERIAL 0” port on the unit and other end to the serial port on a third-party serial terminal device. If you wish to connect the unit to a PC, it is recommended that you purchase Digi’s serial cable (P/N: 76000858).

Some TransPort models also include additional serial ports which have RJ45 connectors. For those models, Digi offers the following serial cables for connectivity:

- P/N: 76000855 -- RJ45 to DB9 Female - 6’
- P/N: 76000856 -- RJ45 to DB25 Male - 6’
- P/N: 76000857 -- RJ45 to DB25 Female - 6’

**Step 6) Connect the Power Supply:** Depending on model, the unit will either come with an AC power supply, 4-pin DC power cord, or a Fleet power cord. Instructions for all options are described below.

**AC Power Supply** - Connect the locking barrel end of the power supply to the “MAIN” connector on the unit, and plug the other end into a wall outlet. “International” units come with interchangeable Power Supply Adapters which can be used according to regional needs.

**Fleet Power Cord** - Connect the 4-pin molded connector to the “Pwr” port on the unit. Connect the locking barrel jack to the “MAIN” connector on the unit. Finally, wire the two bare wires accordingly to your needs.

For sample wiring diagrams and pinout information, see the 4-Pin DC Power Cord and Fleet I/O Interface User’s Guides, which can be found online at <http://ftp1.digi.com/support/documentation/transport/technicalnotes.htm>.

**Step 7)** When the unit is powered-up, the POWER indicator will illuminate and the unit will initiate a series of diagnostic self-tests. During this process one or more of the other indicators will flash to show that the unit is busy. When the flashing stops, the unit has completed its self-test diagnostics and is ready to be configured.

## 4 Configuration

Once the unit has been installed and powered up, it needs to be configured to communicate with the LAN and WAN. Configuration is performed either using the Command Line Interface (CLI) or the Web Interface. The Web Interface (accessed via a web browser e.g. Firefox, IE, Chrome) is the recommended configuration option for most users.


**Note:** You will not be able to use the unit for remote communication until you have subscribed to a suitable mobile/cellular wireless network service.

### 4.1 Network Settings

The default IP address for the LAN port is 192.168.1.1 with a subnet mask of 255.255.255.0. The unit has a DHCP server enabled by default which can assign an appropriate IP address to your PC if the PC is configured to get an IP address automatically. Alternatively you can manually configure your PC to be on the 192.168.1.x network, for example, with an IP address of 192.168.1.2 and subnet mask of 255.255.255.0. Care should be taken to ensure that the unit does not conflict with other devices that may already be on the network.

### 4.2 Web Interface

**Step 1) Connect to the Web Interface:** Open a Web browser (e.g. Firefox, IE, Chrome) on your PC and navigate to <http://192.168.1.1>. If successful, you will be prompted to enter a username and password. The default username is “username”, and the default password is “password”. After you have logged in, it is strongly recommended that you immediately change the default username and password.

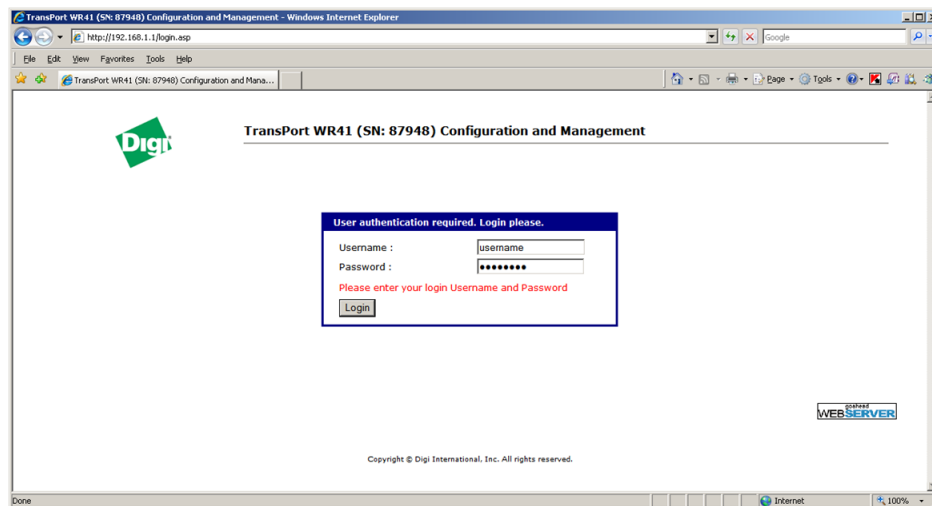


If you are unable to connect to the Web Interface, please refer to the Troubleshooting section on page 19.

**Step 2) Configure the Unit:** The easiest way to perform the initial configuration of the unit is by using the Quick Start Wizard. This wizard allows you to configure the following items where applicable:

- Username and password
- LAN IP settings
- DHCP Server
- Mobile module and connection
- Wi-Fi Access Point

The Quick Start Wizard is located in the Getting Started section on the Home menu.

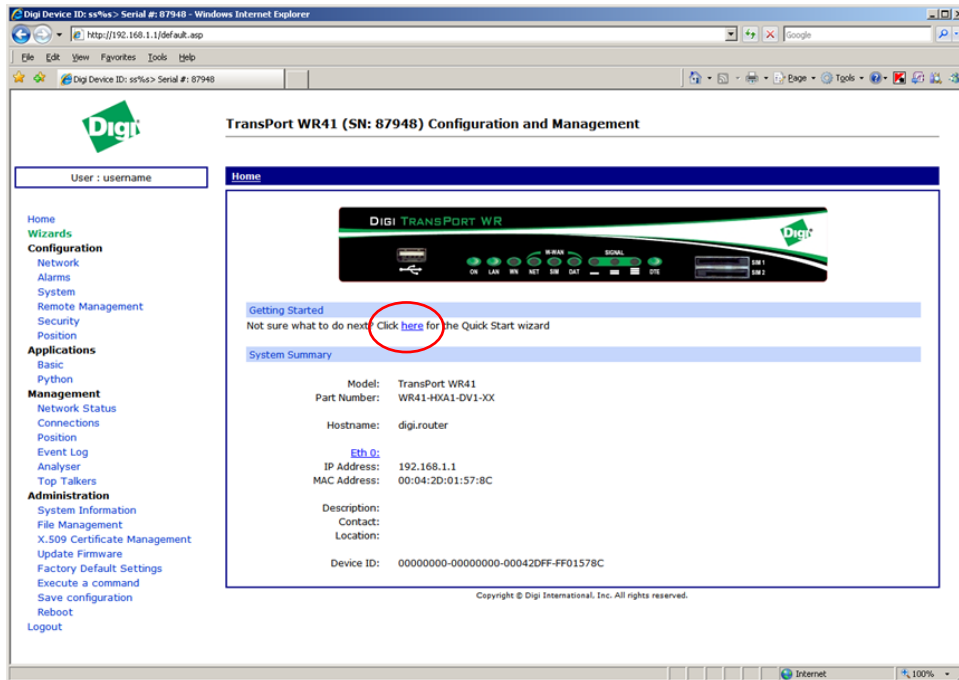


#### 4.2.1 Cellular: CDMA

If your unit is to be used on a CDMA network, the embedded module must be provisioned on the network before it can make a connection.

**Note:** If your unit uses a Gobi module (indicated by a model number of WR41-U5xx-xxx-xx), and you did not select the appropriate CDMA carrier via the Quick Start Wizard, you must run the GOBI Module Carrier Wizard before provisioning can be successfully completed.

To provision the CDMA mobile device, navigate to the CDMA Provisioning section by clicking on **Network > Mobile > CDMA Provisioning**.

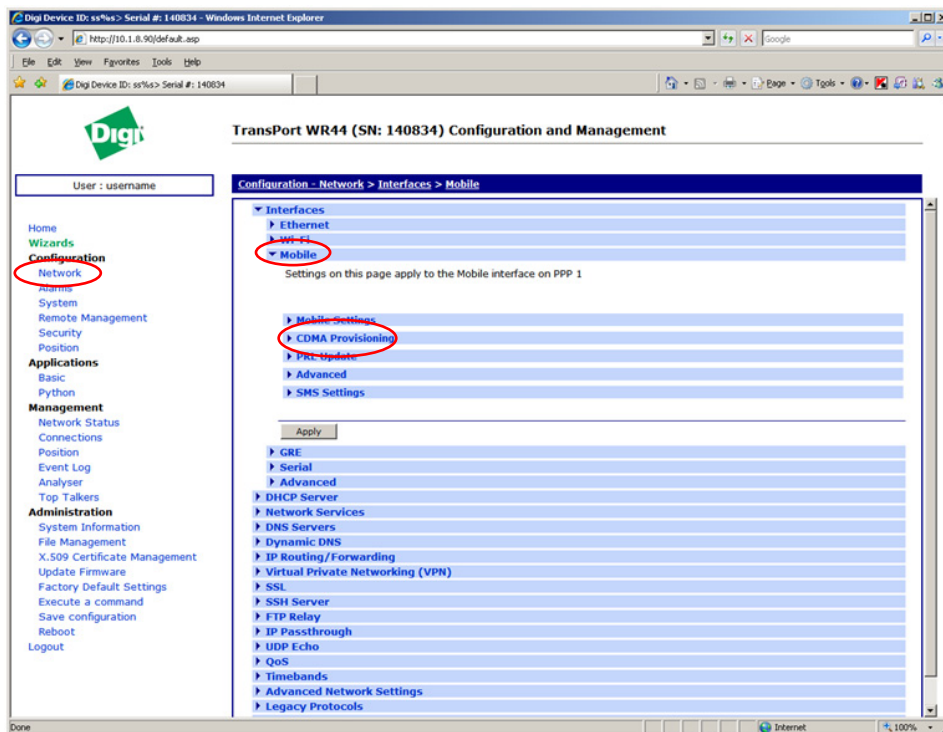

#### 4.2.1.1 CDMA Provisioning

CDMA provisioning is different from GSM since CDMA (in most cases) does not use a SIM card.

The CDMA modem provisioning process creates a CDMA data connection to the mobile carrier network. This authenticates the modem and retrieves account information which is written to flash memory on the modem module itself, not the Digi's configuration file. As the mobile account information is stored on the CDMA module, performing a factory reset on the unit will not remove provisioning information from the CDMA module.

Important points:

- The modem must be provisioned on the network before it will communicate.
- The modem must be in coverage area of the native carrier. It cannot be roaming.
- There must be sufficient signal strength available to provision the modem.
- Always use MIP Profile 1 for manual provisioning unless specified otherwise by your carrier or Digi Technical Support.

#### 4.2.1.2 Automatic vs. Manual Provisioning

There are two types of CDMA provisioning: *Automatic* and *Manual*. This varies between carriers and even within carriers. Settings in the Web Interface vary based on carrier plan. Below are examples for Verizon Wireless and Sprint:

Verizon Wireless always uses *Automatic*. This means that no further settings are required in the Web Interface - simply press Start in the Automatic section and leave the fields blank.

Sprint has two types of plans, Vision for standard Internet connections and DataLink for private IP plans:

1. Sprint Vision uses *Automatic* provisioning. There are three fields of information that may need to be populated in the Automatic screen. Check with Sprint for correct values (if required).
2. Sprint DataLink requires *Manual* provisioning. The required fields in the Web Interface vary based on plan and type of embedded modem. As noted above, always use MIP Profile 1 unless otherwise specified by your carrier or Digi Technical Support.

Check with your carrier for information about the type of provisioning required and what, if any, data is required to be entered.

For more information on configuring the unit, please refer to the Digi TransPort User Guide which is available at [www.digi.com](http://www.digi.com).

#### 4.2.2 Cellular: GSM

To configure the Wireless WAN/mobile interface on non-CDMA routers (GPRS/UMTS/HSPA), please refer to the Application Guide "QN02 - Configure the wireless WAN (PPP) interface" which can be found on the Digi Support site (<http://www.digi.com/support/>).

It is also essential to configure a dead link detection mechanism for routers using a Wireless WAN/mobile interface (such as GPRS/HSDPA/CDMA). Please refer to the Application Guide "AN07 - Wireless - Wide Area Network (W-WAN) Problem Detection and Recovery" which can also be found on the Digi Support site (<http://www.digi.com/support/>).

### 4.3 Command Line Interface (CLI)

In order to configure the unit serially, ensure that the unit is connected to a PC (as outlined in Step 5 on page 13 of the Installation section). Also, terminal emulation software (such as HyperTerminal) will be required.

#### 4.3.1 CLI Notes

- To view the current configuration settings, enter the command **CONFIG C SHOW**.
- To save changes made to the unit, enter the command **CONFIG 0 SAVE**.
- All entered commands will take effect immediately.

#### 4.3.2 Communication Settings

**Step 1)** Configure the following settings for the unit:

COM Port: [select the appropriate port; typically COM1]

Baud Rate: 115200

Data Bits: 8

Stop Bits: 1

Parity: No Parity

Flow Control: None

**Step 2)** Ensure the connection is active by entering the command **AT**. If the device is functioning properly, it will return the response OK.

**Step 3)** Ensure the COM port is setup correctly by entering the command **ATI5**.

#### 4.3.3 Network Settings

To configure the unit with an IP address as part of an existing network, use the commands below.

**Note:** The DHCP server will still operate unless it is disabled.

| Command                              | Description                |
|--------------------------------------|----------------------------|
| <b>ETH 0 IPADDR   XXX.XXX.XX.XXX</b> | Sets the Eth 0 IP address  |
| <b>ETH 0 MASK     XXX.XXX.XX.XXX</b> | Sets the Eth 0 subnet mask |

As an example, to assign the IP address 192.168.10.254/24, the following commands would be entered:

**ETH 0 IPADDR 192.168.10.254**

**ETH 0 MASK 255.255.255.0**

**Note:** When setting the mask to the above 255.255.255.0 value, it will not appear in the output of the **CONFIG C SHOW** command as it is a default value.

To stop the DHCP server from serving addresses, use the following command:

| Command               | Description  |
|-----------------------|--|
| <b>DHCP 0 IPMIN X</b> | Removes the minimum IP address that will be server via DHCP, disabling the DHCP server |

As an example, to stop the DHCP sever from DHCP requests, enter the command **DHCP 0 IPMIN !**. The **!** variable is used to remove a value or set it back to its default.

To retain the DHCP server, but on a different subnet, the following parameters will need to be configured:

| Command                       | Description  |
|-------------------------------|--|
| <b>DHCP 0 IPMIN x.x.x.x</b>   | Minimum IP address to assign, the start of the DHCP pool                                   |
| <b>DHCP 0 IPRANGE</b>         | The number of IP addresses in the DHCP pool  |
| <b>DHCP 0 GATEWAY x.x.x.x</b> | The IP gateway address the DHCP clients should use (normally this router's LAN IP address) |
| <b>DHCP 0 MASK x.x.x.x</b>    | The subnet mask DHCP clients should use  |
| <b>DHCP 0 DNS</b>             | The DNS server DHCP clients should use   |

For more information on CLI commands, visit <http://www.digi.com/support/> and view the various reference manuals available.

## 5 Troubleshooting

### 5.1 Troubleshooting Resources

There are several resources available to you for support of your Digi product or resolving configuration difficulties at Digi's Support site, <http://www.digi.com/support/>. Try these troubleshooting steps to eliminate your problem. After working through these steps and your problem is not solved, try the resources listed below.

1. Digi's Support knowledge base: <http://www.digi.com/support/kbase>.
2. Digi TransPort support documents: <http://ftp1.digi.com/support/documentation/transport/technicalnotes.htm>.
3. If the knowledge base or support forums do not have the information you need, fill out an Online Support Request via: <http://www.digi.com/support/eservice/login.jsp?p=true>. You will need to create a user account if one is not already set up.

When submitting a support request, please include a copy of the debug.txt file from the unit's flash. This will greatly improve the quality of the initial response you receive. Without this file, it is often very difficult for the support team to provide accurate answers to your queries.

For instructions on how to download the debug.txt file from the unit, view the online document "QN24 - Extracting the debug.txt file from a Digi TransPort or Sarian router".

### 5.2 Unable to open the Web Interface

Ensure that the LAN cable is properly connected to the LAN port and that the "LAN" status indicator on the front of the unit is illuminated. If it is not, then there is a problem with either the LAN cable or the device it is connecting to. If the status indicator is illuminated, check that the PC can communicate with the unit. To do this, open the Command Prompt window on your PC and enter the command "ping 192.168.1.1". If you do not get a response, then the problem could be one of the following:

- The IP address of the unit has been changed from its default of 192.168.1.1. Use the Digi TransPort Connection Wizard (which can be downloaded from the Support area at Digi.com or the Digi Device Discovery Tool). It can usually discover the unit on a network as long as the unit's firewall has not been enabled.
- PC IP configuration. The PC's LAN interface that is connected to the unit should be configured to "Obtain an IP address automatically". If required, the Digi TransPort Connection Wizard can be used to configure the PC.
- Check the PC's LAN connection and any LAN device (e.g. Ethernet switch) that is used to interconnect to the unit.
- Refresh the PC's IP settings by opening a command window and enter "ipconfig /release" then "ipconfig /renew".
- ARP resolution. Clear the PC's ARP cache with the command "arp -d \*", then retry the ping command. If you do get a response but are unable to view the Web Interface, then there is most likely a problem with your web browser configuration.

### 5.3 Unable to log in to the Web Interface

Access to the unit can be achieved via any of the asynchronous serial ports. Connect your PC to the unit using a "straight through" RS232 serial cable. This will allow you to change the configuration via the Command Line Interface (CLI). Please refer to the Digi TransPort User Guide for information on how to use the CLI. The User Guide can be downloaded from the Digi Support site. If you have further questions about your product please contact Digi Technical Support (see page 2 for contact information).

## 6 Specifications

| Specifications                      | Digi TransPort WR41  |
|-------------------------------------|--|
| <b>General Features:</b>            |  |
| Dimensions<br>(L x W x H)           | 4.7" x 6.8" x 1.3"<br>(12 cm x 17.3 cm x 3.2 cm)   |
| Weight                              | 1.08 lb (0.49Kg)   |
| Other                               | Standard dual SIM (SIM protection cover option)  |
| <b>RF Features:</b>                 |  |
| <b>GSM Models</b>                   |  |
| GPRS                                | GPRS Class 10, Quadband 850/900/1800/1900 MHz  |
| EDGE                                | GPRS Class 10/EDGE Class 10, Quadband 850/900/1800/1900 MHz  |
| HSDPA/HSUPA/UMTS                    | 850/900/1900/2100 MHz with Rx Diversity  |
| <b>CDMA Models</b>                  |  |
| CDMA/EV-DO Rev A                    | Dualband 800/1900 MHz with Rx Diversity; Optional multi-mode GSM/ EV-DO Gobi support; 450 MHz, 3.1 Mbps down / 1.8 Mbps up, R-UIM support        |
| <b>Power Requirements:</b>          |  |
| Power Input                         | 8 - 48 VDC   |
| Power Supply                        | 100 - 240 VAC 50/60 Hz with barrel connector, Optional barrel connector with bare wire leads   |
| Power Consumption                   | 6W @ 12 VDC to WR41  |
| <b>Environmental:</b>               |  |
| Operating Temperature               | -20° C to +55° C; -25° C to +70° C with reduced cellular performance<br>Wi-Fi models: -5° C to +55° C; -10° C to +70° C with reduced performance |
| Relative Humidity                   | 20% to 95% (non-condensing)  |
| Ethernet Isolation                  | 1.5 kV   |
| Serial Port Protection (ESD)        | 1.5 kV   |
| <b>Approvals:</b>                   |  |
| Mobile Certifications - GSM/ UMTS   | PTCRB, NAPRD.03, GCF-CC, R&TTE, EN 301 511   |
| Mobile Certifications - CDMA/ EV-DO | CDG TIA/EIA-690, CDG TIA/EIA-98-E  |
| Wireless Carrier Certifications     | Certified by most major carriers. See <a href="http://www.digi.com">www.digi.com</a> for current listing.  |
| Safety                              | UL 60950, CSA 22.2 No. 60950, EN60950  |
| Emissions / Immunity                | CE, FCC Part 15 Class B, AS/NZS CISPR 22, EN55022 Class A  |
| Vehicle Related Certifications      | 2004/104/EC, 2005/49/EC, 2005/83/EC, 2006/28/EC, 72/245/EEC, ISO7637-2 Class C   |

## 7 Accessories

### AC Power Supplies

|                        |          |
|------------------------|----------|
| North America (NA)     | 76000823 |
| International (Intl.)  | 76000823 |
| NA - Extended Temp.    | 76000752 |
| Intl. - Extended Temp. | 76000788 |

### DC Power Cords

|                                      |          |
|--------------------------------------|----------|
| Barrel Plug to Bare Wire             | 76000821 |
| Barrel Plug to 12V Auto Power Outlet | 76000860 |

### Mounting Brackets

|           |          |
|-----------|----------|
| DIN Rail  | 76002043 |
| Wallmount | 76000775 |
| Rackmount | 76000840 |

### Adapters

|                          |          |
|--------------------------|----------|
| RJ45 to DB9 Female - 6'  | 76000855 |
| RJ45 to DB25 Male - 6'   | 76000856 |
| RJ45 to DB25 Female - 6' | 76000857 |

### Cables

|                              |          |
|------------------------------|----------|
| RJ45 to RJ45 - 0.5m          | 76000825 |
| RJ45 to RJ45 - 2m            | 76000826 |
| RJ45 to RJ45 Crossover - 2m  | 76000827 |
| RJ45 to RJ45 - 12'           | 76000828 |
| RJ45 to RJ45 Crossover - 12' | 76000829 |
| SMA Male to SMA Female - 5m  | 76000830 |
| SMA Male to SMA Female - 10m | 76000831 |
| SMA Male to SMA Female - 15m | 76000832 |

### SIM Slot Cover Plates

|                     |          |
|---------------------|----------|
| 10-pack             | 76000787 |
| 10-pack Starter Kit | 76000786 |
| Torx Driver Tool    | 76000853 |

**Antennas - Cellular**

|   |              |
|---|--------------|
| Direct Mount, Quad Band, 2dBi                   | 76002050     |
| Direct Mount, Penta Band, 2dBi                  | 76002052     |
| Direct Mount, Dual Band, 3dBi                   | DC-ANT-DBDP3 |
| Magnet Mount, Penta Band, 2.5dBi                | 76002051     |
| Magnet Mount, Dual Band, 4.0dBi                 | DC-ANT-DBHG  |
| Glass Mount, Quad Band, 1.5dBi                  | 76000844     |
| Glass Mount, Penta Band, 0dBd                   | 76000845     |
| Surface/Marine Mount, Quad Band, 0dBi - 2.15dBi | 76000864     |
| Surface/Through-hole Mount, Quad Band, 0dBd     | 76000846     |
| Surface/Through-hole Mount, Quad Band, 3.15dBi  | 76000847     |

**Antennas – Cellular/Wi-Fi Combo**

|  |          |
|--|----------|
| Surface/Through-hole Mount, Penta Band / 2450 Band, 0 - 2dBi | 76000843 |
|--|----------|

**Antennas – Wi-Fi**

|                               |             |
|-------------------------------|-------------|
| Direct Mount, 2450/5300Mhz    | CPTS-ANT-HG |
| Table-top Mount, 2450Mhz      | DC-ANT-24DT |
| Direct Mount, 2450Mhz, 7.8dBi | DC-ANT-24DP |


**Antennas - GPS**

|   |          |
|---|----------|
| Magnet Mount, 1575Mhz, 28db               | 76000842 |
| Surface/Through-hole Mount, 1575Mhz, 25db | 76000841 |

**Antenna Mounting Brackets**

|  |          |
|--|----------|
| L-shaped wallmount, 16.5mm hole                                    | 76000850 |
| L-shaped wallmount, 12mm hole<br>Compatibility: 76000843, 76000841 | 76000851 |
| L-shaped wallmount, 20mm hole<br>Compatibility: 76000847           | 76000852 |

## Appendix A: SERIAL 0 Port Pin-out Diagram

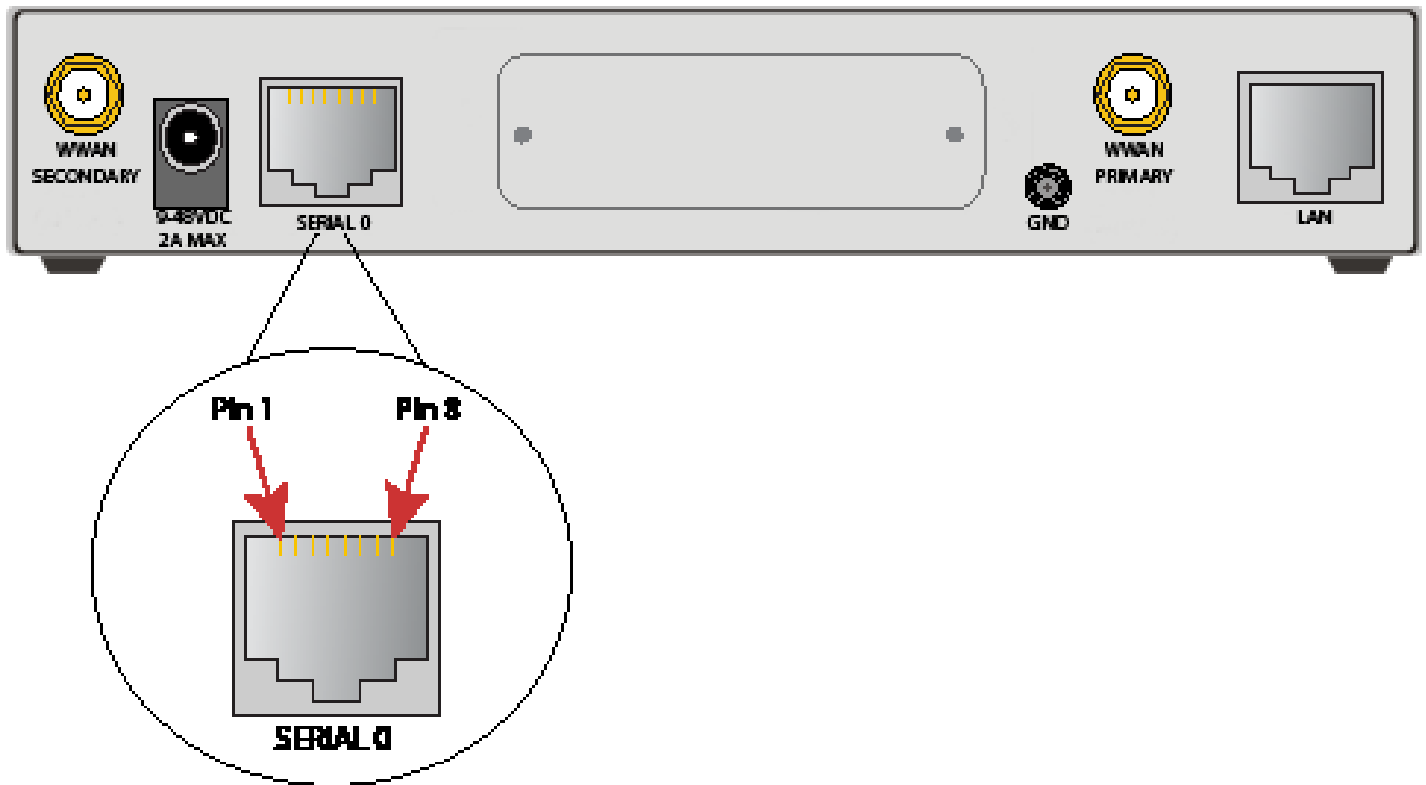

| Pin # | Direction | RS232 DCE | Description         |
|-------|-----------|-----------|---------------------|
| 1     | In        | RTX       | Ready To Send       |
| 2     | In        | DTR       | Data Terminal Ready |
| 3     | Out       | RxD       | Receive Data        |
| 4     | -         | -         | -                   |
| 5     | N/A       | GND       | Ground              |
| 6     | In        | TxD       | Transmit Data       |
| 7     | Out       | DCD       | Data Carrier Detect |
| 8     | Out       | CTS       | Clear To Send       |

## Declaration of Conformity



# EC Declaration Of Conformity

We,

**Manufacturer's Name:** Digi International

of

**Manufacturer's Address:** 11001 Bren Road East  
Minnetonka, MN 55343

declare under our sole responsibility that the product:

**Product Name:** TransPort WR41 v2

**Model Numbers:** Reference product list

to which this declaration relates are in conformity with the essential requirements and other relevant requirements of the Directive 2004/108/EC (EMC), Directive 2006/95/EC (LVD), and Council Directive 1999/5/EC R&TTE.

EMC: (article 3.1b) EN55022:2006 + A1:2007  
 EN55024:1998 + A1:2001 + A2:2003  
 EN61000-3-2:2006  
 EN61000-3-3:1995 + A1:2001 + A2:2005  
 EN301489-7:v1.3.1 (not WR41-U)  
 EN301489-24:v1.4.1 (WR41-U only)  
 EN301489-17:v2.1.1  
 EN301511:v9.0.2 (not WR41-C and WR41-U)  
 EN301526:v1.1.1 (WR41-C only)  
 EN301908-1:v3.2.1 (WR41-U only)

Safety: (article 3.1a) EN60950-1:2006+A11:2009

Minnesota, USA, 16 November, 2010

**(Place and date of issue)**

**Authorised signature for and on  
 behalf of Digi International Inc.  
 Joel Young, VP, Engineering**



## EC Declaration Of Conformity

European Representative: Andreas Burghart  
 Digi International GmbH Branch Breisach  
 Kueferstr. 8, 79206 Breisach, Germany  
 Telephone: +49-7667-908-124

| Part Number  |
|--|
| WR41-X1X2-YZZ-AA   |
| <ul style="list-style-type: none"> <li>Where X1 can be: 00, 01, C0, C1, C2, C5, C8, E1, U0, U1, U2, U3, U4, U5</li> </ul>                              |
| <ul style="list-style-type: none"> <li>Where X2 can be: 00, A1, A3, G1, I1, I3, P1, P3, S1, T1, T2</li> </ul>  |
| <ul style="list-style-type: none"> <li>Where Y can be: D or W</li> </ul>   |
| <ul style="list-style-type: none"> <li>Where ZZ can be: E1, E2, E3, E5, S1, S2, S3, S5, V1, V2, V3, V5, A1, A2, A3, A5 or any numeric value</li> </ul> |
| <ul style="list-style-type: none"> <li>Where AA can be: SA, SB, SD, SF, SU, SN, SW, SL</li> </ul>  |

### Product Disposal Instructions



The WEEE (Waste Electrical and Electronic Equipment: 2002/96/EC) directive has been introduced to ensure that electrical/ electronic products are recycled using the best available recovery techniques to minimize the impact on the environment.

This product contains high quality materials and components which can be recycled. At the end of its life this product MUST NOT be mixed with other commercial waste for disposal. Check with the terms and conditions of your supplier for disposal information.

Digi International Ltd WEEE Registration number: WEE/HF1515VU

## Copyright

© 2011 Digi International Inc.  
All rights reserved.

Digi, Digi International, the Digi logo, a Digi International Company, the Digi web site, Digi Remote Manager, Digi TransPort, Digi TransPort WR, and Digi TransPort WR41 are trademarks or registered trademarks of Digi International, Inc. in the United States and other countries worldwide.

All other trademarks are the property of their respective owners.

Information in this document is subject to change without notice and does not represent a commitment on the part of Digi International.

Digi provides this document “as is,” without warranty of any kind, either expressed or implied, including, but not limited to, the implied warranties of fitness or merchantability for a particular purpose. Digi may make improvements and/or changes in this manual or in the product(s) and/or the program(s) described in this manual at any time.

This product could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes may be incorporated in new editions of the publication.

No part of this document covered by copyright may be reproduced or copied in any form or by any means graphic, electronic, or mechanical, including photocopying, recording, taping, or information and retrieval systems without written permission of Digi International.



Digi International

11001 Bren Road East

Minnetonka, MN 55343

952-912-3444 or 877-912-3444



**(1P):91001661-88 B**



**Стандарт  
Электрон  
Связь**

Мы молодая и активно развивающаяся компания в области поставок электронных компонентов. Мы поставляем электронные компоненты отечественного и импортного производства напрямую от производителей и с крупнейших складов мира.

Благодаря сотрудничеству с мировыми поставщиками мы осуществляем комплексные и плановые поставки широчайшего спектра электронных компонентов.

Собственная эффективная логистика и склад в обеспечивает надежную поставку продукции в точно указанные сроки по всей России.

Мы осуществляем техническую поддержку нашим клиентам и предпродажную проверку качества продукции. На все поставляемые продукты мы предоставляем гарантию .

Осуществляем поставки продукции под контролем ВП МО РФ на предприятия военно-промышленного комплекса России , а также работаем в рамках 275 ФЗ с открытием отдельных счетов в уполномоченном банке. Система менеджмента качества компании соответствует требованиям ГОСТ ISO 9001.

Минимальные сроки поставки, гибкие цены, неограниченный ассортимент и индивидуальный подход к клиентам являются основой для выстраивания долгосрочного и эффективного сотрудничества с предприятиями радиоэлектронной промышленности, предприятиями ВПК и научно-исследовательскими институтами России.

С нами вы становитесь еще успешнее!

**Наши контакты:**

**Телефон:** +7 812 627 14 35

**Электронная почта:** [sales@st-electron.ru](mailto:sales@st-electron.ru)

**Адрес:** 198099, Санкт-Петербург,  
Промышленная ул, дом № 19, литера Н,  
помещение 100-Н Офис 331