

Manual of EP-CHUPCNETPLUS

UP Net Plus chassis for UP
Core Plus system



Revision: 01

Update Date: 9 August 2019

Prepared For: UP Shop User AAEON Europe

Prepared By: Kuankuan Cao AAEON Europe

Revision History

The following table contains the information regarding the history and revisions of this living document.


Version	Date	Contributor	Changes Description
01	08/08/2019	Kuankuan Cao	Initial Creation

Document Attributes

The following table contains the list of files that are associated with this living document.

Filename	Description
Approval Sheet EP-CHUPCNETPLUS	Approval Sheet
3D EP-CHUPCNETPLUS	3D Drawing

Exploding View

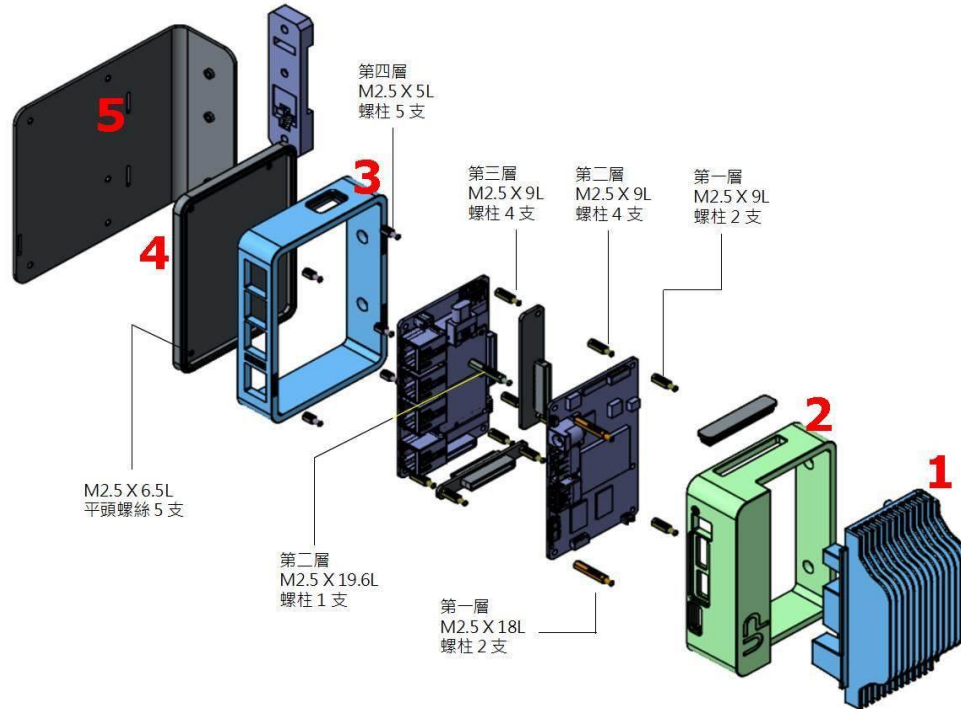

Parts List

The kit includes the following items:

- NET Plus Middle base @1pc
- M2.5*9 Hex Standoff. @8pcs
- M2.5*19.5 Hex Standoff. @1pcs
- SMA plug @2pcs

Not included in the kit, you may need to prepare:

- NET Plus stacking board (UPCP-CR-NPL4xxxx)
- UP Core plus main housing (EP-CHUPCPLUSMT1)

Package of NET Plus housing




Assembly STEP start from unboxing:


1. Prepare the UP Core Plus system, remove the bottom base. Meanwhile prepare the NET Plus board including 2 spacers. When Remove the bottom base, please put 5 x screws and stand off aside and we will need them later.



2. Fasten the UPCP PCB on top cover by 2 different kinds of hex standoffs through the 5 threads nut on (picture below). Make sure to place the 4 pcs 9mm and the 19.5mm hex standoffs in the same position as following picture .

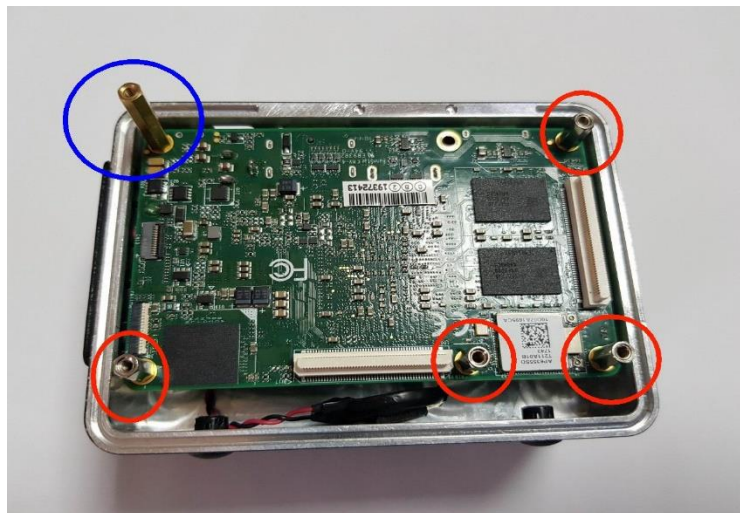

3. Fasten the 2 spacers on the motherboard by 4pcs 9mm hex standoff

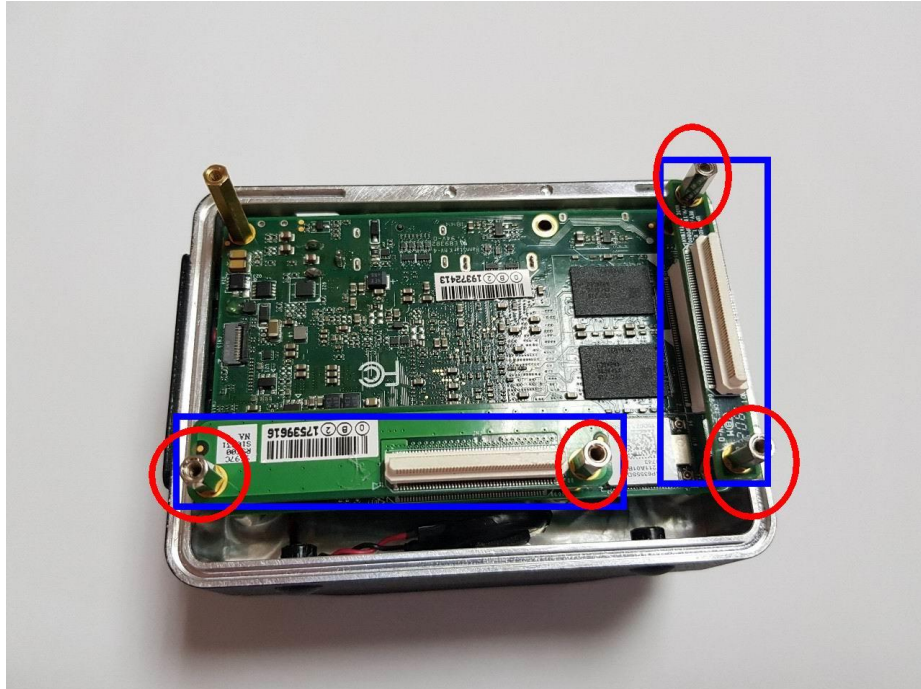

4. Put the NET plus board to be directed into the spacers and the standoff well.



5. Place the NET Plus housing on the top of the main housing, checking the IO side, make sure the I/O is exactly matching the panel side.



6. Use the 5x 5mm Hex standoff that was reserved at first step to fasten the NET Plus board.



7. Place the bottom base on top of the NET Plus housing and tighten this with the M2.5*4 screws which are reserved at first step.



8. In case no Antenna usage, Use the SMA rubber to cover the SMA hole.



9. Check all sides and make sure is exactly match with the IO.





**Стандарт
Электрон
Связь**

Мы молодая и активно развивающаяся компания в области поставок электронных компонентов. Мы поставляем электронные компоненты отечественного и импортного производства напрямую от производителей и с крупнейших складов мира.

Благодаря сотрудничеству с мировыми поставщиками мы осуществляем комплексные и плановые поставки широчайшего спектра электронных компонентов.

Собственная эффективная логистика и склад в обеспечивает надежную поставку продукции в точно указанные сроки по всей России.

Мы осуществляем техническую поддержку нашим клиентам и предпродажную проверку качества продукции. На все поставляемые продукты мы предоставляем гарантию .

Осуществляем поставки продукции под контролем ВП МО РФ на предприятия военно-промышленного комплекса России , а также работаем в рамках 275 ФЗ с открытием отдельных счетов в уполномоченном банке. Система менеджмента качества компании соответствует требованиям ГОСТ ISO 9001.

Минимальные сроки поставки, гибкие цены, неограниченный ассортимент и индивидуальный подход к клиентам являются основой для выстраивания долгосрочного и эффективного сотрудничества с предприятиями радиоэлектронной промышленности, предприятиями ВПК и научно-исследовательскими институтами России.

С нами вы становитесь еще успешнее!

Наши контакты:

Телефон: +7 812 627 14 35

Электронная почта: sales@st-electron.ru

Адрес: 198099, Санкт-Петербург,
Промышленная ул, дом № 19, литера Н,
помещение 100-Н Офис 331