

MCP1630 Coupled Inductor Boost Converter Demo Board User's Guide

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our
 knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data
 Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not
 mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION. QUALITY, PERFORMANCE, MERCHANTABILITY FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

Trademarks

The Microchip name and logo, the Microchip logo, Accuron, dsPIC, KEELOQ, microID, MPLAB, PIC, PICmicro, PICSTART, PRO MATE, PowerSmart, rfPIC and SmartShunt are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

AmpLab, FilterLab, Migratable Memory, MXDEV, MXLAB, SEEVAL, SmartSensor and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, Application Maestro, dsPICDEM, dsPICDEM.net, dsPICworks, ECAN, ECONOMONITOR, FanSense, FlexROM, fuzzyLAB, In-Circuit Serial Programming, ICSP, ICEPIC, Linear Active Thermistor, Mindi, MiWi, MPASM, MPLIB, MPLINK, PICkit, PICDEM, PICDEM.net, PICLAB, PICtail, PowerCal, PowerInfo, PowerMate, PowerTool, REAL ICE, rfLAB, rfPICDEM, Select Mode, Smart Serial, SmartTel, Total Endurance, UNI/O, WiperLock and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

 $\ensuremath{\mathsf{SQTP}}$ is a service mark of Microchip Technology Incorporated in the U.S.A.

All other trademarks mentioned herein are property of their respective companies.

 $\ \ \, \ \ \,$ $\ \ \,$ $\ \ \,$ $\ \ \,$ $\ \ \,$ $\ \ \,$ $\ \ \,$ $\ \ \,$ $\ \ \,$ $\ \ \,$ $\ \ \,$ $\ \ \,$ $\ \$ $\$ $\ \$ $\$ $\ \$ $\$ $\$ $\$ $\$ $\$ $\$ $\$ $\$ $\ \$ $\$

Printed on recycled paper.

QUALITY MANAGEMENT SYSTEM

CERTIFIED BY DNV

ISO/TS 16949:2002

Microchip received ISO/TS-16949:2002 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona, Gresham, Oregon and Mountain View, California. The Company's quality system processes and procedures are for its PICmicro® 8-bit MCUs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.



Table of Contents

Preface	 1
Introduction	1
Document Layout	1
Conventions Used in this Guide	2
Recommended Reading	2
The Microchip Web Site	3
Customer Support	
Document Revision History	
Chapter 1. Product Overview	
1.1 Introduction	
1.2 What is the MCP1630 Coupled Inductor Boost Converter Demo Board? .	
1.3 What The MCP1630 Coupled Inductor Boost Converter Demo Board Kit Includes	
Chapter 2. Installation and Operation	7
2.1 Introduction	
2.2 Features	7
2.3 Getting Started	8
Appendix A. Schematic and Layouts	11
A.1 Introduction	11
A.2 Board – Schematic	12
A.3 Board – Top Silk Layer	13
A.4 Board – Top Metal Layer	14
A.5 Board – Bottom Metal Layer	15
Appendix B. Bill Of Materials (BOM)	17
Appendix C. Demo Board Firmware	19
C.1 Device Firmware	
Vorldwide Sales and Service	22

NOTES:	MCP1630 Coupled Inductor Boost Converter Demo Board User's Guide
	NOTES:



Preface

NOTICE TO CUSTOMERS

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site (www.microchip.com) to obtain the latest documentation available.

Documents are identified with a "DS" number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is "DSXXXXXA", where "XXXXXX" is the document number and "A" is the revision level of the document.

For the most up-to-date information on development tools, see the MPLAB[®] IDE on-line help. Select the Help menu, and then Topics to open a list of available on-line help files.

INTRODUCTION

This chapter contains general information that will be useful to know before using the MCP1630 Coupled Inductor Boost Converter Demo Board. Items discussed in this chapter include:

- · Document Layout
- · Conventions Used in this Guide
- · Recommended Reading
- The Microchip Web Site
- Customer Support
- · Document Revision History

DOCUMENT LAYOUT

This document describes how to use the MCP1630 Coupled Inductor Boost Converter Demo Board. The manual layout is as follows:

- Chapter 1. "Product Overview" Important information about the MCP1630 Coupled Inductor Boost Converter Demo Board.
- Chapter 2. "Installation and Operation" Includes instructions on how to get started with this user's guide and a description of the user's guide.
- Appendix A. "Schematic and Layouts" Shows the schematic and layout diagrams for the MCP1630 Coupled Inductor Boost Converter Demo Board.
- Appendix B. "Bill Of Materials (BOM)" Lists the parts used to build the MCP1630 Coupled Inductor Boost Converter Demo Board.
- Appendix C. "Demo Board Firmware" Provides information about the application firmware and where the source code can be found.

CONVENTIONS USED IN THIS GUIDE

This manual uses the following documentation conventions:

DOCUMENTATION CONVENTIONS

Description	Represents	Examples		
Arial font:				
Italic characters	Referenced books	MPLAB [®] IDE User's Guide		
	Emphasized text	is the only compiler		
Initial caps	A window	the Output window		
	A dialog	the Settings dialog		
	A menu selection	select Enable Programmer		
Quotes	A field name in a window or dialog	"Save project before build"		
Underlined, italic text with right angle bracket	A menu path	File>Save		
Bold characters	A dialog button	Click OK		
	A tab	Click the Power tab		
'b <i>nnnn</i>	A binary number where <i>n</i> is a digit	'b00100, 'b10		
Text in angle brackets < >	A key on the keyboard	Press <enter>, <f1></f1></enter>		
Courier font:				
Plain Courier	Sample source code	#define START		
	Filenames	autoexec.bat		
	File paths	c:\mcc18\h		
	Keywords	_asm, _endasm, static		
	Command-line options	-Opa+, -Opa-		
	Bit values	0, 1		
Italic Courier	A variable argument	file.o, where file can be any valid filename		
0xnnnn	A hexadecimal number where <i>n</i> is a hexadecimal digit	0xffff, 0x007A		
Square brackets []	Optional arguments	<pre>mcc18 [options] file [options]</pre>		
Curly brackets and pipe	Choice of mutually exclusive	errorlevel {0 1}		
character: { }	arguments; an OR selection			
Ellipses	Replaces repeated text	<pre>var_name [, var name]</pre>		
	Represents code supplied by user	void main (void) { }		

RECOMMENDED READING

The following Microchip documents are available and recommended as supplemental reference resources:

MCP1630/MCP1630V Data Sheet, "High-Speed, Microcontroller-Adaptable, Pulse Width Modulator" (DS21896)

This data sheet provides detailed information regarding the MCP1630/MCP1630V product family.

PIC12F683 Data Sheet, "8-Pin Flash-Based, 8-Bit CMOS Microcontrollers with Nano Watt Technology" (DS41211)

This data sheet provides detailed information regarding the PIC12F683 product family.

THE MICROCHIP WEB SITE

Microchip provides online support via our web site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- Product Support Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- General Technical Support Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip consultant program member listing
- Business of Microchip Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- · Distributor or Representative
- · Local Sales Office
- Field Application Engineer (FAE)
- · Technical Support
- · Development Systems Information Line

Customers should contact their distributor, representative or field application engineer for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at: http://support.microchip.com.

In addition, there is a Development Systems Information Line which lists the latest versions of Microchip's development systems software products. This line also provides information on how customers can receive currently available upgrade kits.

The Development Systems Information Line numbers are:

1-800-755-2345 - United States and most of Canada

1-480-792-7302 - Other International Locations

DOCUMENT REVISION HISTORY

Revision A (June 2006)

· Initial Release of this Document.

MCP1630 Cou	pled Inducto	r Boost Co	nverter De	mo Board	User's Gui	de
NOTES:						



Chapter 1. Product Overview

1.1 INTRODUCTION

In certain applications, a higher output voltage is required that needs to be driven from a lower Input voltage (i.e., 3V). The selection of switching device for these applications is faced with certain problems which are listed below.

- The high voltage MOSFET's generally do not operate with a low 3V gate drive
- The larger drain-source capacitance of high-voltage MOSFET's requires energy in the inductor to slew drain to output voltage, thus resulting in a loss in efficiency
- The high voltage MOSFET's with low gate drive voltage are a rare commodity compared to their lower voltage counterparts. For example, a high voltage MOSFET of 40V to 60V is generally available with a gate drive voltage of 5-10V, whereas, it's difficult to locate a high voltage MOSFET of 40V to 60V with a lower gate drive of 3V. Also, high voltage MOSFET's are large and more expensive than their low voltage counterparts

The MCP1630 Coupled Inductor Boost Converter Demo Board reduces the drain-to-source voltage on the main boost converter switch. This allows the use of low gate threshold voltage switches for high voltage output boost applications.

The MCP1630 is a high-speed, microcontroller-adaptable, Pulse Width Modulator (PWM). A coupled Inductor boost design with an MCP1630 device provides a viable solution for obtaining high output voltages with low gate drive voltage.

This chapter covers the following topics.

- · What is the MCP1630 Coupled Inductor Boost Converter Demo Board?
- What the MCP1630 Coupled Inductor Boost Converter Demo Board Kit includes

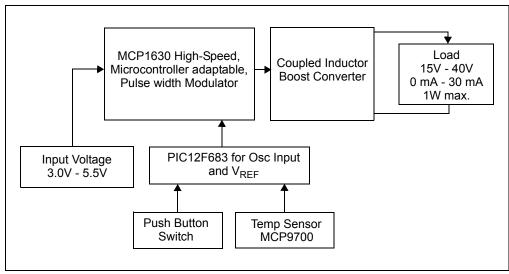


FIGURE 1-1: MCP1630 Coupled Inductor Boost Converter Demo Board Block Diagram.

1.2 WHAT IS THE MCP1630 COUPLED INDUCTOR BOOST CONVERTER DEMO BOARD?

The MCP1630 Coupled Inductor Boost Converter Demo Board demonstrates the use of a conventional boost topology with a coupled inductor. The center of the coupled inductor tap is connected to the Boost switch. The voltage stress on the MOSFET is reduced because the coupled inductor acts as a step-down auto transformer that reduces the reflection of output voltage which the MOSFET encounters. The voltage on the switching node is equal to the output voltage divided by the turn's ratio. The coupled inductor with a turn's ratio 1:1 will reduce the stress on the Boost switch to one-half. The demo board also serves as a platform to evaluate the MCP1630 device.

The inputs of the MCP1630 device are easily attached to the I/O pins of an MCU. The MCU supplies the oscillator pulses and reference voltage to the MCP1630 device to provide the most flexible and adaptable power system. The power system switching frequency and maximum duty cycle are set using the I/O pins of the MCU. The reference input can be external, a Digital-to-Analog Converter (DAC) output or as simple as an I/O output from the MCU. This enables the power system to adapt to many external signals and variables in order to optimize performance and facilitate calibration.

The MCP1630 device demonstrates the use of Microchip's high-speed microcontroller-adaptable PWM integrated with the PIC12F683 (Flash MCU SOIC8) in coupled inductor applications. Under normal operation, the supply ranges between 3.0V - 5.5V. The output voltage can be varied from 15V to 40V at 0 mA -30 mA with a maximum output power of 1W. The output voltage can be adjusted from 15V to 40V in 5V steps using a push button switch, S1, with 2% regulation. An MCP9700 Linear Active Thermistor™ device is provided on-board, which can be used to monitor the ambient temperature and accordingly regulate the output voltage depending on the thermal reading.

1.3 WHAT THE MCP1630 COUPLED INDUCTOR BOOST CONVERTER DEMO BOARD KIT INCLUDES

This MCP1630 Coupled Inductor Boost Converter Demo Board Kit includes:

- MCP1630 Coupled Inductor Boost Converter Demo Board (102-00091)
- MCP1630 Coupled Inductor Boost Converter Demo Board User's Guide (DS51612)



Chapter 2. Installation and Operation

2.1 INTRODUCTION

The MCP1630 Coupled Inductor Boost Converter Demo Board demonstrates Microchip's High-Speed Pulse Width Modulator (PWM) used in a coupled inductor design. When used in conjunction with a microcontroller, the MCP1630 device will control the power system duty cycle to provide different regulated output voltages using push button S1. The PIC12F683 microcontroller is used to generate oscillator pulses, reference voltage and output voltage selection using push button S1. The PIC12F683 can also be programmed to monitor the board ambient temperature using the MCP9700 Linear Active Thermistor™ device and provide different regulated output voltages for different thermal readings. The MCP1630 device generates duty cycle based on various external inputs. External signals include the input oscillator pulses, reference voltage from PIC12F683 device, and the feedback voltage. The output signal is a square-wave pulse given to drive the MOSFET.

The PIC12F683 microcontroller is programmable, allowing the user to modify or develop their own firmware routines to further evaluate the MCP1630 device in this application.

2.2 FEATURES

The MCP1630 Coupled Inductor Boost Converter Demo Board has the following features.

- With reduced stress on the MOSFET switch, provides greater degree of freedom in selecting the MOSFET
- Provides a varied output voltage selection from 15V to 40V in steps of 5V
- Push button select option for the required output voltage selection and ON/OFF control
- Tight line and load regulation and high efficiency over entire operating input voltage range
- PIC12F683 microcontroller is used to generate the Oscillator pulse and reference voltage at required duty cycle
- MCP9700 Linear Active Thermistor device for monitoring the temperature and output voltage control
- Proprietary features can be added by modifying the firmware contained in the PIC12F683 microcontroller
- The factory programmed source code is available

2.3 GETTING STARTED

The MCP1630 Coupled Inductor Boost Converter Demo Board is fully assembled and tested. The board requires the use of an external input voltage source (3.0V to 5.5V) and external load of Max 1W.

2.3.1 Power Input and Output Connection

2.3.1.1 POWERING THE MCP1630 COUPLED INDUCTOR BOOST CONVERTER DEMO BOARD

- 1. Connect the positive side of the input source (+) to TP1. Connect the negative or return side (-) of input source to TP2. Refer to Figure 2-1. The input voltage source should be limited from 3.0V to 5.5V range. As the input voltage is applied and the system powers up, the firmware program of the PIC12F683 device will initialize and help the converter remain in low-power sleep mode (<0.1 μ A) until the S1 push button is pressed for > 2 seconds by the user. If the S1 push button is pressed for less than 2 seconds, the converter will not power up.
- 2. Once the S1 push button is pressed for 2 seconds, the MCP1630 Coupled Inductor Boost Converter Demo Board is powered on delivering an output voltage of 40V with a maximum power of 1W. The S1 push button can also be used to provide a variable output voltage from 40V to 15V in 5V steps. Each depression of the S1 push button for <2 seconds (short key press) after the converter is enabled will provide a decrementing output voltage from 40V to 15V range in reducing 5V steps in cyclic order.</p>
- 3. At any of the output voltages, if the S1 push button is pressed for more than 2 seconds, the MCP1630 Coupled Inductor Boost Converter Demo Board goes into low power sleep mode, turning the converter off.
- 4. Again, a subsequent depressing of the S1 push button for more than 2 seconds wakes the converter from sleep mode and the output is powered at 40V.

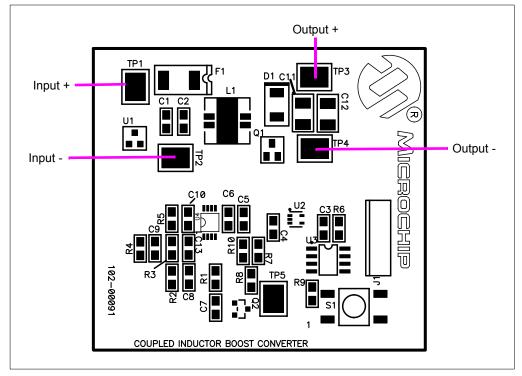


FIGURE 2-1: Setup Configuration Diagram.

2.3.1.2 APPLYING LOAD TO MCP1630 COUPLED INDUCTOR BOOST CONVERTER DEMO BOARD

A variable resistive load can be used to verify the line and load regulation. The load resistance is connected between the TP3 and TP4 test points. To measure the output voltage, connect the common lead of the multi meter to TP4 and the positive terminal to TP3. By varying the load, the load regulation can be verified by measuring the output voltage over the entire load range of 0 mA to 30 mA. Similarly, by varying the line voltage from 3V to 5.5V and checking the output voltage, the line regulation can be calculated.

Evaluating the Application

The best way to evaluate the MCP1630 Coupled Inductor Boost Converter Demo Board is to dig into the circuit. Measure voltages and currents with a Digital Volt Meter (DVM) and probe the board with an oscilloscope.

The voltage on the switching node can be calculated below.

$$V_{SW} = V_{IN} + \left[(V_{OUT} + V_D - V_{IN}) \frac{N_2}{N_I + N_2} \right]$$

Where:

V_{SW} = Voltage across switch

V_{OUT} = Output Voltage

 V_D = Diode Drop

V_{IN} = Input Voltage

 $N_1 \& N_2$ = Coupled Inductor Turns Ratio

(N₁ and N₂ is 1 for a 1:1 ratio coupled inductor)

Firmware

The PIC12F683 device comes preprogrammed with firmware to operate the system as described above. The firmware flow diagram is shown in **Appendix C. "Demo Board Firmware"**.

The program is fairly simple and straight forward. There is an initialization routine at the beginning of the program.

The internal oscillator clock is set to 8 MHz. The TRISIO is configured to set GP2 (Oscillator pulses to the MCP1630) and GP5 (V_{REF} Voltage to MCP1630) as an output port and GP3 (Push button S1) as Input Port. The OPTION register is configured to wake-up on Port pin change of GP3.

The TMR0 is initialized with a value which causes TMR0 to overflow after 10 ms The TMR0 overflow interrupt is also enabled. Initialize registers TEMP and TEMP2 for 2 seconds time measurement.

TMR0 overflow occurs for every 10 ms.

TEMP and TEMP2 counts for 2 seconds (TEMP2 = 10, TEMP = 20)

Hence 10 * 20 * 10 ms = 2 Seconds)

The PWM duty cycle is specified by writing to the CCPR1L register and to the CCP1CON <5:4> bits. The CCPR1L contains the eight MSbs and the CCP1CON <5:4> contains the two LSbs. This 10-bit value is represented by CCPR1L:CCP1CON <5:4>. The switching frequency is set to 100 kHz.

Upon powering on, the processor enters into SLEEP mode after the ports are initialized and registers configured. The processor wakes-up from SLEEP mode if the push button S1 on GP3 is pressed. TEMP and TEMP2 registers check weather the push button S1 is pressed for more than 2 seconds. If the push button S1 is pressed for less than 2 seconds, will not allow the TEMP1 register to set, which indicates that the push button is not pressed for more than 2 seconds and the processor goes back to SLEEP mode.

Once the processor is on after the push button is pressed for 2 seconds, the output voltage is set at 40V by generating V_{REF} Voltage. TMR1 is configured for generating V_{REF} Voltage. The duty cycle and period values are loaded to generate different V_{REF} Voltages.

Period is fixed for 508 µs ~= 1.94 kHz.

Off Time (Duty cycle) is varied from 308 µs to 508 µs.

Off time @ Duty Cycle = $00 \text{ is } 00 \text{ } \mu \text{s}$ (For 40V Output)

= 10 is 64 μs (For 35V Output)

= 20 is 128 μs (For 30V Output)

= 30 is 192 μs (For 25V Output)

= 40 is 256 μs (For 20V Output)

= 50 is 320 μs (For 15V Output)

Each short depression of push button S1 will load different duty cycles to generate different V_{REF} voltages which decrements the output voltage from 40V to 15V in reducing steps of 5V in cyclic order. A key debounce delay of 300 ms is introduced between each short push button depressions.

At any of the output voltages, if the push button S1 is pressed for more than 2 seconds, the processor goes into SLEEP mode by clearing the TEMP1 register.

Again, a subsequent depression of push button S1 for more than 2 seconds wakes the processor form SLEEP mode by setting the TEMP1 register and output is powered at 40V.

The firmware program in the PIC12F683 device can be edited to modify the operation of the application.

An additional feature can be incorporated in the firmware program where one can vary the output voltage depending on the board ambient temperature. The MCP9700 Linear Active Thermistor provided on-board can be directly interfaced to a MCU, and the firmware suitably modified to achieve the objective. This feature is presently not implemented in this demo board.

Programming

Header J1 is provided for in-circuit programming. This is an optional feature, since the MCP1630 Coupled Inductor Boost Converter Demo Board comes preprogrammed with firmware to operate the system. The PIC12F683 device can be reprogrammed with the Baseline Flash Microcontroller Programmer (BFMP).




Appendix A. Schematic and Layouts

A.1 INTRODUCTION


This appendix contains the following schematics and layouts for the MCP1630 Coupled Inductor Boost Converter Demo Board:

- · Board Schematic
- Board Top Silk Layer
- Board Top Metal Layer
- Board Bottom Metal Layer


A.2 BOARD - SCHEMATIC

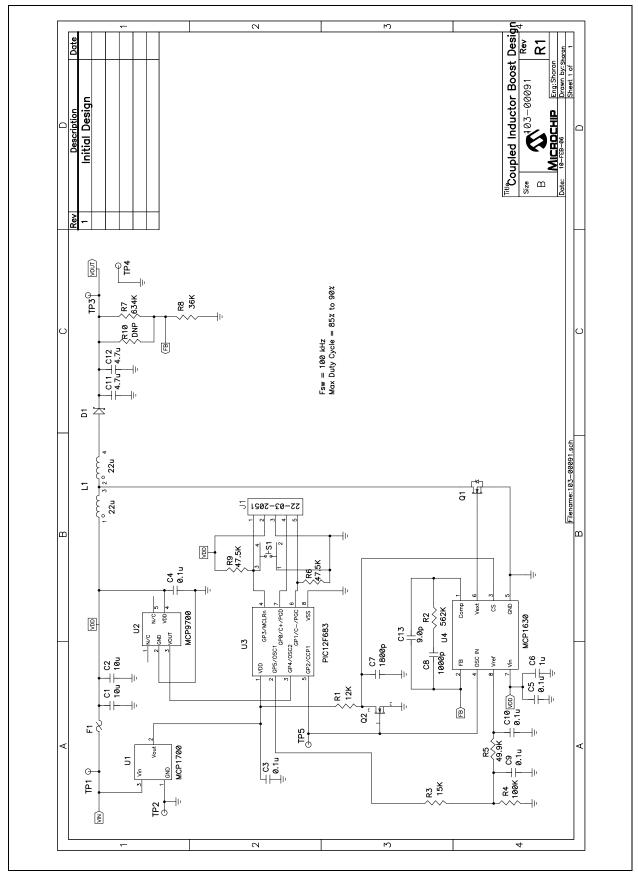


A.3 BOARD - TOP SILK LAYER

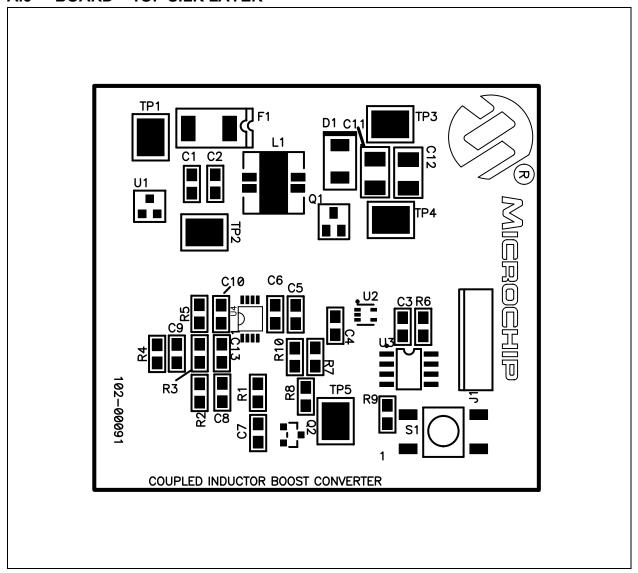

A.4 BOARD - TOP METAL LAYER

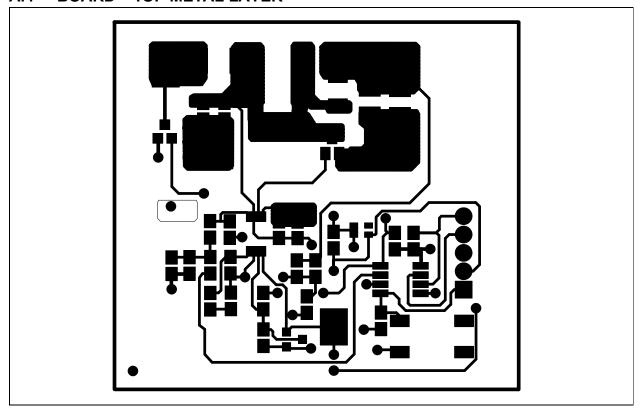

A.5 BOARD - BOTTOM METAL LAYER

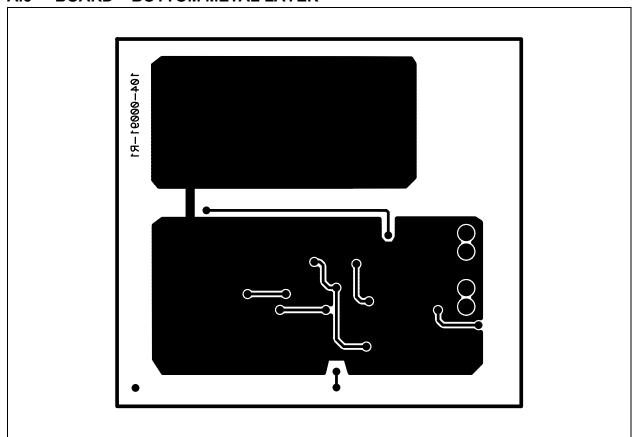

MCP1630 Couple	ed Inductor Bo	ost Conver	ter Demo B	oard User	's Guide
NOTES:					



Appendix B. Bill Of Materials (BOM)

TABLE B-1: BILL OF MATERIALS (BOM)

Qty	Reference	Description	Manufacture	Part Number
2	C1, C2	Cap 10uF 6.3V Ceramic X5R 0805	Panasonic® - ECG	ECJ-2FB0J106M
5	C3, C4, C5, C9, C10	Cap 0.1uF 16V Ceramic X7R 0805	Panasonic - ECG	ECJ-2VB1C104K
1	C6	Cap 1uF 16V Ceramic 0805 X5R	Panasonic - ECG	ECJ-2FB1C105K
1	C7	Cap Ceramic1800pF 50V NPO 0805	Panasonic - ECG	ECJ-2VC1H182J
1	C8	Cap 1000pF 50V Cerm Chip 0805	Panasonic - ECG	ECJ-2VC1H102J
2	C11, C12	Cap 4.7uF 50V Ceramic F 1210	Panasonic - ECG	ECJ-4YF1H475Z
1	C13	Cap 9.0pF 50V Cerm Chip 0805 SMD	Panasonic - ECG	ECJ-2VC1H090D
1	D1	Diode Schottky 60V 1A SMB	International Rectifier	10BQ060PBF
1	J1	Conn Header 5 Pos.100 Vert Tin	Molex [®] Electronics	22-03-2051
1	F1	Polyswitch Resettable Fuses	Keystone Electronics	MINISMDC110F-2
1	L1	Inductor shield dual 22uH SMD	Coiltronics/ Div of Cooper/Bussmann	DRQ74-220-R
1	Q1	MOSFET N-CH 30V 2.2A SSOT3	Fairchild Semiconductor®	FDN337N
1	Q2	MOSFET N-CH 60V 280mA SOT-23	Fairchild Semiconductor	NDS7002A
1	R1	Res 12.0K Ohm 1/8W 5% 0805 SMD	Panasonic - ECG	ERJ-6GEYJ123V
1	R2	Res 562K Ohm 1/8W 1% 0805 SMD	Panasonic - ECG	ERJ-6ENF5623V
1	R3	Res 15.0K Ohm 1/8W 1% 0805 SMD	Panasonic - ECG	ERJ-6ENF1502V
1	R4	Res 100K Ohm 1/8W 1% 0805 SMD	Panasonic - ECG	ERJ-6ENF1003V
1	R5	Res 49.9K Ohm 1/8W 1% 0805 SMD	Panasonic - ECG	ERJ-6ENF4992V
2	R6,R9	Res 47.5K Ohm 1/8W 1% 0805 SMD	Panasonic - ECG	ERJ-6ENF4752V
1	R7	Res 634K Ohm 1/8W 1% 0805 SMD	Panasonic - ECG	ERJ-6ENF6343V
1	R8	Res 36.0K Ohm 1/8W 5% 0805 SMD	Panasonic - ECG	ERJ-6GEYJ363V
0	R10	Not Used	_	_
1	S1	Momentary Tact Switches	E-Switch Inc.	TL3301NF260QG
5	TP1,TP2,TP3, TP4,TP5	PC Test point compact SMT	Keystone Electronics®	5016
1	U1	IC LDO REG 250mA 2.5V SOT-23	Microchip Technology Inc.	MCP1700T-2502E/TT
1	U2	IC Sensor Thermal 2.3V SC70-5	Microchip Technology Inc.	MCP9700T-E/LT
1	U3	IC MCU Flash 2KX14 8SOIC	Microchip Technology Inc.	PIC12F683-I/SN
1	U4	IC PWM HS MCU-Adaptable 8MSOP	Microchip Technology Inc.	MCP1630-E/MS

Note 1: The components listed in this Bill of Materials are representative of the PCB assembly. The released BOM used in manufacturing uses all RoHS-compliant components.


MCP1630 Couple	d Inductor Boost	Converter Den	no Board User's	Guide
NOTES:				



Appendix C. Demo Board Firmware

C.1 DEVICE FIRMWARE

For the latest version of the MCP1630 Coupled Inductor Boost Converter Demo Board firmware, visit the Microchip web site at www.microchip.com.

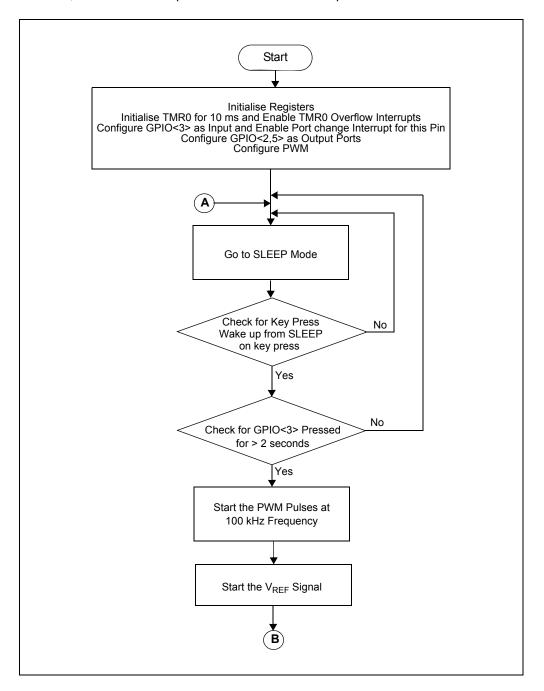

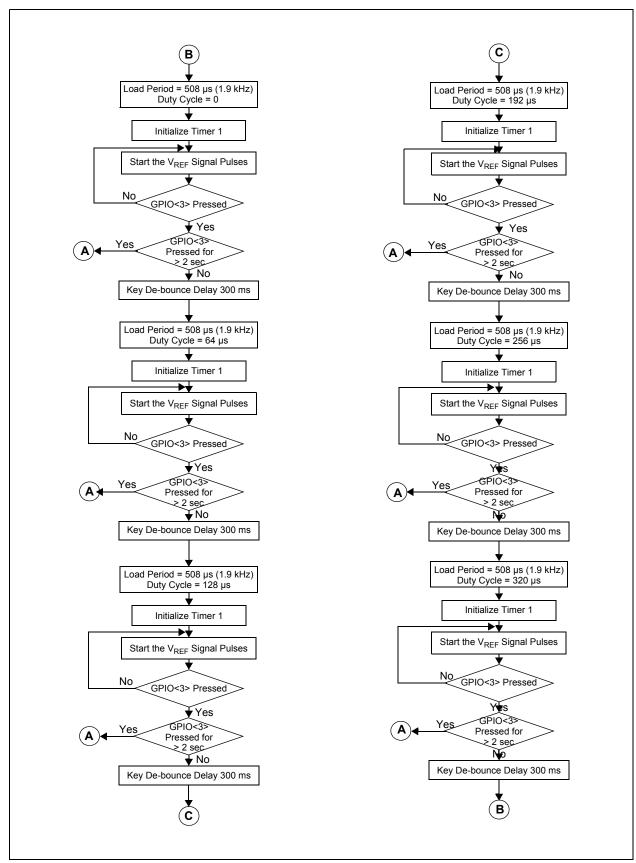


FIGURE C-1: Firmware Flowchart.

Dem	n l	$3 \circ$	arc	l Fi	irm	wa	re
			aıt			wwa	

	Demo Board i illiware
NOTES:	



WORLDWIDE SALES AND SERVICE

AMERICAS

Corporate Office 2355 West Chandler Blvd.

Chandler, AZ 85224-6199 Tel: 480-792-7200 Fax: 480-792-7277 Technical Support:

http://support.microchip.com

Web Address: www.microchip.com

Asia Pacific Office

Suites 3707-14, 37th Floor Tower 6, The Gateway Habour City, Kowloon Hong Kong

Tel: 852-2401-1200 Fax: 852-2401-3431

Atlanta

Alpharetta, GA Tel: 770-640-0034 Fax: 770-640-0307

Boston

Westborough, MA Tel: 774-760-0087 Fax: 774-760-0088

Chicago Itasca, IL

Tel: 630-285-0071 Fax: 630-285-0075

Dallas

Addison, TX Tel: 972-818-7423 Fax: 972-818-2924

Detroit

Farmington Hills, MI Tel: 248-538-2250 Fax: 248-538-2260

Kokomo

Kokomo, IN Tel: 765-864-8360 Fax: 765-864-8387

Los Angeles

Mission Viejo, CA Tel: 949-462-9523 Fax: 949-462-9608

San Jose

Mountain View, CA Tel: 650-215-1444 Fax: 650-961-0286

Toronto

Mississauga, Ontario,

Canada

Tel: 905-673-0699 Fax: 905-673-6509

ASIA/PACIFIC

Australia - Sydney Tel: 61-2-9868-6733

Fax: 61-2-9868-6755

China - Beijing Tel: 86-10-8528-2100

Fax: 86-10-8528-2104

China - Chengdu Tel: 86-28-8676-6200 Fax: 86-28-8676-6599

China - Fuzhou

Tel: 86-591-8750-3506 Fax: 86-591-8750-3521

China - Hong Kong SAR

Tel: 852-2401-1200 Fax: 852-2401-3431

China - Qingdao

Tel: 86-532-8502-7355 Fax: 86-532-8502-7205

China - Shanghai

Tel: 86-21-5407-5533 Fax: 86-21-5407-5066

China - Shenyang

Tel: 86-24-2334-2829 Fax: 86-24-2334-2393

China - Shenzhen

Tel: 86-755-8203-2660 Fax: 86-755-8203-1760

China - Shunde

Tel: 86-757-2839-5507 Fax: 86-757-2839-5571

China - Wuhan

Tel: 86-27-5980-5300 Fax: 86-27-5980-5118

China - Xian

Tel: 86-29-8833-7250 Fax: 86-29-8833-7256

ASIA/PACIFIC

India - Bangalore

Tel: 91-80-4182-8400 Fax: 91-80-4182-8422

India - New Delhi

Tel: 91-11-5160-8631 Fax: 91-11-5160-8632

India - Pune

Tel: 91-20-2566-1512 Fax: 91-20-2566-1513

Japan - Yokohama

Tel: 81-45-471- 6166 Fax: 81-45-471-6122

Korea - Gumi

Tel: 82-54-473-4301 Fax: 82-54-473-4302

Korea - Seoul

Tel: 82-2-554-7200 Fax: 82-2-558-5932 or 82-2-558-5934

Malaysia - Penang

Tel: 60-4-646-8870 Fax: 60-4-646-5086

Philippines - Manila

Tel: 63-2-634-9065 Fax: 63-2-634-9069

Singapore

Tel: 65-6334-8870 Fax: 65-6334-8850 Taiwan - Hsin Chu

Tel: 886-3-572-9526

Fax: 886-3-572-6459

Taiwan - Kaohsiung Tel: 886-7-536-4818

Fax: 886-7-536-4803

Taiwan - Taipei

Tel: 886-2-2500-6610 Fax: 886-2-2508-0102

Thailand - Bangkok Tel: 66-2-694-1351 Fax: 66-2-694-1350

EUROPE

Austria - Wels

Tel: 43-7242-2244-3910 Fax: 43-7242-2244-393 Denmark - Copenhagen

Tel: 45-4450-2828 Fax: 45-4485-2829

France - Paris

Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79

Germany - Munich

Tel: 49-89-627-144-0 Fax: 49-89-627-144-44

Italy - Milan

Tel: 39-0331-742611 Fax: 39-0331-466781

Netherlands - Drunen

Tel: 31-416-690399 Fax: 31-416-690340

Spain - Madrid

Tel: 34-91-708-08-90 Fax: 34-91-708-08-91

UK - Wokingham Tel: 44-118-921-5869 Fax: 44-118-921-5820

06/08/06



Мы молодая и активно развивающаяся компания в области поставок электронных компонентов. Мы поставляем электронные компоненты отечественного и импортного производства напрямую от производителей и с крупнейших складов мира.

Благодаря сотрудничеству с мировыми поставщиками мы осуществляем комплексные и плановые поставки широчайшего спектра электронных компонентов.

Собственная эффективная логистика и склад в обеспечивает надежную поставку продукции в точно указанные сроки по всей России.

Мы осуществляем техническую поддержку нашим клиентам и предпродажную проверку качества продукции. На все поставляемые продукты мы предоставляем гарантию.

Осуществляем поставки продукции под контролем ВП МО РФ на предприятия военно-промышленного комплекса России, а также работаем в рамках 275 ФЗ с открытием отдельных счетов в уполномоченном банке. Система менеджмента качества компании соответствует требованиям ГОСТ ISO 9001.

Минимальные сроки поставки, гибкие цены, неограниченный ассортимент и индивидуальный подход к клиентам являются основой для выстраивания долгосрочного и эффективного сотрудничества с предприятиями радиоэлектронной промышленности, предприятиями ВПК и научноисследовательскими институтами России.

С нами вы становитесь еще успешнее!

Наши контакты:

Телефон: +7 812 627 14 35

Электронная почта: sales@st-electron.ru

Адрес: 198099, Санкт-Петербург,

Промышленная ул, дом № 19, литера Н,

помещение 100-Н Офис 331