


Cables and Mating Connectors

Test & Measurement Sensors

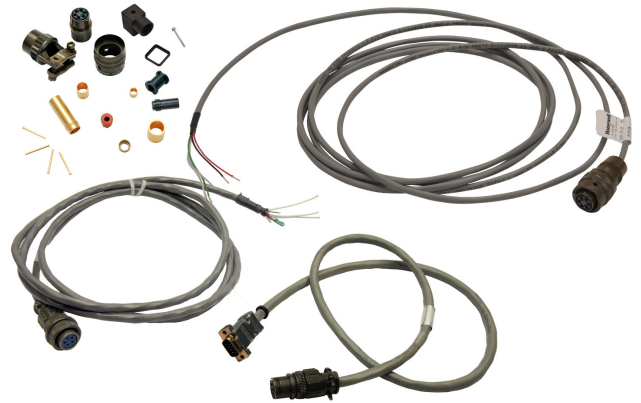

DESCRIPTION

Cable assemblies and mating connectors for Honeywell's pressure, load and torque catalog products are offered through Honeywell's online configurator in standard cable lengths of 15 ft [4.5 m], 50 ft [15.2 m] and 100 ft [30.5 m]. Other lengths are available by consulting the factory. Mating connectors offered for pressure, load, and torque sensors are available for general duty. Honeywell also offers optional connectors for environmental protection and high temperature applications. Contact Honeywell to discuss a modification or a custom order to meet a specific application and/or operating environment.

Honeywell's default-type cable offer is PVC, with an optional choice of Teflon®, neoprene, or polyurethane. Other types are available upon request. Depending on the model and options chosen, there are various wiring configurations that can be used

with Honeywell cable assemblies. This datasheet and website configurator will help determine the proper cable assembly for specific product applications.

Mating connectors are available to connect to pressure, load, torque, and accelerometer transducer electrical terminations for general duty, as well as, for environmental protection or high temperatures. These include, but are not limited to, connectors: PT06A-10-6A, PC06A-10-6S, MS3106A-14S-6S (SR), MS3106A-14S-5S, MS3106A-14S-2S, MS3476L-10-6S, PG9, PG11, and DP-4S-1.

For special configurations and/or requirements, please contact Honeywell.

CABLE ASSEMBLY FEATURES

- Cable assemblies in 15 ft [4.5 m], 50 ft [15.2 m] and 100 ft [30.5 m] lengths of various 3, 4, 5, or 6 conductor cable
- PVC (std.) or teflon, neoprene, polyurethane (optional)
- Cables made with various wiring options that are compatible with several different conductor cables
- Cable assemblies match directly with both the sensor and our instrument
- Custom lengths and configurations – Contact Honeywell

MATING CONNECTOR FEATURES

- MS, PT or PC series types
- General duty applications
- Environmental protection (optional)
- High temperature (optional)
- For custom connectors – Contact Honeywell


Cables and Mating Connectors

ONLINE CONFIGURATOR

Honeywell has developed an online configurator for standard catalog pressure, load and torque products. The following pages of information with Model cross references to the CABLE ASSEMBLY BASE ORDER CODES and WIRING OPTIONS can be used when working with the online configurator.

A sample of the website's cable assembly configurator can be found to the right.

There is a set of Cable Assembly Base Order Codes to first select from (Model cross references can be found in this data sheet). The user is then walked through a series of options which include, range or cable length choice, type of cable, a wiring option (model cross references can be found in this data sheet), and finally an option for secondary termination choice. Please check out the Honeywell Test and Measurement website (<http://measurementsensors.honeywell.com>) for an interactive session .

Cable Assembly Order Code Format		
CA301XX,XX,XX,XX		
		
Cable Type		
6AZ		PVC Cable with Operating Temperature of -28 to 71 deg.C (-20 to 160 deg.F)
6BA		Teflon Cable with Operating Temperature of -53 to 246 deg.C. (-65 to 475 deg.F).
6BB		Neoprene Cable with Operating Temperature of -17 to 82 deg.C (0 to 180 deg.F).
6BC		Polyurethane Cable with Operating Temperature of Max to 82 deg.C. (180 deg.F.)
Wiring Codes		
7A		Amplified sensor with 4 wire, +/- 5 VDC output and +/-15 or 26 to 32 VDC input (option 2A or 2B) with Internal Shunt Calibration or Internal Remote Buffered Shunt Calibration. See Datasheet for Applicable Models
7B		Amplified sensor with 3 wire, 5 VDC output and 11 to 28 VDC input (option 2C) or 3 wire, 10 VDC output and 15 to 28 VDC input (option 2T) or 3 wire, 4 to 20 mA output and 22 to 32 VDC input (2J) all with Internal Shunt Calibration or Internal Remote Buffered Shunt Calibration. See Datasheet for Applicable Models
7C		Amplified sensor with 3 wire, 5 VDC output and 9 to 32 VDC input (option 2D & 2E) or 3 wire, 10 VDC output and 9 to 32 VDC input (option 2F or 2G) for Model FP
7D		Amplified sensor with 3 wire, 5 VDC output and 9 to 32 VDC input (option 2E) or 3 wire, 10 VDC output and 9 to 32 VDC input (option 2F) and Internal Remote Buffered Shunt Calibration for Model FP
7E		Amplified sensor with 2 wire, 4 to 20 mA output and 9 to 32 VDC input (for option 2K,2P,2Y) and 9 to 28 VDC input for Intrinsic Safety (option 2N). See Datasheet for Applicable Models
7F		Non-amplified sensor with mV/V output (Sensotec Products) and voltage input (option 2U). See Datasheet for Applicable Models
7G		Non-amplified sensor with mV/V output (Sensotec Products) and voltage input with Internal Shunt Calibration (option 2U & 8A). See Datasheet for Applicable Models
7H		Non-amplified sensor with mV/V output (Sensotec Products) and voltage input with Internal Remote Buffered Shunt Calibration (option 2U & 3D). See Datasheet for Applicable Models
7I		Non-amplified sensor with mV/V output (Sensotec Products) and voltage input with Internal Signature Calibration Module (option 53E) or Internal TEDS Module (option 53T). See Datasheet for Applicable Models
7J		Amplified sensor with 2 wire, 4 to 20 mA output and 9 to 32 VDC input for option 2K and 2Y or 9 to 28 VDC input for Intrinsic Safety option 2N with Internal Remote Buffered Shunt Calibration. See Datasheet for Applicable Models
7K		Amplified or Non-amplified sensor with mV/V, Voltage or mA output with DIN style termination (option 6M or 6N). See Datasheet for Applicable Models
7L		Non-amplified sensor with mV/V output (option 2U) for 1600 Series Models
7M		Non-amplified sensor with mV/V output (option 2U) for 1800 Series Models
7N		Amplified sensor output for 1700 Series Models
7O		Non-amplified sensor with mV/V output (Lebow Products) for Western Regional Wiring Code (option 2U). See Datasheet for Applicable Models
7P		Non-amplified sensor with mV/V output (option 2U) for Model 6443. See Datasheet for Applicable Models
7Q		Non-amplified sensor with mV/V output (option 2U) for 1254 Series Models
7R		Non-amplified sensor with mV/V output (option 2U) for Model 1369
7S		Amplified sensor with 0 to 5 vdc Analog output and either RS-232 Digital Output (option 2Z) or RS-485 Digital Output (option 2AA) for Model DS
7T		Non-amplified sensor with mV/V output (Sensotec Products) and voltage input and Sense Leads (option 2U). See Datasheet for Applicable Models
7U		Non-amplified sensor with mV/V output (Sensotec Products) and voltage input with Internal Shunt Calibration and Sense Leads (option 2U & 8A). See Datasheet for Applicable Models
7V		Non-amplified sensor with mV/V output (Sensotec Products) and voltage input with Internal Remote Buffered Shunt Calibration and Sense Leads (option 2U & 3D). See Datasheet for Applicable Models
7W		Non-amplified sensor with mV/V output (Sensotec Products) and voltage input with Internal Signature Calibration Module (option 53E) or Internal TEDS Module (option 53T) and Sense Leads. See Datasheet for Applicable Models
7Y		Non-amplified sensor with mV/V output (Lebow Products) and Western Regional Wiring Code and Sense Leads (option 2U). See Datasheet for Applicable Models
7Z		Non-amplified sensor with mV/V output and Sense Leads (option 2U) for Model 6443. See Datasheet for Applicable Models
7AA		Non-amplified sensor with mV/V output and Sense Leads (option 2U) for 1254 Series Models
7AB		Non-amplified sensor with mV/V output and Sense Leads (option 2U) for Model 1369
Secondary termination		
33A		Secondary Termination of Pigtail leads
33B		Secondary Electrical Termination for Model SC Instrument
33C		Secondary Electrical Termination for Model 7541 Instrument
33D		Secondary Electrical Termination for Model NK Instrument
33E		Secondary Electrical Termination for Model 7554 Instrument
33F		Secondary Electrical Termination for Model 7561-PSD Instrument
33G		Secondary Electrical Termination for Model 7927 Shunt Cal Reference Box
Length in ft		
BJ	15 ft	
BN	50 ft	
BR	100 ft	

BASE ORDER CODE DESCRIPTIONS

Order Code	Description
CA301	Cable assembly with Bendix PT Series, straight plug, 6 socket, shell size 10. See datasheet for applicable models
CA302	Cable assembly with Amphenol MS Series, straight plug, 5 socket, shell size 14. See datasheet for applicable models
CA303	Cable assembly with Amphenol MS Series, straight plug, 6 socket, shell size 14. See datasheet for applicable models
CA304	Cable assembly with Bendix PC Series, straight plug, 6 socket, shell size 10. See datasheet for applicable models
CA305	Cable assembly with DIN 43650 straight plug, 4 socket. See datasheet for applicable models
CA306	Cable assembly with Bendix PT Series, straight plug, 10 socket, shell size 12. See datasheet for applicable models
CA307	Cable assembly with Bendix PT Series, straight plug, 8 socket, shell size 12. See datasheet for applicable models
CA308	Cable assembly with Binder 12 socket, KV120. See datasheet for applicable models
CA309	Cable assembly with Amphenol MS Series, 4 socket, shell size 14 for Wing Union Pressure Transducer See datasheet for applicable models
CA310	Cable assembly with Bendix Receptacle, PT01 Series, 10 socket, shell size 12. See datasheet for applicable models
CA311	Cable assembly with Amphenol MS Series, Wall Mounting (Bulk) Plug, 5 socket, shell size 14. See datasheet for applicable models
CA312	Cable assembly for high temperature with Amphenol MS Series, 6 socket, shell size 10 (MS-3476L-10-6S(SR)). See datasheet for applicable models
CA313	Cable assembly with DIN 40050 straight plug, 4 socket. See datasheet for applicable models

Cables and Mating Connectors

PRESSURE SENSORS

Wiring Options for Cable/Online Configurator →			7A	7B	7C	7D	7E	7F	7G	7H	7I	
SENSOR OPTIONS →			(2A or 2B)	(2C 2J or 2T)	(2D, 2E, 2F or 2G)	(2E & 3D 2F & 3D)	(2K, 2N, 2P, 2Y)	(2U)	(2U & 8A)	(2U & 3D)	(2U & 53E, 53T)	
Sensor Reference Information		Base order code description for Online Configurator	Cable assembly base order code									
Model	Order code			Amplified sensor with 4 wire, ±5 Vdc output and ±15 Vdc or 26 Vdc to 32 Vdc input (option 2A or 2B) with internal shunt calibration or internal remote buffered shunt calibration.	Amplified sensor with 3 wire, 5 Vdc output and 11 to 28 Vdc input (option 2C) or 3 wire, 10 Vdc output and 15 Vdc to 28 Vdc input (option 2T) or 3 wire, 4 to 20 mA output and 22 to 32 Vdc input (2J) all with internal shunt calibration or internal remote buffered shunt calibration.	Amplified sensor with 3 wire, 5 Vdc output and 9 to 32 Vdc input (option 2D & 2E) or 3 wire, 10 Vdc output and 9 to 32 Vdc input (option 2F or 2G) for Model FP	Amplified sensor with 3 wire, 5 Vdc output and 9 to 32 Vdc input (option 2E) or 3 wire, 10 Vdc output and 9 to 32 Vdc input (option 2F) and internal remote buffered shunt calibration for Model FP	Amplified sensor with 2 wire, 4 to 20 mA output and 9 to 32 Vdc input (for option 2K, 2P, 2Y) and 9 to 28 Vdc input for intrinsic Safety (option 2N).	Non-amplified sensor with mV/V output (Sensotec Prod.) & voltage input (option 2U).	Non-amplified sensor with mV/V output and voltage input with internal shunt calibration (option 2U & 8A).	Non-amplified with mV/V output (Sensotec Prod.) & voltage input with internal remote buffered shunt calibr. (option 2U & 3D).	Non-amplified sensor with mV/V output (Sensotec Products) and voltage input with internal Signature calibration module (option 53E) or internal TEDS Module (option 53T).
355	BP313	Cable assembly with Bendix PT Series, straight plug, 6 socket, shell size 10	CA301		x			x				
415	AP411/ AP412							x				
424	BP424	Cable assembly with Amphenol MS Series, 4 socket, shell size 14 (MS-3106F-14-2S)	CA309					x				
425	BP425							x				
440	AP415/ AP416	Cable assembly with DIN 43650 straight plug, 4 socket	CA305					x				
A-105	AP311	Cable assembly with Bendix PT Series, straight plug, 6 socket, shell size 10	CA301						x			
A-105a	AP313- AP318				x			x				
A-205	AP312								x			
A-205a	AP314- AP316				x			x				
A-5	AP141/ AP142			x	x			x	x	x		x
AS17A	AP161				x				x	x		
AS19G	AP162				x				x	x		
DS	AP611- AP614	Cable assembly with Bendix PT Series, straight plug, 8 socket, shell size 12	CA307									
FP2000 (6n)	FPA, FPG, FPB, FPV, FPW	Cable assembly with DIN 40050 straight plug, 4 socket	CA313									
FP2000 (6m)		Cable assembly with DIN 43650 straight plug, 4 socket	CA305									
FP2000 (6a)		Cable assembly with Bendix PT Series, straight plug, 6 socket, shell size 10	CA301			x	x	x	x		x	
HP	BP521			x	x			x	x	x		x
Super TJE	AP111/ AP112			x	x			x	x	x		x
TJE	AP121	Cable assembly with Bendix PT Series, straight plug, 6 socket, shell size 10	CA301	x	x			x	x	x		x
Z	AP131/ AP132			x	x			x	x	x		x

Test & Measurement Sensors

7J	7K	7L	7M	7N	7O	7P	7Q	7R	7S	7T	7U	7V	7W	7Y	7Z	7AA	7AB
(2K, 2N or 2Y & 3D)	(DIN)	(1600)	(1800)	(1700)	(WRC)	(6443)	(1254E)	(1369)	(DS)	(2U/ Sense Leads)	(2U & 8A/ Sense Leads)	(2U & 3D/ Sense Leads)	(2U & 53E, 53T/Sense Leads)	(WRC/ Sense Leads)	(6443/ Sense Leads)	(1254E/ Sense Leads)	(1369/ Sense Leads)
Amplified sensor with 2 wire, 4 to 20 mA output and 9 to 32 Vdc input for option 2K and 2Y or 9 to 28 Vdc input for intrinsic Safety option 2N with internal remote buffered shunt calibration.	Amplified or non-amplified sensor with mV/V, Voltage or mA output with DIN style termination (option 6M or 6N).	Non-amplified sensor with mV/V output (option 2U) for 1600 Series models	Non-amplified sensor with mV/V output (option 2U) for 1800 Series models	Amplified sensor output for 1700 Series models	Non-amplified sensor with mV/V output (Lebow Products) for western regional wiring code (option 2U).	Non-amplified sensor with mV/V output (option 2U) for Model 6443.	Non-amplified sensor with mV/V output (option 2U) for 1254 Series Models	Non-amplified sensor with mV/V output (option 2U) for Model 1369	Amplified sensor with 0 to 5 vdc Analog output and either RS-232 Digital Output (option 2Z) or RS-485 Digital Output (option 2AA) for Model DS	Non-amplified sensor with mV/V output (Sensotec Products) and voltage input and Sense Leads (option 2U).	Non-amplified sensor with mV/V output (Sensotec Products) and voltage input with internal shunt calibration and Sense Leads (option 2U & 8A).	Non-amplified sensor with mV/V output (Sensotec Products) and voltage input with internal remote buffered shunt calibration and sense leads (option 2U & 3D).	Non-amplified sensor with mV/V output (Sensotec Products) & voltage input with internal signature calibration mod. (option 53E) or internal TEDS module (option 53T) and sense leads.	Non-amplified sensor with mV/V output (Lebow Products) and western regional wiring code and sense leads (option 2U).	Non-amplified sensor with mV/V output and Sense Leads (option 2U) for Model 6443.	Non-amplified sensor with mV/V output and Sense Leads (option 2U) for 1254 Series models	Non-amplified sensor with mV/V output and Sense Leads (option 2U) for Model 1369
	X																
										X							
										X							
										X	X		X				
										X	X						
										X	X						
									X								
	X																
X	X									X		X					
										X	X		X				
										X	X		X				
										X	X		X				

Cables and Mating Connectors

DIFFERENTIAL PRESSURE SENSORS

Wiring Options for Cable/Online Configurator ➔			7A	7B	7C	7D	7E	7F	7G	7H	7I	
SENSOR OPTIONS ➔			(2A or 2B)	(2C 2J or 2T)	(2D, 2E, 2F or 2G)	(2E & 3D 2F & 3D)	(2K, 2N, 2P, 2Y)	(2U)	(2U & 8A)	(2U & 3D)	(2U & 53E, 53T)	
Sensor Reference Information		Base order code description for Online Configurator	Cable assembly base order code	Amplified sensor with 4 wire, ±5 Vdc output and ±15 Vdc or 26 Vdc to 32 Vdc input (option 2A or 2B) with internal shunt calibration or internal remote buffered shunt calibration.	Amplified sensor with 3 wire, 5 Vdc output and 11 to 28 Vdc input (option 2C) or 3 wire, 10 Vdc output and 15 Vdc to 28 Vdc input (option 2T) or 3 wire, 4 to 20 mA output and 22 to 32 Vdc input (2U) all with internal shunt calibration or internal remote buffered shunt calibration.	Amplified sensor with 3 wire, 5 Vdc output and 9 to 32 Vdc input (option 2D & 2E) or 3 wire, 10 Vdc output and 9 to 32 Vdc input (option 2F or 2G) for Model FP	Amplified sensor with 3 wire, 5 Vdc output and 9 to 32 Vdc input (option 2E) or 3 wire, 10 Vdc output and 9 to 32 Vdc input (option 2F) and internal remote buffered shunt calibration for Model FP	Amplified sensor with 2 wire, 4 to 20 mA output and 9 to 32 Vdc input (for option 2K, 2P, 2Y) and 9 to 28 Vdc input for intrinsic Safety (option 2N).	Non-amplified sensor with mV/V output (Sensotec Prod.) & voltage input (option 2U).	Non-amplified sensor with mV/V output and voltage input with internal shunt calibration (option 2U & 8A).	Non-amplified with mV/V output (Sensotec Prod.) & voltage input with internal remote buffered shunt calibr. (option 2U & 3D).	Non-amplified sensor with mV/V output (Sensotec Products) and voltage input with internal Signature calibration module (option 53E) or internal TEDS Module (option 53T).
Model	Order code			A-5 Low	AD112	x	x			x	x	x
A-5 Mid	AD123	x	x			x	x	x		x		
A-5 High	BD142	x	x			x	x	x		x		
HL-Z	BD511	x	x			x	x	x		x		
HL-A-5	BD512	x	x			x	x	x		x		
KZ low	AD115	x	x			x	x	x		x		
TJE Low	AD114	x	x			x	x	x		x		
TJE low, welded	AD116	x	x			x	x	x		x		
TJE Mid	BD121	x	x			x	x	x		x		
Z Low	AD111	x	x			x	x	x		x		
Z Mid	AD122	x	x			x	x	x		x		
Z High	BD141	x	x			x	x	x		x		
420 High	AD413					x						
420 Mid	AD412					x						
420 Low	AD411					x						

Cables and Mating Connectors

LOAD CELLS

Wiring Options for Cable/Online Configurator →				7A	7B	7C	7D	7E	7F	7G	7H	7I
SENSOR OPTIONS →				(2A or 2B)	(2C 2J or 2T)	(2D, 2E, 2F or 2G)	(2E & 3D 2F & 3D)	(2K, 2N, 2P, 2Y)	(2U)	(2U & 8A)	(2U & 3D)	(2U & 53E, 53T)
Sensor Reference Information		Base order code description for Online Configurator	Cable assembly base order code									
Model	Order code			Amplified sensor with 4 wire, ±5 Vdc output and ±15 Vdc or 26 Vdc to 32 Vdc input (option 2A or 2B) with internal shunt calibration or internal remote buffered shunt calibration.	Amplified sensor with 3 wire, 5 Vdc output and 11 to 28 Vdc input (option 2C) or 3 wire, 10 Vdc output and 15 Vdc to 28 Vdc input (option 2T) or 3 wire, 4 to 20 mA output and 22 to 32 Vdc input (2U) all with internal shunt calibration or internal remote buffered shunt calibration.	Amplified sensor with 3 wire, 5 Vdc output and 9 to 32 Vdc input (option 2D & 2E) or 3 wire, 10 Vdc output and 9 to 32 Vdc input (option 2F or 2G) for Model FP	Amplified sensor with 3 wire, 5 Vdc output and 9 to 32 Vdc input (option 2E) or 3 wire, 10 Vdc output and 9 to 32 Vdc input (option 2F) and internal remote buffered shunt calibration for Model FP	Amplified sensor with 2 wire, 4 to 20 mA output and 9 to 32 Vdc input (for option 2K, 2P, 2Y) and 9 to 28 Vdc input for intrinsic Safety (option 2N).	Non-amplified sensor with mV/V output (Sensotec Prod.) & voltage input (option 2U).	Non-amplified sensor with mV/V output and voltage input with internal shunt calibration (option 2U & 8A).	Non-amplified with mV/V output (Sensotec Prod.) & voltage input with internal remote buffered shunt calibr. (option 2U & 3D).	Non-amplified sensor with mV/V output (Sensotec Prod.) and voltage input with internal Signature calibration module (option 53E) or internal TEDS Module (option 53T).
41 (7.5K to 500K lb)	AL111	Cable assembly with Amphenol MS Series, straight plug, 6 socket, shell size 14	CA303	x	x			x	x	x		x
43 (7.5K to 500K lb)	AL112			x	x			x	x	x		x
45	AL116	Cable assembly with Bendix PC Series, straight plug, 6 socket, shell size 10	CA304	x	x			x	x	x		x
47	AL117			x	x			x	x	x		x
73 (7.5K to 500K lb)	BL113	Cable assembly with Amphenol MS Series, straight plug, 6 socket, shell size 14	CA303	x	x			x	x	x		x
75 (7.5)	BL114			x	x			x	x	x		x
3108	3108	Cable assembly with Bendix PT Series, straight plug, 6 socket, shell size 10	CA301									
3124	3124	Cable assembly with Amphenol MS Series, straight plug, 5 socket, shell size 14	CA302									
3127	3127											
3127-118	3127-118											
3130	3130											
3132	3132	Cable assembly with Bendix PT Series, straight plug, 6 socket, shell size 10	CA301									
3156	3156	Cable assembly with Amphenol MS Series, straight plug, 5 socket, shell size 14	CA302									
3156-133	3156-133											

Test & Measurement Sensors

7J	7K	7L	7M	7N	7O	7P	7Q	7R	7S	7T	7U	7V	7W	7Y	7Z	7AA	7AB
(2K, 2N or 2Y & 3D)	(DIN)	(1600)	(1800)	(1700)	(WRC)	(6443)	(1254E)	(1369)	(DS)	(2U/ Sense Leads)	(2U & 8A/ Sense Leads)	(2U & 3D/ Sense Leads)	(2U & 53E/ 53T/Sense Leads)	(WRC/ Sense Leads)	(6443/ Sense Leads)	(1254E/ Sense Leads)	(1369/ Sense Leads)
Amplified sensor with 2 wire, 4 to 20 mA output and 9 to 32 Vdc input for option 2K and 2Y or 9 to 28 Vdc input for intrinsic Safety option 2N with internal remote buffered shunt calibration.	Amplified or non-amplified sensor with mV/V, Voltage or mA output with DIN style termination (option 6M or 6N).	Non-amplified sensor with mV/V output (option 2U) for 1600 Series models	Non-amplified sensor with mV/V output (option 2U) for 1800 Series models	Amplified sensor output for 1700 Series models	Non-amplified sensor with mV/V output (Lebow Products) for western regional wiring code (option 2U).	Non-amplified sensor with mV/V output (option 2U) for Model 6443.	Non-amplified sensor with mV/V output (option 2U) for 1254 Series Models	Non-amplified sensor with mV/V output (option 2U) for Model 1369	Amplified sensor with 0 to 5 vdc Analog output and either RS-232 Digital Output (option 2Z) or RS-485 Digital Output (option 2AA) for Model DS	Non-amplified sensor with mV/V output (Sensotec Products) and voltage input and Sense Leads (option 2U).	Non-amplified sensor with mV/V output (Sensotec Products) and voltage input with internal shunt calibration and Sense Leads (option 2U & 8A).	Non-amplified sensor with mV/V output (Sensotec Products) and voltage input with internal remote buffered shunt calibration and sense leads (option 2U & 3D).	Non-amplified sensor with mV/V output (Sensotec Prod.) & voltage input with internal signature calibration mod. (option 53E) or internal TEDS module (option 53T) and sense leads.	Non-amplified sensor with mV/V output (Lebow Products) and western regional wiring code and sense leads (option 2U).	Non-amplified sensor with mV/V output and Sense Leads (option 2U) for Model 6443.	Non-amplified sensor with mV/V output and Sense Leads (option 2U) for 1254 Series models	Non-amplified sensor with mV/V output and Sense Leads (option 2U) for Model 1369
										X	X		X				
										X	X		X				
										X	X		X				
										X	X		X				
										X	X		X				
										X	X		X				
					X									X			
					X									X			
					X									X			
					X									X			
					X									X			
					X									X			

Cables and Mating Connectors

LOAD CELLS

Wiring Options for Cable/Online Configurator →			7A	7B	7C	7D	7E	7F	7G	7H	7I	
SENSOR OPTIONS →			(2A or 2B)	(2C 2J or 2T)	(2D, 2E, 2F or 2G)	(2E & 3D 2F & 3D)	(2K, 2N, 2P, 2Y)	(2U)	(2U & 8A)	(2U & 3D)	(2U & 53E, 53T)	
Sensor Reference Information		Base order code description for Online Configurator	Cable assembly base order code	Amplified sensor with 4 wire, ±5 Vdc output and ±15 Vdc or 26 Vdc to 32 Vdc input (option 2A or 2B) with internal shunt calibration or internal remote buffered shunt calibration.	Amplified sensor with 3 wire, 5 Vdc output and 11 to 28 Vdc input (option 2C) or 3 wire, 10 Vdc output and 15 Vdc to 28 Vdc input (option 2T) or 3 wire, 4 to 20 mA output and 22 to 32 Vdc input (2U) all with internal shunt calibration or internal remote buffered shunt calibration.	Amplified sensor with 3 wire, 5 Vdc output and 9 to 32 Vdc input (option 2D & 2E) or 3 wire, 10 Vdc output and 9 to 32 Vdc input (option 2F or 2G) for Model FP	Amplified sensor with 3 wire, 5 Vdc output and 9 to 32 Vdc input (option 2E) or 3 wire, 10 Vdc output and 9 to 32 Vdc input (option 2F) and internal remote buffered shunt calibration for Model FP	Amplified sensor with 2 wire, 4 to 20 mA output and 9 to 32 Vdc input (for option 2K, 2P, 2Y) and 9 to 28 Vdc input for intrinsic Safety (option 2N).	Non-amplified sensor with mV/V output (Sensotec Prod.) & voltage input (option 2U).	Non-amplified sensor with mV/V output and voltage input with internal shunt calibration (option 2U & 8A).	Non-amplified with mV/V output (Sensotec Prod.) & voltage input with internal remote buffered shunt calibr. (option 2U & 3D).	Non-amplified sensor with mV/V output (Sensotec Prod.) and voltage input with internal Signature calibration module (option 53E) or internal TEDS Module (option 53T).
Model	Order code											
3161	3161	Cable assembly with Bendix PT Series, straight plug, 6 socket, shell size 10	CA301									
3167	3167											
3170 Series	3173											
	3174											
	3175											
	3176											
3336	3336	Cable assembly with Amphenol MS Series, straight plug, 5 socket, shell size 14	CA302									
3397	3397	Cable assembly with Bendix PT Series, straight plug, 6 socket, shell size 10	CA301									
3419	3419		NA									
3632	3632	Cable assembly with Bendix PT Series, straight plug, 6 socket, shell size 10	CA301									
3663	3663	Cable assembly with Bendix Receptacle, PT01 Series, 10 socket, shell size 12	CA310									
3719	3719	Cable assembly with Amphenol MS Series, straight plug, 5 socket, shell size 14	CA302									
6443	6443											
3129-112	3129-112											
3129-121	3129-121											
3130-131	3130-131											

Test & Measurement Sensors

7J	7K	7L	7M	7N	7O	7P	7Q	7R	7S	7T	7U	7V	7W	7Y	7Z	7AA	7AB
(2K, 2N or 2Y & 3D)	(DIN)	(1600)	(1800)	(1700)	(WRC)	(6443)	(1254E)	(1369)	(DS)	(2U/ Sense Leads)	(2U & 8A/ Sense Leads)	(2U & 3D/ Sense Leads)	(2U & 53E, 53T/Sense Leads)	(WRC/ Sense Leads)	(6443/ Sense Leads)	(1254E/ Sense Leads)	(1369/ Sense Leads)
Amplified sensor with 2 wire, 4 to 20 mA output and 9 to 32 Vdc input for option 2K and 2Y or 9 to 28 Vdc input for intrinsic Safety option 2N with internal remote buffered shunt calibration.	Amplified or non-amplified sensor with mV/V, Voltage or mA output with DIN style termination (option 6M or 6N).	Non-amplified sensor with mV/V output (option 2U) for 1600 Series models	Non-amplified sensor with mV/V output (option 2U) for 1800 Series models	Amplified sensor output for 1700 Series models	Non-amplified sensor with mV/V output (Lebow Products) for western regional wiring code (option 2U).	Non-amplified sensor with mV/V output (option 2U) for Model 6443.	Non-amplified sensor with mV/V output (option 2U) for 1254 Series Models	Non-amplified sensor with mV/V output (option 2U) for Model 1369	Amplified sensor with 0 to 5 vdc Analog output and either RS-232 Digital Output (option 2Z) or RS-485 Digital Output (option 2AA) for Model DS	Non-amplified sensor with mV/V output (Sensotec Products) and voltage input and Sense Leads (option 2U).	Non-amplified sensor with mV/V output (Sensotec Products) and voltage input with internal shunt calibration and Sense Leads (option 2U & 8A).	Non-amplified sensor with mV/V output (Sensotec Products) and voltage input with internal remote buffered shunt calibration and sense leads (option 2U & 3D).	Non-amplified sensor with mV/V output (Sensotec Prod.) & voltage input with internal signature calibration mod. (option 53E) or internal TEDS module (option 53T) and sense leads.	Non-amplified sensor with mV/V output (Lebow Products) and western regional wiring code and sense leads (option 2U).	Non-amplified sensor with mV/V output and Sense Leads (option 2U) for Model 6443.	Non-amplified sensor with mV/V output and Sense Leads (option 2U) for 1254 Series models	Non-amplified sensor with mV/V output and Sense Leads (option 2U) for Model 1369
					x									x			
					x									x			
					x									x			
					x									x			
					x									x			
					x									x			
					x									x			
					x									x			
					x									x			
					x									x			
					x									x			
					x									x			
						x											
															x		
					x									x			
					x									x			
					x									x			

Cables and Mating Connectors

LOAD CELLS

Wiring Options for Cable/Online Configurator →			7A	7B	7C	7D	7E	7F	7G	7H	7I
SENSOR OPTIONS →			(2A or 2B)	(2C 2J or 2T)	(2D, 2E, 2F or 2G)	(2E & 3D 2F & 3D)	(2K, 2N, 2P, 2Y)	(2U)	(2U & 8A)	(2U & 3D)	(2U & 53E, 53T)
Sensor Reference Information		Base order code description for Online Configurator	Cable assembly base order code								
Model	Order code			Amplified sensor with 4 wire, ±5 Vdc output and ±15 Vdc to 32 Vdc input (option 2A or 2B) with internal shunt calibration or internal remote buffered shunt calibration.	Amplified sensor with 3 wire, 5 Vdc output and 11 to 28 Vdc input (option 2C) or 3 wire, 10 Vdc output and 15 Vdc to 28 Vdc input (option 2T) or 3 wire, 4 to 20 mA output and 22 to 32 Vdc input (2U) all with internal shunt calibration or internal remote buffered shunt calibration.	Amplified sensor with 3 wire, 5 Vdc output and 9 to 32 Vdc input (option 2D & 2E) or 3 wire, 10 Vdc output and 9 to 32 Vdc input (option 2F or 2G) for Model FP	Amplified sensor with 3 wire, 5 Vdc output and 9 to 32 Vdc input (option 2E) or 3 wire, 10 Vdc output and 9 to 32 Vdc input (option 2F) and internal remote buffered shunt calibration for Model FP	Amplified sensor with 2 wire, 4 to 20 mA output and 9 to 32 Vdc input (for option 2K, 2P, 2Y) and 9 to 28 Vdc input for intrinsic Safety (option 2N).	Non-amplified sensor with mV/V output (Sensotec Prod.) & voltage input (option 2U).	Non-amplified sensor with mV/V output and voltage input with internal shunt calibration (option 2U & 8A).	Non-amplified with mV/V output (Sensotec Prod.) & voltage input with internal remote buffered shunt calibr. (option 2U & 3D).
3140-P and 3140-CS Series	3143-CS	Cable assembly with Bendix PT Series, straight plug, 6 socket, shell size 10	CA301								
	3143-P										
	3144-CS										
	3144-P										
	3145-CS										
	3145-P										
	3146-CS										
	3146-P										
	3149-FR										
AL-JP	TL121	Cable assembly with Amphenol MS Series, wall mounting (bulk) plug, 5 socket, shell size 14	CA311						x		
AL-SC	TL131	Cable assembly with Amphenol MS Series, straight plug, 5 socket, shell size 14	CA302						x		
LP	AL441	Cable assembly with Bendix PT Series, straight plug, 6 socket, shell size 10	CA301	x	x			x	x	x	x
MPB	BL515	Cable assembly with Amphenol MS Series, straight plug, 6 socket, shell size 14	CA303	x	x			x	x	x	x
RF	AL414-AL418			x	x			x	x	x	x
RGF	AL428/AL628	Cable assembly with Bendix PT Series, straight plug, 6 socket, shell size 10	CA301	x	x			x	x	x	x
RGH	AL427/AL627			x	x			x	x	x	x
RGM	AL426			x	x			x	x	x	x
RH	AL419-AL424	Cable assembly with Amphenol MS Series, straight plug, 6 socket, shell size 14	CA303	x	x			x	x	x	x
RM	AL413-AL417			x	x			x	x	x	x
UG	BL122			x	x			x	x	x	x

Test & Measurement Sensors

7J	7K	7L	7M	7N	7O	7P	7Q	7R	7S	7T	7U	7V	7W	7Y	7Z	7AA	7AB
(2K, 2N or 2Y & 3D)	(DIN)	(1600)	(1800)	(1700)	(WRC)	(6443)	(1254E)	(1369)	(DS)	(2U/ Sense Leads)	(2U & 8A/ Sense Leads)	(2U & 3D/ Sense Leads)	(2U & 53E, 53T/Sense Leads)	(WRC/ Sense Leads)	(6443/ Sense Leads)	(1254E/ Sense Leads)	(1369/ Sense Leads)
Amplified sensor with 2 wire, 4 to 20 mA output and 9 to 32 Vdc input for option 2K and 2Y or 9 to 28 Vdc input for intrinsic Safety option 2N with internal remote buffered shunt calibration.	Amplified or non-amplified sensor with mV/V. Voltage or mA output with DIN style termination (option 6M or 6N).	Non-amplified sensor with mV/V output (option 2U) for 1600 Series models	Non-amplified sensor with mV/V output (option 2U) for 1800 Series models	Amplified sensor output for 1700 Series models	Non-amplified sensor with mV/V output (Lebow Products) for western regional wiring code (option 2U).	Non-amplified sensor with mV/V output (option 2U) for Model 6443.	Non-amplified sensor with mV/V output (option 2U) for 1254 Series Models	Non-amplified sensor with mV/V output (option 2U) for Model 1369	Amplified sensor with 0 to 5 vdc Analog output and either RS-232 Digital Output (option 2Z) or RS-485 Digital Output (option 2AA) for Model DS	Non-amplified sensor with mV/V output (Sensotec Products) and voltage input and Sense Leads (option 2U).	Non-amplified sensor with mV/V output (Sensotec Products) and voltage input with internal shunt calibration and Sense Leads (option 2U & 8A).	Non-amplified sensor with mV/V output (Sensotec Products) and voltage input with internal remote buffered shunt calibration and sense leads (option 2U & 3D).	Non-amplified sensor with mV/V output (Sensotec Prod.) & voltage input with internal signature calibration mod. (option 53E) or internal TEDS module (option 53T) and sense leads.	Non-amplified sensor with mV/V output (Lebow Products) and western regional wiring code and sense leads (option 2U).	Non-amplified sensor with mV/V output and Sense Leads (option 2U) for Model 6443.	Non-amplified sensor with mV/V output and Sense Leads (option 2U) for 1254 Series models	Non-amplified sensor with mV/V output and Sense Leads (option 2U) for Model 1369
					X									X			
					X									X			
					X									X			
					X									X			
					X									X			
					X									X			
					X									X			
					X									X			
					X									X			
										X							
										X							
										X	X		X				
										X	X		X				
										X	X		X				
										X	X		X				
										X	X		X				
										X	X		X				
										X	X		X				
										X	X		X				
										X	X		X				

Cables and Mating Connectors

TORQUE TRANSDUCERS

Wiring Options for Cable/Online Configurator →			7A	7B	7C	7D	7E	7F	7G	7H	7I
SENSOR OPTIONS →			(2A or 2B)	(2C 2J or 2T)	(2D, 2E, 2F or 2G)	(2E & 3D 2F & 3D)	(2K, 2N, 2P, 2Y)	(2U)	(2U & 8A)	(2U & 3D)	(2U & 53E, 53T)
Sensor Reference Information		Base order code description for Online Configurator	Cable assembly base order code								
Model	Order code			Amplified sensor with 4 wire, ±5 Vdc output and ±15 Vdc or 26 Vdc to 32 Vdc input (option 2A or 2B) with internal shunt calibration or internal remote buffered shunt calibration.	Amplified sensor with 3 wire, 5 Vdc output and 11 to 28 Vdc input (option 2C) or 3 wire, 10 Vdc output and 15 Vdc to 28 Vdc input (option 2T) or 3 wire, 4 to 20 mA output and 22 to 32 Vdc input (2U) all with internal shunt calibration or internal remote buffered shunt calibration.	Amplified sensor with 3 wire, 5 Vdc output and 9 to 32 Vdc input (option 2D & 2E) or 3 wire, 10 Vdc output and 9 to 32 Vdc input (option 2F or 2G) for Model FP	Amplified sensor with 3 wire, 5 Vdc output and 9 to 32 Vdc input (option 2E) or 3 wire, 10 Vdc output and 9 to 32 Vdc input (option 2F) and internal remote buffered shunt calibration for Model FP	Amplified sensor with 2 wire, 4 to 20 mA output and 9 to 32 Vdc input (for option 2K, 2P, 2Y) and 9 to 28 Vdc input for intrinsic Safety (option 2N).	Non-amplified sensor with mV/V output (Sensotec Prod.) & voltage input (option 2U).	Non-amplified sensor with mV/V output and voltage input with internal shunt calibration (option 2U & 8A).	Non-amplified with mV/V output (Sensotec Prod.) & voltage input with internal remote buffered shunt calibr. (option 2U & 3D).
1102	1102	Cable assembly with Bendix PT Series, straight plug, 6 socket, shell size 10	CA301								
1103	1103										
1100 Series	1104	Cable assembly with Amphenol MS Series, straight plug, 5 socket, shell size 14	CA302								
	1105										
	1106										
	1107										
1228	1228										
1239	1239										
1242	1242										
1246	1246	Cable assembly with Bendix PT Series, straight plug, 6 socket, shell size 10	CA301								
1248	1248	Cable assembly with Amphenol MS Series, straight plug, 5 socket, shell size 14	CA302								
1308	1308										
1369	1369	Cable assembly with Bendix PT Series, straight plug, 8 socket, shell size 12	CA307								
1602	1602	Cable assembly with Amphenol MS Series, straight plug, 5 socket, shell size 14	CA302								
1600 Series	1604										
	1605										
	1606										
	1607										
1615	1615										
1641	1641										
1648	1648										

Cables and Mating Connectors

TORQUE TRANSDUCERS

Wiring Options for Cable/Online Configurator →			7A	7B	7C	7D	7E	7F	7G	7H	7I	
SENSOR OPTIONS →			(2A or 2B)	(2C 2J or 2T)	(2D, 2E, 2F or 2G)	(2E & 3D 2F & 3D)	(2K, 2N, 2P, 2Y)	(2U)	(2U & 8A)	(2U & 3D)	(2U & 53E, 53T)	
Sensor Reference Information		Base order code description for Online Configurator	Cable assembly base order code	Amplified sensor with 4 wire, ±5 Vdc output and ±15 Vdc or 26 Vdc to 32 Vdc input (option 2A or 2B) with internal shunt calibration or internal remote buffered shunt calibration.	Amplified sensor with 3 wire, 5 Vdc output and 11 to 28 Vdc input (option 2C) or 3 wire, 10 Vdc output and 15 Vdc to 28 Vdc input (option 2T) or 3 wire, 4 to 20 mA output and 22 to 32 Vdc input (2U) all with internal shunt calibration or internal remote buffered shunt calibration.	Amplified sensor with 3 wire, 5 Vdc output and 9 to 32 Vdc input (option 2D & 2E) or 3 wire, 10 Vdc output and 9 to 32 Vdc input (option 2F or 2G) for Model FP	Amplified sensor with 3 wire, 5 Vdc output and 9 to 32 Vdc input (option 2E) or 3 wire, 10 Vdc output and 9 to 32 Vdc input (option 2F) and internal remote buffered shunt calibration for Model FP	Amplified sensor with 2 wire, 4 to 20 mA output and 9 to 32 Vdc input (for option 2K, 2P, 2Y) and 9 to 28 Vdc input for intrinsic Safety (option 2N).	Non-amplified sensor with mV/V output (Sensotec Prod.) & voltage input (option 2U).	Non-amplified sensor with mV/V output and voltage input with internal shunt calibration (option 2U & 8A).	Non-amplified with mV/V output (Sensotec Prod.) & voltage input with internal remote buffered shunt calibr. (option 2U & 3D).	Non-amplified sensor with mV/V output (Sensotec Prod.) and voltage input with internal Signature calibration module (option 53E) or internal TEDS Module (option 53T).
Model	Order code											
1700 Series	1700	Cable assembly with Binder 12 socket, KV120	CA308									
	1701											
	1702											
	1703											
	1706											
1800 Series	1804	Cable assembly with Amphenol MS Series, straight plug, 5 socket, shell size 14	CA302									
	1805											
	1806											
	1807											
2102	2102											
2105	2105	Cable assembly with Bendix PT Series, straight plug, 6 socket, shell size 10	CA301									
2110 Series	2110	Cable assembly with Amphenol MS Series, straight plug, 5 socket, shell size 14	CA302									
	2111											
	2112											
	2113											
	2114											
	2115											
	2116											
2120 Series	2121											
	2122											
	2124											
	2125											
	2126											
2320	2320											
2320	2320											
2404	2404											
1115A	1115A	Cable assembly with Amphenol MS Series, straight plug, 5 socket, shell size 14	CA302									
1115K	1115K											

Cables and Mating Connectors

TORQUE TRANSDUCERS

Wiring Options for Cable/Online Configurator ➡			7A	7B	7C	7D	7E	7F	7G	7H	7I			
SENSOR OPTIONS ➡			(2A or 2B)	(2C 2J or 2T)	(2D, 2E, 2F or 2G)	(2E & 3D 2F & 3D)	(2K, 2N, 2P, 2Y)	(2U)	(2U & 8A)	(2U & 3D)	(2U & 53E, 53T)			
Sensor Reference Information		Base order code description for Online Configurator	Cable assembly base order code	Amplified sensor with 4 wire, ±5 Vdc output and ±15 Vdc or 26 Vdc to 32 Vdc input (option 2A or 2B) with internal shunt calibration or internal remote buffered shunt calibration.	Amplified sensor with 3 wire, 5 Vdc output and 11 to 28 Vdc input (option 2C) or 3 wire, 10 Vdc output and 15 Vdc to 28 Vdc input (option 2T) or 3 wire, 4 to 20 mA output and 22 to 32 Vdc input (2U) all with internal shunt calibration or internal remote buffered shunt calibration.	Amplified sensor with 3 wire, 5 Vdc output and 9 to 32 Vdc input (option 2D & 2E) or 3 wire, 10 Vdc output and 9 to 32 Vdc input (option 2F or 2G) for Model FP	Amplified sensor with 3 wire, 5 Vdc output and 9 to 32 Vdc input (option 2E) or 3 wire, 10 Vdc output and 9 to 32 Vdc input (option 2F) and internal remote buffered shunt calibration for Model FP	Amplified sensor with 2 wire, 4 to 20 mA output and 9 to 32 Vdc input (for option 2K, 2P, 2Y) and 9 to 28 Vdc input for intrinsic Safety (option 2N).	Non-amplified sensor with mV/V output (Sensotec Prod.) & voltage input (option 2U).	Non-amplified sensor with mV/V output and voltage input with internal shunt calibration (option 2U & 8A).	Non-amplified with mV/V output (Sensotec Prod.) & voltage input with internal remote buffered shunt calibr. (option 2U & 3D).	Non-amplified sensor with mV/V output (Sensotec Prod.) and voltage input with internal Signature calibration module (option 53E) or internal TEDS Module (option 53T).		
Model	Order code			1254 Series	1254	Cable assembly with Bendix PT Series, straight plug, 10 socket, shell size 12	CA306							
		1254 Series	1254E											
		1388-102	1388-102	Cable assembly with Bendix PT Series, straight plug, 6 socket, shell size 10	CA301									
		1815A	1815A	Cable assembly with Amphenol MS Series, straight plug, 5 socket, shell size 14	CA302									
		1815K	1815K											
		2120 Low	2120	Cable assembly with Bendix PT Series, straight plug, 6 socket, shell size 10	CA301									
		6459	Cable assembly with Amphenol MS Series, straight plug, 5 socket, shell size 14	CA302										
		6467												
		6468												
		6469												
		6470												
		QFFH-9	BT121	Cable assembly with Bendix PT Series, straight plug, 6 socket, shell size 10	CA301					x	x		x	
		QSFK-9	BT111	Cable assembly with Amphenol MS Series, straight plug, 6 socket, shell size 14	CA303						x	x		x

Test & Measurement Sensors

7J	7K	7L	7M	7N	7O	7P	7Q	7R	7S	7T	7U	7V	7W	7Y	7Z	7AA	7AB
(2K, 2N or 2Y & 3D)	(DIN)	(1600)	(1800)	(1700)	(WRC)	(6443)	(1254E)	(1369)	(DS)	(2U/ Sense Leads)	(2U & 8A/ Sense Leads)	(2U & 3D/ Sense Leads)	(2U & 53E, 53T/Sense Leads)	(WRC/ Sense Leads)	(6443/ Sense Leads)	(1254E/ Sense Leads)	(1369/ Sense Leads)
Amplified sensor with 2 wire, 4 to 20 mA output and 9 to 32 Vdc input for option 2K and 2Y or 9 to 28 Vdc input for intrinsic Safety option 2N with internal remote buffered shunt calibration.	Amplified or non-amplified sensor with mV/V, Voltage or mA output with DIN style termination (option 6M or 6N).	Non-amplified sensor with mV/V output (option 2U) for 1600 Series models	Non-amplified sensor with mV/V output (option 2U) for 1800 Series models	Amplified sensor output for 1700 Series models	Non-amplified sensor with mV/V output (Lebow Products) for western regional wiring code (option 2U).	Non-amplified sensor with mV/V output (option 2U) for Model 6443.	Non-amplified sensor with mV/V output (option 2U) for 1254 Series Models	Non-amplified sensor with mV/V output (option 2U) for Model 1369	Amplified sensor with 0 to 5 vdc Analog output and either RS-232 Digital Output (option 2Z) or RS-485 Digital Output (option 2AA) for Model DS	Non-amplified sensor with mV/V output (Sensotec Products) and voltage input and Sense Leads (option 2U).	Non-amplified sensor with mV/V output (Sensotec Products) and voltage input with internal shunt calibration and Sense Leads (option 2U & 8A).	Non-amplified sensor with mV/V output (Sensotec Products) and voltage input with internal remote buffered shunt calibration and sense leads (option 2U & 3D).	Non-amplified sensor with mV/V output (Sensotec Prod.) & voltage input with internal signature calibration mod. (option 53E) or internal TEDS module (option 53T) and sense leads.	Non-amplified sensor with mV/V output (Lebow Products) and western regional wiring code and sense leads (option 2U).	Non-amplified sensor with mV/V output and Sense Leads (option 2U) for Model 6443.	Non-amplified sensor with mV/V output and Sense Leads (option 2U) for 1254 Series models	Non-amplified sensor with mV/V output and Sense Leads (option 2U) for Model 1369
							X									X	
							X									X	
					X									X			
			X														
			X														
					X									X			
					X									X			
					X									X			
					X									X			
										X	X		X				
										X	X		X				

Cables and Mating Connectors

PRESSURE TRANSDUCER MATING CONNECTORS

		Mating Connector Options					
		Service Class "E" Environmental		Service Class "A" General Duty (Standard)		Service Class "W" Weather/Moisture Proofing	
Model	Connector Description	Model	Mnf. Part number	Model	Mnf. Part number	Model	Mnf. Part number
Most models except 440, DS, 424, 425	Bendix straight plug, PT Series, 6 socket, shell size 10	023-0107-00 (AA118 order code)	PT06E-10-6S	023-0032-00 (AA111 order code)	PT06A-10-6S	023-0124-00	PT06W-10-6S
DS	Bendix straight plug, PT Series, 8 socket, shell size 12	023-0036-00 / PT06W-12-8S					
440 (mates to DIN 43650)	DIN straight plug, 4 socket	023-0568-02 (order code AA157) DIN43650 - use with PG11 socket for 6 mm to 10 mm cable 023-0568-03 (order code AA155) DIN43650 - use with 1/2 in NPTF conduit fitting 023-0568-01 (order code AA156) DIN43650 - use with PG9 socket for 4,5 mm to 7,0 mm cable					
FP2000	DIN straight plug, 4 socket	023-0546-00 (order code AA161) DIN40050 - use with PG7 socket for 3,5 mm to 6 mm cable					
424, 425	Amphenol straight plug, MS Series, 4 socket, shell size 14	023-0768-00 / MS3106F-14-2S					
	High temperature Amphenol MS Series, 6 socket, shell size 10	023-0528-00 (order code AA151) MS-3476L-10-6S(SR)					

LOAD CELL MATING CONNECTORS

		Mating Connector Options					
		Service Class "E" Environmental		Service Class "A" General Duty (Standard)		Service Class "W" Weather/Moisture Proofing	
Model	Connector Description	Model	Mnf. Part number	Model	Mnf. Part number	Model	Mnf. Part number
45 47	Bendix straight plug, PC Series, 6 socket, shell size 10	—	—	023-0092-00 (AA162 order code)	PC06A-10-6S	023-LW181-014	PC06W-10-6S
41 & 43 (5 to 5K lb); 73 & 75 (50 to 2K lb); RM, RH, RF (2K to 50K lb); RGM, RGH, RGF, LP, 3132, 3397, 3108, 3140, 3170, 3632, 3161	Bendix straight plug, PT Series, 6 socket, shell size 10	023-0107-00 (AA118 order code)	PT06E-10-6S	023-0032-00 (AA111 order code)	PT06A-10-6S	023-0124-00	PT06W-10-6S
3663	Bendix receptacle, PT01 Series, 10 socket, shell size 12	023-LW180-103	PT01E-12-10S (SR)	—	—	023-LW180-017	PT01W-12-10S
41 & 43 (7.5K to 500K lb); 73 & 75 (3K to 200K lb); RF, RM, RH (75K to 200K lbs); UG, MPB	Amphenol straight plug, MS Series, 6 socket, shell size 14	023-0161-00	MS3106E-14S-6S	023-0046-00 (AA121 order code)	MS3106A-14S-6S	—	—
3124, 3336, 3719, AL-SC, 3127, 3156, 3129, 3130,	Amphenol straight plug, MS Series, 5 socket, shell size 14	023-1247-00	MS3106E-14S-5S	023-LW180-038	MS3106A-14S-5S	—	—
AL-JP	Amphenol Wall Mounting (Bulk) Plug, MS Series, 5 socket, shell size 14	023-1060-00	MS3102E-14S-5S	023-0056-00	MS3101A-14S-5S	—	—
6443	Amphenol 90 Degree Plug, MS Series, 5 socket, shell size 14	—	—	023-LW180-068	MS3108B-14S-5S	—	—
	High temperature Amphenol MS Series, 6 socket, shell size 10					023-0528-00 (AA151 order code)	MS-3476L-10-6S (SR)

Cables and Mating Connectors

TORQUE TRANSDUCER MATING CONNECTORS

		Mating Connector Options					
		Service Class "E" Environmental		Service Class "A" General Duty (Standard)		Service Class "W" Weather/Moisture Proofing	
Model	Connector Description	Model	Mnf. Part number	Model	Mnf. Part number	Model	Mnf. Part number
QFFH-9, 1102, 1103, 1246, 1388-102, 2105, 2120 Low, 6118	Bendix straight plug, PT Series, 6 socket, shell size 10	023-0107-00 (AA118 order code)	PT06E-10-6S	023-0032-00 (AA111 order code)	PT06A-10-6S	023-0124-00	PT06W-10-6S
1254 and 1254E Series	Bendix straight plug, P Series, 10 socket, shell size 12	023-LW181-108	PT06E-12-10S (SR)	—	—	—	—
1369	Bendix straight plug, PT Series, 8 socket, shell size 12	—	—	—	—	023-LW181-037	PT06W-12-8S
QSKF-9	Amphenol Straight Plug, MS Series, 6 socket, shell size 14	023-0161-00	MS3106E-14S-8S	023-0046-00 (AA121 order code)	MS3106A-14S-6S	—	—
1100, 1600, 1602, 1800, 2102, 2110, 2120, 1228, 1248, 1641, 1648, 2404, 2320, 1308, 1242, 1239, 1115, 1615, 1815, 6459, 6467, 6468, 6470, 6105, 6116, 6129, 1388-124	Amphenol straight plug, MS Series, 5 socket, shell size 14	023-1247-00	MS3106E-14S-5S	023-LW180-038	MS3106A-14S-5S	—	—
1700 Series	Binder 12 socket	023-LW185-027 binder					

ACCELEROMETER MATING CONNECTORS

Order Code	Part Number	Description
AA141	023-0076-00	Microtec DP straight plug, four socket, general duty (DP-4S-1)
AA174	023-0466-00	Bendix MS Series straight plug, three socket, shell size 10 connector (MS3106F-10SL-3S)
MH002	031-0428-00	2-pin MS type for MA11, MA12, and MAV51
MH008	032-1197-00	3-pin 62 GB for MA15, MAT53, and MAV52
CA067	031-0446-00	BNC plug with strain relief
CA054	031-0487-00	BNC bulkhead socket and dust cap fitted in 90° bracket, fitted to cable

ACCEL MATING CONNECTOR – CABLE ASSEMBLY

Order Code	Part Number	Description
AA143	060-0436-04	Cable assembly, Microtec-type connector, 15 ft of Teflon® cable for JTF
CA051	032-1399-00	Cable assembly, microdot to microdot, 15 ft of PVC cable for MAQ13, MAQ36, and MAQ41
CA338	032-1397-00	Cable assembly, microdot to microdot, 15 ft of PTFE cable for MAQ13, MAQ36, and MAQ41
CA137	032-1396-00	Cable assembly, 5 meters of twin core PTFE cable with stainless steel overbraid for MA15, MAT53, and MAV53
CA053	031-0439-01	Cable assembly, 5 meters of twin core PTFE cable with stainless steel overbraid for MA11, MA12, and MAV51



INSTRUMENT MATING CONNECTORS

Order code	Description
AA176	Mating connector adapter, 9 pin male to 25 pin male

TORQUE PASSIVE SPEED SENSOR PICKUP CABLE ASSEMBLY

Order Code	Description
7204-00-15	15 feet
7204-00-50	50 feet
7204-00-100	100 feet
7204-16-15	15 feet with connector for Model 7541
7204-16-50	50 feet with connector for Model 7541
7204-16-100	100 feet with connector for Model 7541

TORQUE ZERO VELOCITY, ACTIVE SPEED PICKUP CABLE ASSEMBLY

Order Code	Description
7220-47-15	15 feet
7220-47-50	50 feet
7220-47-100	100 feet
7220-119-15	15 feet with connector for Model 7541
7220-119-50	50 feet with connector for Model 7541
7220-119-100	100 feet with connector for Model 7541



RF CABLE ASSEMBLY

Order Code	Description
043-LW525-034-LF	RF cable assembly to TMS9000, 92000 Series, 17,37 m [57 ft] BNC-BNC
043-1529-01	RF cable assembly to TMS9000, 94000 Series, 14,6 m [47.9 ft], tri-axial

For custom lengths or configurations – contact Honeywell



INSTRUMENT CABLE ASSEMBLIES

Order code	Description
AA154	Power cable and connector for GM family
AA168	Molded 25-pin male/female communications cable

Find out more

Honeywell serves its customers through a worldwide network of sales offices, representatives and distributors. For application assistance, current specifications, pricing or name of the nearest Authorized Distributor, contact your local sales office. To learn more about Honeywell's test and measurement products, call **+1-614-850-5000**, visit **www.honeywell.com/sensotec**, or e-mail inquiries to **info.tm@honeywell.com**

Sensing and Control
Honeywell
1985 Douglas Drive North
Golden Valley, MN 55422
www.honeywell.com

Warranty. Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Honeywell's standard product warranty applies unless agreed to otherwise by Honeywell in writing; please refer to your order acknowledgement or consult your local sales office for specific warranty details. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace, at its option, without charge those items it finds defective. **The foregoing is buyer's sole remedy and is in lieu of all warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. In no event shall Honeywell be liable for consequential, special, or indirect damages.**

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

WARNING

PERSONAL INJURY

- DO NOT USE these products as safety or emergency stop devices or in any other application where failure of the product could result in personal injury.

Failure to comply with these instructions could result in death or serious injury.

WARNING

MISUSE OF DOCUMENTATION

- The information presented in this datasheet is for reference only. DO NOT USE this document as product installation information.
- Complete installation, operation and maintenance information is provided in the instructions supplied with each product.

Failure to comply with these instructions could result in death or serious injury.

Honeywell



**Стандарт
Электрон
Связь**

Мы молодая и активно развивающаяся компания в области поставок электронных компонентов. Мы поставляем электронные компоненты отечественного и импортного производства напрямую от производителей и с крупнейших складов мира.

Благодаря сотрудничеству с мировыми поставщиками мы осуществляем комплексные и плановые поставки широчайшего спектра электронных компонентов.

Собственная эффективная логистика и склад в обеспечивает надежную поставку продукции в точно указанные сроки по всей России.

Мы осуществляем техническую поддержку нашим клиентам и предпродажную проверку качества продукции. На все поставляемые продукты мы предоставляем гарантию .

Осуществляем поставки продукции под контролем ВП МО РФ на предприятия военно-промышленного комплекса России , а также работаем в рамках 275 ФЗ с открытием отдельных счетов в уполномоченном банке. Система менеджмента качества компании соответствует требованиям ГОСТ ISO 9001.

Минимальные сроки поставки, гибкие цены, неограниченный ассортимент и индивидуальный подход к клиентам являются основой для выстраивания долгосрочного и эффективного сотрудничества с предприятиями радиоэлектронной промышленности, предприятиями ВПК и научно-исследовательскими институтами России.

С нами вы становитесь еще успешнее!

Наши контакты:

Телефон: +7 812 627 14 35

Электронная почта: sales@st-electron.ru

Адрес: 198099, Санкт-Петербург,
Промышленная ул, дом № 19, литера Н,
помещение 100-Н Офис 331