


PME Expansion Cards

Various Selections Supporting PCI, PCI-X, PCIe x1/x4/x8/x16

NEW

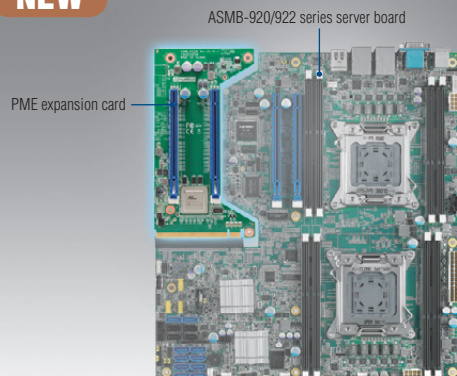

Features

- Auto-configured by BIOS
- ASMB-920/922 series plus PME expansion forms a standard EATX motherboard compatible with EATX chassis
- Multiple options for all demands

Note:

1. To enable PME function, it must to install processor both into CPU0 & CPU1 socket of ASMB-920/920IR.
2. To enable PME function, it need to install a processor into CPU0 socket of ASMB-922/922I.

Introduction

Advantech's PME (Powerful Modular Expansion) design allows versatile expansion module options to the ASMB-920/922 series motherboard. PME expansion cards are an economical, effective solution for a range of applications, providing function expansion for a range of PCIe modules. In addition to meeting standard industrial specifications, Advantech's PME modules fit just about anywhere. They are easy to assemble and provide a simple upgrade path.

Specifications

Model Name	ASMB-FF3PX	ASMB-FF20F	ASMB-FF208	ASMB-FF3P8
Expansion Slots	Total PCI/PCI-X/PCIe slots	3	2	3
	Slot location 1	PCI 33/66 MHz	PCIe x16 (Gen3 x16 link)	PCI x16 (Gen1 x8 link)
	Slot location 2	PCI-X 100 MHz	-	PCIe x8 (Gen2 x4 link)
	Slot location 3	PCI-X 100 MHz	PCIe x16 (Gen3 x16 link)	PCIe x16 (Gen1 x8 link)
Fit Motherboard	ASMB-920/922 series			
Environment	Operating		Non-operating	
	Temperature	System: 0 ~ 40° C Board: 0 ~ 60° C	-40 ~ 85° C	
	Humidity	0% ~ 90%	5% ~ 95% (Non condensing)	
Physical Characteristics	Dimensions	110 mm x 193 mm	110 mm x 193 mm	110 mm x 193 mm


Front View



ASMB-FF3PX-12A1E



ASMB-FF20F-02A1E

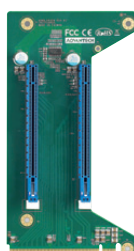

ASMB-FF208-02A1E



ASMB-FF3P8-12A1E

Ordering Information

Part Number	Description
ASMB-FF3PX-12A1E	PME card with 2 PCI-X and 1 PCI slots
ASMB-FF20F-02A1E	PME card with 2 PCIe x16 slots (x16 link)
ASMB-FF3P8-12A1E	PME card with 1 PCIe x8 slot(x8 link) and 1 PCIe x8 slot(x4 link) and 1 PCI slot
ASMB-FF208-02A1E	PME card with 2 PCIe x16 slots (x8 link)

Note:

1. To enable PME function, it must to install processor both into CPU0 & CPU1 socket of ASMB-920/920IR.
2. To enable PME function, it need to install a processor into CPU0 socket of ASMB-922/922I.



**Стандарт
Электрон
Связь**

Мы молодая и активно развивающаяся компания в области поставок электронных компонентов. Мы поставляем электронные компоненты отечественного и импортного производства напрямую от производителей и с крупнейших складов мира.

Благодаря сотрудничеству с мировыми поставщиками мы осуществляем комплексные и плановые поставки широчайшего спектра электронных компонентов.

Собственная эффективная логистика и склад в обеспечивает надежную поставку продукции в точно указанные сроки по всей России.

Мы осуществляем техническую поддержку нашим клиентам и предпродажную проверку качества продукции. На все поставляемые продукты мы предоставляем гарантию .

Осуществляем поставки продукции под контролем ВП МО РФ на предприятия военно-промышленного комплекса России , а также работаем в рамках 275 ФЗ с открытием отдельных счетов в уполномоченном банке. Система менеджмента качества компании соответствует требованиям ГОСТ ISO 9001.

Минимальные сроки поставки, гибкие цены, неограниченный ассортимент и индивидуальный подход к клиентам являются основой для выстраивания долгосрочного и эффективного сотрудничества с предприятиями радиоэлектронной промышленности, предприятиями ВПК и научно-исследовательскими институтами России.

С нами вы становитесь еще успешнее!

Наши контакты:

Телефон: +7 812 627 14 35

Электронная почта: sales@st-electron.ru

Адрес: 198099, Санкт-Петербург,
Промышленная ул, дом № 19, литера Н,
помещение 100-Н Офис 331