Web Site: www.parallax.com
Forums: forums.parallax.com
Sales: sales@parallax.com
Technical: support@parallax.com

Office: (916) 624-8333
Fax: (916) 624-8003
Sales: (888) 512-1024
Tech Support: (888) 997-8267

PING))) Ultrasonic Distance Sensor (#28015)

The Parallax PING)))™ ultrasonic distance sensor provides precise, non-contact distance measurements from about 2 cm (0.8 inches) to 3 meters (3.3 yards). It is very easy to connect to microcontrollers such as the BASIC Stamp®, Propeller chip, or Arduino, requiring only one I/O pin.

The PING))) sensor works by transmitting an ultrasonic (well above human hearing range) burst and providing an output pulse that corresponds to the time required for the burst echo to return to the sensor. By measuring the echo pulse width, the distance to target can easily be calculated.

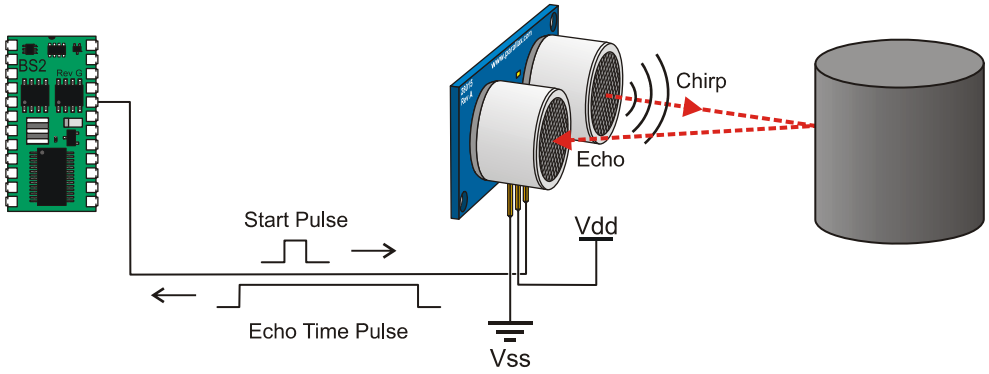

Features

- Range: 2 cm to 3 m (0.8 in to 3.3 yd)
- Burst indicator LED shows sensor activity
- Bidirectional TTL pulse interface on a single I/O pin can communicate with 5 V TTL or 3.3 V CMOS microcontrollers
- Input trigger: positive TTL pulse, 2 µs min, 5 µs typ.
- Echo pulse: positive TTL pulse, 115 µs minimum to 18.5 ms maximum.
- RoHS Compliant

Key Specifications

- Supply voltage: +5 VDC
- Supply current: 30 mA typ; 35 mA max
- Communication: Positive TTL pulse
- Package: 3-pin SIP, 0.1” spacing (ground, power, signal)
- Operating temperature: 0 – 70° C.
- Size: 22 mm H x 46 mm W x 16 mm D (0.84 in x 1.8 in x 0.6 in)
- Weight: 9 g (0.32 oz)

Pin Definitions

GND	Ground (Vss)
5 V	5 VDC (Vdd)
SIG	Signal (I/O pin)

The PING))) sensor has a male 3-pin header used to supply ground, power (+5 VDC) and signal. The header may be plugged into a directly into solderless breadboard, or into a standard 3-wire extension cable (Parallax part #800-00120).

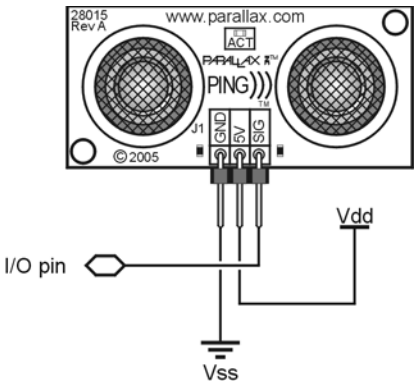

Dimensions

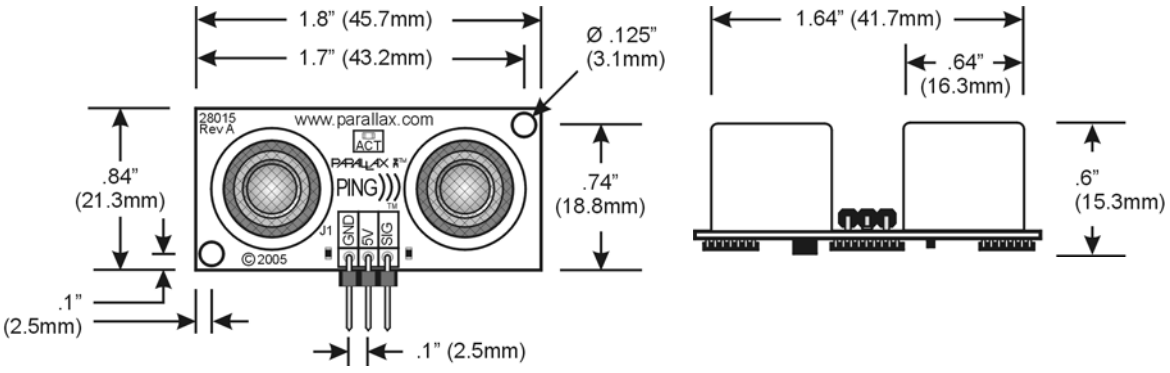

Communication Protocol

The PING))) sensor detects objects by emitting a short ultrasonic burst and then "listening" for the echo. Under control of a host microcontroller (trigger pulse), the sensor emits a short 40 kHz (ultrasonic) burst. This burst travels through the air, hits an object and then bounces back to the sensor. The PING))) sensor provides an output pulse to the host that will terminate when the echo is detected, hence the width of this pulse corresponds to the distance to the target.

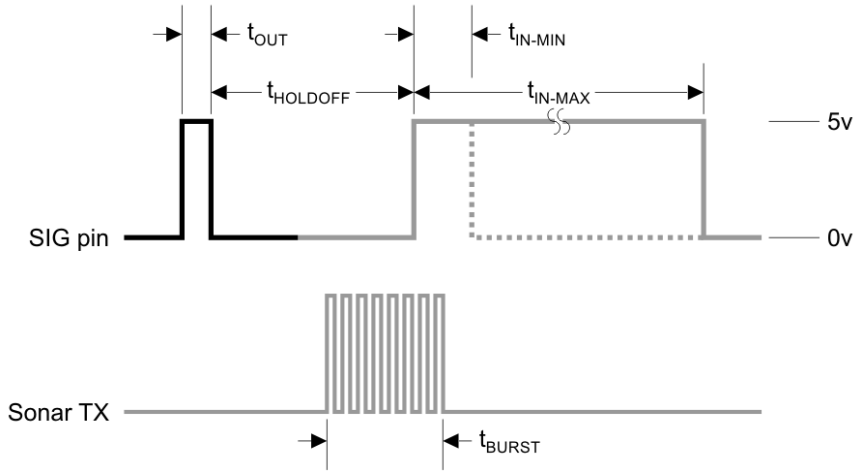

▬	Host Device	Input Trigger Pulse	t_{OUT}	2 µs (min), 5 µs typical
▬	PING))) Sensor	Echo Holdoff	$t_{HOLDOFF}$	750 µs
		Burst Frequency	t_{BURST}	200 µs @ 40 kHz
		Echo Return Pulse Minimum	t_{IN-MIN}	115 µs
		Echo Return Pulse Maximum	t_{IN-MAX}	18.5 ms
		Delay before next measurement		200 µs

Practical Considerations for Use

Object Positioning

The PING))) sensor cannot accurately measure the distance to an object that: a) is more than 3 meters away, b) that has its reflective surface at a shallow angle so that sound will not be reflected back towards the sensor, or c) is too small to reflect enough sound back to the sensor. In addition, if your PING))) sensor is mounted low on your device, you may detect sound reflecting off of the floor.

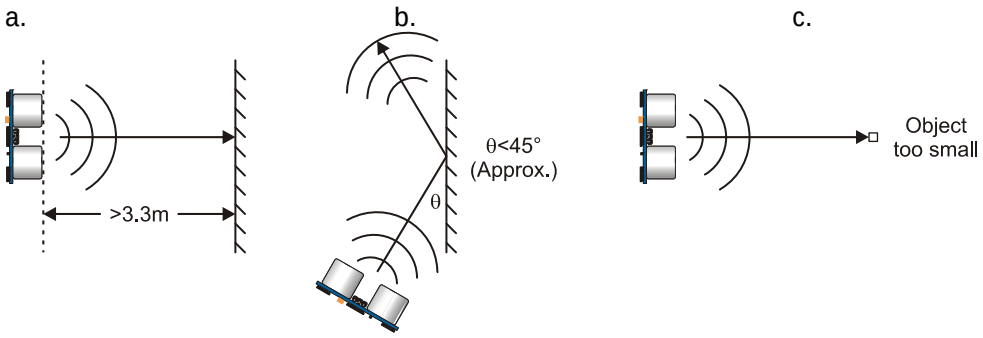

Target Object Material

In addition, objects that absorb sound or have a soft or irregular surface, such as a stuffed animal, may not reflect enough sound to be detected accurately. The PING))) sensor will detect the surface of water, however it is not rated for outdoor use or continual use in a wet environment. Condensation on its transducers may affect performance and lifespan of the device.

Air Temperature

Temperature has an effect on the speed of sound in air that is measurable by the PING))) sensor. If the temperature (°C) is known, the formula is:

$$C_{air} = 331.5 + (0.6 \times T_C)\ m/s$$

The percent error over the sensor's operating range of 0 to 70 ° C is significant, in the magnitude of 11 to 12 percent. The use of conversion constants to account for air temperature may be incorporated into your program (as is the case in the example BS2 program given in the Example Programs section below). Percent error and conversion constant calculations are introduced in Chapter 2 of *Smart Sensors and Applications*, a Stamps in Class text available for download from the 28029 product page at www.parallax.com.

Test Data

The test data on the following pages is based on the PING))) sensor, tested in the Parallax lab, while connected to a BASIC Stamp microcontroller module. The test surface was a linoleum floor, so the sensor was elevated to minimize floor reflections in the data. All tests were conducted at room temperature, indoors, in a protected environment. The target was always centered at the same elevation as the PING))) sensor.

Test 1

Sensor Elevation: 40 in. (101.6 cm)
Target: 3.5 in. (8.9 cm) diameter cylinder, 4 ft. (121.9 cm) tall – vertical orientation

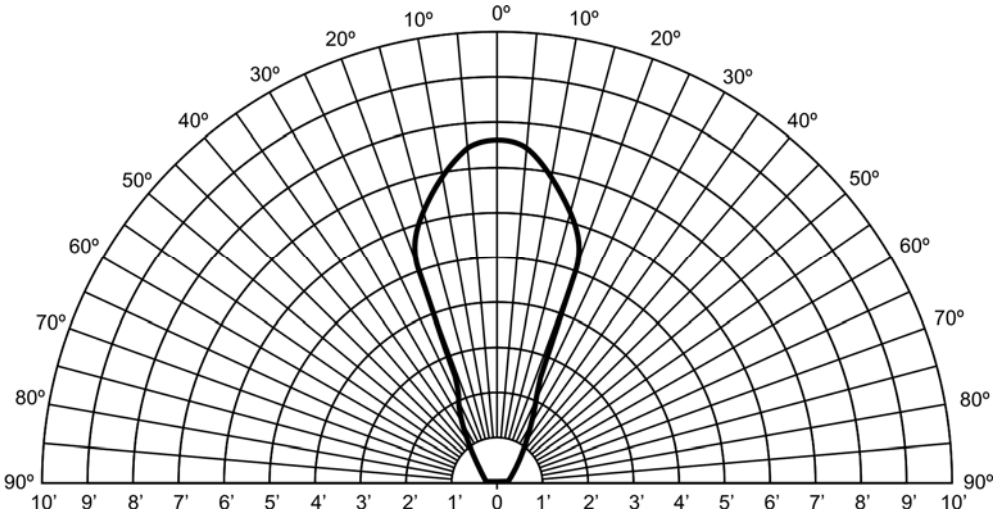

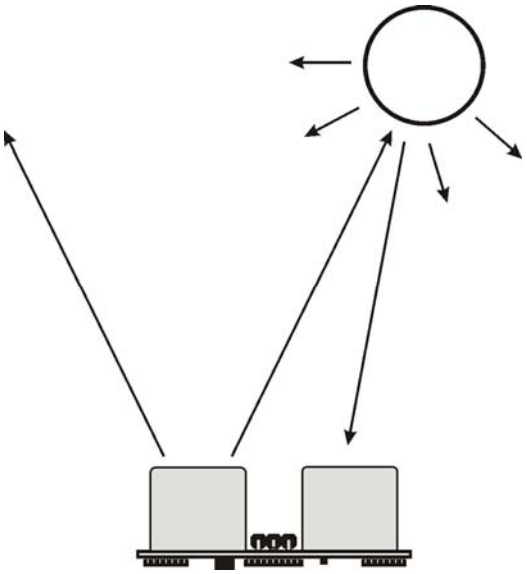

Test 2

Sensor Elevation: 40 in. (101.6 cm)
Target: 12 in. x 12 in. (30.5 cm x 30.5 cm) cardboard, mounted on 1 in. (2.5 cm) pole
Target positioned parallel to backplane of sensor

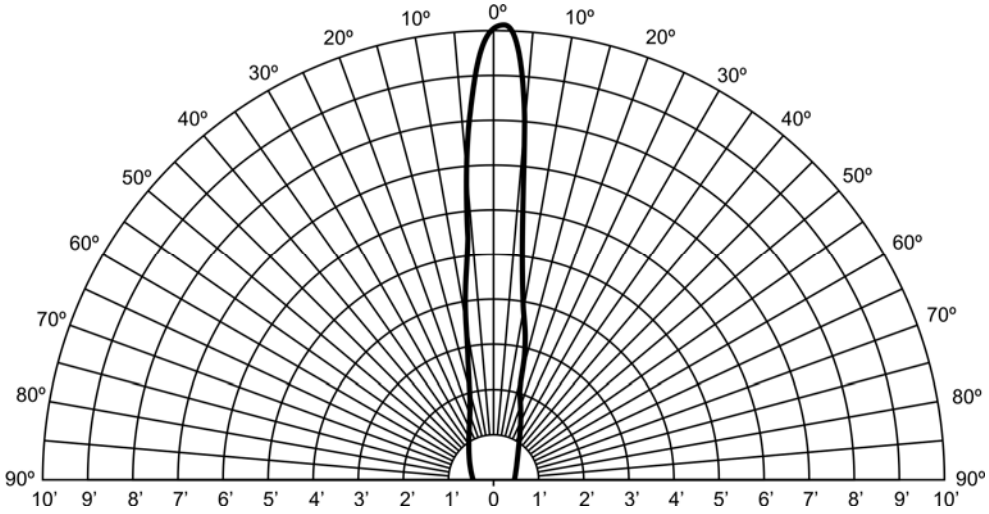

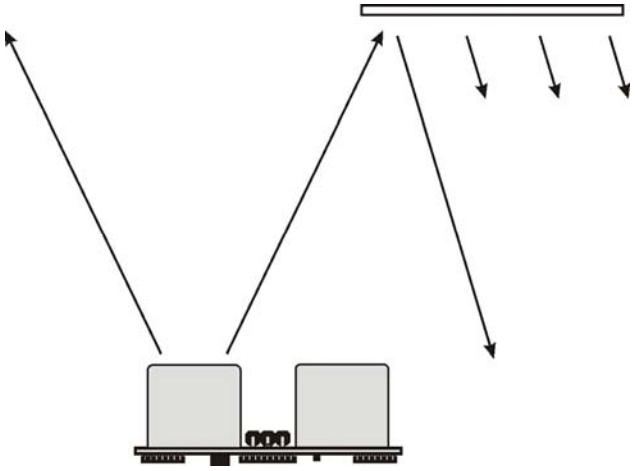

Example Programs

BASIC Stamp 2

This circuit allows you to quickly connect your PING))) sensor to a BASIC Stamp® 2 via the Board of Education® breadboard area. The PING))) module's GND pin connects to Vss, the 5 V pin connects to Vdd, and the SIG pin connects to I/O pin P15. This circuit will work with the example BASIC Stamp program listed below.

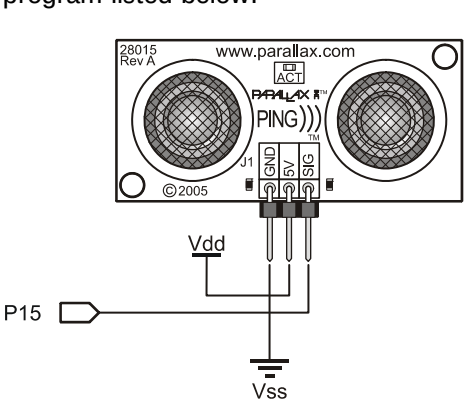

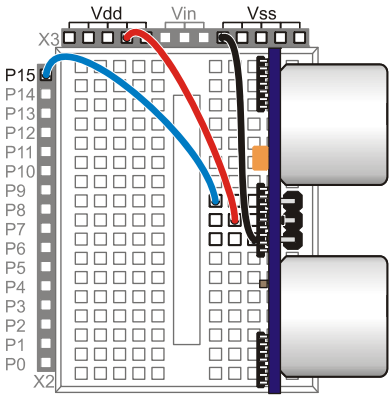

Extension Cable and Port Cautions for the Board of Education

If you are connecting your PING))) sensor to a Board of Education platform using an extension cable, follow these steps:

1. When plugging the cable onto the PING))) sensor, connect Black to GND, Red to 5 V, and White to SIG.
2. Check to see if your Board of Education servo ports have a jumper, as shown at right.
3. If your Board of Education servo ports have a jumper, set it to Vdd as shown. Then plug the cable into the port, matching the wire color to the labels next to the port.
4. If your Board of Education servo ports do not have a jumper, **do not use them with the PING))) sensor**. These ports only provide Vin, not Vdd, and this may damage your PING))) sensor. Go to the next step.
5. Connect the cable directly to the breadboard with a 3-pin header as shown above. Then, use jumper wires to connect Black to Vss, Red to Vdd, and White to I/O pin P15.

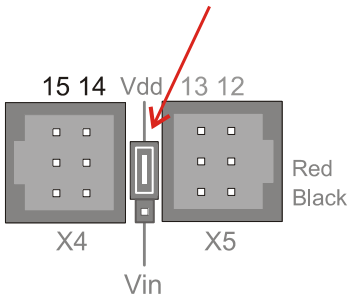

Board of Education Servo Port Jumper, Set to Vdd

Example Program: PingMeasureCmAndIn.bs2

This program for the BASIC Stamp 2 displays distance measurements in both inches and centimeters in the BASIC Stamp Debug Terminal. The example program can be downloaded from the 28015 product page at www.parallax.com. The BASIC Stamp Editor software, which includes the Debug Terminal, is a free download from www.parallax.com/basicstampsoftware.

```
' Smart Sensors and Applications - PingMeasureCmAndIn.bs2
' Measure distance with Ping))) sensor and display in both in & cm

' {$STAMP BS2}
' {$PBASIC 2.5}

' Conversion constants for room temperature measurements.
CmConstant    CON   2260
InConstant    CON   890

cmDistance  VAR   Word
inDistance  VAR   Word
time        VAR   Word

DO

  PULSOUT 15, 5
  PULSIN 15, 1, time

  cmDistance = cmConstant ** time
  inDistance = inConstant ** time

  DEBUG HOME, DEC3 cmDistance, " cm"
  DEBUG CR, DEC3 inDistance, " in"

  PAUSE 100

LOOP
```

Propeller Microcontroller

```
{{
***************************************
*       Ping))) Object V1.1           *
*      (C) 2006 Parallax, Inc.        *
* Author:  Chris Savage & Jeff Martin *
* Started: 05-08-2006                 *
***************************************

Interface to Ping))) sensor and measure its ultrasonic travel time.  Measurements can be in
units of time or distance.  Each method requires one parameter, Pin, that is the I/O pin that
is connected to the Ping)))'s signal line.

  ┌───────────────────┐
  │┌───┐         ┌───┐│    Connection To Propeller
  ││ ▮ │ PING))) │ ▮ ││    Remember PING))) Requires
  │└───┘         └───┘│    +5V Power Supply
  │    GND +5V SIG    │
  └─────┬───┬───┬─────┘
        │  ┌┘   ≷ 1K
        │  └┘   └┤ Pin
        ▽

--------------------------REVISION HISTORY--------------------------
 v1.1 - Updated 03/20/2007 to change SIG resistor from 10K to 1K
}}

CON
  TO_IN = 73_746                                                ' Inches
  TO_CM = 29_034                                                ' Centimeters

PUB Ticks(Pin) : Microseconds | cnt1, cnt2
''Return Ping)))'s one-way ultrasonic travel time in microseconds

  outa[Pin]~                                                    ' Clear I/O Pin
  dira[Pin]~~                                                   ' Make Pin Output
  outa[Pin]~~                                                   ' Set I/O Pin
  outa[Pin]~                                                    ' Clear I/O Pin (> 2 µs pulse)
  dira[Pin]~                                                    ' Make I/O Pin Input
  waitpne(0, |< Pin, 0)                                         ' Wait For Pin To Go HIGH
  cnt1 := cnt                                                   ' Store Current Counter Value
  waitpeq(0, |< Pin, 0)                                         ' Wait For Pin To Go LOW
  cnt2 := cnt                                                   ' Store New Counter Value
  Microseconds := (||(cnt1 - cnt2) / (clkfreq / 1_000_000)) >> 1    ' Return Time in µs

PUB Inches(Pin) : Distance
''Measure object distance in inches

  Distance := Ticks(Pin) * 1_000 / TO_IN                         ' Distance In Inches

PUB Centimeters(Pin) : Distance
''Measure object distance in centimeters

  Distance := Millimeters(Pin) / 10                              ' Distance In Centimeters

PUB Millimeters(Pin) : Distance
''Measure object distance in millimeters

  Distance := Ticks(Pin) * 10_000 / TO_CM                        ' Distance In Millimeters
```

The ping.spin object is used in an example project with the Parallax 4 x 20 Serial LCD (#27979) to display distance measurements. The complete Project Archive can be downloaded from the Propeller Object Exchange at http://obex.parallax.com. The Propeller Tool software can be downloaded from www.parallax.com/propellertool.

```
_____________________________________
Parallax Propeller Chip Project Archive
_____________________________________

 Project :  "ping_demo"

Archived :  Tuesday, December 18, 2007 at 3:29:46 PM

    Tool :  Propeller Tool version 1.05.8


            ping_demo.spin
               |
               |--Debug_Lcd.spin
               |     |
               |     |--Serial_Lcd.spin
               |     |     |
               |     |     |--Simple_Serial.spin
               |     |
               |     |
               |     |--Simple_Numbers.spin
               |
               |
               |--ping.spin
```

Reources and Downloads

For additional example code downloads and links to videos, tutorials and robotics projects that use the Ping))) Ultrasonic Distance Sensor, visit www.parallax.com and search “28015.”

Product Change Notice

Rev A: original release
Rev B: resonator added to the SX-28 co-processor circuit. No changes to functionality
Rev C: SX-28 co-processor changed to PIC16F57. No changes to functionality.

Revision History

Version 2.0: Added revision history. Removed Javelin Stamp examples. Added URLs for programming software. Added Product Change Notice section with PCB revision information.

Стандарт Электрон Связь

Мы молодая и активно развивающаяся компания в области поставок электронных компонентов. Мы поставляем электронные компоненты отечественного и импортного производства напрямую от производителей и с крупнейших складов мира.

Благодаря сотрудничеству с мировыми поставщиками мы осуществляем комплексные и плановые поставки широчайшего спектра электронных компонентов.

Собственная эффективная логистика и склад в обеспечивает надежную поставку продукции в точно указанные сроки по всей России.

Мы осуществляем техническую поддержку нашим клиентам и предпродажную проверку качества продукции. На все поставляемые продукты мы предоставляем гарантию .

Осуществляем поставки продукции под контролем ВП МО РФ на предприятия военно-промышленного комплекса России , а также работаем в рамках 275 ФЗ с открытием отдельных счетов в уполномоченном банке. Система менеджмента качества компании соответствует требованиям ГОСТ ISO 9001.

Минимальные сроки поставки, гибкие цены, неограниченный ассортимент и индивидуальный подход к клиентам являются основой для выстраивания долгосрочного и эффективного сотрудничества с предприятиями радиоэлектронной промышленности, предприятиями ВПК и научно-исследовательскими институтами России.

С нами вы становитесь еще успешнее!

Наши контакты:

Телефон: +7 812 627 14 35

Электронная почта: sales@st-electron.ru

Адрес: 198099, Санкт-Петербург,
Промышленная ул, дом № 19, литера Н,
помещение 100-Н Офис 331