


zHD and zCD Connector Assembly Installation Extractor Tool

molex

Application Tooling Specification Sheet

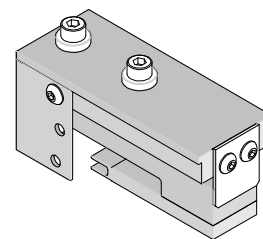

Order No. 62203-0750

FEATURES

- Removes the zHD or zCD connector assembly from the PCB
- Removes connector from the PCB without damage to the board
- Use tool 62203-0700 for inserting connectors

SCOPE

Products: zHD and zCD 16X connector assemblies. See Product List below for specific part numbers.

Product List

The following is a partial list of the product order numbers and their specifications this tool is designed to run. Updates to this list are available on www.molex.com.

Connector Series No.	Assembly Order No.			
170834	170834-0001	170834-0002	170834-0012	170834-0013

Tool Setup

The tooling arrangement in this removal tool is determined by the module and component placement on the PCB.

There is a "Keep-Out Zone" that needs to be clear of the other components when using some of the tool arrangements. See Figure 1. For more information see Molex drawing number SD-170834-0001.

Note: Be sure that all parts of the removal tool will clear any components on the printed circuit board during use. See correct tooling set-up figures below. Tape may also be placed over circuit traces or on the bottom of the side plate for added protection of the printed circuit board.

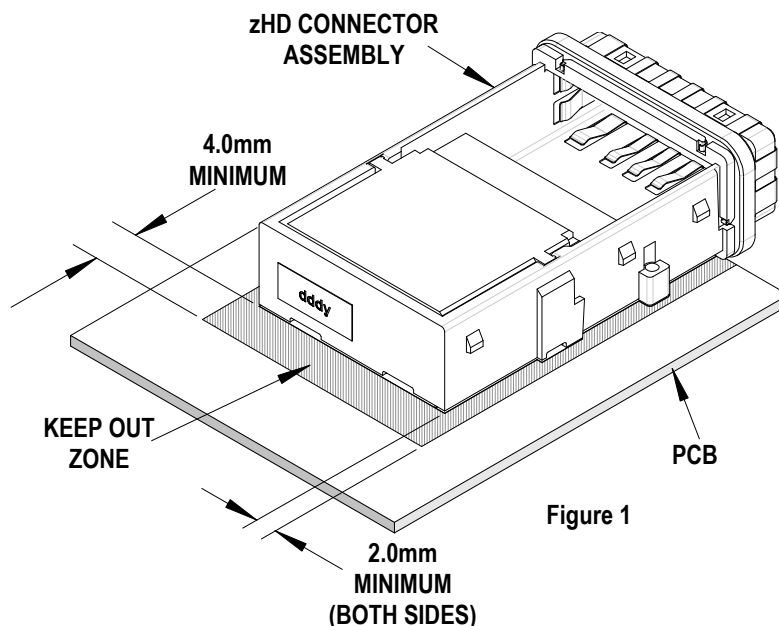


Figure 1




To prevent damage to the adjacent modules in the PC Board the correct position of the (2) side plates must be used. See Figures 6 and 7 for correct use of PCB side plates with positioned modules.

Warning: M2 screws must be removed before removing the connector.

Three (3) M2 screws hold the connector assembly to the printed circuit board. Before any removal operation is done these screws must be removed. See Figure 2. The heat sink and cover, if used, must also be removed in order for the tool to fit.



Operation

1. Disassemble the (2) halves as delivered by unscrewing the screws on the top of the "upper tooling".
2. Unscrew the (2) M4 x 8 BHCS from the front lift place on the support tooling and set aside.
3. Depending on if there are connector assemblies on either side of the connector to be removed, position the side plates as shown in Figure 5, Figure 7, or Figure 8.
4. Insert the support block assembly into the connector assembly until it is fully seated. See Figure 4.
5. Reattach the front lift plate to the back of the support block using the (2) M4 BHCS but to not tighten.
6. Make sure the front lift plate two protruded feet engage in the two slots of the connector assembly before tightening the M4 screws. Some adjustments by hand of the support block assembly may be necessary to engage the lift plate feet into the connector assembly slots.

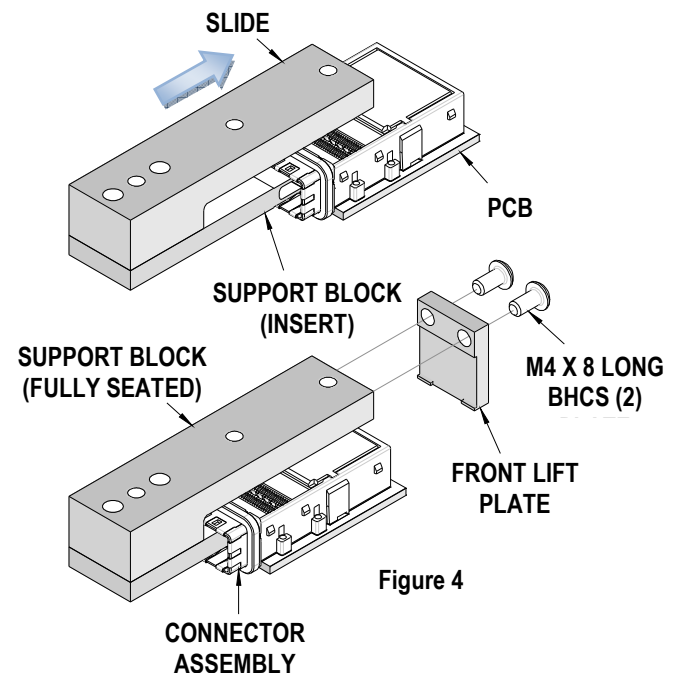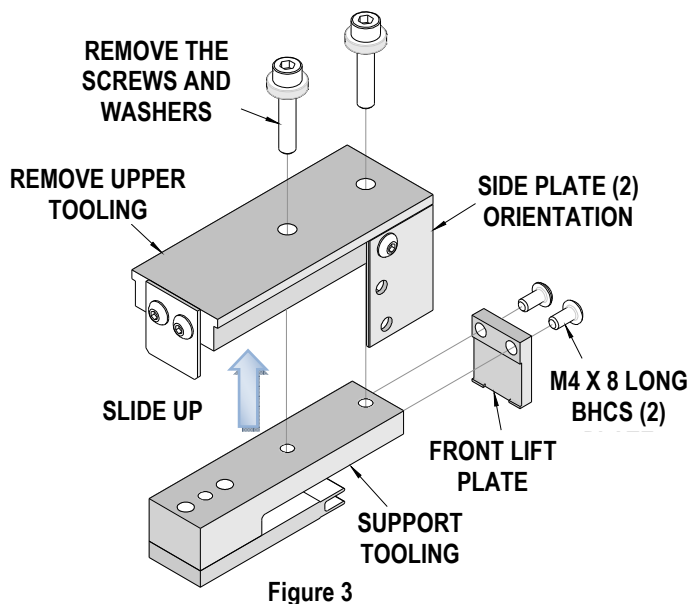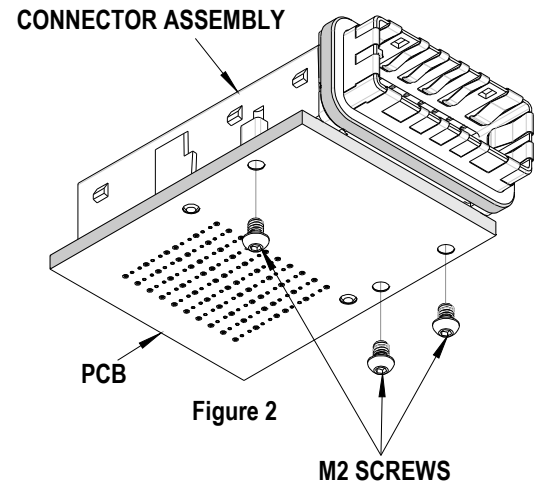

7. Place the top removal assembly over the support block and the connector assembly, aligning the front tab of the top removal assembly with the front edge of the support block. See Figure 5.
8. Now place the washers and screws into the holes in the top removal assembly and turn until seated on the top plate, using a 4mm hex wrench to tighten the screws.

9. Tighten each screw, one turn in an alternating pattern until the connector assembly is removed from the PCB. See Figure 6.

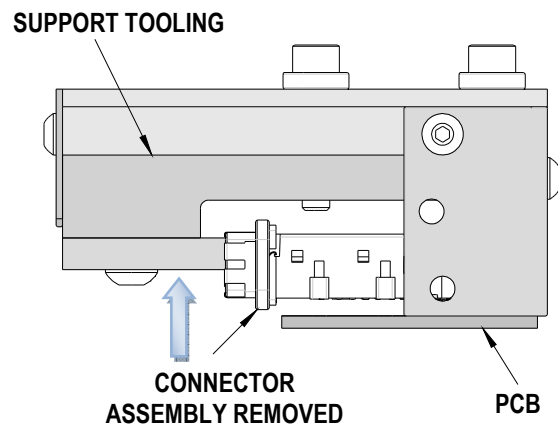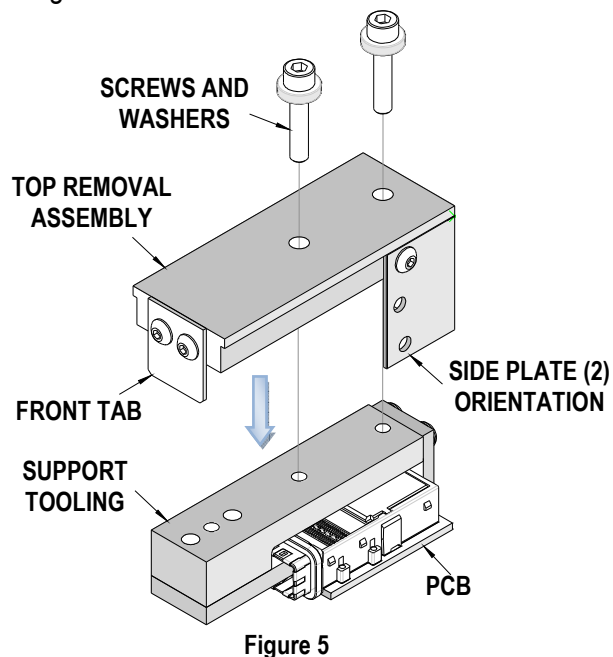

Connector Assemblies Removal (With Connector Assemblies on Both sides)



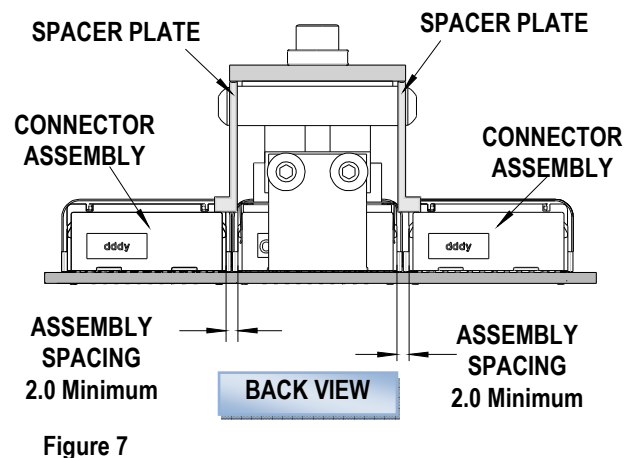


Figure 7 shows the allowable spacing between zHD connector assemblies; using the (2) Side Plate rotated 90°.

Use the correct position of the side plates if the connector assemblies are 2.0mm apart shown in Figure 6. This connector assembly arrangement allows the side plates to rest on the top surface of the adjacent connector assembly on both sides.

Connector Assemblies Removal (With Connector Assemblies on one side)

Figure 8 shows the allowable spacing between zHD connector assemblies, using the (2) Side Plate. Use the correct position of the side plates if the connector assemblies are 2.0mm apart shown in Figure 7. This connector assembly arrangement allows one the side plates (rotated 90°) to rest on the top surface of the adjacent connector assembly and one side plate to rest on the PCB.

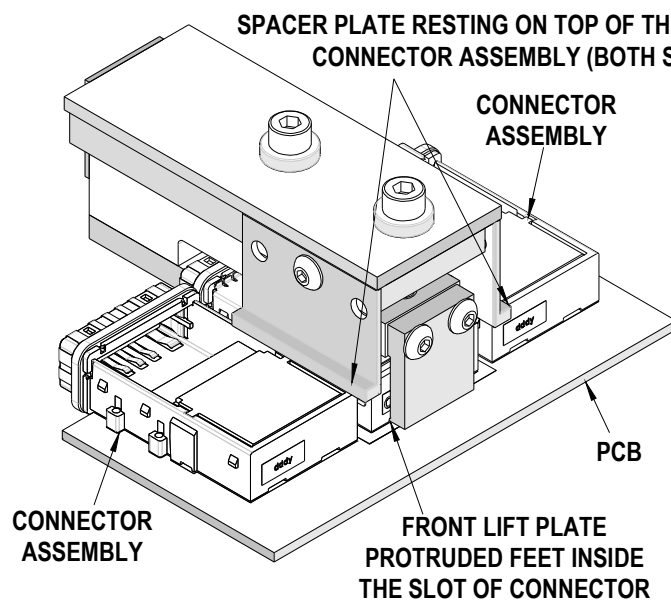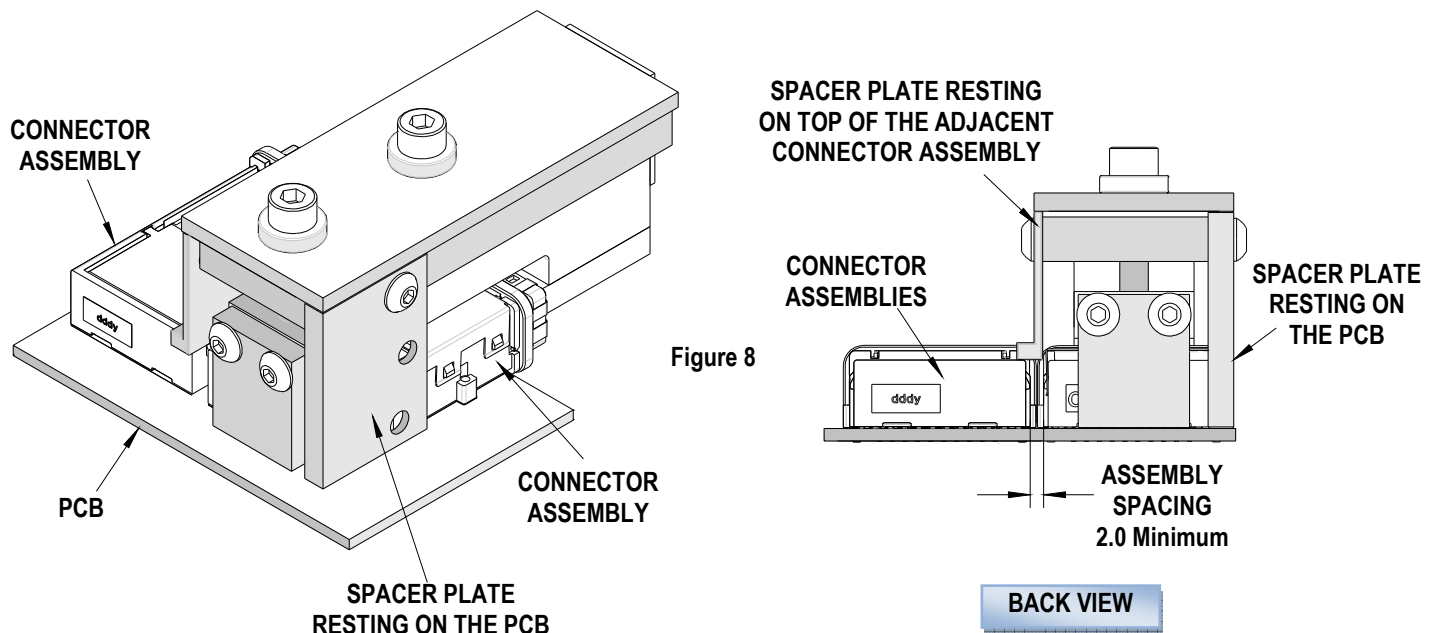

CAUTION: Molex application tooling specifications are valid only when used with Molex connectors and tooling.

Contact Information

For more information on Molex application tooling please contact Molex at 1-800-786-6539.

<http://www.molex.com>



**Стандарт
Электрон
Связь**

Мы молодая и активно развивающаяся компания в области поставок электронных компонентов. Мы поставляем электронные компоненты отечественного и импортного производства напрямую от производителей и с крупнейших складов мира.

Благодаря сотрудничеству с мировыми поставщиками мы осуществляем комплексные и плановые поставки широчайшего спектра электронных компонентов.

Собственная эффективная логистика и склад в обеспечивает надежную поставку продукции в точно указанные сроки по всей России.

Мы осуществляем техническую поддержку нашим клиентам и предпродажную проверку качества продукции. На все поставляемые продукты мы предоставляем гарантию .

Осуществляем поставки продукции под контролем ВП МО РФ на предприятия военно-промышленного комплекса России , а также работаем в рамках 275 ФЗ с открытием отдельных счетов в уполномоченном банке. Система менеджмента качества компании соответствует требованиям ГОСТ ISO 9001.

Минимальные сроки поставки, гибкие цены, неограниченный ассортимент и индивидуальный подход к клиентам являются основой для выстраивания долгосрочного и эффективного сотрудничества с предприятиями радиоэлектронной промышленности, предприятиями ВПК и научно-исследовательскими институтами России.

С нами вы становитесь еще успешнее!

Наши контакты:

Телефон: +7 812 627 14 35

Электронная почта: sales@st-electron.ru

Адрес: 198099, Санкт-Петербург,
Промышленная ул, дом № 19, литера Н,
помещение 100-Н Офис 331