


Quad squib driver ASIC for safety application

Datasheet - production data

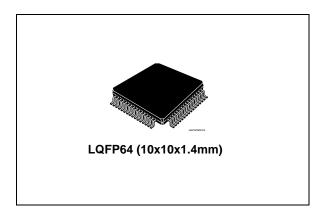

Features

- 4 deployment drivers with SPI selectable firing current and times
- Capability to deploy the squib with 1.2 A (min)/2 ms, 1.75 A (min)/1.0 ms and 1.75 A (min)/0.65 ms between VRES of 7 V to 37 V
- Capability to deploy the squib with 1.5 A (min)/2 ms between VRES of 7 V to 25 V
- Firing capability to deploy all channels simultaneously
- Independently controlled high-side and lowside MOS for diagnosis

- Analog output available for resistance measurement
- Squib short to ground, short to battery and MOS diagnostic available on SPI register
- Capability to deploy the squib when the low side MOS is shorted to ground
- 2 fire enable inputs
- 5.5 MHz SPI interface
- · Low voltage internal reset
- · 2 kV ESD capability on all pins
- Package: LQFP64
- Technology: ST proprietary BCD5 (0.65µm)
- RoHS compliant

Description

The L9660 is intended to deploy up to 4 squibs. Squib drivers are sized to deploy 1.2 A minimum for 2 ms, 1.75 A minimum for 1 ms and 1.75 A minimum for 0.65 ms during load dump along with 1.5 A minimum for 2 ms for VRES voltages less than 25 V.

Full diagnostic capabilities of the squib interface are provided.

Table 1. Device summary

Order code	Amb. temp range, °C	Package	Packing
L9660	-40 to +95	LQFP64	Tray
L9660TR	-40 to +95	LQFP64	Tape and reel

Contents

1	Bloc	k diagr	am and pin description	5
	1.1	Block	diagram	5
	1.2	Pin de	scription	5
	1.3	Applic	ation schematic	7
2	Elec	trical si	pecifications	8
_	2.1	-	ute maximum ratings	
	2.2		ute maximum degraded operating ratings	
	2.2		ting ratings	
	2.3	•	cal characteristics	
	2.4	2.4.1	General	
		2.4.2	Electrical characteristics - Squib deployment drivers and diagnostics	
		2.4.3	SPI timing	
		2.4.0	Gir tilling	10
3	Fund	ctional	description	18
	3.1	Overvi	iew	18
	3.2	Gener	al functions	18
		3.2.1	Power on reset (POR)	18
		3.2.2	RESETB	18
		3.2.3	Reference resistor	19
		3.2.4	Loss of ground	19
		3.2.5	VRESx capacitance	19
		3.2.6	Supply voltages	19
		3.2.7	Ground connections	19
	3.3	Serial	peripheral interface (SPI)	20
		3.3.1	SPI pin descriptions	20
	3.4	Squib	drivers	21
		3.4.1	Firing	21
		3.4.2	Firing current measurement	24
		3.4.3	Fire enable (FEN) function description	25
		3.4.4	Squib diagnostics	25
		3.4.5	SPI register definition for squib functions	30
4	Pacl	kage inf	formation	47
_				
5	Rev	ision his	story	48



L9660 List of tables

List of tables

Table 1.	Device summary	1
Table 2.	Pin description	5
Table 3.	Absolute maximum ratings	8
Table 4.	Absolute maximum degraded operating ratings	9
Table 5.	Operating ratings	
Table 6.	General - DC electrical characteristics	. 10
Table 7.	Squib deployment drivers and diagnostics - DC electrical characteristics	. 11
Table 8.	SPI timing - DC electrical characteristics	. 16
Table 9.	Features that are accessed/controlled for the SPI	. 20
Table 10.	SPI MOSI/MISO response	
Table 11.	How faults shall be interpreted	. 27
Table 12.	Diagnostic Mode HSS selection	. 29
Table 13.	Diagnostic mode 3 VRESx selection	. 29
Table 14.	MISO responses to various events	. 30
Table 15.	Command description summary	31
Table 16.	Configuration mode 1	. 32
Table 17.	Configuration mode 2	. 33
Table 18.	Deployment mode 1 bit definition	
Table 19.	Deployment mode 2 bit definition	
Table 20.	Diagnostic selection	
Table 21.	Diagnostic mode LS FET selection	
Table 22.	Diagnostic mode HS FET selection	
Table 23.	Diagnostic mode HSS selection	
Table 24.	Diagnostic mode VRESx selection	
Table 25.	Channel selection	
Table 26.	MOSI diagnostic mode 1 bit definition	
Table 27.	DEPLOY_STATUSx flag and DEPLOY_SUCCESSx flag conditions	
Table 28.	MOSI monitor mode 2 Bit definition	
Table 29.	Current measurement channel selections	
Table 30.	MOSI monitor mode 3 bit definition	
Table 31.	MOSI monitor mode 4 bit definition	. 46
Table 32	Document revision history	48



List of figures

List of figures

Figure 1.	Block diagram	!
Figure 2.	Application schematic	
Figure 3.	MOS settling time and turn-on time 2	18
Figure 4.	SPI timing diagram	
Figure 5.	MISO loading for disable time measurement	
Figure 6.	POR timing	
Figure 7.	Deployment drivers diagram	
Figure 8.	Driver activation timing diagram	23
Figure 9.	Squib diagnostics block diagram	20
Figure 10	LOEP64 (10 x 10 x mm) mechanical data and package dimensions	4



Block diagram and pin description 1

1.1 **Block diagram**

Figure 1. Block diagram Squib CS_D VRES0 SCLK deployment & SQH0 MOSI diagnostics SPI SQL0 MISO GND0 VRES1 **IREF** SQH1 VDD SQL1 GND1 VRES2 TEST Deployment GND FEN1 SQH2 Driver SQL2 FEN2 & GND2 VRES3 Diagnostics SQH3 SQL3 VSDIAG GND3 RESETB AOUT AGND

1.2 Pin description

Table 2. Pin description

Pin Number	Pin name	Description	I/O type	Reset state
1	MISO	SPI Data Out	Output	Hi-Z
2	N.C.	Not connected	-	-
3	FEN1	Fire enable for channels 0 and 1	Input	Pull-down
4	N.C.	Not connected	-	-
5	RESETB	Reset pin	Input	Pull-up
6	GND	Ground (Analog & Digital)	-	-
7	VDD	VDD Supply Voltage	Input	-
8	N.C.	Not connected	-	-
9	FEN2	Fire enable for channels 2 and 3	Input	Pull-down
10	N.C.	Not connected	-	-
11	N.C.	Not connected	-	-
12	CS_D	SPI Chip Select for Deployment Driver	Input	Pull-up
13	MOSI	SPI Data In	Input	Hi-Z
14	N.C.	Not connected	-	-

577

GAPGPS00660

Table 2. Pin description (continued)

Pin Number	Pin name	Description	I/O type	Reset state
15	N.C.	Not connected	-	-
16	SCLK	SPI Clock	Input	Hi-Z
17	N.C.	Not connected	-	-
18	N.C.	Not connected	-	-
19	N.C.	Not connected	-	-
20	N.C.	Not connected	-	-
21	N.C.	Not connected	-	-
22	N.C.	Not connected	-	-
23	N.C.	Not connected	-	-
24	N.C.	Not connected	-	-
25	GND2	Power Ground for Loop Channel 2	-	-
26	SQL2	Low Side Driver Output for Channel 2	Output	Pull-down
27	SQH2	High Side Driver Output for Channel 2	Output	Hi-Z
28	VRES2	Reserve Voltage for Loop Channel 2	Input	-
29	VRES3	Reserve Voltage for Loop Channel 3	Input	-
30	SQH3	High Side Driver Output for Channel 3	Output	Hi-Z
31	SQL3	Low Side Driver Output for Channel 3	Output	Pull-down
32	GND3	Power Ground for Loop Channel 3	-	-
33	TEST	Test pin	Input	Pull-down
34	VSDIAG	Supply for Deployment Driver Diagnostics	Input	-
35	N.C.	Not connected	-	-
36	Reserved	Factory testmode output	-	-
37	Reserved	Factory testmode output	-	-
38	N.C.	Not connected	-	-
39	N.C.	Not connected	-	-
40	N.C.	Not connected	-	-
41	N.C.	Not connected	-	-
42	N.C.	Not connected	-	-
43	N.C.	Not connected	-	-
44	N.C.	Not connected	-	-
45	N.C.	Not connected	-	-
46	IREF	External Current Reference Resistor	Output	-
47	AGND	Ground Reference for AOUT	-	-
48	AOUT	Analog Output for Loop Diagnostics	Output	Hi-Z
49	N.C.	Not connected	-	-

Pin Number	Pin name	Description	I/O type	Reset state
50	N.C.	Not connected	-	-
51	N.C.	Not connected	-	-
52	N.C.	Not connected	-	-
53	N.C.	Not connected	-	-
54	N.C.	Not connected	-	-
55	N.C.	Not connected	-	-
56	N.C.	Not connected	-	-
57	GND1	Power Ground for Loop Channel 1	-	-
58	SQL1	Low Side Driver Output for Channel 1	Output	Pull-down
59	SQH1	High Side Driver Output for Channel 1	Output	Hi-Z
60	VRES1	Reserve Voltage for Loop Channel 1	Input	-
61	VRES0	Reserve Voltage for Loop Channel 0	Input	-
62	SQH0	High Side Driver Output for Channel 0	Output	Hi-Z
63	SQL0	Low Side Driver Output for Channel 0	Output	Pull-down

Power Ground for Loop Channel 0

Table 2. Pin description (continued)

1.3 Application schematic

GND0

64

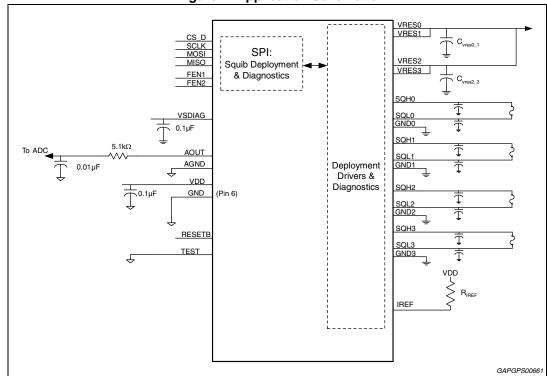


Figure 2. Application schematic

2 Electrical specifications

2.1 Absolute maximum ratings

The following maximum ratings are continuous absolute ratings; exceeding any one of these values may cause permanent damage to the integrated circuit.

Table 3. Absolute maximum ratings

Symbol	Parameter	Value	Unit
V _{DD} ⁽¹⁾	Supply voltage	- 0.3 to 5.5	V
V _{SDIAG}	Supply voltage for squib diagnostics	- 0.3 to 40	V
VRESx	VRES voltage (VRES0, VRES1, VRES2, VRES3)	- 0.3 to 40	V
SQHx	Squib high side drivers (SQH0, SQH1, SQH2, SQH3)	- 0.6 to 40	V
SQLx	Squib low side drivers (SQL0, SQL1, SQL2, SQL3)	- 0.3 to 40	V
TEST	Test pin	-0.3 to 40	V
VI	Discrete input voltage (RESETB, CS_D, SCLK, MOSI, FEN1, FEN2, IREF)	- 0.3 to 5.5	V
Vo	Discrete output voltage (MISO, AOUT)	- 0.3 to 5.5	V
AGND	Analog output reference	-0.3 to 5.5	V
GNDx	Ground (GND0, GND1, GND2, GND3)	-0.3 to 5.5	V
T _j ⁽²⁾	Maximum steady-state junction temperature	150	°C
T _{amb}	Ambient temperature	-40 to 95	°C
T _{stg}	Storage temperature	-65 to 150	°C
R _{th j amb}	Thermal resistance junction to ambient (on FR-4 board)	46	°C/W
	naximum ratings are up to 48 hours; exceeding any one of these cause permanent damage to the integrated circuit.	e values for longer than a	total time o
V_{DD}	Supply voltage	- 0.3 to 6.0	V
V _I	Discrete input voltage (RESETB, CS_D, SCLK, MOSI, FEN1, FEN2, IREF)	- 0.3 to 6.0	V
V _O	Discrete output voltage (MISO, AOUT)	- 0.3 to 6.0	V
AGND	Analog output reference	-0.3 to 6.0	V
GNDx	Ground (GND0, GND1, GND2, GND6, GND7)	-0.3 to 6.0	V
T _j ⁽²⁾	Maximum steady-state junction temperature	150	°C
T ^{amb}	Ambient temperature	-40 to 95	°C
T _{stg}	Storage temperature	-65 to 150	°C
R _{th j amb}	Thermal resistance junction to ambient (on FR-4 board)	46	°C/W

^{1.} Exceeding a $V_{\mbox{\scriptsize DD}}$ of 5.1V during a deployment may cause damage

To allow for deployment the maximum steady state junction temperature cannot exceed 130°C. Under the operating ratings defined in Section 2.3 the steady state junction temperature does not exceed 130°C.



2.2 Absolute maximum degraded operating ratings

Under the following deviations to the ratings indicated in Section 2.3 the L9660 performance is degraded and not meeting the electrical characteristics outlined in Section 2.4. The SPI and diagnostics still function but not meet specified electrical parameters.

Table 4. Absolute maximum degraded operating ratings

Symbol	Parameter	Value	Unit
V _{DD} ⁽¹⁾	V _{DD} ⁽¹⁾ Supply voltage		V
V _{SDIAG}	V _{SDIAG} Supply voltage for squib diagnostics		V
V _{RES}	V _{RES} VRES voltage (VRES0, VRES1, VRES2, VRES3)		V
VI	Discrete input voltage (RESETB, DEPEN, CS_D, SCLK, MOSI, FEN1, FEN2, IREF)	- 0.3 to (VDD +0.3)	V
Vo	V _O Discrete output voltage (MISO, AOUT)		V
Tj	T _j Junction temperature -40 to 1		°C

^{1.} Exceeding a $V_{\mbox{\scriptsize DD}}$ of 5.1V during a deployment may cause damage.

Note:

The above is provided for informational purposes only and results in degraded operation. Under the above conditions the SPI is functional as well as diagnostics, though the electrical performance may not conform to the parameters outlined in Section 2.4. Firing requirements as indicated in Section 2.4 may not be met with the conditions above.

2.3 Operating ratings

Table 5. Operating ratings

Symbol	Parameter	Value	Unit	
V_{DD}	Supply voltage	4.9 to 5.1	V	
V _{SDIAG}	Supply voltage for squib diagnostics	7 to 37	V	
V _{RESx}	VRES voltage (VRES0, VRES1, VRES2, VRES3,)	7 to 37	V	
VI	Discrete input voltage (RESETB, CS_D, SCLK, MOSI, FEN1, FEN2, IREF)	- 0.3 to (V _{DD} +0.3)	V	
V _O	Discrete output voltage (MISO, AOUT)	-0.3 to (VDD + 0.3)	V	
T _{amb}	Ambient temperature	-40 to 95	°C	
R _{Th j-amb}	Thermal resistance junction to ambient (on FR-4 board)	46	°C/W	

Comments:

VSDIAG supply provides power for squib resistance and HSS diagnostics

VDD is used for all internal functions as well as short to battery/ground and high squib resistance diagnostics.




2.4 Electrical characteristics

2.4.1 General

 $\begin{array}{l} 4.9 \; V \leq V_{DD} \leq 5.1 \; V; \; 7 \; V \leq V_{RESX} \leq 37 \; V; \; 7 \; V \leq V_{SDIAG} \leq 37 \; V; \; FEN1 = FEN2 = V_{DD}; \\ R_REF = 10 \; k\Omega, \; \pm 1 \; \%, \; 100 \; PPM; \; -40 \; ^{\circ}C \leq T_{A} \leq +95 \; ^{\circ}C; \; unless \; other \; specified. \end{array}$

Table 6. General - DC electrical characteristics

Symbol	Parameter	Test condition	Min.	Тур.	Max.	Unit
Osc	Internal oscillator frequency	Tested with 10K, 1%, 100ppm Iref resistor	4.75	-	5.25	MHz
V _{RST1}	Internal voltage reset VDD after de-glitch time (t _{POR}) See <i>Figure 6</i>	VDD level for L9660 to report reset condition -deployment drivers are disabled	4.0	-	4.5	V
V _{RST2}	Internal voltage reset VDD with no de-glitch time See Figure 6	Guaranteed by design	2.1	-	3.0	V
t _{POR}	POR De-glitch timer	Timer for VRST1	5	-	25	μs
		No squib diagnostics. No deployment.	-	-	15	
I _{DD}	Input current VDD	Resistance measurement diagnostics with no fault condition present.	-	-	17	mA
		Short to -0.3V on SQL; VRCM active	-	-	35	
		During deployment	-	-	15	
R _{IREF_H}	Resistance threshold IREF	-	ı	-	60.0	kΩ
R _{IREF_L}		-	2.0	-	-	kΩ
V_{IH_RESETB}	3	-	ı	-	2.0	V
V_{IL_RESETB}	Input voltage threshold RESETB	-	0.8	-	-	V
V _{HYS_RST}		-	100	-	300	mV
V _{IH_TEST}	Input voltage threshold TEST	Guaranteed by design	-	3.2	-	V
I _{TESTPD}	Input pull-down current TEST	-	1.0	-	2.5	mA
I _{AOUT_SHRT}	AOUT pin current limit	AOUT short to ground during squib resistance diagnostics	ı	-	20	mA
I _{RESETPU}	Input pull-up current RESETB	RESETB = VIH to GND	-10	-	-50	μΑ
I _{RESx}	Quiescent current for VRESx during HSS test	Current per pin during HSS test excluding selected channel	ı	-	10	μΑ
V _{IH}	Input voltage threshold	Input Logic = 1	•	-	2.0	V
V_{IL}	(MOSI, SCLK, CS_D)	Input Logic = 0	0.8	-	-	V
V _{HYST}	Input hysteresis (MOSI, SCLK, CS_D)		100	-	300	mV



	(11.11.11.11.11.11.11.11.11.11.11.11.11.					
Symbol	Parameter	Test condition	Min.	Тур.	Max.	Unit
1 .	Input leakage current	VIN = VDD	-	-	1	μΑ
I _{LKGD}	MOSI, SCLK	VIN = 0 to VIH	-1	-	-	μA
I _{PU_CS}	PU_CS Input pull-up current CS_D	VIN = VIH to GND	-10	-	-50	μA
V _{OH}	Output voltage MISO	IOH = -800µA	VDD- 0.8	-	-	V
V _{OL}		IOL = 1.6mA	-	-	0.4	V
1	Tri-state current MISO	MISO = VDD	-	-	1	μΑ
lHI_Z	Tri-state current MISO	MISO = 0V	-1	-	-	μΑ

Table 6. General - DC electrical characteristics (continued)

2.4.2 Electrical characteristics - Squib deployment drivers and diagnostics

4.9 V ≤ V_{DD} ≤ 5. 1V; 7 V ≤ V_{RESX} ≤ 37 V; 7 V ≤ V_{SDIAG} ≤ 37 V; FEN1 = FEN2 = V_{DD}; R_REF = 10 kΩ, ±1%, 100 PPM; -40 °C ≤ T_A ≤ +95 °C; C_VRES0_1 ≥ 68nF; C_VRES2_3 ≥ 68nF; unless other specified.

Table 7. Squib deployment drivers and diagnostics - DC electrical characteristics

Symbol	Parameter	Test condition	Min.	Тур.	Max.	Unit
General			•	•	•	
I _{LKGSQH}	Leakage current SQH	VSDIAG = VDD = 0, VRES = 37V, VSQH = 0V	-	-	50	50 μA 10 μA 10 μA 4.1 mA 5% V 20 mA 3.42 ΚΩ 3.98 ΚΩ 8.42 ΚΩ .42 mA
I _{LKGVRES}	Bias current VRESX	VSDIAG = 18V; VDD = 5V; VRES = 37V; SQH shorted to SQL	-	-	10	μΑ
I _{LKGSQL}	Leakage current SQL	VSDIAG = VDD = 0, VSQL = 18V	-10	-	10	μA
I _{PD}	Pull-down current SQL	VSQL = 1.5V to 20V	3.3	-	4.1	mA
V_{BIAS}	Diagnostics Bias voltage	Nominal 3.6V	-5%	VDD* 0.72	+5%	V
Short to bat	tery/ground diagnostics - R _{se}	$_{ m qb}$ from 0 Ω to Open	•	•		
I _{SVRCM}	Maximum diagnostics bias current limit	Short to battery or ground test active VSQH = 0V	5	-	20	mA
		Vbatt = 6.5V	1.92	-	3.42	ΚΩ
R_{STB}	Short to battery resistance threshold	Vbatt = 16V	8.61	-	13.98	ΚΩ
		Vbatt = 20V	11.42	-	18.42	ΚΩ
I _{STB}	Short to battery current threshold	-	0.9	-	1.42	mA
R _{STG}	Short to ground threshold	-	1.07	-	2.1	ΚΩ
I _{STG}	Short to ground current threshold	-	1.8	-	3.2	mA



12/49

Table 7. Squib deployment drivers and diagnostics - DC electrical characteristics (continued)

Symbol	Parameter	Test condition	Min.	Тур.	Max.	Unit
^t DIAGTIMEOUT	Diagnostic delay time	From/CS ↑ until Test Results are Valid, Output voltage change 0V to VDD * 0.72	-	-	300	μs
		C_{SQHx} = 0.12 μ F C_{SQLx} = 0.12 μ F				
High side saf	ing diagnostics					
I _{SRC_HSS}	Diagnostic current into selected VRESx pin during test	Normal conditions	710	-	950	μA
I _{HSS_4}	Current during diagnostic	All 4 VRESx pins tied together	710	-	1020	μΑ
R _{HSSNORM_t}	Normal resistance range when running high side safing diagnostics	All 4 VRESx pins tied together	1.4	-	2.5	kΩ
V _{HSSNORM_r}	Normal voltage range between VSDIAG and VRESx pin) when running high side safing diagnostics	All 4 VRESx pins tied together	1.0	-	2.5	V
V _{HSSSHORT_t}	Short voltage threshold between VSDIAG and VRESx pin)	All 4 VRESx pins tied together	0.5	-	1.0	V
V _{HSSOPEN_th}	Open voltage threshold between VSDIAG and VRESx pin)	All 4 VRESx pins tied together	2.5	-	4.0	V
^t DIAGTIMEOUT	Diagnostic delay time	From/CS ↑ until test results are valid, C _{SQHx} = 0.12µF C _{SQLx} = 0.12µF	-	-	500	μs
Voltage meas	surement diagnostics (VRES)	()				
I _{RESx}	Max diagnostic current into V _{RESx} pin	Normal Conditions	-	-	50	μΑ
V _{VRESXLO_th}	Low voltage threshold for VRESx pin	-	5.0	-	7	V
$V_{VRESXHI_th}$	High voltage threshold for VRESx pin	-	13.7	-	18.0	V
t _{DIAGTIMEOUT}	Diagnostic delay time	From/CS ↑ until test results are valid.	-	-	100	μs
MOS diagnos	stics					
I_MOS	MOS test max current	Normal conditions	-	-	I _{SVRCM}	mA
^t SHUTOFF	LS/HS MOS turn off under fault condition	Time is measured from the valid LS/ HS MOS current > 100mA to the LS/HS turn off	-	-	4	μs




Table 7. Squib deployment drivers and diagnostics - DC electrical characteristics (continued)

Symbol	Parameter	Test condition	Min.	Тур.	Max.	Unit
t _{FETtimeout}	FET time-out	Normal Conditions	-	-	100	μs
High squib re	esistance diagnostics					
R _{SQHIZ}	High load resistance threshold	-	1.07	-	2.1	kΩ
I _{HR}	High resistance current threshold	-		I _{STG}	•	mA
†DIAGTIMEOUT	MOS diagnostic delay time	From/CS ↑ until test results are valid, CsQHx = 0.12µF CSQLx = 0.12µF	-	-	300	μs
Squib resista	nce diagnostics					
V _{OH}	Output voltage AOUT	High saturation voltage; I _{AOUT} = -500μA	VDD- 0.2	-	-	V
V _{OL}	Output Voltage AOOT	Low Saturation Voltage; I _{AOUT} = +500μA	-	-	0.2	V
I _Z	Tri-State Current AOUT	AOUT = VDD	-	-	1	μA
	TII-State Current AOOT	AOUT = 0V	-1	-		μA
R _{SQB RANGE}	Load resistance range	-	0	-	10.0	Ω
	Resistance measurement analog output tolerance	$0\Omega \le R_{SQB} < 3.5\Omega$	V _{AOUT} - 0.095V	-	V _{AOUT} + 0.095V	V
V_{AOUT}	$V_{AOUT} = VDD \cdot \left[\frac{1}{9.75} + \left(0.08 \cdot \frac{R_{SQB}}{\Omega} \right) \right]$	$3.5\Omega \le R_{SQB} \le 10\Omega$	V _{AOUT} . 0.95V	-	V _{AOUT} . 1.05V	V
I _{SRC}	Resistance measurement current source	$V_{DD} = 5.0V; V_{SDIAG} = 7.0V$ to 37V	38	-	42	mA
I _{SINK}	Resistance measurement current sink	IPD OFF, VSQLx = 4 V	45	-	57	mA
I _{SLEW}	Rmeas current di/dt	30% - 70% of ISRC	2	•	11	mA/μs
V_{cmpr}	Voltage threshold on squib pin to shutdown ISRC	-	2.65		3.25	٧
t _{isrcshtdwn}	Shutdown time	Guaranteed by design	-	-	30	μs
VLSDrsqb	LSD (V_SQL) voltage during resistance measure	-	0.8	-	2.2	V
t _{R_WAIT} Rmeas wait time		Wait time before AOUT voltage is stable for ADC reading R AOUT= $5.1k\Omega$; C_{AOUT} =10nF	-	-	300	μs
FENx input p	ins					
t _{FENfilter}	Minimum pulse width	-	12	-	16	μs
I _{FENPD}	Internal pull-down current	VIN = VIL to VDD	20	-	50	μA



Table 7. Squib deployment drivers and diagnostics - DC electrical characteristics (continued)

Symbol	Parameter	Test condition	Min.	Тур.	Max.	Unit
V _{FENLO}	Input low voltage threshold	-	0.8	-	-	V
V _{FENHI}	Input high voltage threshold	-	-	-	2.0	V
T _{FENLATCH}	FEN Latch timer	-	0	-	512	ms
t _{FLACC}	FEN latch timer accuracy	-	- 20%	-	20	%
Deployment	drivers					
T _{RESOLUTION}	Diagnostic timing / resolution	$I_{HS} \ge I_{MEAS}$	22.5	25	27.5	μs
T _{ACCURACY}	Diagnostic time accuracy	$0s \le T_{MEASURE_TIME} \le 3.7 ms$ $C_{SQUIB_HI} = 0.12 \mu F$ $C_{SQUIB_LO} = 0.12 \mu F$	-	-	2	LSB
I _{MEAS}	High side driver current limit detect threshold	Guaranteed by design	I _{HSX} x 0.90	-	I _{HSX} x 0.99	Α
R _{DSonTOTAL}	Total high and low side MOS on resistance	High side MOS + low side MOS D9:D8="11"; V _{RES} = 7V; I = 1.6A @95°C	-	-	2.0	Ω
R _{DSonHS}	High side MOS on resistance	D9:D8="11"; VRES = 7V;	-	0.3	0.8	Ω
R _{DSonLS}	Low side MOS on resistance	$T_{amb} = 95$ °C; IVRES = 1.6A;	-	0.6	1.2	Ω
I _{HS_12A}		Configuration mode 1 bits D9:D8="00" SQHx shorted to ground; V _{RES} = 7 to 37V	1.21	-	1.47	Α
I _{HS_15A}	High side deployment current limit	Configuration Mode 1 bits D9:D8="01" SQHx shorted to ground; V _{RES} = 7 to 25V	1.51	-	1.85	А
I _{HS_175A}		Configuration Mode 1 bits D9:D8="11" SQHx shorted to ground; V _{RES} = 7 to 37V	1.76	-	2.14	А
t _{ILIM}	Low side MOS shutdown under short to battery	V _{sqblo} =18V	90	-	110	μs
I _{LS}	Low side MOS current limit		2.2	-	4.0	Α
^t settle	Firing current settling time	Time from fire command CS_D rising edge to where firing current remains within specified limits CSQUIR UI = 0 to 0.12uF	-	-	150	μs
		$C_{SQUIB_HI} = 0$ to $0.12\mu F$ $C_{SQUIB_LO} = 0$ to $0.12\mu F$				





Table 7. Squib deployment drivers and diagnostics - DC electrical characteristics (continued)

Symbol	Parameter	Test condition	Min.	Тур.	Max.	Unit
t _{DEPLOY-2ms}		$ \begin{array}{l} \text{VRES} = 7 \text{Vto } 37 @ \text{ I}_{\text{HS}_12A} \\ \text{VRES} = 7 \text{Vto } 25 @ \text{ I}_{\text{HS}_15A} \\ \text{For I}_{\text{HS}_12A} \text{ and I}_{\text{HS}_15A} \\ \text{Firing current measured} \\ \text{from CS}_D \text{ rising edge} \\ \end{array} $	2.15	-	2.5	ms
t _{DEPLOY-1ms}	Deployment time	V _{RES} = 7Vto 37V For I _{HS_175A} Firing current measured from CS_D rising edge	1.15	-	1.40	ms
t _{DEPLOY} - 0.65ms		V _{RES} = 7Vto 37V For I _{HS_175A} Firing current measured from CS_D rising edge	0.65	-	0.85	ms

Figure 3. MOS settling time and turn-on time 2

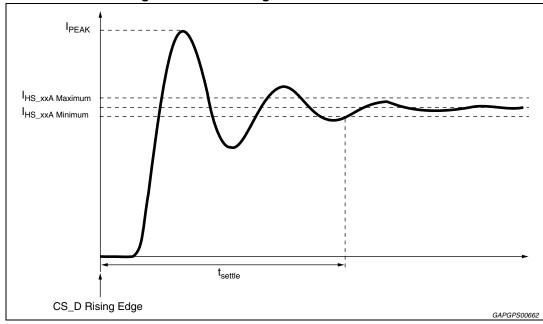

2.4.3 SPI timing

All SPI timing is performed with a 150 pF load on MISO unless otherwise noted.

 $4.9V \le V_{DD} \le 5.1V$; $7V \le V_{RESX} \le 37V$; $7V \le V_{SDIAG} \le 37V$; (FEN1 = FEN2 = V_{DD} ; R_REF = 10KΩ, ±1%, 100PPM; -40°C ≤ $T_A \le +95$ °C; C_VRES0_1 ≥ 68nF; C_VRES2_3 ≥ 68nF; unless other specified.

Table 8. SPI timing - DC electrical characteristics

No.	Symbol	Parameter	Min.	Тур.	Max.	Unit
-	fop	Transfer frequency	dc	-	5.50	MHz
1	tsck	SCLK Period	181	-	-	ns
2	tLEAD	Enable Lead Time	65	-	-	ns
3	tLAG	Enable Lag Time	50	-	-	ns
4	tsclkhs	SCLK, High Time	65	-	-	ns
5	tsclkls	SCLK, Low Time	65	-	-	ns
6	tsus	MOSI, Input Setup Time	20	-	-	ns
7	tHS	MOSI, Input Hold Time	20	-	-	ns
8	tA	MISO, Access Time	-	-	60	ns
9	tDIS (1)	MISO, Disable Time	-	-	100	ns
10	tvs	MISO, Output Valid Time	-	-	60	ns
11	tHO ⁽¹⁾	MISO, Output Hold Time	0	-	-	ns
12	tro	Rise Time (Design Information)	-	-	30	ns
13	tFO	Fall Time (Design Information)	-	-	30	ns
14	tcsn	CS_D, Negated Time	640	-	-	ns
15	tCLKN	Time between CS rising edge and first transition of SCLK must be higher than tCLKN. It happens when multiple devices are connected to the same SCLK and MOSI but with different chip select.	500	-	-	ns

Parameters t_{DIS} and t_{HO} shall be measured with no additional capacitive load beyond the normal test fixture capacitance on the MISO pin. Additional capacitance during the disable time test erroneously extends the measured output disable time, and minimum capacitance on MISO is the worst case for output hold time.

SCLK

MISO

MSB OUT

DATA

LSB OUT

CARE

GAPGPS00663

57

VDD +5 V 4.0 V MISO

NISO -1k CS The CS GAPGPS00664

Figure 5. MISO loading for disable time measurement



3 Functional description

3.1 Overview

The L9660 is an integrated circuit to be used in air bag systems. Its main functions include deployment of air bags. The L9660 supports 4 deployment loops.

3.2 General functions

3.2.1 Power on reset (POR)

The ASIC has a power on reset (POR) circuit, which monitors VDD voltage. When VDD voltage falls below V_{RST1} for longer than or equal to t_{POR} , all outputs are disabled and all internal registers are reset to their default condition. A second reset level, V_{RST2} , also monitors VDD but uses no filter time, so all outputs are disabled and all internal registers are reset to their default condition when VDD falls below the reset threshold.

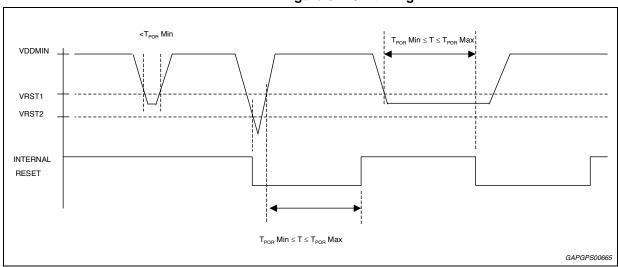


Figure 6. POR timing

3.2.2 RESETB

The RESETB pin is active low. The effects of RESETB are similar to those of a POR event, except during a deployment. When a deployment is in-progress, the L9660 ignore the RESETB signal.

However, it shuts itself down as soon as it detects a POR condition. When the deployment is completed and RESETB signal is asserted, the L9660 disables its outputs and reset its internal registers to their default states.

A de-glitch timer is provided for the RESETB pin. The timer protects this pin against spurious glitches. The L9660 neglects RESETB signal if it is asserted for shorter than tGLITCH. RESETB has an internal pull-up in case of an open circuit.

18/49 DocID024714 Rev 2

3.2.3 Reference resistor

IREF pin shall be connected to VDD supply through a resistor, RIREF. When the L9660 detects the resistor on IREF pin is larger than RIREF_H or smaller than RIREF_L, it goes into a reset condition. All outputs are disabled and all internal registers are reset to their default conditions.

3.2.4 Loss of ground

GND

When the GND pin is disconnected from PC-board ground, the L9660 goes in reset condition. All outputs are disabled and all internal registers are reset to their default conditions.

GND0-GND3

A loss of power-ground (GND0 – GND3) pin/s disables the respective low side driver/s on SQLx. However, the high side driver of the respective channel is still able to be turned on. Thus under the scenario where the low side is shorted to ground the L9660 is able to provide the programmed firing current for the specified time.

An open GNDx connection on any channel has no affect on the other channels. An open GNDx condition is detected using the low side MOS diagnostics.

AGND

The AGND pin is a reference for AOUT pin. When AGND loses its connection, the voltage on AOUT pin is pulled up to VDD voltage and L9660 goes in reset condition. All outputs are disabled and all internal register are reset to their default conditions.

3.2.5 VRESx capacitance

To properly ensure all diagnostics functions a typical capacitor of equal to or greater than 68nF is required close to the firing supply pins. Thus a minimum of 2 capacitors are required with one placed close to the VRES0 and VRES1 pins and a second capacitor close to the VRES2 and VRES3 pins.

3.2.6 Supply voltages

The primary current sources for the different functions of the ASIC are as follows:

- VRESx Firing currents along with HSS and HS FET diagnostic currents
- VSDIAG Squib resistance and HSS diagnostics
- VDD is used for all internal functions as well as short to battery/ground and high squib resistance diagnostics.

3.2.7 Ground connections

GND pin (6) is not connected internally to other ground pins (AGND or power ground GNDx). A ground plane is needed to directly connect the GND pin. This ground plane needs to be isolated from the high current ground for the squib drivers to prevent voltage shifts.

AGND pin should be connected to ground plane too to minimize drop versus ground reference of ADC that capture AOUT voltage.



3.3 Serial peripheral interface (SPI)

The L9660 contains one serial peripheral interface for control of the squib functions. The following table shows features that are accessed/controlled by the SPI.

Function	Pin names	Features accessed
Squib diagnostic and deployment SPI	SCLK MISO MOSI CS_D	All Squib Diagnostics; Squib related status information; Squib Arming and Firing; Software Reset; Component ID & Revision

Table 9. Features that are accessed/controlled for the SPI

The software reset accessed over SPI is resets squib functions. The L9660 has a counter to verify the number of clocks in SCLK. If the number of clocks in SCLK is not equal to 16 clocks while CS D is asserted, it ignores the SPI message and sends a SPI fault response. L9660 computes SPI error length flag through counting the number of SCLK rising edges occurring when CS_D is active. If the first SCLK rising edge occurs when CS_D is inactive and the falling edge occurs when CS_D is low, it is considered as valid edge.

MOSI commands contain several unused bits, all those bits must be 0. Commands are not recognized valid if one or more unused bits are not 0.

3.3.1 SPI pin descriptions

Chip select (CS_D)

Chip-select inputs select the L9660 for serial transfers. CS D can be asserted at any given time and are active low. When chip-select is asserted, the respective MISO pin is released from tri-state mode, and all status information is latched into the SPI shift register. While chip-select is asserted, register data is shifted into MOSI pin and shifted out of MISO pin on each subsequent SCLK. When chip-select is negated, MISO pin is tri-stated. To allow sufficient time to reload the registers; chip-select pin shall remain negated for at least tCSN. The chip-select inputs have current sinks which pull these pins to the negated state when there is an open circuit condition. These pins have TTL level compatible input voltages allowing proper operation with microprocessors using a 3.3 to 5.0 volt supply.

Serial clock (SCLK)

SCLK input is the clock signal input for synchronization of serial data transfer. This pin has TTL level compatible input voltages allowing proper operation with microprocessors using a 3.3 to 5.0 volt supply. When chip select is asserted, both the SPI master and L9660 latch input data on the rising edge of SCLK. The L9660 shifts data out on the falling edge of SCLK.

Serial data output (MISO)

MISO output pins shall be in one tri-state condition when chip select is negated. When chip select is asserted, the MSB is the first bit of the word/byte transmitted on MISO and the LSB is the last bit of the word/byte transmitted. This pin supplies a rail to rail output, so if interfaced to a microprocessor that is using a lower VDD supply, the appropriate microprocessor input pin shall not sink more than I_{OH(min)} and shall not clamp the MISO output voltage to less than $V_{OH(min)}$ while MISO pin is in \acute{a} logic "1" state. When connecting to a micro using a lower supply, such as 3.3V, a resistor divider shall be used with high enough impedance to prevent excess current flow.

20/49 DocID024714 Rev 2



Serial data input (MOSI)

MOSI inputs take data from the master processor while chip select is asserted. The MSB shall be the first bit of each word/byte received on MOSI and the LSB shall be the last bit of each word/byte received.

This pin has TTL level compatible input voltages allowing proper operation with microprocessors using a 3.3 to 5.0 volt supply.

3.4 Squib drivers

3.4.1 Firing

The on-chip deployment drivers are designed to deliver 1.2 A (min) for 2ms (min) and 1.75A (min) for 1ms (min) and 1.75A (min) for 0.65ms (min) with VRESx voltages between 7V and 37 V. In addition the L9660 can provide 1.5A minimum for 2ms for VRESx voltages between 7V and 25V. The firing condition is selectable via the SPI. At the end of a deployment, a deploy success flag is asserted and can be read using the appropriate SPI command. Each VRESx and GNDx connection is used to accommodate 4 loops that can be deployed simultaneously.

Upon receiving a valid deployment condition, the respective SQHx and SQLx drivers are turned on. The only other activation of the SQHx and SQLx drivers is momentarily during a MOS diagnostic. Otherwise, SQHx and SQLx are inactive under any normal, fault, or transient conditions. Upon a successful deployment of the respective SQHx and SQLx drivers, a deploy command success flag is asserted via SPI. Refer to *Figure 8* for the valid conditions and the deploy success flag timing.



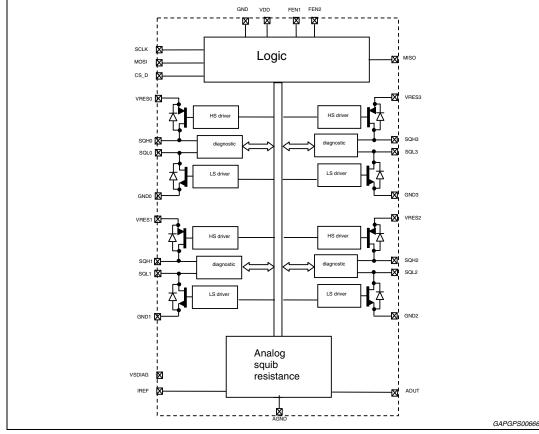


Figure 7. Deployment drivers diagram

The L9660 is protected against inadvertent turn on of the firing drivers unless the appropriate conditions are present. Non-typical conditions do not cause driver activation. This includes the case where VRESx and/or VSDIAG pins are connected to a supply up to 40V and VDD is between 0V and VDD min. Under these conditions the L9660 ensures that driver activation does not occur. No flow of current shall be allowed through the SQHx and SQLx pins.

Driver activation

The firing of a squib driver requires the appropriate FEN function to be active and two separate sixteen bit writes be made over the SPI. The FEN function is defined as the result of the FENx pin OR'd with the internal FENx latch. The FENx pin going high initiates the FEN function. With the FEN 1 function being active and the appropriate Arm and Fire commands sent then Squib_0 & 1 drivers would be activated. With the FEN 2 function being active and the appropriate Arm and Fire commands sent then Squib_2 & 3 drivers would be activated.

The first write is to ARM the drivers in preparation of receiving the fire command. The ARM command stops on all channels any diagnostics that are active. Any combination of squibs can be armed. The second write is a FIRE command that must directly follow the ARM command and that activates the desired driver pairs assuming the FEN function is valid. If there is a parity mismatch the data bits are ignored and the squib drivers do not have their status changed, and the two write sequence must then be started again. If there is a mismatch in channels selected then only those channels selected in both the Arm and Fire commands are activated.

477

During the first write, when the drivers are armed, all diagnostic functions are cleared. The FIRE command must follow the ARM command along with the FEN function active for driver activation. If a command is between the ARM and FIRE command then the sequence must be restarted. An error response is received for the Fire command if the ARM/FIRE sequence is not followed.

The ARM/FIRE commands and FEN function are independent from each other. The L9660 begins the t_{DEPLOY} timer once a valid ARM/FIRE sequence has been received. If a valid ARM/FIRE command has been sent and the FEN function is inactive then the drivers are not activated but the t_{DEPLOY} timer starts. If the FEN function becomes active before t_{DEPLOY} has expired then the drivers become active for the full t_{DEPLOY} time. If the FEN does not become active before t_{DEPLOY} has expired then the sequence needs to be restarted. A diagram illustrating this is shown in *Figure 8*.

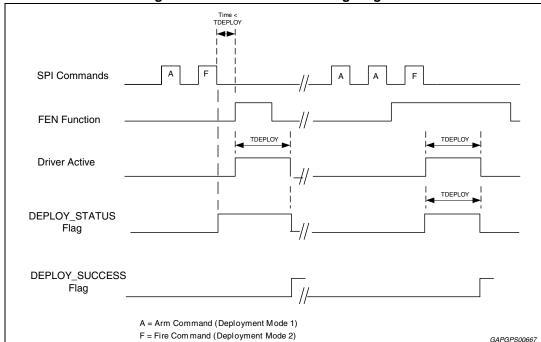


Figure 8. Driver activation timing diagram

Only the channels selected in the ARM and, directly following, the FIRE command are activated.

By reading the appropriate registers a status of the deployment is provided. If a valid Arm/Fire sequence has been provided the status flag becomes active. This flag remains active for as long as the T_{DEPLOY} timer is counting. Depending on the state of the FEN function the DEPLOY_STATUS flag is active a minimum of T_{DEPLOY} and a maximum of 2 x T_{DEPLOY} . If driver activation did occur (both a valid Arm/Fire sequence and the appropriate FEN function active within the appropriate time) then the DEPLOY_SUCCESS flag is active following the completion of the driver activation period. This flag is active until cleared by software. If a valid Arm/Fire sequence did occur but the FEN function was never activated within the T_{DEPLOY} time then the DEPLOY_SUCCESS flag remains '0'.

Once the Deploy Success Flag is set, it inhibits the subsequent deployment command until a SPI command to clear this deployment success flag is received. Bits D7 through bit D0 are used to clear/keep the deploy success flag. When these bits are set to '1,' the flag can be



cleared. Otherwise, the state of these flags is not affected. The Success flag must be cleared to allow re-activation of the drivers.

During driver activation the respective high side (SQHx) and low side (SQLx) drivers turn on for t_{DEPLOY}.

L9660 driver activation does not occur or, if firing is in process, is terminated under the following conditions:

- Power On Reset (POR)
- IREF resistance is larger than RIREF_H or smaller than RIREF_L
- Loss of ground condition on GND pin

The following conditions are ignored when driver activation is in progress:

- RESETB
- Valid soft reset sequences
- SPI commands except as noted below. Response for ignored commands is 0xD009
- FEN function

The following table shows the response when sending SPI commands during deployment.

SPI MISO SPI MOSI Response Configuration SPI fault response MOSI register mode messages are ignored Commands Execute for channels not in deployment; no effect Deployment Commands Command mode to deploying channel Diagnostic Commands SPI fault response MOSI diagnostic mode messages are ignored **Monitor Commands** Status response Execute for all channels

Table 10. SPI MOSI/MISO response

Note 1: SPI MISO sent in the next SPI transmission.

The L9660 can only deploy a channel when the FEN function is active. Once the drivers are active the L9660 keeps the drivers on for the required duration regardless of the FEN state. Once complete a status bit is set to indicate firing is complete.

3.4.2 Firing current measurement

All channels have a 7 bit current measurement register that is used to measure the amount of time the current is above I_{MEAS} during firing. The maximum measurement for each channel is 3.175ms nominal based on a bit weight of 25µs. The current measurement register does not increment outside the deployment time. The current measurement begins incrementing once the current has exceeded 95% of the nominal target value. The count continues to increment from the stored value until either a clear command has been issued for that channel or all '1's are present in the corresponding channel measurement register. If all '1's are present for a channel's measurement register and another firing sequence has been issued the register remains all '1's. Only if a clear command has been issued that particular register resets to all '0's. All other channels shall keep the stored measurement count. During firing the current measurement register cannot be cleared. After a clear command has been issued for a channel then the channel is ready to count if the current exceeds the specified level. After a POR or software reset the L9660 resets all 4 measurement registers to all '0's.



A "real-time" current measurement status of all the channels is available. If a current limit status request is sent then the L9660 reports in the next SPI transfer whether the current is above or below IMEAS for each of the channels. The current status results can be read at any time and correctly reports whether current is flowing. The content of the internal current status register is captured on the falling edge of chip select during the SPI response. The internal status register is updated at a nominal sample time of 25 μ s and is independent from SPI transfers.

For this circuit there is a continuously performed compensation of the comparator in order to remove offset errors, which is independent from SPI commands. The compensation is being performed every 12.8 µs based on the internal clock.

3.4.3 Fire enable (FEN) function description

The Fire Enable (FEN) function is the result of the FENx input OR'd with the internal FEN latch. If the FEN latch is not enabled and the FENx pin is low then activations of the FET drivers are disabled except as indicated during the MOS test. All internal diagnostics are active, and results are available through the serial interface. This pin must be pulled high to initiate the FEN latch function (if programmed) and enable firing of the FET drivers.

There are two FEN function blocks

- FEN Function 1 is FEN1 input OR'd with FEN1 latch timer and used for enabling channels 0 & 1
- FEN Function 2 is FEN1 input OR'd with FEN2 latch timer and used for enabling channels 2 & 3

The FEN function is considered active when the pin is active ('1' or high) for more than 12 microseconds. Tolerance range for the filter used is 12 to 16 µs.

When the FENx input is active, '1', the FEN function activates. When the FENx input state transitions from '1' to '0', the programmable latching function holds the FEN function active until the time-out of the FEN timer. The programmable latch and hold function are capable of delays of 0ms, 128ms, 256ms, and 512ms. There are 2 independent timers with the timer for FEN1 associated with channels 0 & 1, timer for FEN2 associated with channels 2 & 3. The timer is reset to the programmed time when the FENx pin transitions from '0' to '1'. The programmable counter delay is set through a SPI command.

3.4.4 Squib diagnostics

Overview

The ASIC is able to perform the following diagnostics

- Short to battery and ground on both SQHx and SQLx pins with or without a squib
- Loop to loop diagnostics
- Squib resistance measurement
- Squib High resistance
- High side safing FET diagnostics
- VRESx voltage status
- High and low side FET diagnostics

Below is a block diagram showing the components involved in the squib diagnostics.



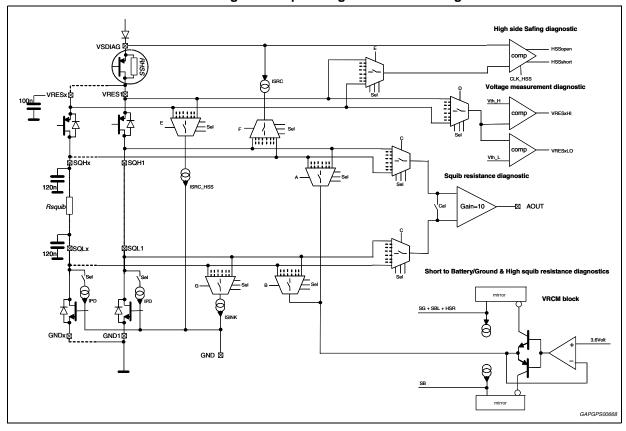


Figure 9. Squib diagnostics block diagram

Short to battery/ground and loop to loop diagnostics

The leakage diagnostic includes short to battery, short to ground and a short between loop tests. The test has to run for each SQHx and SQLx pin so that shorts can be detected regardless of the resistance between the squib pins.

Normal short to battery/ground diagnostics.

For the test the internal VRCM is switched on and connected to the selected pin (SQHx or SQLx) pin. The IPD bit selected OFF deactivates the pull-down current on the channel under test and all other channels. During the test with no leakage present the voltage on the selected SQHx or SQLx pin is equal to VBIAS and no current is sunk or sourced by VRCM. If a leakage to ground, battery or to SQLy is present, the VRCM sinks or sources a current less then I_{SVRCM} trying to keep VBIAS. Two current comparators, ISTB and ISTG, detect the abnormal current flow.

Loop to loop diagnostics

For this test the same procedure is followed except the pull-down current (IPD) is selected to be ON that deactivates the pull-down current only on the channel under test with all other channel pull-down currents active. If a short to ground fault is active, assuming it was not active during normal short to battery/ground diagnostics, then that particular channel has a short to another squib loop. To detect loop to loop shorts between ASICs in the system the Stop diagnostics command with IPD enabled needs to be sent to the other ASICs before running the loop to loop diagnostics on the channel to be monitored. If the channel being monitored has a short to ground fault active, assuming it was not active during normal short

26/49 DocID024714 Rev 2

to battery/ground diagnostics, then that particular channel has a short to another squib loop in the system.

The following table indicated how faults would be interpreted.

Fault condition for channel ⁽¹⁾	Channel leakage diagnostics results with I _{PD} ON	Channel leakage diagnostics results with I _{PD} OFF								
No Shorts	No Fault	No Fault								
Short to battery	STB Fault	STB Fault								
Loop to loop short	STG Fault	No Fault								
Short to ground	STG Fault	STG Fault								

Table 11. How faults shall be interpreted

Once the command is issued the state of the comparators is captured on the next falling edge of CS_D. The results are valid after T_{SHORTDIAG} time, which is mainly dependant on the external capacitors on the squib lines.

Squib resistance measurement

During a resistance measurement, both ISRC and ISINK are switched on and connected to the selected SQHx and SQLx channel. A differential voltage is created between the SQHx and SQLx pin based in the ISRC current and resistance between the pins. The analog output pin, AOUT, provides the resistance-measurement voltage based on the scaling factor indicated in the electrical parameters section. The tri-state output, AOUT, is connected to an ADC input of a microprocessor. When not running squib resistance diagnostics the AOUT pin is in high impedance state.

To increase accuracy of the squib resistance measurements the offset of the internal amplifier can be provided on the AOUT pin. This is done by setting the appropriate calibration bit, waiting the required time, and reading the converted AOUT voltage connected to the microprocessor ADC.

The normal measurement method for squib resistance is to take a single ended analog output measurement for a channel (V_{AOUT} with AMC bit=0) and use the tolerances and equation shown in the parametric table. The L9660 is also capable of improving the tolerance at resistances below 3.5 Ohms by removing the offset of the differential comparator. This method works taking the single ended analog output results for a channel (V_{AOUT} with AMC bit=0) and subtracting the internal comparator offset measurement of V_{AOUT} (V_{AOUT} with AMC bit=1). The summary of the equation for this is as follows:

$$A_{OUT_CAL} = (V_{AOUT} - V_{AOUT_CAL})/VDD$$

$$A_{OUT_CAL} \text{ typical} = 0.08 \text{ x R}_{SQUIB}$$

High squib resistance diagnostics

During a high squib resistance diagnostic, VRCM and ISINK are switched ON and connected to SQHx and SQLx on the selected channel. Current flowing on SQHx is measured and compared to IHR threshold to identify if resistance is above or below RSQHZ. The results are reported in the next SPI message. Once the command is issued



Condition where 2 open channels have the SQHx pins shorted is not detected. If one squib is open and the
other has a normal squib connection then the fault is indicated on the channel that is open. Assumes both
pins are tested.

the state of the squib resistance is valid after THSR is captured on the next falling edge of CS_D. The voltage source for this test is VBIAS which is based on the VDD supply.

A way to reduce the time required until valid results are available is to perform a leakage diagnostics prior to this test. The leakage diagnostics biases the voltage on the squibs to around 3.5V, which is the same bias voltage required for the high squib resistance diagnostic. By running this sequence of diagnostics the test time reduces from 1.5ms to 200µs.

High and low side FET diagnostics

Prior to either the HS or LS FET diagnostics being run it is required to have the VRCM switched ON. Running the leakage diagnostics with the appropriate delay time prior to either the HS or LS FET diagnostics can do this. When the FET diagnostic command is issued the flags is initially cleared. If the VRMC is not active or some leakage is present then the MOS is not turned ON, the test is aborted and Fault Present (FP) bit set. The FEN function must be inactive to run test. The test does not start if FEN function is active on channel under test and it results in the Fault Present (FP) bit to set.


If no leakage is present and FEN function is inactive, the MOS (High side or Low Side) is turned ON. The L9660 monitors the current sink or sourced by VRCM. If the MOS is working properly, this current exceeds ISTB (HS test) or ISTG (LS test) and the L9660 turns off the driver under test within the specified time $T_{SHUTOFF}$. If the current does not exceed ISTB or ISTG then the test is terminated and the MOS switched off by the L9660 within $T_{FETTIMEOUT}$. During the $T_{FETTIMEOUT}$ period the FET Time-out bit is set (FT=1) and cleared at the expiration of the timer.

The results must be compared with the leakage diagnostic results to distinguish between a real leakage/short versus a FET fault. For high side FET diagnostics if no faults were indicated in the preceding leakage diagnostics then a normal result would be STB=1;STG=0 (with FT=0;FP=0). If the returned results for the high side FET test is not STB=1;STG=0 (with FT=0;FP=0) then either the FET is not functional, a short occurred during the test, or there is a missing VRESx connection for that channel. For low side FET diagnostics if no faults were indicated in the preceding leakage diagnostics then a normal result would be STB=0;STG=1 (with FT=0;FP=0). If the returned results for the low side FET test is not STB=0;STG=1 (with FT=0;FP=0) then either the FET is not functional, a short occurred during the test, or there is a missing GNDx connection for that channel. If the test is in progress then a bit (FT) is used in the response to indicate this status.

Once the command is issued, output of comparators is latched.

On the next falling edge of CS_D, comparator latched data is captured and reported to MISO response. The results remain latched until the next test is initiated (diagnostic write command). If the test is in progress then a bit is used in the response to indicate the test completion. If the FET under test is working properly then the results indicate a "Short to Ground" for LS test and "Short to Battery" for HS test. If a leakage is present prior to the test or FENx is asserted then both "Short to Ground" and Short to Battery" are indicated in the response for either a LS or HS FET test.

For all conditions the current on SQHx/SQLx never exceeds I_{SVRCM}. On the squib lines there may be higher transient currents due to the presence of the filter capacitor.



High side safing diagnostics

When the command is received the L9660 activates IHSS on the selected VRESx. The diagnostics measures the difference between VSDIAG and VRESx. The internal comparator detects open, short or normal condition based on the differential voltage between VSDIAG and VRESx.

The results are reported in the next SPI message using bits HSS1 and HSS0 as indicated in the following table. Once the command is issued the voltages are captured on the next falling edge of CS_D.

 Condition
 HSS1
 HSS0

 (VSDIAG-VRESx) < V_{HSSSHORT_th}
 0
 0

 V_{HSSSHORT_th} < (VSDIAG-VRESx) < V_{HSSOPEN_th}
 0
 1

 V_{HSSOPEN_th} < (VSDIAG-VRESx)</td>
 1
 1

Table 12. Diagnostic Mode HSS selection

Voltage measurement diagnostics (VRESx)

When the command is received the L9660 activates a comparator for the selected channel. A 2 bit indication of the state of the VRESx pins is reported as indicated below. The results are reported in the next SPI message. Once the command is issued the voltages are captured on the next falling edge of CS_D.

Condition	VR1	VR0
V _{RESx} < V _{VRESXLO_th}	0	0
$V_{VRESXLO_th} < V_{RESx} < V_{VRESXHI_th}$	0	1
$V_{VRESXHI_th} < V_{RESx}$	1	1

Table 13. Diagnostic mode 3 VRESx selection

Loss of power ground

When any of the power grounds (GND0-3) are lost, no deployment can occur on the respective deployment channels because the low side driver is inactive. The high side driver for the respective channel can still be activated.

A loss of ground condition on one or several channels does not affect the operation of the remaining channels. When a loss of ground condition occurs, the source of the low side MOS is floating. In this case, no current flows through the low side driver.

This condition is detected as a fault by a low side MOS diagnostic. No additional faults are reported from any other diagnostic due to this condition.



3.4.5 SPI register definition for squib functions

The SPI provides access to read/write to the registers internal to the L9660. All commands and responses sent to/from the L9660 on SPI use set D13 as required for odd parity on the 16 bit word. The responses to the commands are sent in the next valid CS D.

The table below summarizes the MISO register mode response of various events and MOSI messages. After POR event, RESETB negated, and loss of GND, the L9660 sends 0x0000 in MISO for the first SPI transmission.

The MISO response shown here is the one received in the next valid SPI transmission after each event or MOSI write.

Event/MOSI message MISO response MOSI Parity error or unrecognized command 0xD000 MOSI transmission - Incorrect number of clocks/bits 0xD003 Incorrect firing sequence received (Firing Command without 0xD005 a valid Arm Command) Error due to message not allowed during deployment 0xD009 POR 0x0000 **RESETB** 0x0000 LOSS OF gnd 0x0000 RIREF out of range 0x0000 MOSI Write Soft Reset: \$AA 0x1X02

Table 14. MISO responses to various events

Note: X in software reset response interpreted as follows: D11=1;D10=0;D9:D8=CL bits

The SPI fault responses (0xD000 or 0xD003) indicate a fault in the last MOSI transmission. The L9660 uses the parity bit to determine the integrity of the MOSI command transmission.

0x2003

3.4.5.1 Squib SPI commands

MOSI Write Soft Reset: \$55 (after \$AA)

The following are the modes that are supported by the squib L9660 using SPI.

- Configuration mode
- Deployment mode
- Diagnostic mode
- Monitor mode

The table below is a summary of the modes and the functions that are achieved by sending the particular MOSI command. The following sections provide a full description of bit settings for each mode. All commands and responses use D13 to achieve odd parity.

Table 15. Command description summary

Command/mode	Description	Mode bits								
Command/mode	Description		D14	D13	D12	D11	D10	D09	D08	D07 - D00
Configuration com	mands									
Config. Mode 1	Current limit programming and software reset	0	0	Р	-	-	0	-	-	-
Config. Mode 2	FEN latch time Programming	0	0	Р	-	-	1	-	-	-
Deployment comma	ands									
Deployment Mode 1	Arming Command	0	1	Р	1	1	0	0	1	-
Deployment Mode 2	Firing Command	0	1	Р	0	0	0	0	0	-
Diagnostic commai	nds	•	•	•		•			•	
Diagnostic Mode 1	Disable Diagnostic	1	0	Р	-	0	0	0	-	-
Diagnostic Mode 2	Short to battery & ground diagnostics Short between loop diagnostics		0	Р	-	0	0	1	-	-
Diagnostic Mode 3	VRESx voltage diagnostics	1	0	Р	-	0	1	0	-	-
Diagnostic Mode 4	High Side Safing diagnostics	1	0	Р	-	0	1	1	-	-
Diagnostic Mode 5	Squib Resistance Diagnostics	1	0	Р	-	1	0	0	-	-
Diagnostic Mode 6	High Squib Resistance Diagnostics	1	0	Р	-	1	0	1	-	-
Diagnostic Mode 7	LS driver diagnostics	1	0	Р	-	1	1	0	-	-
Diagnostic Mode 8	HS driver diagnostics	1	0	Р	-	1	1	1	-	-
Monitor commands										
Monitor Mode 1	Deployment status	1	1	Р	-	0	0	-	-	-
Monitor Mode 2	Channel current limit measurement information	1	1	Р	-	0	1	-	-	-
Monitor Mode 3	FENx function status and active current limit status	1	1	Р	-	1	0	-	-	-
Monitor Mode 4	Revision and L9660 ID	1	1	Р	-	1	1	-	-	-
P = Parity bit – all c	ommands and responses use this	bit to	achie	eve o	dd pa	rity	•	•	•	

The squib circuits can be reset over when sending the appropriate configuration commands via SPI.

Configuration commands

Configuration mode 1

Configuration mode 1 main functions are as follows:

- Set Deployment current for all channels. All channels are either set to 1.2A/2ms,
 1.5A/2ms (Maximum VRESx Voltage limited to 25V) 1.75A/1ms or 1.75A/0.65ms
- Perform a software reset

The SPI message definition for MOSI commands and MISO responses in this mode are defined below.



MSB															LSB
D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
MOSI Command for configuration Mode 1															
0	0 P R/W SWR 0 CL Set bits Software Reset Sequence bits														
MISO Response for configuration Mode 1 (Except for Soft Reset/D11=1 and appropriate pattern)															
0	0	Р	R/W	SWR	0	CL Se	t bits	0	0	0	0	0	0	1	0

Table 16. Configuration mode 1

Bit		MOSI command	MISO response
DIL	State	Descript	ion
D15	0	Mode bits	See above
D14	0	INIOGE DITS	See above
D13		Odd Parity – Includes all 16 bits	Odd Parity – Includes all 16 bits
D12	0	Read (default) - When D12='0' bits D11 to D0 are ignored	R/W bit
DIZ	1	Write – Allows Soft reset and deployment programming	R/W DIL
D11	0	Sets Deployment Condition for ALL channels - When D11='0' bits D7 to D0 are ignored	See above
	1	Soft Reset Sequence – bits D8 and D9 are ignored	
D10	0		See above
D9		Sets Deployment Conditions	Internal Stored Value CL bits
		00 = 1.2A/2ms (Default)	
D8		01 = 1.5A/2ms	
D0		10 = 1.75A/0.65ms	
		11 = 1.75A/1ms	
D7 – D2			See above
D1	_	Software Reset-sequence	see above
D0	D0		See above

Bit [D9:D8] Bits used to set the firing current/time for all channels. The default state is '00' (1.2A/2ms min.)

Bits [D7:D0] The soft reset for the L9660, which includes deployment driver/diagnostics, is achieved by writing 0xAA and 0x55 within two subsequent 16-bit SPI transmissions. If the sequence is broken, the processor is required to re-transmit the sequence. The L9660 does not reset if the sequence is not completed within two subsequent 16-bit SPI transmissions. When soft reset command is received, the L9660 reset its deployment driver's internal logic and timers, including all internal registers. The effects of a soft reset is the same as for a POR event, except MISO response.

Bit [D1] For the first response after POR (or equivalent) the PU bit is set to '0'. For all responses following the bit is set to '1'.

Bit [D0]

Bit D0 used to report the soft reset sequence status. If valid soft reset sequences are received, bit D0 is set to '1.' Otherwise, bit D0 is set to '0.' When L9660 receives valid soft reset sequences, it sends a MISO configuration mode response containing 0x2003 in the next SPI transmission.

Configuration mode 2

Configuration mode 2 main function is as follows:

Set the latch time for FENx input

The SPI message definition for MOSI commands and MISO responses in this mode are defined below.

MSB												LSB			
D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
MOSI Command for configuration mode 2															
0	0	Р	R/W	0	1	Latch bits		0	0	0	0	0	0	0	0
MISO Response for configuration mode 2															
0	0	Р	R/W	0	1	Latch	n bits	0	0	0	0	0	0	0	0

Table 17. Configuration mode 2

		Table 111 Configuration filedo 2	<u> </u>				
Bit		MOSI command	MISO response				
DIL	State	Descripti	ion				
D15	0	Mode bits	See above				
D14	0	Widde bits	See above				
D13		Odd Parity – Includes all 16 bits	Odd Parity – Includes all 16 bits				
D12	0	Read (default) - When D12='0' bits D11 to D0 are ignored	R/W bit				
	1	Write – FEN latch programming	-				
D11	0	-	-				
D10	1	-	-				
D9		FEN latch time					
D8	-	00 = 0ms (default) 01 = 128ms 10 = 256ms 11 = 512ms	Internal Stored Value FEN latch bits				
D7 – D0	0	-	See above				

Bits [D9:D8]

Bits are used to set the period of the FEN latch timer. The L9660 has 2 independent timers. A valid FENx input starts the pulse stretch timer. These bits set the timer duration. These values default to '00' after a POR event.



Deployment commands

The deployment mode is used to activate the drivers. Two consecutive commands are required to activate the drivers. Any combination of channels can be fired as long as the prerequisite conditions are met as indicated in the previous section.

The SPI message definition for MOSI commands and MISO responses in Deployment Mode are defined below.

MSB															LSB
D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
MOSI C	MOSI Command for Deployment Mode 1														
0	1	Р	1	1	0	0	1	0	0	0	0	Arming Channel Select			elect
MISO Response for Deployment Mode 1															
0	1	Р	1	1	0	0	1	0	0	0	0	А	rmed C	hanne	ls
MOSI C	MOSI Command for Deployment Mode 2														
0	1	Р	0	0	0	0	0	0	0	0	0	Firing Channel Select			elect
MISO Response for Deployment Mode 2															
0	1	Р	0	0	0	0	0	0	0	0	0		nnels a nels wai inp	ting fo	

Table 18. Deployment mode 1 bit definition

Bit		MOSI command	MISO response				
ы	State	Des	scription				
D15	0	Mode bits	See above				
D14	1	Node bits	See above				
D13		Odd Parity – Includes all 16 bits	Odd Parity – Includes all 16 bits				
D12-D8		Arm pattern	See above				
D7	0	-	0				
D6	0	-	0				
D5	0	-	0				
D4	0	-	0				
D3	0	Channel 3 Idle (default)	Internal Stored Value Arm bit				
DS	1	Arm Channel 3	internal Stored value Arm bit				
D2	0	Channel 2 Idle (default)	Internal Stored Value Arm bit				
DZ	1	Arm Channel 2	internal Stored value Ami bit				
D1	0	Channel 1 Idle (default)	Internal Stored Value Arm bit				
וט	1	Arm Channel 1	Tinternal Stored Value Arm Dit				



Table 18. Deployment mode 1 bit definition

Bit		MOSI command	MISO response				
Біі	State	tate Description					
D0	0	Channel 0 Idle (default)	Internal Stored Value Arm bit				
D0	1	Arm Channel 0	internal Stored value Arm bit				

Table 19. Deployment mode 2 bit definition

Bit		MOSI command	MISO response				
ы	State	Des	cription				
D15	0	Mode bits	See above				
D14	1	-	See above				
D13		Odd Parity – Includes all 16 bits	Odd Parity – Includes all 16 bits				
D12 – D8		Fire pattern	See above				
D7	0	-	0				
D6	0	-	0				
D5	0	-	0				
D4	0	-	0				
D3	0	Channel 3 Idle (default)	Internal Danlay Status				
DS	1	Deploy Channel 3	Internal Deploy Status				
D2	0	Channel 2 Idle (default)	Internal Denley Status				
D2	1	Deploy Channel 2	Internal Deploy Status				
D1	0	Channel 1 Idle (default)	Internal Danlay Status				
וט	1	Deploy Channel 1	Internal Deploy Status				
D0	0	Channel 0 Idle (default)	Internal Danley Status				
טט	1	Deploy Channel 0	Internal Deploy Status				

The Deploy Status becomes '1' when there is a valid fire sequence. Once active it becomes '0' when the time out has expired waiting FEN activation or when squib driver has turned off for fire completion. The same information is available when receiving a response from Monitor Mode 1.

For the drivers to be fire capable the command mode 1 (Arming) must be sent followed by command mode 2 (Firing). With this sequence valid and FEN active then firing begins. A break in the sequence requires the process to be restarted. All other bit patterns for D12-D0 are ignored and the L9660 responds with \$D005.

To begin a deployment 2 consecutive commands need to be sent along with the FEN active (external or internal latch). An example of a firing sequence for channel 0 would be as follows

FENx active or inactive

TX - 0x5901 - ARM Channel 0

RX – Based on previous command



```
TX - 0x5901 - ARM Channel 0
```

RX - 0x5901

TX - 0x5901 - ARM Channel 0

RX - 0x5901

TX – 0x6001 – Firing on Channel 0 is started on if FEN is active

RX - 0x5901

TX – 0x6001 – Command ignored – sequence is not allowed

RX - 0x6001

TX – 0x6001 – Command ignored

RX - 0xD005

Alternatively, if the sequence is broken the response is as in the following example

FENx active

TX - 0x5901 - ARM Channel 0

RX - Based on previous command

TX - 0x2000 - Read of Register Mode 1

RX - 0x5901

TX – 0x6001 – Command ignored – sequence is not allowed

RX – contents of register

TX – 0x6001 – Command ignored – sequence is not allowed

RX - 0xD005

If, for example, channel 0 and 1 bits are set in the Arm command and channel 0 and 2 bits are set in the fire command then the drivers on channel 0 are activated (assuming FEN function is active) and there are no effect on channel 2.

During a deployment, any commands directed to the channel that is in deployment are ignored and the response shall be 0xD009.

Diagnostic commands

Diagnostic Mode

Diagnostic mode main functions are as follows:

- Squib short to battery/ground diagnostics
- Loop to loop diagnostics
- Normal Squib Resistance Diagnostics
- High Squib Resistance Diagnostics
- High side safing diagnostics
- VRESx measurement
- LS and HS FET Test

The SPI message definition for MOSI commands and MISO responses in Diagnostic Mode are defined below.



Write commands definition

MSB															LSB
D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
MOSI	Comm	and fo	r Diag	nostic	Mode E	Execut	ion								
1	0	Р	1	Diag. S	Selectio	n bits	0	0	0	SQ P	IPD_DIS	AMC	Char	nnel se	election
MISO	MISO Response for Diagnostic Mode, Stop Diagnostic Selection (MOSI D11:D9=000) Diagnostic Mode 1														
1	0	Р	1	0	0	0	0	0	0	0	IPD_DIS	0		000	
MISO	MISO Response for Short to Battery/Ground Selection (MOSI D11:D9=001) Diagnostic Mode 2														
1	0	Р	1	0	0	1	STB	STG	0	SQP	IPD_DIS	0	Char	nnel se	election
MISO	MISO Response for Diagnostic Mode, Vresx Selection (MOSI D11:D9=010) Diagnostic Mode 3														
1	0	Р	1	0	1	0	VR1	VR0	0	0	IPD_DIS	0	Char	nnel se	election
MISO	Respoi	nse fo	r Diagı	nostic I	Mode, I	High S	ide Safi	ng Sele	ction	(MOS	SI D11:D9=	011) Di	agnos	tic Mo	de 4
1	0	Р	1	0	1	1	HSS1	HSS0	0	0	IPD_DIS	0	Char	nnel se	election
MISO	Respoi	nse fo	r Diagı	nostic I	Mode, \$	Squib	Resista	nce Sel	ectio	n (MO	SI D11:D9=	=100) C	iagno	stic M	ode 5
1	0	Р	1	1	0	0	0	0	0	0	IPD_DIS	AMC	Char	nnel se	election
MISO	Respoi	nse fo	r Diagı	nostic I	Mode, I	High S	quib Re	sistanc	e Sel	ectior	(MOSI D1	1: D 9=1	1 01) Di	iag. M	ode 6
1	0	Р	1	1	0	1	HSR	0	0	0	IPD_DIS	0	Char	nnel se	election
MISO	Respoi	nse fo	r Diagı	nostic I	Mode, I	Low Si	ide FET	Test Se	lection	on (MC	OSI D11:D9	=110)	Diagn	ostic I	Mode 7
1	0	Р	1	1	1	0	STB	STG	FP	FT	IPD_DIS	0	Char	nnel se	election
MISO	Respoi	nse fo	r Diagı	nostic I	Mode, I	High S	ide FET	Test Se	electi	on (M	OSI D11:D	9=111)	Diagn	ostic	Mode 8
1	0	Р	1	1	1	1	STB	STG	FP	FT	IPD_DIS	0	Char	nnel se	election

Read commands definition

MSB															LSB
D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
MOSI	Comm	and fo	r Diag	nostic	Mode	, REA	D comm	and							
1	0	Р	0	0	0	0	1	1	1	1	0	0		000	1
MISO F	Respo	esponse for Diagnostic Mode, READ command													
1	0	Р	0		. Selecternal :		Х	Х	Х	Х	IPD_DIS	Х	S	Chani Select ernal	ion

Bits D13 Parity bit. Command and response use odd parity

Bits D12 R/W

1 = Write (execute command)

0 = Read

For bits D11:D09 the following table shall be used for diagnostic selection.



Table 20. Diagnostic selection

Diagnostic		Bits		Current source	Comparator or
Diagnostic	D11	D10	D9	active	amplifier
Stop Diagnostic	0	0	0	NO	NO
Short to Battery/Ground and short between loops	0	0	1	Y (VMRC)	Y (Comp ISTB/ISTG)
VRESx Diagnostic	0	1	0	N	Y (Comp VRESx)
High Side Safing Diagnostics	0	1	1	Y (IHSS)	Y (Comp HSS)
Squib Resistance Diagnostics	1	0	0	Y (ISRC/ISINK)	Y (Amply)
High Squib Resistance Diagnostics	1	0	1	Y (VMRC/ISINK)	Y (Comp IHR)
LS FET test	1	1	0	Y (VMRC)	Y (Comp ISTB/ISTG)
HS FET test	1	1	1	Y (VMRC)	Y (Comp ISTB/ISTG)

Bits D8:D7

The definition of the response bits changes as follows based on diagnostic select

STB/STG bit Definition with MOSI D11:D9=001 (Leakage Test)

STB bit Bit used for indicating leakage to battery.

0 = No leakage to battery

1 = Short to battery / HS Driver test pass

STG bit Bit used for indicating leakage to ground.

0 = No leakage to battery

1 = Short to ground / LS Driver test pass

STB/STG bit Definition with MOSI D11:D9=110 (LS FET)

STB, STG bits see table below

Table 21. Diagnostic mode LS FET selection

Condition	STB	STG
Test in Process (FT=1); Fault present prior to run test (FP=1); or LS FET/GNDx open fault (FP=0,FT=0). Only Valid if test is in process or inactive.	0	0
Short to battery occurred during test.	1	0
Test Pass if leakage diagnostics did not indicate a short to Gnd.	0	1



STB/STG bit definition with MOSI D11:D9=111 (HS FET)

STB, STG bits see table below

Table 22. Diagnostic mode HS FET selection

Condition	STB	STG
Test in Process (FT=1); Fault present prior to run test (FP=1); or HS FET/VRESx open fault (FP=0,FT=0). Only Valid if test is in process or inactive.	0	0
Test Pass if leakage diagnostics did not indicate a short to battery.	1	0
Short to ground occurred during test.	0	1

HSS1:HSS0 bit definition with MOSI D11:D9=011 (High side safing)

HSS1:HSS0 bits see table below

Table 23. Diagnostic mode HSS selection

Condition	HSS1	HSS0
(VSDIAG-VRESx) < V _{HSSSHORT_th}	0	0
$V_{HSSSHORT_th} < (VSDIAG-VRESx) < V_{HSSOPEN_th}$	0	1
$V_{HSSOPEN_th} < (VSDIAG-VRESx)$	1	1

VR1:VR0 bit definition with MOSI D11:D9=010 (VRESx supply voltage)

VR1:VR0 bits see table below

Table 24. Diagnostic mode VRESx selection

Condition	VR1	VR0
$V_{RESx} < V_{VRESXLO_th}$	0	0
$V_{VRESXLO_th} < V_{RESx} < V_{VRESXHI_th}$	0	1
$V_{VRESXHI_th} < V_{RESx}$	1	1

HSR Bit Definition with MOSI D11:D9=101 (High Squib Resistance)

HSR bit Bit used for indicating a high squib resistance.

0 = Squib Resistance below R_{SOHIZ}

1 = Squib Resistance above R_{SQHIZ}

Bits D6 FP Fault present prior to running LS FET or HS FET test

(diagnostics aborted)

0 = Normal

1 = Test not run - Fault present (FEN in incorrect state, short to battery or ground)

Bits D5 Bit definition based on diagnostic selection.

FT bit Read Only - Used for LS FET or HS FET diagnostics and is the status of the FET timer

0 = FET timer not active

1 = FET timer active



SQP bit: Squib Pin to be tested during short to

battery/ground diagnostics

0 = SQBLx pin test 1 = SQBHx pin test

Bits D4 Used to disable IPD on all channels

0 = IPD active as indicated:

 Active for all channels except the one under test when running Short to Battery/Ground and short between

loops

Diagnostics and LS/HS FET test

 Active for all channels when running Stop Diagnostic, Resistance Diagnostics, High Squib Resistance Diagnostics, HSS Diagnostic and VRESx Diagnostics

1 = IPD disabled on all channels

Bits D3 AMC Bit Bit used for resistance measurement amplifier calibration.

Only valid when squib resistance diagnostics is selected, otherwise this is ignored and a 0 is reported in the

response

0 = No calibration (Normal squib resistance measurements)

1 = Calibration

For bits D2:D0 The following table shall be used for channel selection.

Table 25. Channel selection

Channel	Bit D2	Bit D1	Bit D0
0	0	0	0
1	0	0	1
2	0	1	0
3	0	1	1

All other combinations for MOSI bits D2:D0 produce an error response of 0xD000.

Note: Except for short to battery /ground diagnostics and loop to loop test the state of IPD (D4) does not affect the test.



Monitor commands

Monitor Mode 1

Monitor mode main information:

Deployment status

The SPI message definition for MOSI commands and MISO responses in Monitor Mode 1 are defined below.

MSB															LSB
D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
MOSI	SI Command for Monitor Mode 1														
1	1	Р	0	0	0	0	DS		Char	nel S	election	on Stati	us Re	quest	
MISO F	O Response for Monitor Mode 1														
1	1	Р	0	0	0	0	DS			C	hann	el Statu	ıs		

Table 26. MOSI diagnostic mode 1 bit definition

Dir		MOSI Command	MISO Response				
Bit	State	Desc	ription				
D15	1	Mode bits	See above for state				
D14	1	Mode bits	See above for state				
D13		Odd Parity – Includes all 16 bits	Odd Parity – Includes all 16 bits				
D12	0	-	See above for state				
D11	0	Monitor Mode selection bits	See above for state				
D10	0	Monitor Mode selection bits	See above for state				
D9	0	-	See above for state				
D8	0	Report Deploy Success Flag (default)	Internal state of report setting				
סט	1	Report Deploy Status	Internal state of report setting				
D7	0	-	0				
D6	0	-	0				
D5	0	-	0				
D4	0	-	0				
D3	0	Keep Deploy Success Flag Channel 3 (default)	Deploy Information for channel based on bit D8 is either DEPLOY_STATUS3				
	1	Clear Deploy Success Flag Channel 3	orDEPLOY_SUCCESS3				
D2	0	Keep Deploy Success Flag Channel 2 (default)	Deploy Information for channel based on bit D8 is either DEPLOY_STATUS2 or				
	1	Clear Deploy Success Flag Channel 2	DEPLOY_SUCCESS62				
D1	0 Keep Deploy Success Flag Channel 1 (default)		Deploy Information for channel based on bit D8 is either DEPLOY_STATUS1 or				
	1	Clear Deploy Success Flag Channel 1	DEPLOY_SUCCESS1				
D0	0 Keep Deploy Success Flag Channel 0 (default)		Deploy Information for channel based on bit D8 is either DEPLOY_STATUS0 or				
	1	Clear Deploy Success Flag Channel 0	DEPLOY_SUCCESS0				



The DEPLOY_SUCCESSx flag indicates if the corresponding channel's drivers were activated and the activation period completed. This bit is set when the activation period has expired. The DEPLOY_SUCCESSx flag is '1' until it is cleared by writing a '1' to the appropriate channel(s) (bits D3-D0).

The DEPLOY_STATUSx bit becomes '1' when there is a valid Arm and Fire sequence for the corresponding channel. The DEPLOY_STATUSx bit transitioning from a '0' to a '1' does not depend on the state of the FEN function. It becomes '0' when time out has expired. Depending on the state of FEN the DEPLOY_STATUSx flag could be '1' for a minimum of 1x t_{DEPLOY} and a maximum of up to 2 x t_{DEPLOY} (see *Figure 8*.). The Deployment status is captured on the falling edge of CS_D.


Bit D8 is used to select the meaning of bit D3 through bit D0 in the status response message. When this bit is set to '1,' bits D3 through D0 in the status response message report the state of the DEPLOY_STATUSx flag.

When this bit is '0,' bit D3 through bit D0 in the status response message report the DEPLOY_SUCCESSx flag. The following table shows the conditions for the DEPLOY_STATUSx flag and the DEPLOY_SUCCESSx flag.

DEPLOY_SUCCESSx DEPLOY_STATUSx flag Description flag No Deployment in process or has been 0 0 initiated since POR or since last Clear of Success flag 0 1 Deployment has successfully completed 1 0 Deployment in process 1 1 Deployment terminated / LSD shutdown

Table 27. DEPLOY_STATUSx flag and DEPLOY_SUCCESSx flag conditions

Once set, the Deploy Success Flag inhibits the subsequent deployment command until a SPI command to clear this deployment success flag is received. Bits D3 through bit D0 are used to clear/keep the deploy success flag. When these bits are set to '1,' the flag can be cleared. Otherwise, the state of these flags is not affected. **The Success flag must be cleared to allow re-activation of the drivers.**



Monitor mode 2

Monitor mode main information:

Current limit measurement of channels

The SPI message definition for MOSI commands and MISO responses in Monitor Mode 2 are defined below.

MSB															LSB
D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
MOSI	Comma	and for	Monito	r Mode	2										
1	1	Р	CLR	0	1	Current Measurement Channel Select		0	0	0	0	0	0	0	
MISO	Respor	se for	Monito	r Mode	2										
1	1	Р	0	0	1	Mea	Current asureme Channel	ent		Cu	rrent N	/leasure	ement E	Data	

Table 28. MOSI monitor mode 2 Bit definition

Bit		MOSI command	MISO response		
ы	State	Descri	ption		
D15	1	Mode bits	See above for state		
D14	1	Mode bits	See above for state		
D13		Odd parity – Includes all 16 bits	Odd Parity – Includes all 16 bits		
	0	Keep timer measurements	See above for state		
D12	1	Clear "current measurement time" stored on the register of channel selected by D9:D7	See above for state		
D11	0	Monitor mode selection bits	See above for state		
D10	1	Monitor mode selection bits	See above for state		
D9		Channel selected for current			
D8		measurement	Internal Stored channel selections bits		
D7		See Table 29			
D6:D0	0	-	Current measurement of selected channel		

Bits [D9:D7].

Used when sending the MOSI command to select the channel to be measured. The MISO response echoes the MOSI command.

Table 29. Current measurement channel selections

Channel	Bit D9	Bit D08	Bit D07
0	0	0	0
1	0	0	1
2	0	1	0
3	0	1	1



All other combinations for MOSI bits D9:D7 produce an error response of 0xD000.

Bits [D6:D0] Current measurement data of selected squib channel. Bit weight is

nominally 25µs for a total measurement time 3.175ms.

Monitor mode 3

Monitor mode main information:

- Status of FENx Function FENx pin OR'd with Internal FENx latch
- Status of current for each channel

The SPI message definition for MOSI commands and MISO responses in Monitor Mode 3 are defined below.

MSB															LSB
D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
MOSI Command for Monitor Mode 3															
1	1	Р	0	1	0	CFS	0	0	0	0	0	0	0	0	0
MISO	MISO Response for Monitor Mode 3														
1	1	Р	0	1	0	CFS	POR STA T	CF7	CF6	CF5	CF4	CF3	CF2	CF1	CF0

Table 30. MOSI monitor mode 3 bit definition

Bit		MOSI command	MISO response					
Ы	State	Des						
D15	1	Mode Bits	See above for state					
D14	1	Wide bits	See above for state					
D13	-	Odd Parity – Includes all 16 bits	Odd Parity – Includes all 16 bits					
D12	0	-	See above for state					
D11	1	-	See above for state					
D10	0	-	See above for state					
D09		Status Type 0 = Current limit status 1 = FEN function status	0 = current measurement status reported in bit D7:D0 1 = FEN function status reported in D7:D0					
D08	0	-	POR status					
D7:D0	0	-	Current measurement status of channels or FEN status as indicated below					

Bit [D8] POR status

0= Reset occurred. Bit cleared when read

1= Normal

With Bit D9=1 CFS

Bit D7:D2'000000'



Bit D1: 0 = FEN2 input or FEN2 latch timer inactive

1 = FEN2 input or FEN2 latch timer active

Bit D0: 0 = FEN1 input or FEN1 latch timer inactive

1 = FEN1 input or FEN1 latch timer active

Note:

The FEN status is the result of the state of the FEN input pin OR'd with the FEN latch timer. The FEN latch timer remains inactive until a transition of '1' to '0' on the FEN input (assuming the pin was high for a minimum of 16µs). At that time the FEN latch timer is active and keeps the internal FEN signal active based on the programmed time (0ms, 128ms, 256ms or 512ms) for that particular FEN function.

With Bit D9=0 CFS

Bit D7:D4:'0000'

Bit D3: $0 = \text{Current through channel 3 is below I}_{MFAS}$

1 = Current through channel 3 is above I_{MEAS}

Bit D2: $0 = \text{Current through channel 2 is below I}_{MEAS}$

1 = Current through channel 2 is above I_{MFAS}

Bit D1: $0 = \text{Current through channel 1 is below I}_{MEAS}$

1 = Current through channel 1 is above I_{MFAS}

Bit D0: $0 = \text{Current through channel 0 is below I}_{MEAS}$

1 = Current through channel 0 is above I_{MEAS}

Note: Current status for channel is captured on the falling edge of chip select.

Monitor mode 4

Monitor mode main information:

- Revision
- L9660 ID

The SPI message definition for MOSI commands and MISO responses in Monitor Mode 4 are defined below:

MSB															LSB
D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
MOSI Command for Monitor Mode 4															
1	1	Р	0	1	1	0	0	0	0	0	0	0	0	0	0
MISO F	MISO Response for Monitor Mode 4														
1	1	Р	0	1	1	ID3	ID2	ID1	ID0	R5	R4	R3	R2	R1	R0



Table 31. MOSI monitor mode 4 bit definition

Bit		MOSI command	MISO response						
ы	State	Description							
D15	1	Mode Bits	See above for state						
D14	1	Wide bits	See above for state						
D13		Odd Parity – Includes all 16 bits	Odd Parity – Includes all 16 bits						
D12	0	-	See above for state						
D11	1	Mode selection	See above for state						
D10	1	Mode selection	See above for state						
D9-D6	0	-	'1000' is device L9660						
D5:D0	0	-	Revision Information						

The MOSI response for the first pass L9660 is 0xCE09.




4 Package information

In order to meet environmental requirements, ST offers these devices in different grades of ECOPACK[®] packages, depending on their level of environmental compliance. ECOPACK[®] specifications, grade definitions and product status are available at: www.st.com.

ECOPACK® is an ST trademark.

Figure 10. LQFP64 (10 x 10 x mm) mechanical data and package dimensions.

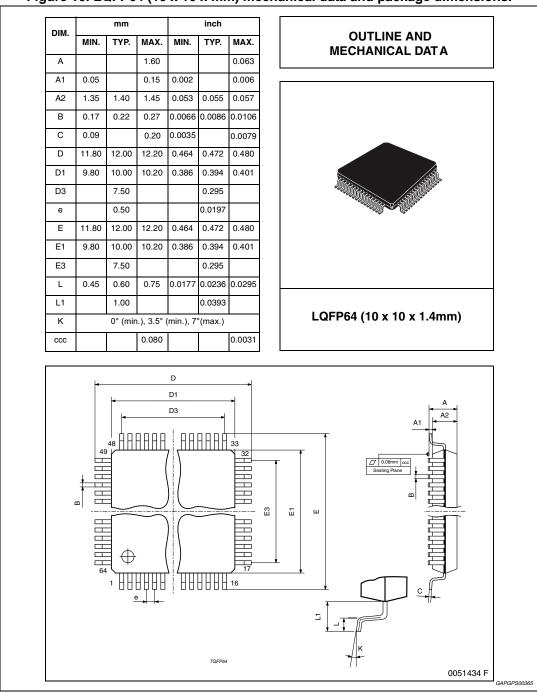

Revision history L9660

5 Revision history

Table 32. Document revision history

Date	Revision	Changes
27-Jun-2013	1	Initial release.
19-Sep-2013	2	Updated Disclaimer.

Please Read Carefully:

Information in this document is provided solely in connection with ST products. STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, modifications or improvements, to this document, and the products and services described herein at any time, without notice.

All ST products are sold pursuant to ST's terms and conditions of sale.

Purchasers are solely responsible for the choice, selection and use of the ST products and services described herein, and ST assumes no liability whatsoever relating to the choice, selection or use of the ST products and services described herein.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted under this document. If any part of this document refers to any third party products or services it shall not be deemed a license grant by ST for the use of such third party products or services, or any intellectual property contained therein or considered as a warranty covering the use in any manner whatsoever of such third party products or services or any intellectual property contained therein.

UNLESS OTHERWISE SET FORTH IN ST'S TERMS AND CONDITIONS OF SALE ST DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO THE USE AND/OR SALE OF ST PRODUCTS INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION), OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

ST PRODUCTS ARE NOT DESIGNED OR AUTHORIZED FOR USE IN: (A) SAFETY CRITICAL APPLICATIONS SUCH AS LIFE SUPPORTING, ACTIVE IMPLANTED DEVICES OR SYSTEMS WITH PRODUCT FUNCTIONAL SAFETY REQUIREMENTS; (B) AERONAUTIC APPLICATIONS; (C) AUTOMOTIVE APPLICATIONS OR ENVIRONMENTS, AND/OR (D) AEROSPACE APPLICATIONS OR ENVIRONMENTS. WHERE ST PRODUCTS ARE NOT DESIGNED FOR SUCH USE, THE PURCHASER SHALL USE PRODUCTS AT PURCHASER'S SOLE RISK, EVEN IF ST HAS BEEN INFORMED IN WRITING OF SUCH USAGE, UNLESS A PRODUCT IS EXPRESSLY DESIGNATED BY ST AS BEING INTENDED FOR "AUTOMOTIVE, AUTOMOTIVE SAFETY OR MEDICAL" INDUSTRY DOMAINS ACCORDING TO ST PRODUCT DESIGN SPECIFICATIONS. PRODUCTS FORMALLY ESCC, QML OR JAN QUALIFIED ARE DEEMED SUITABLE FOR USE IN AEROSPACE BY THE CORRESPONDING GOVERNMENTAL AGENCY.

Resale of ST products with provisions different from the statements and/or technical features set forth in this document shall immediately void any warranty granted by ST for the ST product or service described herein and shall not create or extend in any manner whatsoever, any liability of ST.

ST and the ST logo are trademarks or registered trademarks of ST in various countries.

Information in this document supersedes and replaces all information previously supplied.

The ST logo is a registered trademark of STMicroelectronics. All other names are the property of their respective owners.

© 2013 STMicroelectronics - All rights reserved

STMicroelectronics group of companies

Australia - Belgium - Brazil - Canada - China - Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan - Malaysia - Malta - Morocco - Philippines - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America

www.st.com





Мы молодая и активно развивающаяся компания в области поставок электронных компонентов. Мы поставляем электронные компоненты отечественного и импортного производства напрямую от производителей и с крупнейших складов мира.

Благодаря сотрудничеству с мировыми поставщиками мы осуществляем комплексные и плановые поставки широчайшего спектра электронных компонентов.

Собственная эффективная логистика и склад в обеспечивает надежную поставку продукции в точно указанные сроки по всей России.

Мы осуществляем техническую поддержку нашим клиентам и предпродажную проверку качества продукции. На все поставляемые продукты мы предоставляем гарантию.

Осуществляем поставки продукции под контролем ВП МО РФ на предприятия военно-промышленного комплекса России, а также работаем в рамках 275 ФЗ с открытием отдельных счетов в уполномоченном банке. Система менеджмента качества компании соответствует требованиям ГОСТ ISO 9001.

Минимальные сроки поставки, гибкие цены, неограниченный ассортимент и индивидуальный подход к клиентам являются основой для выстраивания долгосрочного и эффективного сотрудничества с предприятиями радиоэлектронной промышленности, предприятиями ВПК и научноисследовательскими институтами России.

С нами вы становитесь еще успешнее!

Наши контакты:

Телефон: +7 812 627 14 35

Электронная почта: sales@st-electron.ru

Адрес: 198099, Санкт-Петербург,

Промышленная ул, дом № 19, литера Н,

помещение 100-Н Офис 331