

# Blackfin<sup>®</sup> EZ-Extender<sup>®</sup> Manual

Revision 4.0, April 2006

Part Number  
82-000735-01

Analog Devices, Inc.  
One Technology Way  
Norwood, Mass. 02062-9106



## **Copyright Information**

©2006 Analog Devices, Inc., ALL RIGHTS RESERVED. This document may not be reproduced in any form without prior, express written consent from Analog Devices, Inc.

Printed in the USA.

## **Limited Warranty**

The Blackfin EZ-Extender is warranted against defects in materials and workmanship for a period of one year from the date of purchase from Analog Devices or from an authorized dealer.

## **Disclaimer**

Analog Devices, Inc. reserves the right to change this product without prior notice. Information furnished by Analog Devices is believed to be accurate and reliable. However, no responsibility is assumed by Analog Devices for its use; nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under the patent rights of Analog Devices, Inc.

## **Trademark and Service Mark Notice**

The Analog Devices logo, Blackfin, VisualDSP++, EZ-KIT Lite, and EZ-Extender are registered trademarks of Analog Devices, Inc.

All other brand and product names are trademarks or service marks of their respective owners.

## Regulatory Compliance

The Blackfin EZ-Extender has been certified to comply with the essential requirements of the European EMC directive 89/336/EEC (inclusive 93/68/EEC) and, therefore, carries the “CE” mark.

The Blackfin EZ-Extender has been appended to Analog Devices Development Tools Technical Construction File referenced “DSPTOOLS1” dated December 21, 1997 and was awarded CE Certification by an appointed European Competent Body and is on file.



The EZ-KIT Lite evaluation system contains ESD (electrostatic discharge) sensitive devices. Electrostatic charges readily accumulate on the human body and equipment and can discharge without detection. Permanent damage may occur on devices subjected to high-energy discharges. Proper ESD precautions are recommended to avoid performance degradation or loss of functionality. Store unused EZ-KIT Lite boards in the protective shipping package.





# CONTENTS

## PREFACE

Purpose of This Manual .....	ix
Intended Audience .....	ix
Manual Contents .....	ix
What's New in This Manual .....	x
Technical or Customer Support .....	x
Supported Products .....	xi
Product Information .....	xi
MyAnalog.com .....	xi
Processor Product Information .....	xii
Related Documents .....	xii
Online Technical Documentation .....	xiv
Notation Conventions .....	xvi

## EZ-EXTENDER INTERFACES

ADC and Mixed-Signal HSC Interface .....	1-1
DAC HSC Interface .....	1-2
Camera Interface .....	1-3
LCD Interface .....	1-4

## **EZ-EXTENDER HARDWARE REFERENCE**

System Architecture .....	2-1
DIP Switches and Jumpers .....	2-4
Direction Control Switch (SW1) .....	2-4
Clock Routing Switch (SW2) .....	2-5
General Frame Sync Routing Switch (SW3) .....	2-7
LCD Frame Sync Routing Switch (SW4) .....	2-8
MISO Disconnect Jumper (P7) .....	2-9
SMA Connector Clock Disconnect Jumper (P10) .....	2-9
PPI Data Routing Jumper (P36) .....	2-9
External Clock Disable Jumper (P37) .....	2-10

## **EZ-EXTENDER BILL OF MATERIALS**

## **EZ-EXTENDER SCHEMATIC**

Title Page .....	B-1
Expansion Connectors (1 and 2) .....	B-2
Expansion Connector (3) .....	B-3
HSC/OmniVision/LCD Interfaces .....	B-4
Data/FSYNC Buffers .....	B-5
Configuration/SPI .....	B-6
Breadboard Area Footprints .....	B-7

## **INDEX**

# PREFACE

Thank you for purchasing the Blackfin EZ-Extender<sup>®</sup>, Analog Devices (ADI) extender board to the EZ-KIT Lite<sup>®</sup> evaluation system for ADSP-BF533 and ADSP-BF561 Blackfin<sup>®</sup> processors.

The Blackfin processors are embedded processors that support a Media Instruction Set Computing (MISC) architecture. This architecture is the natural merging of RISC, media functions, and digital signal processing (DSP) characteristics towards delivering signal processing performance in a microprocessor-like environment.

The Blackfin EZ-Extender is designed to be used in conjunction with the ADSP-BF533 or ADSP-BF561 EZ-KIT Lite evaluation system. The EZ-KIT Lite includes an evaluation suite of VisualDSP++<sup>®</sup> software, which is limited in program memory size for use solely with the EZ-KIT Lite product. VisualDSP++ is a powerful programming tool with flexibility that significantly decreases the time required to port software code to a processor, reducing time-to-market.

To learn more about Analog Devices development software, go to <http://www.analog.com/dsp/tools/>.

Example programs are available to demonstrate the capabilities of the Blackfin EZ-Extender board.

The Blackfin EZ-Extender is a separately sold assembly that plugs onto the expansion interface of the ADSP-BF533 and ADSP-BF561 EZ-KIT Lite evaluation system.

The board extends the capabilities of the evaluation system by providing a connection between the parallel peripheral interface (PPI) of the ADSP-BF533 processor (the PPI0 and PPI1 interfaces of the ADSP-BF561 processor), an Analog Devices high-speed converter (HSC) evaluation board, a camera evaluation board, and an LCD display device. Moreover, the extender broadens the range of the EZ-KIT Lite applications by providing surface mounted (SMT) footprints for breadboard capabilities and access to all of the pins on the EZ-KIT Lite's expansion interface.

The extender features:

- High-speed converter (HSC) evaluation board interface
  - ✓ 40-pin, right angle, 0.1 in. spacing, female socket to connect to analog-to-digital converter (ADC) boards
  - ✓ 40-pin straight, 0.1 in. spacing header to connect to digital-to-analog converter (DAC) boards
  - ✓ Switches for routing and direction selection
  - ✓ RJ-45 with serial peripheral interconnect (SPI) to configure converter registers
- Camera interface
  - ✓ Connection to OmniVision OV6630AA evaluation boards
  - ✓ 32-pin, right angle, 0.1 in. spacing, female socket
- LCD interface
  - ✓ 32-pin, right angle FLZ-type connector to connect to LCD displays
- SMT footprint area
  - ✓ 1206 and 805 footprints
  - ✓ SOIC24 and SOIC20 footprints

- Dimensions
  - ✓ 5 in (H) x 5 in (W)

## Purpose of This Manual

The *Blackfin EZ-Extender Manual* describes the operation and configuration of the components on the board. A schematic and a bill of materials are provided as a reference for future ADSP-BF533 and ADSP-BF561 Blackfin processor board designs.

## Intended Audience

This manual is a user's guide and reference to the Blackfin EZ-Extender. Programmers who are familiar with the Analog Devices Blackfin processor architecture, operation, and development tools are the primary audience for this manual.

Programmers who are unfamiliar with VisualDSP++ or EZ-KIT Lite evaluation software should refer to the *ADSP-BF533 EZ-KIT Lite Evaluation System Manual* or *ADSP-BF561 EZ-KIT Lite Evaluation System Manual*, VisualDSP++ online Help, and user's or getting started guides. For the locations of these documents, refer to [“Related Documents”](#).

## Manual Contents

The manual consists of:

- Chapter 1, [“EZ-Extender Interfaces”](#) on page 1-1  
Provides basic board information.
- Chapter 2, [“EZ-Extender Hardware Reference”](#) on page 2-1  
Provides information on the hardware aspects of the board.

## What's New in This Manual

- Appendix A, “EZ-Extender Bill Of Materials” on page A-1  
Provides a list of components used to manufacture the Blackfin EZ-Extender board.
- Appendix B, “EZ-Extender Schematic” on page B-1  
Provides the resources to allow extender board-level debugging or to use as a reference design.



Appendix B now is part of the online Help. The PDF version of the *Blackfin EZ-Extender Manual* is located in the Docs\EZ-KIT Lite Manuals folder on the installation CD. Alternatively, the book can be found at the Analog Devices Web site, [www.analog.com/processors](http://www.analog.com/processors).

## What's New in This Manual

This edition of the *Blackfin EZ-Extender Manual* has been updated for the latest revision of VisualDSP++.

## Technical or Customer Support

You can reach Analog Devices, Inc. Customer Support in the following ways:

- Visit the Embedded Processing and DSP products Web site at <http://www.analog.com/processors/technicalSupport>
- E-mail tools questions to [processor.tools.support@analog.com](mailto:processor.tools.support@analog.com)
- E-mail processor questions to [processor.support@analog.com](mailto:processor.support@analog.com) (World wide support)  
[processor.europe@analog.com](mailto:processor.europe@analog.com) (Europe support)  
[processor.china@analog.com](mailto:processor.china@analog.com) (China support)

- Phone questions to 1-800-ANALOGD
- Contact your Analog Devices, Inc. local sales office or authorized distributor
- Send questions by mail to:  
Analog Devices, Inc.  
One Technology Way  
P.O. Box 9106  
Norwood, MA 02062-9106  
USA

## Supported Products

The Blackfin EZ-Extender is an extender board to the ADSP-BF533 and ADSP-BF561 EZ-KIT Lite evaluation systems.

## Product Information

You can obtain product information from the Analog Devices Web site, from the product CD-ROM, or from the printed publications (manuals).

Analog Devices is online at [www.analog.com](http://www.analog.com). Our Web site provides information about a broad range of products—analog integrated circuits, amplifiers, converters, and digital signal processors.

## MyAnalog.com

MyAnalog.com is a free feature of the Analog Devices Web site that allows customization of a Web page to display only the latest information on products you are interested in. You can also choose to receive weekly

## Product Information

e-mail notifications containing updates to the Web pages that meet your interests. MyAnalog.com provides access to books, application notes, data sheets, code examples, and more.

### Registration:

Visit [www.myanalog.com](http://www.myanalog.com) to sign up. Click **Register** to use MyAnalog.com. Registration takes about five minutes and serves as means for you to select the information you want to receive.

If you are already a registered user, just log on. Your user name is your e-mail address.

## Processor Product Information

For information on embedded processors and DSPs, visit our Web site at [www.analog.com/processors](http://www.analog.com/processors), which provides access to technical publications, data sheets, application notes, product overviews, and product announcements.

You may also obtain additional information about Analog Devices and its products in any of the following ways.

- E-mail questions or requests for information to  
[processor.support@analog.com](mailto:processor.support@analog.com) (World wide support)  
[processor.europe@analog.com](mailto:processor.europe@analog.com) (Europe support)  
[processor.china@analog.com](mailto:processor.china@analog.com) (China support)
- Fax questions or requests for information to  
1-781-461-3010 (North America)  
+49-89-76903-157 (Europe)

## Related Documents

For information on product-related development software, see the following publications.

Table 1. Related Processor Publications

Title	Description
<i>ADSP-BF533 Blackfin Embedded Processor Datasheet</i> <i>ADSP-BF561 Blackfin Embedded Symmetric Multi-Processor Data sheet</i>	General functional description, pinout, and timing.
<i>Blackfin Processor Hardware Reference</i>	Description of internal processor architecture and all register functions.
<i>Blackfin Processor Instruction Set Reference</i>	Description of all allowed processor assembly instructions.

Table 2. Related VisualDSP++ Publications

Title	Description
<i>ADSP-BF533 EZ-KIT Lite Evaluation System Manual</i> <i>ADSP-BF561 EZ-KIT Lite Evaluation System Manual</i>	Detailed description of the EZ-KIT Lite features and usage.
<i>VisualDSP++ User's Guide</i>	Detailed description of VisualDSP++ features and usage.
<i>VisualDSP++ Assembler and Preprocessor Manual for Blackfin Processors</i>	Description of the assembler function and commands for Blackfin processors.
<i>VisualDSP++ C/C++ Compiler and Library Manual for Blackfin Processors</i>	Description of the compiler function and commands for Blackfin processors.
<i>VisualDSP++ Linker and Utilities Manual</i>	Description of the linker function and commands for the processors.
<i>VisualDSP++ Loader and Utilities Manual</i>	Description of the loader/splitter function and commands for the processors.

## Product Information

 If you plan to use the EZ-KIT Lite board in conjunction with a JTAG emulator, also refer to the documentation that accompanies the emulator.

All documentation is available online. Most documentation is available in printed form.

Visit the Technical Library Web site to access all processor and tools manuals and data sheets:

<http://www.analog.com/processors/resources/technicalLibrary>.

## Online Technical Documentation

Online documentation comprises the VisualDSP++ Help system, software tools manuals, hardware tools manuals, processor manuals, the Dinkum Abridged C++ library, and Flexible License Manager (FlexLM) network license manager software documentation. You can easily search across the entire VisualDSP++ documentation set for any topic of interest. For easy printing, supplementary .PDF files of most manuals are provided in the Docs folder on the VisualDSP++ installation CD.

Each documentation file type is described as follows.

File	Description
.CHM	Help system files and manuals in Help format
.HTM or .HTML	Dinkum Abridged C++ library and FlexLM network license manager software documentation. Viewing and printing the .html files requires a browser, such as Internet Explorer 5.01 (or higher).
.PDF	VisualDSP++ and processor manuals in Portable Documentation Format (PDF). Viewing and printing the .PDF files requires a PDF reader, such as Adobe Acrobat Reader (4.0 or higher).

If documentation is not installed on your system as part of the software installation, you can add it from the VisualDSP++ CD at any time by running the Tools installation. Access the online documentation from the VisualDSP++ environment, Windows<sup>®</sup> Explorer, or the Analog Devices Web site.

# Notation Conventions

Text conventions used in this manual are identified and described as follows.

Example	Description
Close command (File menu)	Titles in reference sections indicate the location of an item within the VisualDSP++ environment's menu system (for example, the <b>Close</b> command appears on the <b>File</b> menu).
{this   that}	Alternative required items in syntax descriptions appear within curly brackets and separated by vertical bars; read the example as <i>this</i> or <i>that</i> . One or the other is required.
[this   that]	Optional items in syntax descriptions appear within brackets and separated by vertical bars; read the example as an optional <i>this</i> or <i>that</i> .
[this,...]	Optional item lists in syntax descriptions appear within brackets delimited by commas and terminated with an ellipse; read the example as an optional comma-separated list of <i>this</i> .
.SECTION	Commands, directives, keywords, and feature names are in text with letter gothic font.
<i>filename</i>	Non-keyword placeholders appear in text with italic style format.
	<b>Note:</b> For correct operation, ... A Note provides supplementary information on a related topic. In the online version of this book, the word <b>Note</b> appears instead of this symbol.
	<b>Caution:</b> Incorrect device operation may result if ... <b>Caution:</b> Device damage may result if ... A Caution identifies conditions or inappropriate usage of the product that could lead to undesirable results or product damage. In the online version of this book, the word <b>Caution</b> appears instead of this symbol.
	<b>Warning:</b> Injury to device users may result if ... A Warning identifies conditions or inappropriate usage of the product that could lead to conditions that are potentially hazardous for the devices users. In the online version of this book, the word <b>Warning</b> appears instead of this symbol.

 Additional conventions, which apply only to specific chapters, may appear throughout this document.

# Notation Conventions

# 1 EZ-EXTENDER INTERFACES

The Blackfin EZ-Extender board offers the following interfaces.

- “ADC and Mixed-Signal HSC Interface”
- “DAC HSC Interface”
- “Camera Interface”
- “LCD Interface”

The following sections describe each extender interface.

## ADC and Mixed-Signal HSC Interface

The Blackfin EZ-Extender can connect to an analog-to-digital converter (ADCs) and a mixed-signal HSC evaluation board via the ADC/mixed-signal HSC interface. The ADC/mixed-signal HSC interface consists of a 40-pin female header, which contains all of the control and data signals necessary to transfer data between the processor’s parallel peripheral interface (PPI) and the HSC evaluation board. Additionally, the extender provides a RJ-45 connector, which contains all of the serial peripheral interconnect (SPI) signals necessary to configure the control registers of capable HSC converters. For a block diagram of this interface, see [Figure 2-1 on page 2-2](#).

Before using the Blackfin EZ-Extender, familiarize yourself with the documentation and schematics of the target board and the EZ-KIT Lite. For example, on the EZ-KIT Lite, it may be necessary to disable other devices on the PPI, route the PPI clocks, and disable the push buttons.

## DAC HSC Interface

To configure the Blackfin EZ-Extender to connect to an ADC or mixed-signal HSC evaluation board, first determine the source of the PPI clock. To learn about possible clock settings, refer to “[Clock Routing Switch \(SW2\)](#)” on page 2-5. It is also necessary to determine the direction of the data and frame synchronization signals. The direction is dependent upon the type of the board to which you connect. With ADC boards, it is necessary to set up the data driver on the extender as a receiver. With mixed-signal boards, the data direction can change and a programmable flag is used to change the direction in real time. The frame sync signals are dependent on the external user interface; thus, the functionality of the interface must be taken into consideration. For more information, refer to “[System Architecture](#)” on page 2-1 and “[DIP Switches and Jumpers](#)” on page 2-4.

Refer to the Analog Devices Web site at <http://www.analog.com/en/prod/0%2C2877%2CBF%25252DEXTENDER%2C00.html> for more information about the daughter card.

A list of ADC and mixed-signal evaluation boards compatible with the extender can be found at [http://www.analog.com/processors/processors/blackfin/technicalLibrary/manuals/pdf/EZ-Extender\\_to\\_DSP\\_Supported.pdf](http://www.analog.com/processors/processors/blackfin/technicalLibrary/manuals/pdf/EZ-Extender_to_DSP_Supported.pdf). Example programs can be found at [ftp://ftp.analog.com/pub/tools/patches/bf\\_extender\\_card.zip](ftp://ftp.analog.com/pub/tools/patches/bf_extender_card.zip), when available. To learn more about Analog Devices data converters, go to <http://www.analog.com>.

## DAC HSC Interface

The Blackfin EZ-Extender can connect to digital-to-analog converter HSC evaluation boards via the DAC HSC interface. The DAC HSC interface consists of a 40-pin male header, which contains all of the control and data signals necessary to transfer data from the processor’s PPI to

the DAC evaluation board. Your extender kit includes the cable used to make a connection. For more information about this interface, see [Figure 2-1 on page 2-2](#).

Before using the Blackfin EZ-Extender, familiarize yourself with the documentation and schematics of the target board and the EZ-KIT Lite. For example, on the EZ-KIT Lite, it may be necessary to disable other devices on the PPI, route the PPI clocks, and disable the push buttons.

To configure the Blackfin EZ-Extender to connect to a DAC evaluation board, first determine the source of the PPI clock. To learn about possible clock settings, refer to [“Clock Routing Switch \(SW2\)” on page 2-5](#). It is also necessary to determine the direction and source of the data and frame synchronization signals. If your processor holds more than one PPI, the DAC interface allows you to communicate with either PPI0 or PPI1 of the processor. The direction of the frame sync signals is dependent on the target; thus, the functionality of the interface must be taken into consideration. For more information, refer to [“System Architecture” on page 2-1](#) and [“DIP Switches and Jumpers” on page 2-4](#).

A list of DAC HSC evaluation boards compatible with the Blackfin EZ-Extender can be found at [http://www.analog.com/processors/processors/blackfin/technicalLibrary/manuals/pdf/EZ-Extender\\_to\\_DSP\\_Supported.pdf](http://www.analog.com/processors/processors/blackfin/technicalLibrary/manuals/pdf/EZ-Extender_to_DSP_Supported.pdf). Example programs can be found at [ftp://ftp.analog.com/pub/tools/patches/bf\\_extender\\_card.zip](ftp://ftp.analog.com/pub/tools/patches/bf_extender_card.zip), when available. To learn more about Analog Devices data converters, go to <http://www.analog.com>.

## Camera Interface

The Blackfin EZ-Extender camera interface is a right-angle 32-pin connector with control signals compatible to the ITU-R BT.656 camera interface specification. Specifically, the extender’s camera interface is directly compatible with camera interface boards, such as the Omnivision

## LCD Interface

OV6630AA evaluation module. To learn more about the OV6630AA evaluation module, go to <http://www.ovt.com>. For a block diagram of the camera interface, see [Figure 2-1 on page 2-2](#).

Before using the Blackfin EZ-Extender, familiarize yourself with the documentation and schematics of the target board and the EZ-KIT Lite. For example, on the EZ-KIT Lite, it may be necessary to disable other devices on the PPI, route the PPI clocks, and disable the push buttons.

To configure the Blackfin EZ-Extender to connect to a camera, first determine the source of the PPI clock. To learn about possible clock settings, refer to [“Clock Routing Switch \(SW2\)” on page 2-5](#). It is also necessary to set the direction of the data and the frame sync signals. The direction of frame synchronization signals depends on the camera’s configuration. The data must be set as an input to the PPI port. For more information, refer to [“System Architecture” on page 2-1](#) and [“DIP Switches and Jumpers” on page 2-4](#).

## LCD Interface

The LCD interface is intended to drive an LCD display device. A 32-pin, right-angle FLZ-type connector is provided to connect the data and control lines of commercially available LCD panels. For a block diagram of this interface, see [Figure 2-1 on page 2-2](#).

A timing and functional analysis is required to determine if a specific LCD can connect to the Blackfin EZ-Extender. An example of a display which does connect to the extender is the Sharp LQ058T5DRQ1 display. For more information about the Sharp LCD panel (part number LQ058T5DRQ1), go to

<http://www.sharpsma.com/fastfocus/nidetail.asp?t=DISPLAY&ck=f&p=PCPVTSBY3&n=2>.

Please note that the power for the backlight feature of the LCD must be provided by the customer. Information on the backlight inverter module (part number LXM1614-14-11) needed to connect to the LCD panel is available at <http://www.chipdocs.com/pndecoder/datasheets/MSEMI/LXM1614-14-11.html?ReR=IN>. The part number of the connector on the EZ-Extender is JST32FLZ-SM1-R-TB. The cable connecting the JST part to the data port on the LCD is available from Parlex Corporation (part number 050-32-76B).

Before using the Blackfin EZ-Extender, familiarize yourself with the documentation and schematics of the target board and the EZ-KIT Lite. For example, on the EZ-KIT Lite, it may be necessary to disable other devices on the PPI, route the PPI clocks, and disable the push buttons.

To configure the EZ-Extender to connect to the LCD interface, first determine the source of the PPI clock and the source and direction of the data and frame sync signals. If your target processor holds more than one PPI, the LCD interface allows you to communicate with either PPI0 or PPI1 of the processor. For more information, refer to “System Architecture” on page 2-1 and “DIP Switches and Jumpers” on page 2-4.

Example programs can be found at [ftp://ftp.analog.com/pub/tools/patches/bf\\_extender\\_card.zip](ftp://ftp.analog.com/pub/tools/patches/bf_extender_card.zip), when available. To learn more about Analog Devices LCD drivers, go to <http://www.analog.com>.

# LCD Interface

# 2 EZ-EXTENDER HARDWARE REFERENCE

This chapter describes the hardware design of the Blackfin EZ-Extender. The following topics are covered.

- [“System Architecture” on page 2-1](#)  
Describes the configuration of the extender and explains how the board components interface with the processor and EZ-KIT Lite.
- [“DIP Switches and Jumpers” on page 2-4](#)  
Describes the function of the configuration DIP switches.

## System Architecture

A detailed block diagram of the Blackfin EZ-Extender is shown in [Figure 2-1](#). Note that the arrow in the bidirectional driver symbols denotes the direction of the driver when in transmit mode. The bidirectional driver is in transmit mode when the direction pin is pulled high. Use the diagram in conjunction with information in [“DIP Switches and Jumpers”](#) section of this manual to configure your Blackfin EZ-Extender.

Before using the EZ-Extender, familiarize yourself with the documentation and schematics of the target board and the EZ-KIT Lite. For example, on the EZ-KIT Lite, it may be necessary to disable other devices on the PPI, route the PPI clocks, and disable the push buttons.

The block diagram in [Figure 2-1](#) shows that all of the interfaces have clock signals, frame sync signals, data signals and, possibly, general-purpose signals. Each signal’s configuration depends on how your interface operates.

# System Architecture

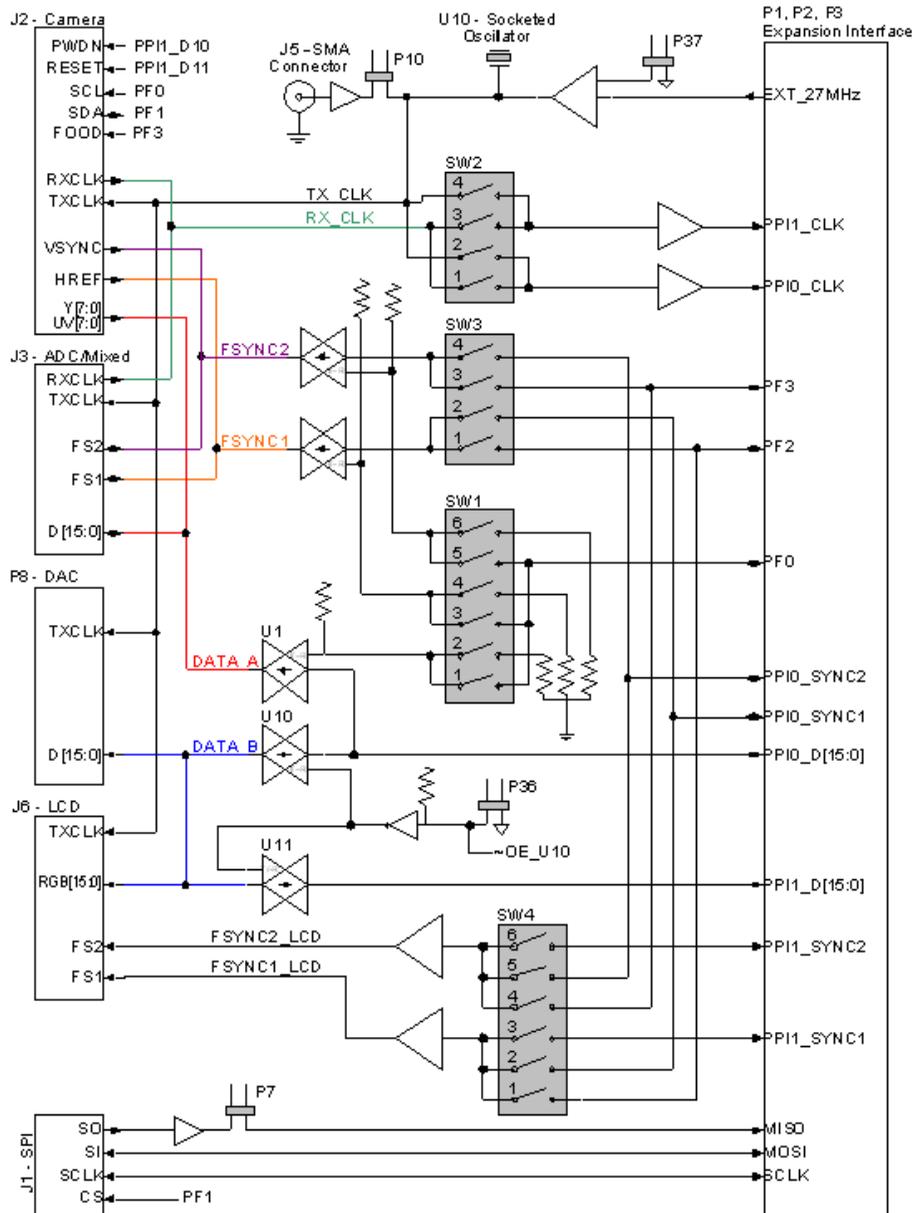


Figure 2-1. Blackfin EZ-Extender Block Diagram

The EZ-Extender holds two clock signals, TX\_CLK and RX\_CLK. The TX\_CLK signal is used as an output to the interface you are using. The TX\_CLK signal can be generated in three ways: applying a signal via an SMA connector, populating a socket with an oscillator, or using a 27 MHz signal provided by the EZ-KIT Lite. Only one of these sources can be used at a time, the other sources must be disabled. For how to disable the TX\_CLK sources, see [“SMA Connector Clock Disconnect Jumper \(P10\)” on page 2-9](#) and [“External Clock Disable Jumper \(P37\)” on page 2-10](#). The RX\_CLK signal is generated by the target board. Both the TX\_CLK and RX\_CLK can connect to the PPI\_CLK signal as an input to the processor. See [“Clock Routing Switch \(SW2\)” on page 2-5](#) for more information.

The ADC/mixed-signal HSC interface and camera interface have two frame sync signals, FSYNC1 and FSYNC2. For information on how to set the direction and the source of these signals, refer to [“Direction Control Switch \(SW1\)” on page 2-4](#) and [“General Frame Sync Routing Switch \(SW3\)” on page 2-7](#).

The LCD interface has two frame sync signals, FSYNC1\_LCD and FSYNC2\_LCD. These signals are always outputs, but it is possible set the source of the signals. For more information see, [“LCD Frame Sync Routing Switch \(SW4\)” on page 2-8](#).

The ADC/mixed-signal HSC interface and camera interface connect to the DATA\_A[15:0] parallel bus. The DAC HSC interface and the LCD interface connect to the DATA\_B[15:0] parallel bus. The DATA\_A bus is attached to only the PPI0 bus, while DATA\_B[15:0] can connect to either PPI0 or PPI1 busses. This allows access to all of the interfaces with a single PPI port or access to two separate interfaces with two PPI ports. For more information about the routing of the PPI data signals see, [“PPI Data Routing Jumper \(P36\)” on page 2-9](#). To configure the direction of the DATA\_A signals, see [“Direction Control Switch \(SW1\)” on page 2-4](#).

# DIP Switches and Jumpers

The following section describes the function of all of the jumpers and switches on the EZ-Extender. Before connecting the extender, make sure you understand each possible settings effect on your application.

## Direction Control Switch (SW1)

The PPI interface is bidirectional and half-duplex. A designated DIP switch, SW1, provides an independent direction control for the DATA\_A bus and the sync signals (FSYNC1 and FSYNC2) going to the camera interface and ADC/mixed-signal HSC interface, as illustrated in [Figure 2-1 on page 2-2](#). Each of the signals can be hardwired to be either transmit or receive, or can be changed in real time using the PF0 processor programmable flag pin.

 If the PF0 programmable flag is intended for direction control, ensure the flag is not used for other purposes on the EZ-KIT Lite board (the motherboard).

When the switch connects a direction control signal to ground (GND), the corresponding signal (or signals) being controlled is an input.

The SW1 DIP switch settings are summarized in [Table 2-1](#) through [Table 2-3](#).

Table 2-1. SW1 Data Direction Control Positions 1 and 2

SW1 Position 1	SW1 Position 2	Function
OFF	OFF	EZ-KIT Lite is transmitter
ON	OFF	PF0 sets the direction: 0 = EZ-KIT Lite is receiver 1 = EZ-KIT Lite is transmitter
OFF	ON	EZ-KIT Lite is receiver
ON	ON	Do not use

Table 2-2. SW1 FSYNC1 Direction Control Positions 3 and 4

SW1 Position 3	SW1 Position 4	Function
OFF	OFF	EZ-KIT Lite is transmitter
ON	OFF	PF0 sets the direction: 0 = EZ-KIT Lite is receiver 1 = EZ-KIT Lite is transmitter
OFF	ON	EZ-KIT Lite is receiver
ON	ON	Do not use

Table 2-3. SW1 FSYNC2 Direction Control Positions 5 and 6

SW1 Position 5	SW1 Position 6	Function
OFF	OFF	EZ-KIT Lite is transmitter
ON	OFF	PF0 sets the direction: 0 = EZ-KIT Lite is receiver 1 = EZ-KIT Lite is transmitter
OFF	ON	EZ-KIT Lite is receiver
ON	ON	Do not use

## Clock Routing Switch (SW2)

The source of the clock input signals PPI0\_CLK and PPI1\_CLK are configured through the SW2 DIP switch settings, as illustrated in [Figure 2-1 on page 2-2](#). The SW2 settings are summarized in [Table 2-4](#) and [Table 2-5](#).

Table 2-4. PPI0\_CLK Source Settings

SW2 Position 1 RX_CLK	SW2 Position 2 TX_CLK	PPI0_CLK Source
OFF	OFF	The PPI0_CLK signal is not generated by the EZ-Extender
OFF	ON	TX_CLK; this signal must be generated by one of the user-configured PPI clock sources

## DIP Switches and Jumpers

Table 2-4. PPI0\_CLK Source Settings (Cont'd)

SW2 Position 1 RX_CLK	SW2 Position 2 TX_CLK	PPI0_CLK Source
ON	OFF	RX_CLK
ON	ON	RX_CLK; in this configuration, the RX_CLK signal is also routed to the TX_CLK as an output

Table 2-5. PPI1\_CLK Source Settings

SW2 Position 3 RX_CLK	SW2 Position 4 TX_CLK	PPI1_CLK Source
OFF	OFF	The PPI1_CLK signal is not generated by the EZ-Extender
OFF	ON	TX_CLK; this signal must be generated by one of the user-configured PPI clock sources
ON	OFF	RX_CLK
ON	ON	RX_CLK; in this configuration, the RX_CLK signal is also routed to the TX_CLK as an output

Possible user-configured PPI clock sources are:

- 27 MHz clock signal from the EZ-KIT Lite (not available on ADSP-BF533 EZ-KIT Lite). See [“External Clock Disable Jumper \(P37\)”](#) on page 2-10.
- A local oscillator, by populating the oscillator socket (U10).
- An external clock source using the SMA connector (J5). See [“SMA Connector Clock Disconnect Jumper \(P10\)”](#) on page 2-9.



Only one of these sources can be used at a time —ensure that all of the other sources are disabled.

## General Frame Sync Routing Switch (SW3)

Frame synchronization signals `FSYNC1` and `FSYNC2` get configured through the SW3 DIP switch settings, as illustrated in [Figure 2-1 on page 2-2](#).

The `FSYNC1` signal can be set by either the PF2 programmable flag or the processor's `PPIO_SYNC1` signal. The `FSYNC2` signal can be set by either the PF3 programmable flag or the `PPIO_SYNC2` signal. [Table 2-6](#) and [Table 2-7](#) depict the available options. Note that the source of the `PPIO_SYNC1` and `PPIO_SYNC2` signals is dependent on the EZ-KIT Lite to which you connect.

 If the PF2 or PF3 programmable flags are used, ensure the flags are not used for other purposes on the EZ-KIT Lite board (the mother board).

Table 2-6. FSYNC1 Source Settings

SW3 Position 1 RX_CLK	SW3 Position 2 TX_CLK	FSYNC1 Source
OFF	OFF	FSYNC1 signal is used
OFF	ON	FSYNC1 signal is not used
ON	OFF	FSYNC1 = PF2
–	–	All others, do not use

Table 2-7. FSYNC2 Source Settings

SW3 Position 3 RX_CLK	SW3 Position 4 TX_CLK	FSYNC2 Source
OFF	OFF	FSYNC2 signal is used
OFF	ON	FSYNC2 signal is not used
ON	OFF	FSYNC2 = PF3
–	–	All others, do not use

### LCD Frame Sync Routing Switch (SW4)

Frame synchronization signals `FSYNC1_LCD` and `FSYNC2_LCD` get configured through the SW4 DIP switch settings, as illustrated in [Figure 2-1 on page 2-2](#).

The `FSYNC1_LCD` signal can be set by the PF2 programmable flag, `PPIO_SYNC1`, or `PPI1_SYNC1` signal. The `FSYNC2_LCD` signal can be set by the PF3 programmable flag, `PPIO_SYNC2`, or `PPI1_SYNC2` signal. [Figure 2-8](#) and [Figure 2-9](#) depict the available options.

 If the PF2 or PF3 programmable flag is used, ensure the flag is not used for other purposes on the EZ-KIT Lite board (the mother board).

Table 2-8. `FSYNC1_LCD` Source Settings

SW4 Position 1 PF2	SW4 Position 2 PPIO_SYNC1	SW4 Position 3 PPI1_SYNC1	FSYNC1_LCD Source
OFF	OFF	OFF	FSYNC1_LCD signal is used
OFF	ON	OFF	FSYNC1_LCD = PPIO_SYNC1
OFF	OFF	OFF	FSYNC1_LCD = PPI1_SYNC1
ON	OFF	ON	FSYNC1_LCD = PF2
–	–	–	All other configurations should not be used

Table 2-9. `FSYNC2_LCD` Source Settings

SW4 Position 4 PF2	SW4 Position 5 PPIO_SYNC2	SW4 Position 6 PPI1_SYNC2	FSYNC2_LCD Source
OFF	OFF	OFF	FSYNC2_LCD signal is used
OFF	ON	OFF	FSYNC2_LCD = PPIO_SYNC2
OFF	OFF	OFF	FSYNC2_LCD = PPI1_SYNC2

Table 2-9. FSYNC2\_LCD Source Settings (Cont'd)

SW4 Position 4 PF2	SW4 Position 5 PPI0_SYNC2	SW4 Position 6 PPI1_SYNC2	FSYNC2_LCD Source
ON	OFF	ON	FSYNC2_LCD = PF3
–	–	–	All other configurations should not be used

## MISO Disconnect Jumper (P7)

The S0 signal of the SPI connector (J1) is driven by a buffer to the processor's MISO signal, as illustrated in [Figure 2-1 on page 2-2](#). When the SPI connector is not in use, remove the jumper to prevent any interfering with other devices on the SPI bus.

## SMA Connector Clock Disconnect Jumper (P10)

The SMA connector (J5) provides the ability to input a clock from a signal generator or other clock source. This signal is first put through a buffer, as illustrated in [Figure 2-1 on page 2-2](#). When the SMA connector is not in use, remove the jumper to prevent any interfering with other devices on the net.

## PPI Data Routing Jumper (P36)

The flexibility of the EZ-Extender used with the Blackfin processor's single and double PPI requires the PPI data signals to be routed accordingly. [Figure 2-2](#) and [Figure 2-3](#) show the data flow when P36 is installed and when it is not installed.



When connecting to the OV6630AA evaluation module, ensure that the P36 jumper is not installed. The signals attached to PPI1 are used as input by the camera.

## DIP Switches and Jumpers

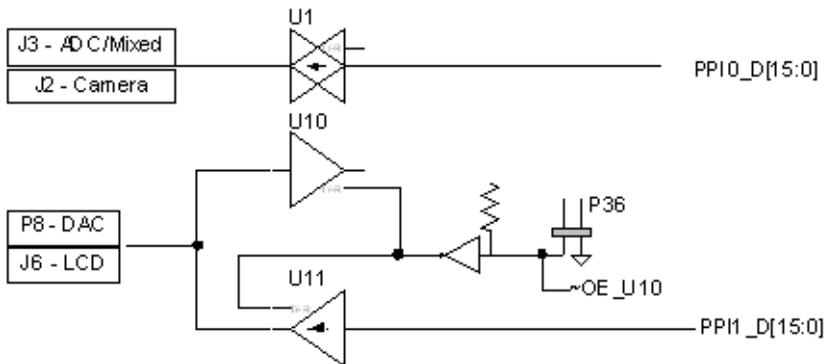


Figure 2-2. P36 Not Installed Data Flow

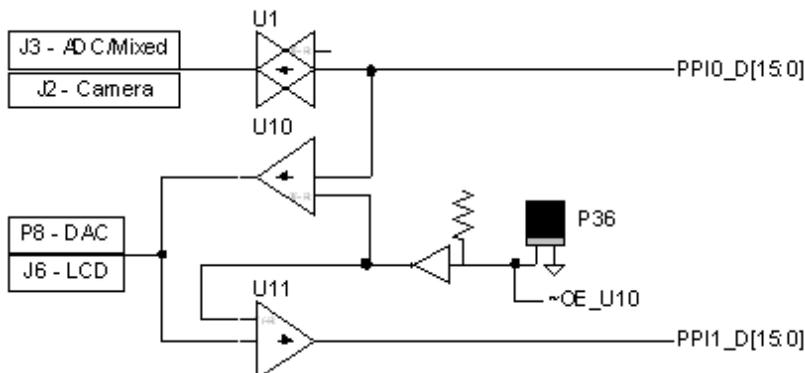


Figure 2-3. P36 Installed Data Flow

## External Clock Disable Jumper (P37)

The EZ-KIT Lite provides a 27 MHz clock, which can be used as a transmit clock for all of the interfaces as illustrated in [Figure 2-1 on page 2-2](#). When the 27 MHz clock is not being used, remove the jumper to prevent the TX\_CLK signal from being driven. For information about other transmit clock sources, see [“Clock Routing Switch \(SW2\)” on page 2-5](#).

# A EZ-EXTENDER BILL OF MATERIALS

The bill of materials corresponds to “EZ-Extender Schematic” on page B-1. Please check the latest schematic on the Analog Devices Web site:


<http://www.analog.com/Processors/Processors/DevelopmentTools/technicalLibrary/manuals/DevToolsIndex.html#Evaluation%20Kit%20Manuals>.

Ref.	Qty.	Description	Reference Designator	Manufacturer	Part Number
1	1	74LVX244MSOIC20	U8	FAIRCHILD	74LVX244M
2	1	SN74AHC1G00 SOT23-5	U13	TI	SN74AHC1G00DBVR
3	6	SN74LVC1G125 SOT23-5	U4-6,U9,U12, U14	TI	74LVC1G125DBVRE4
4	4	74LVTH16245MEA SSOP48	U1-2,U10-11	FAIRCHILD	74LVTH16245MEA
5	1	SN74LVC1G14DBV R SOT23-5	U3	DIGI-KEY	296-11607-1-ND
6	1	DIP 8 DIP8SOC	U7	MILL-MAX	614-43-308-31-007000
7	3	0.05 45x2 CON018	P1-3	SAMTEC	TFC-145-32-F-D
8	2	DIP6 SWT017	SW1,SW4	C&K	TDA06H0SB1
9	1	IDC 16X2 IDC16X2RASOC	J2	SAMTEC	SSW-116-02-F-D-RA
10	1	IDC 20X2 IDC20X2RASOC	J3	SAMTEC	SSW-120-02-G-D-RA




Ref.	Qty.	Description	Reference Designator	Manufacturer	Part Number
11	1	RJ45 8PIN CON_RJ45	J1	TYCO	1-16609214-1
12	2	DIP4 SWT018	SW2-3	ITT	TDA04HOSB1
13	1	SMA XPINS CON043	J5	JOHNSON COMP	142-0701-201
14	1	IDC 20x2 IDC20x2_S	P8	AMP/TYCO	5499910-9
15	1	FLZ 32-PIN CON044	J6	JST	32FLZ-SM1-R-TBLF
16	5	IDC 2X1 IDC2X1	P7,P9-10,P36-37	FCI	90726-402HLF
17	1	51 1/8W 5% 1206	R9	VISHAY	CRCW120651R0JKEA
18	25	0.1UF 50V 10% 0805	C1-10,C12-26	AVX	08055C104KAT
19	14	10K1/10W 5% 0805	R5-7,R11-12, R15-16,R21-25, R28,R30	VISHAY	CRCW080510K0JNEA
20	4	33 1/10W 5% 0805	R10,R13,R18, R29	VISHAY	CRCW080533R0JNEA
21	5	10UF 16V 10% B	CT1-5	AVX	TAJB106K016R
22	2	0 1/10W 5% 0805	R1,R14	VISHAY	CRCW08050000ZSEA
23	4	22 1/10W 5% 0805	R3-4,R26-27	VISHAY	CRCW080522R0JNEA
24	3	1.2K1/10W 5% 0805	R17,R19-20	VISHAY	CRCW08051K20JNEA
25	8	22 125MW 5% RNS001	RN1-8	CTS	744C083220JP
26	1	10K 1/2W 10% RES002	R8	COPAL ELECT	CT9EW103


# BLACKFIN EZ-EXTENDER SCHEMATIC

		<b>ANALOG DEVICES</b>	20 Cotton Road Nashua, NH 03063 PH: 1-800-ANALOGD
<b>Title</b>		BLACKFIN EZ-EXTENDER TITLE	
<b>Size</b> C	<b>Board No.</b>	A0186-2003	<b>Rev</b> 2.0
<b>Date</b>	4-24-2006_9:34	<b>Sheet</b>	1 of 7

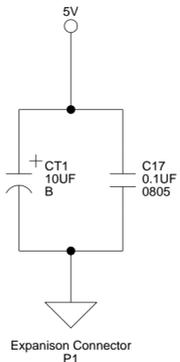

EXPANSION INTERFACE (TYPE B)

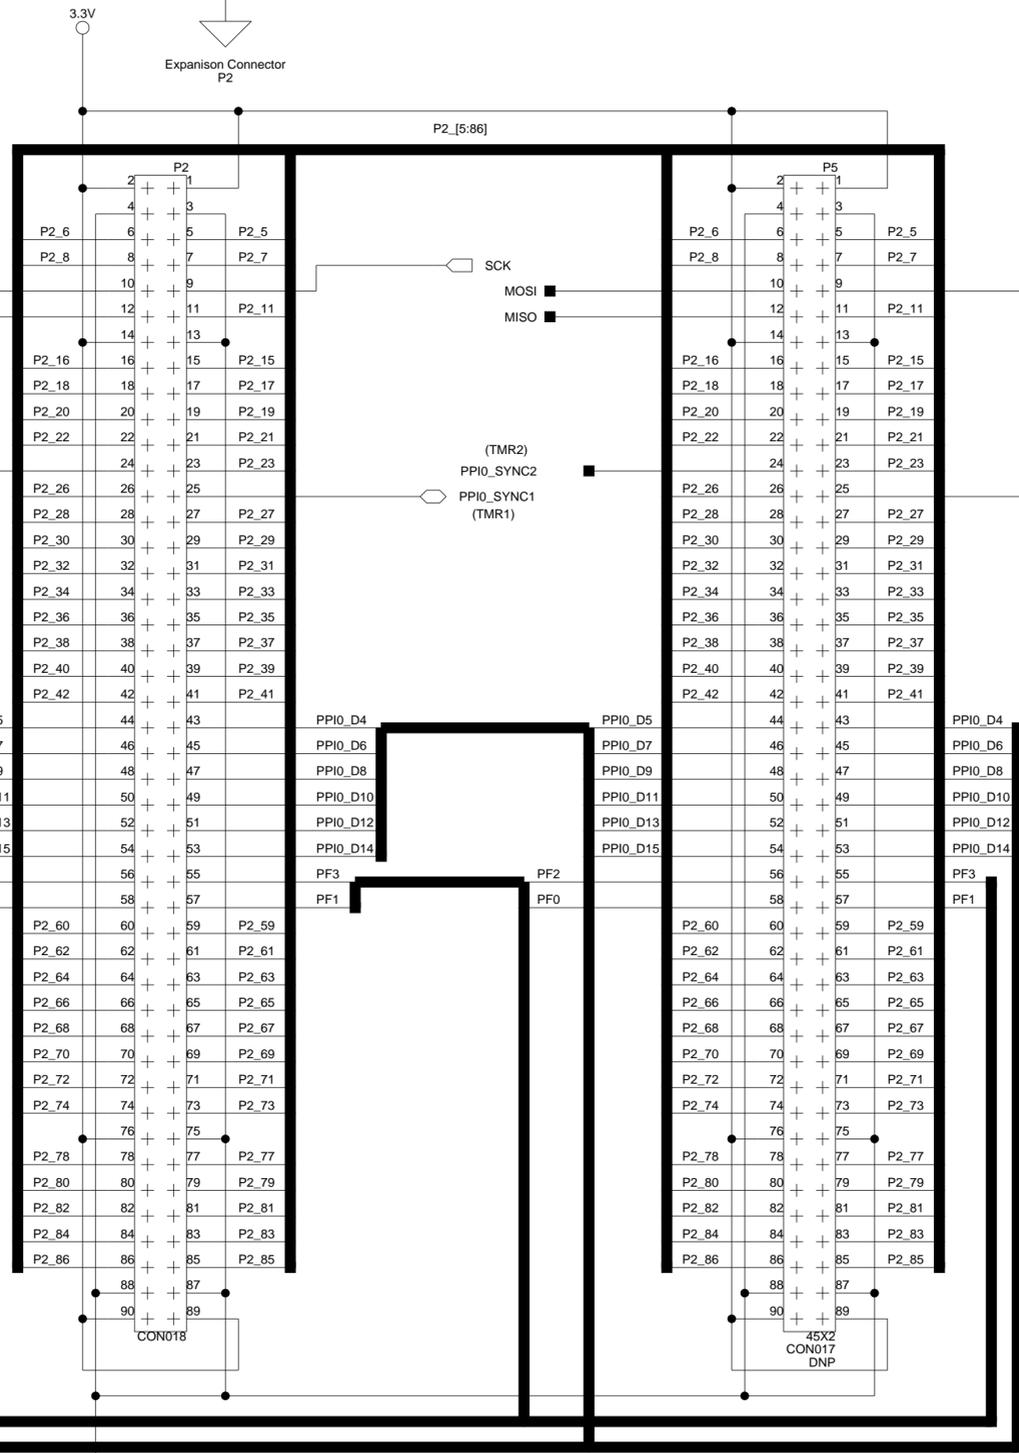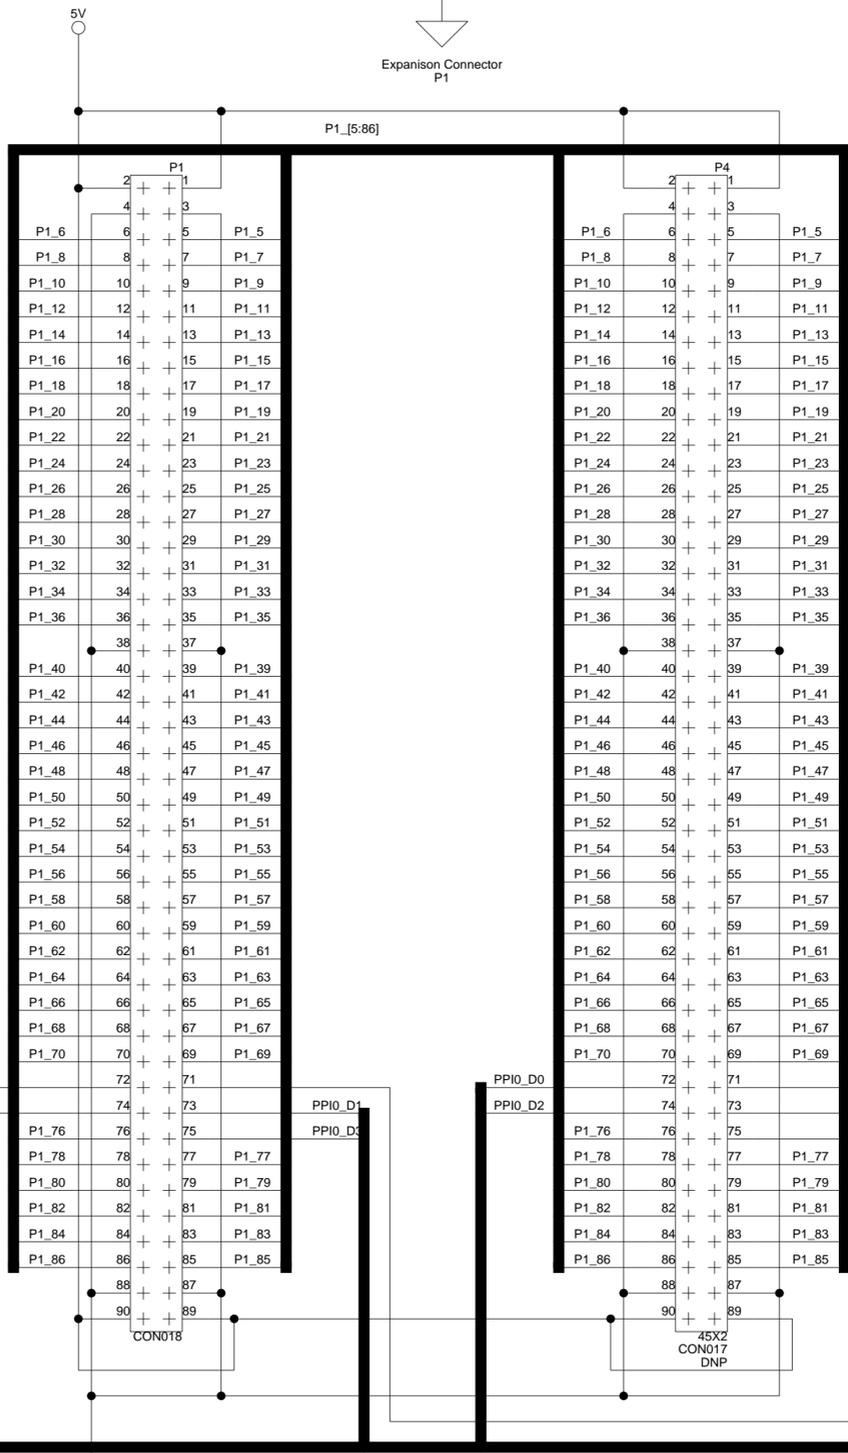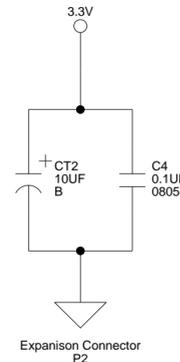


 <b>ANALOG DEVICES</b>		20 Cotton Road Nashua, NH 03063 PH: 1-800-ANALOGD	
		<b>Title</b> BLACKFIN EZ-EXTENDER EXPANSION CONNECTOR 1 AND 2	
<b>Size C</b>	<b>Board No.</b> A0186-2003	<b>Rev</b> 2.0	
<b>Date</b> 4-24-2006_9:34	<b>Sheet</b> 2 of 7		

A


B

C

D

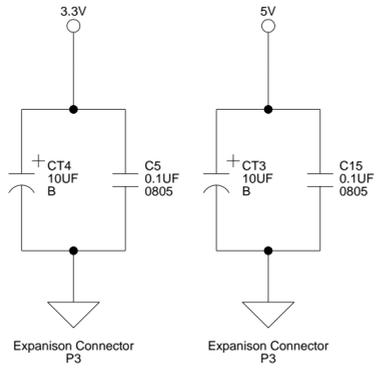


### EXPANSION INTERFACE (TYPE B)

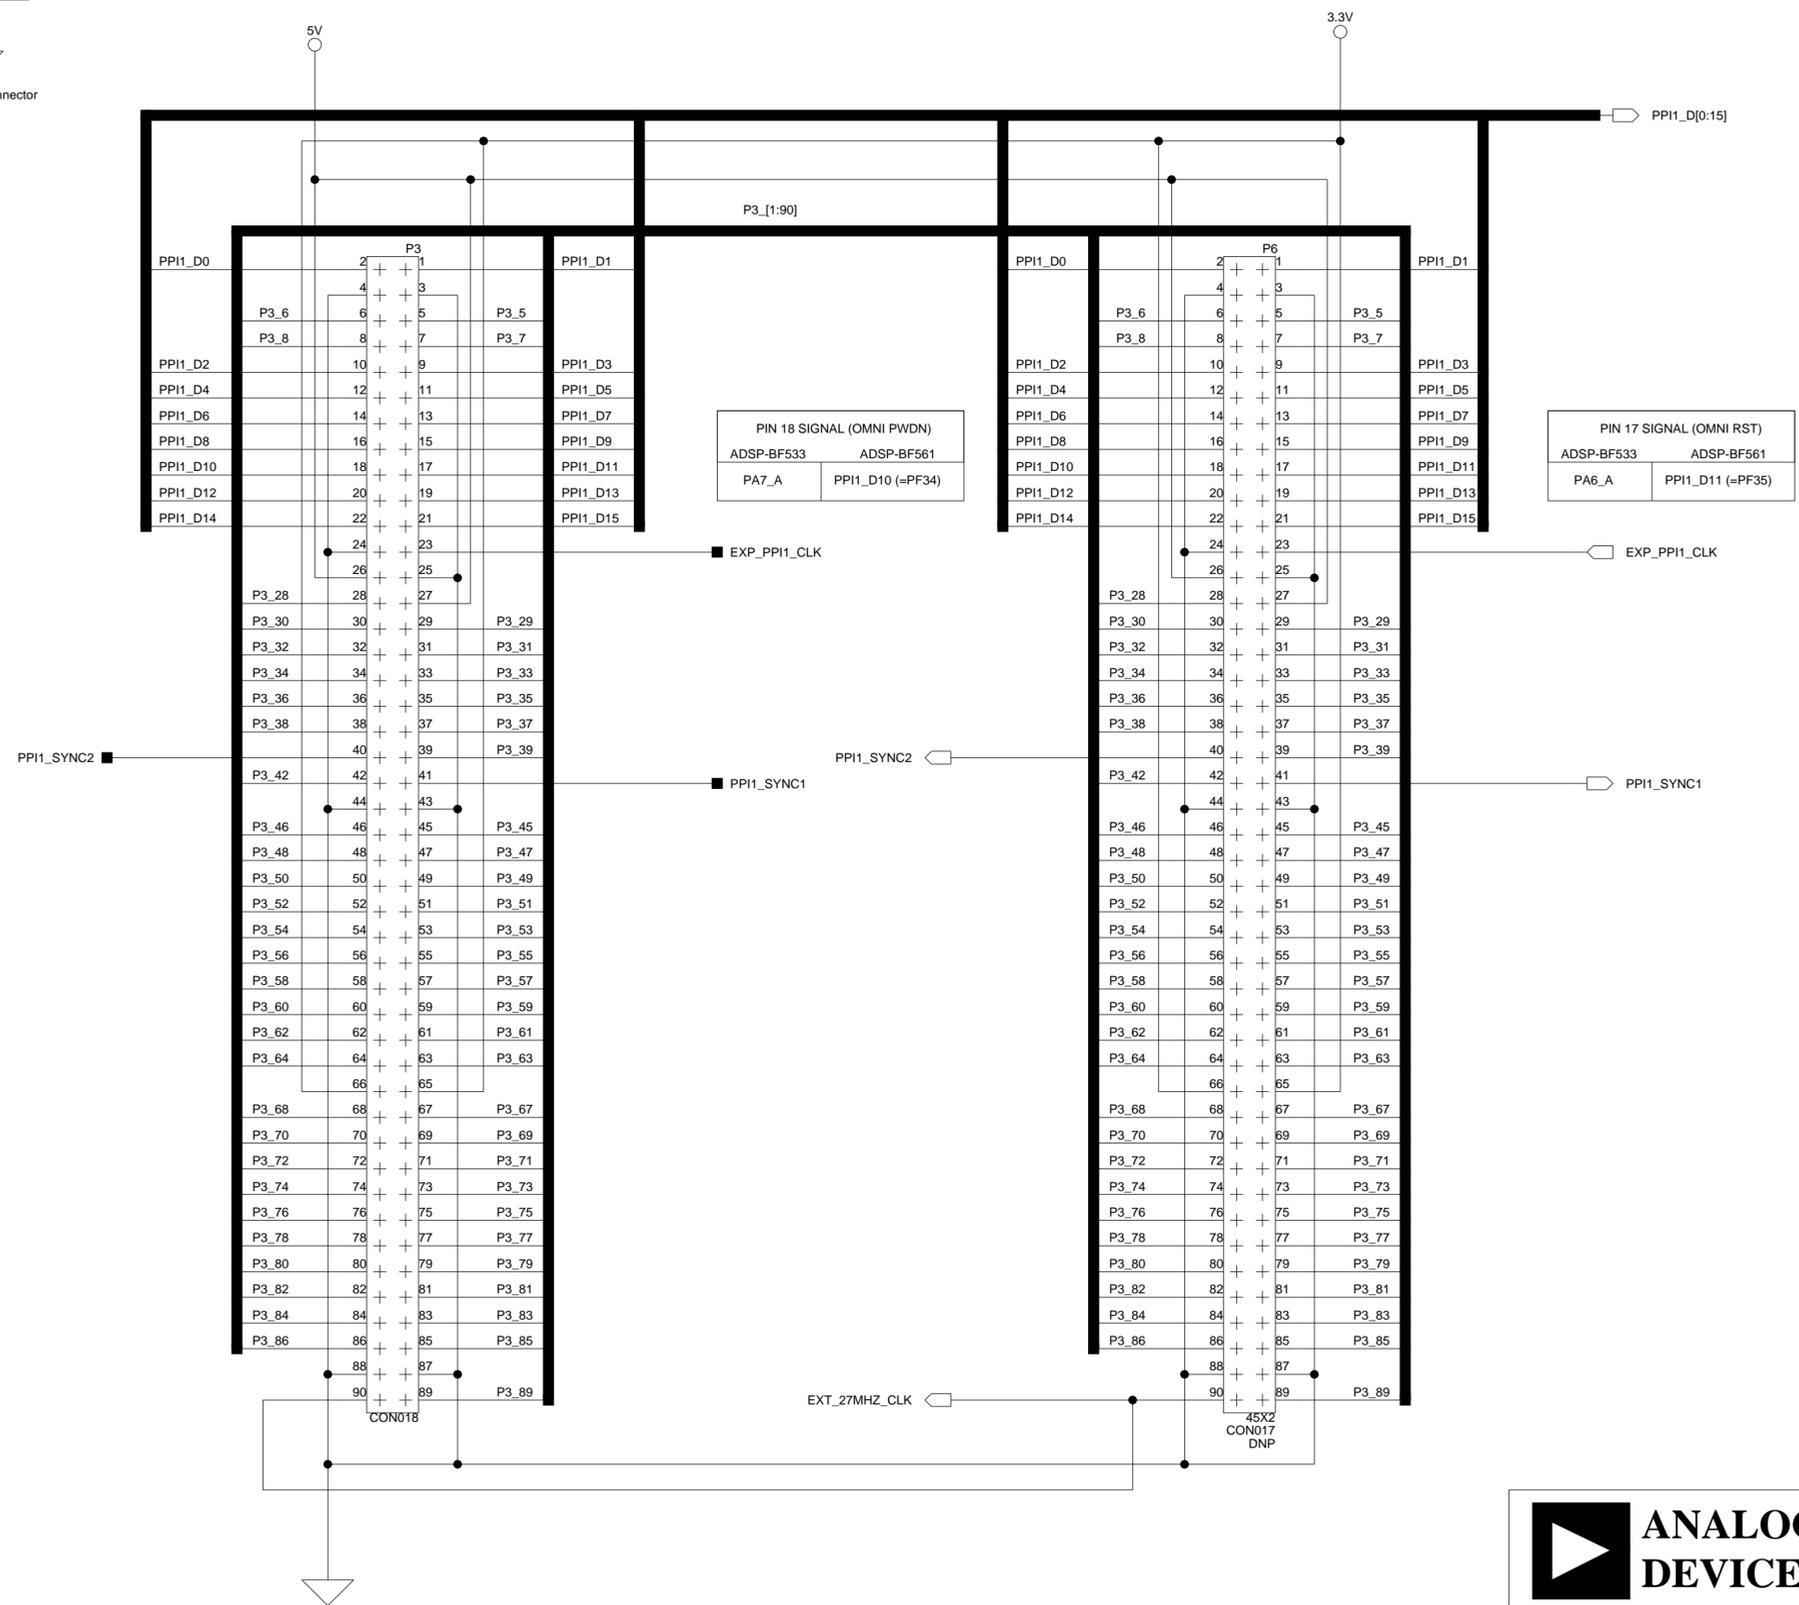


		20 Cotton Road Nashua, NH 03063 PH: 1-800-ANALOGD	
		<b>Title</b> BLACKFIN EZ-EXTENDER EXPANSION CONNECTOR 3	
<b>Size C</b>	<b>Board No.</b> A0186-2003	<b>Rev</b> 2.0	
<b>Date</b> 4-24-2006_9:34	<b>Sheet</b> 3 of 7		


### Camera Interface

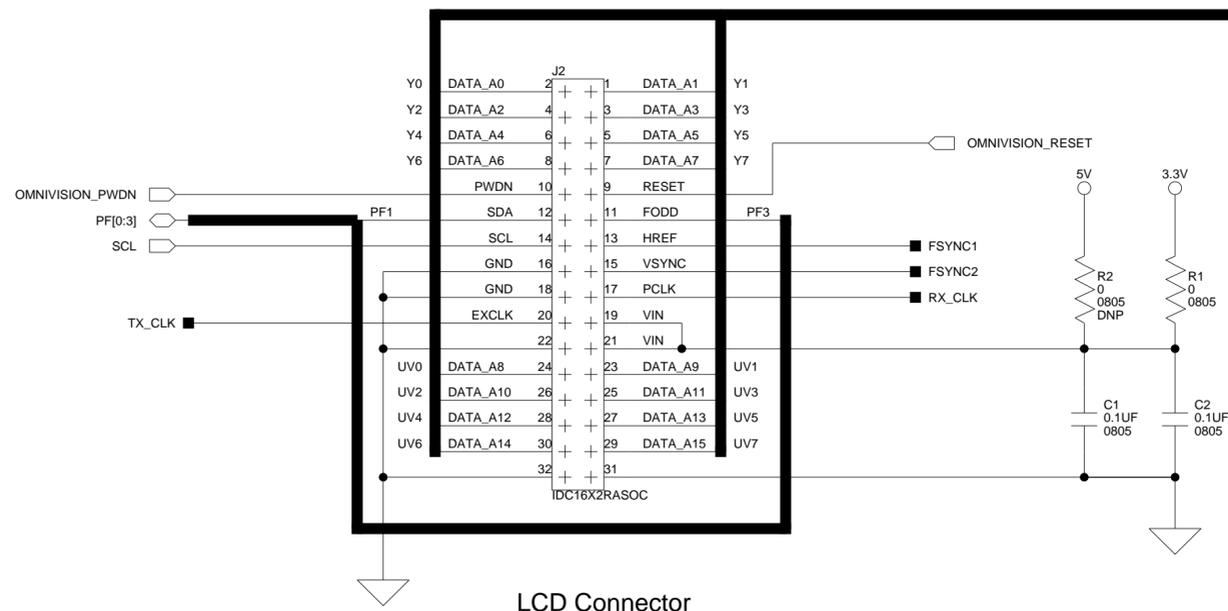



### ADC/Mixed Signal HSC Interface

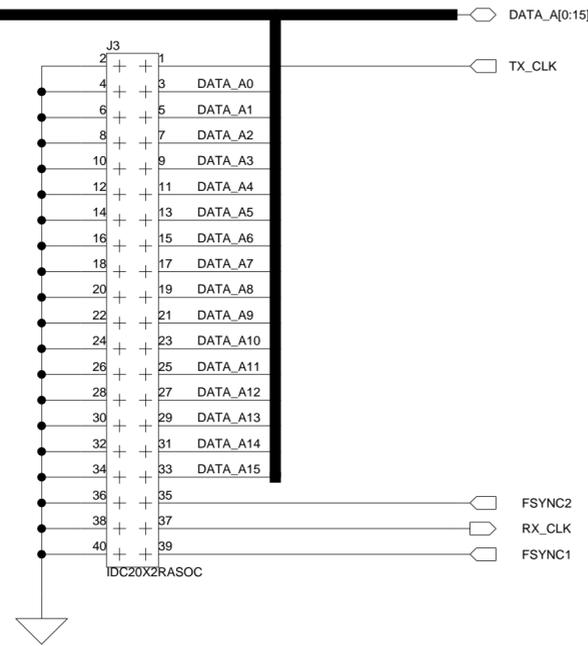












### LCD Connector

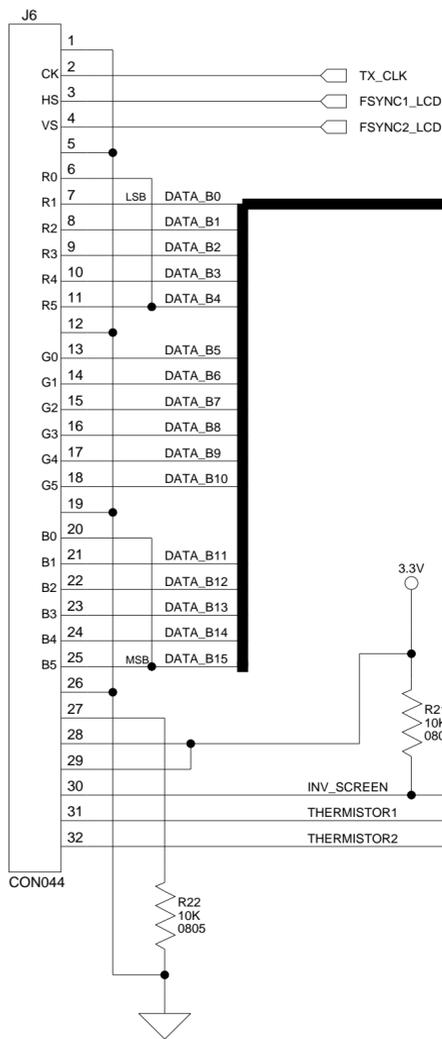

### DAC HSC Interface

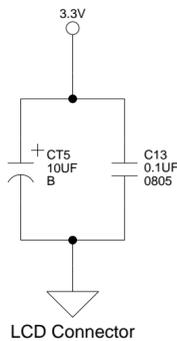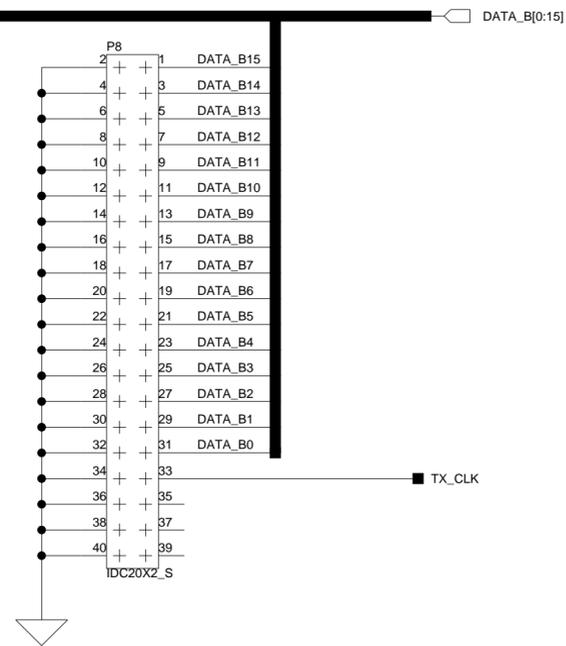

 <b>ANALOG DEVICES</b>		20 Cotton Road Nashua, NH 03063 PH: 1-800-ANALOGD	
		<b>Title</b> BLACKFIN EZ-EXTENDER HSC/OMNIVISION/LCD CONNECTORS	
<b>Size C</b>	<b>Board No.</b>	<b>A0186-2003</b>	<b>Rev</b>
<b>Date</b>	4-24-2006_9:34	<b>Sheet</b>	4 of 7

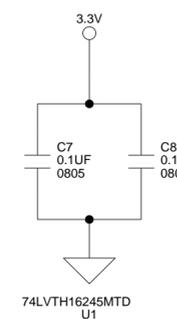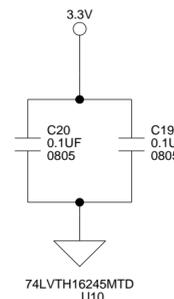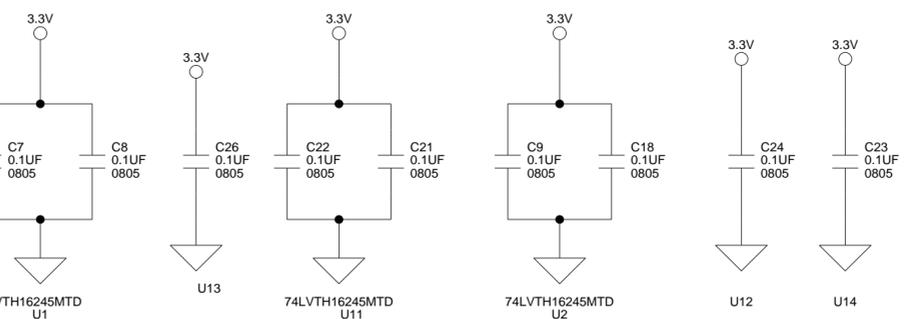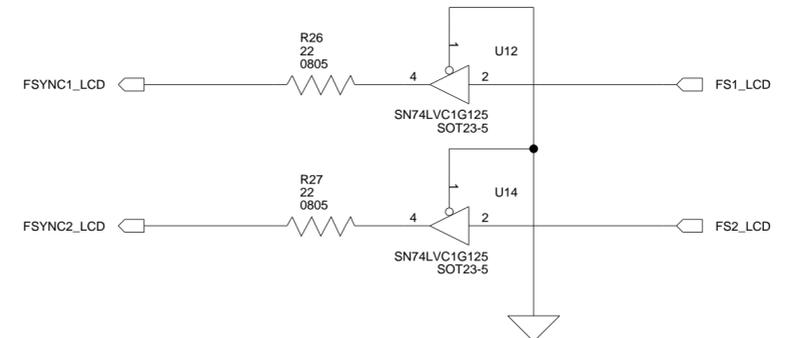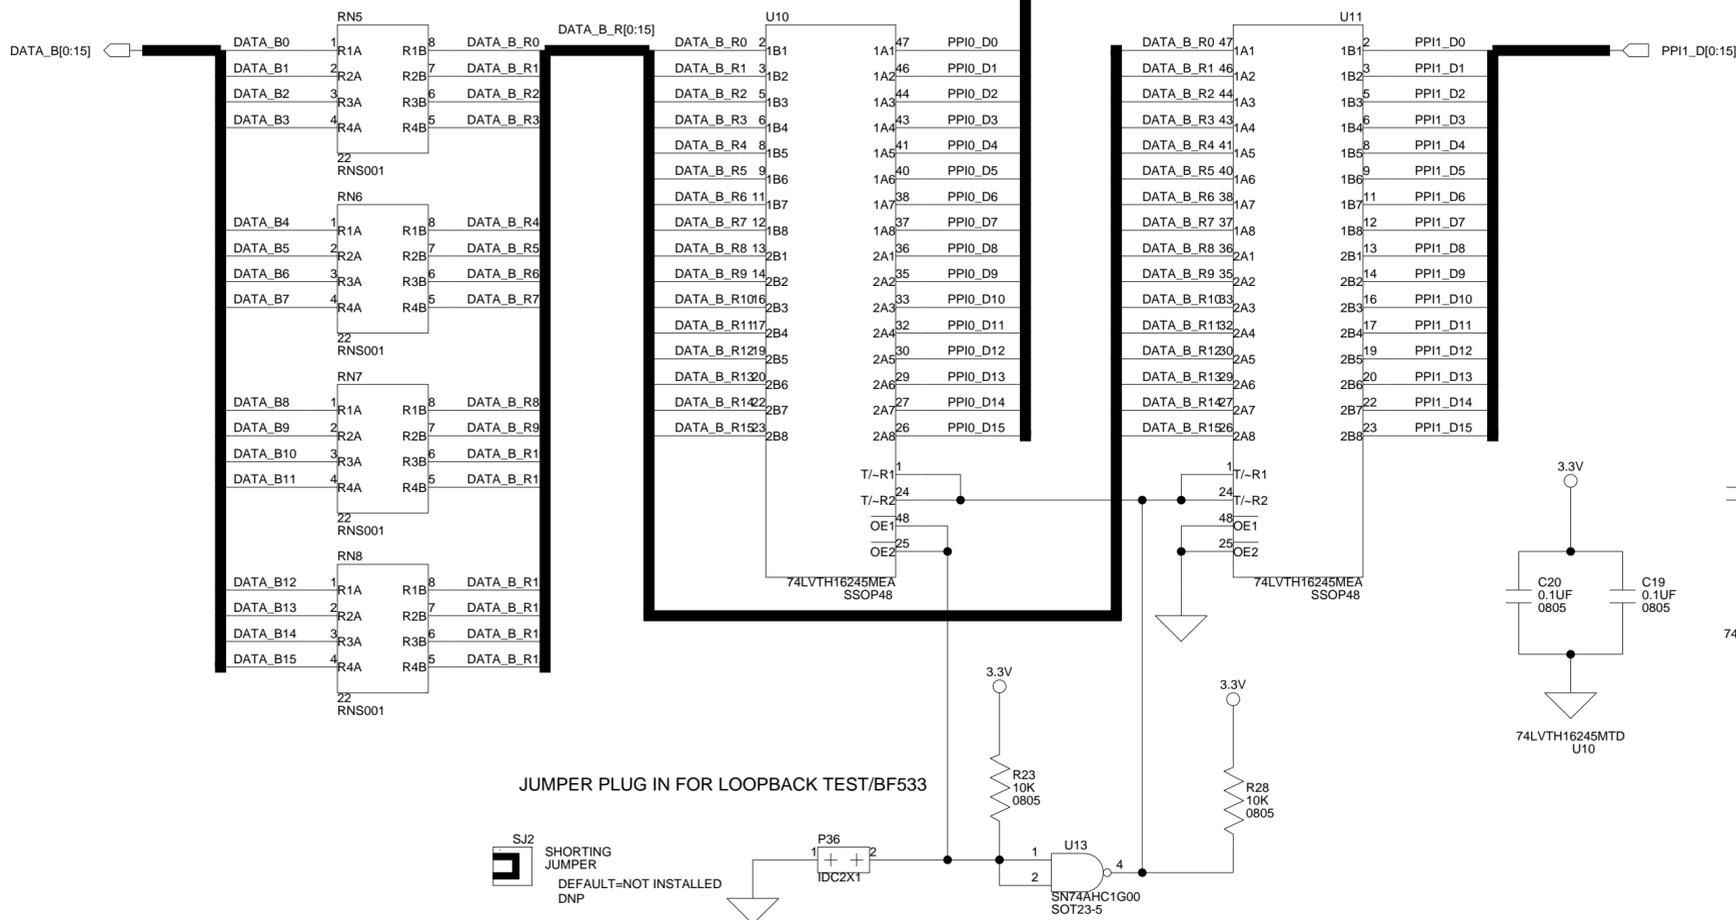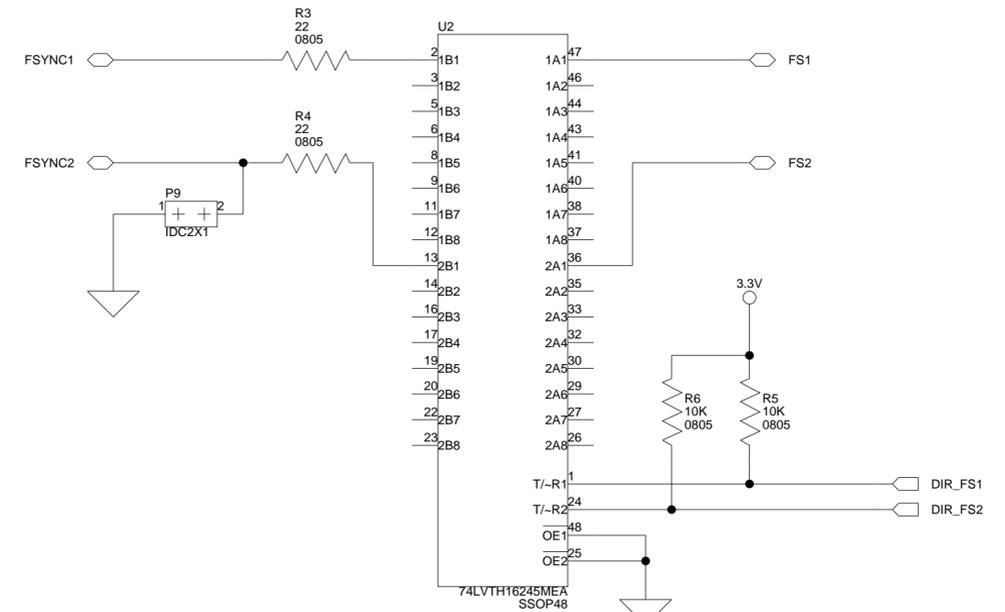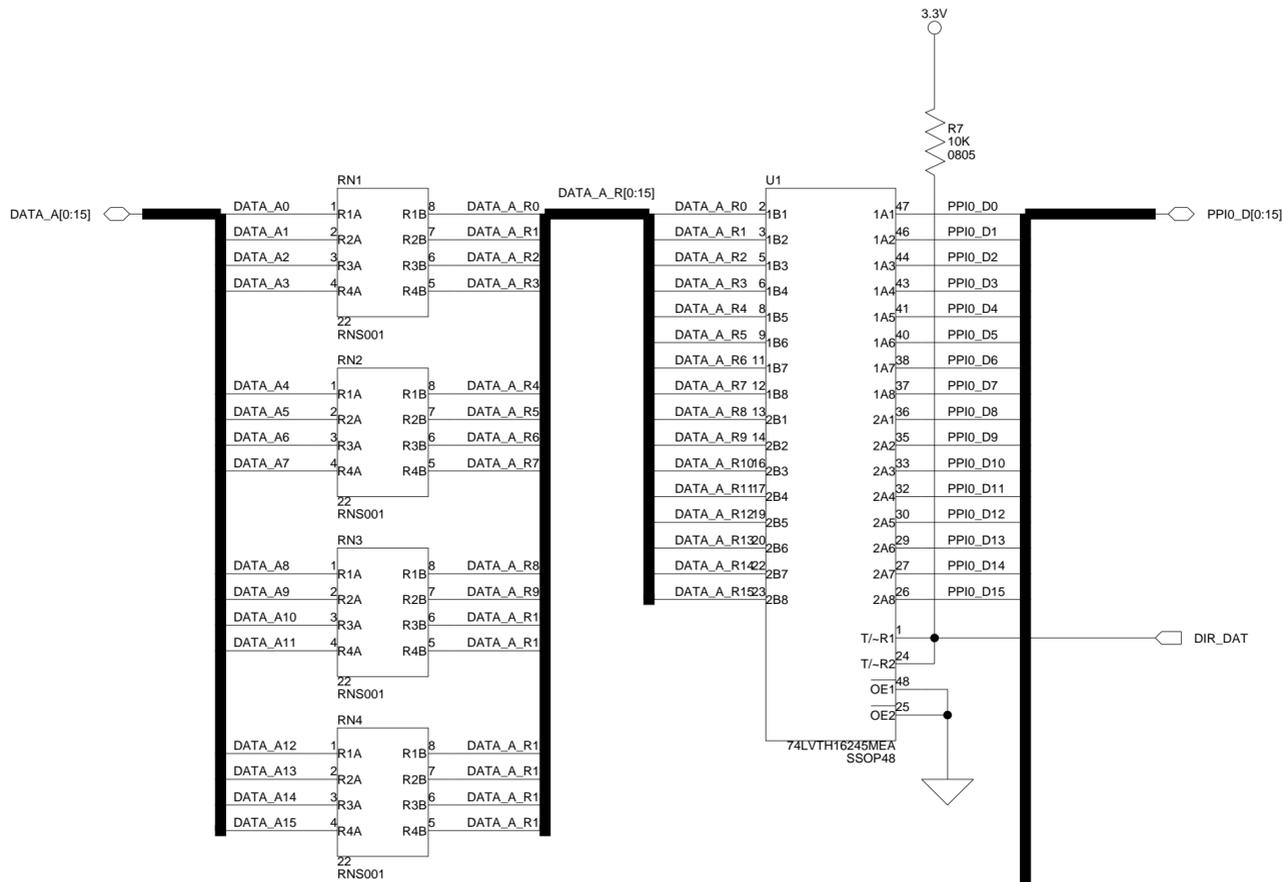




**ANALOG  
DEVICES**

20 Cotton Road  
Nashua, NH 03063  
PH: 1-800-ANALOGD


Title		<b>BLACKFIN EZ-EXTENDER DATA/FSYNC BUFFERS</b>	
Size C	Board No.	A0186-2003	Rev 2.0
Date	4-24-2006_9:34	Sheet	5 of 7

Direction Control


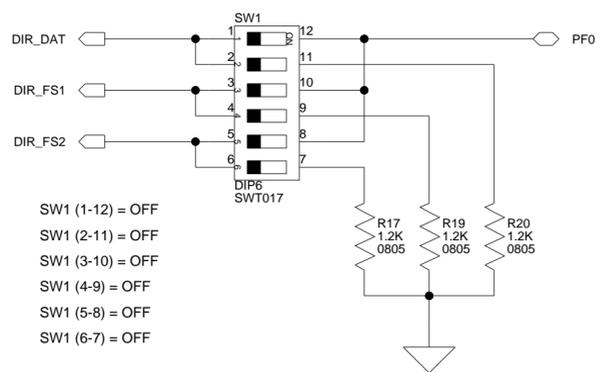


- SW1 (1-12) = OFF
- SW1 (2-11) = OFF
- SW1 (3-10) = OFF
- SW1 (4-9) = OFF
- SW1 (5-8) = OFF
- SW1 (6-7) = OFF



- SW3 (1-8) = OFF
- SW3 (2-7) = OFF
- SW3 (3-6) = OFF
- SW3 (4-5) = OFF

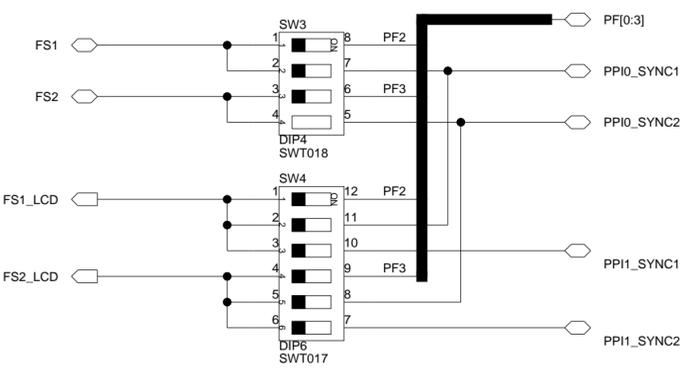


- SW4 (1-12) = OFF
- SW4 (2-11) = OFF
- SW4 (3-10) = OFF
- SW4 (4-9) = OFF
- SW4 (5-8) = OFF
- SW4 (6-7) = OFF

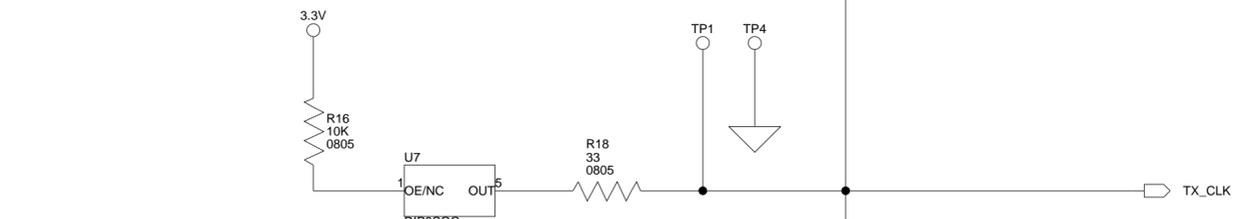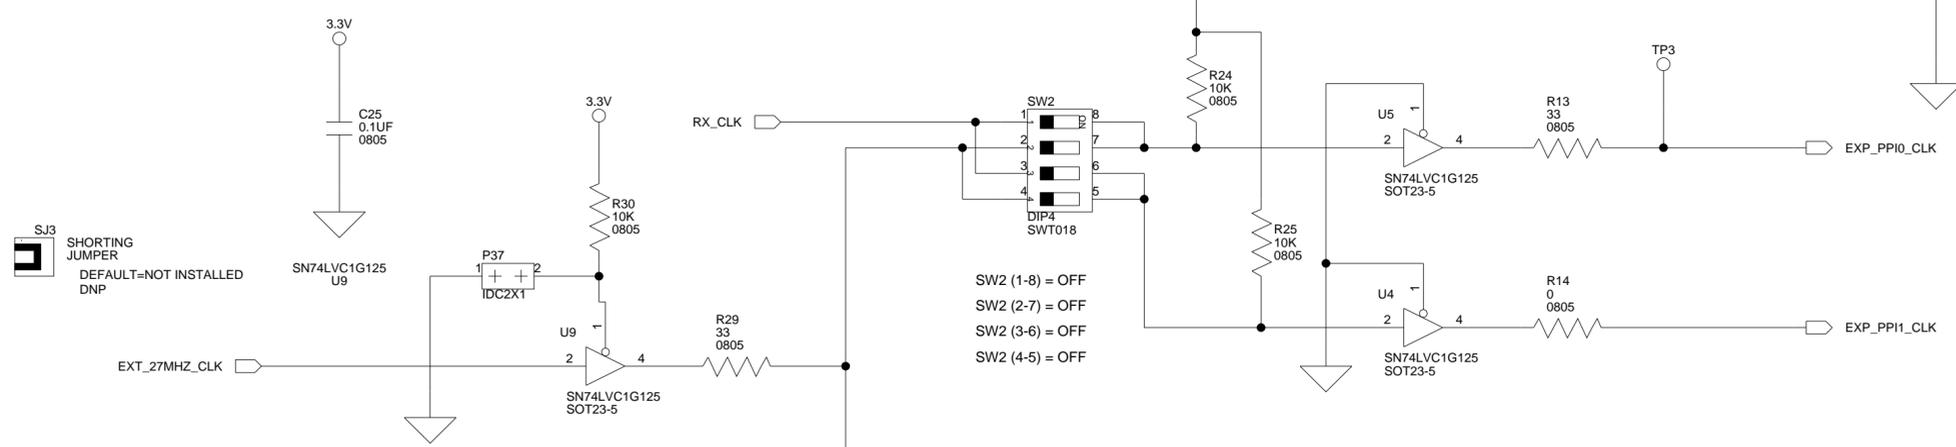










CLOCK SQUARING CIRCUITRY

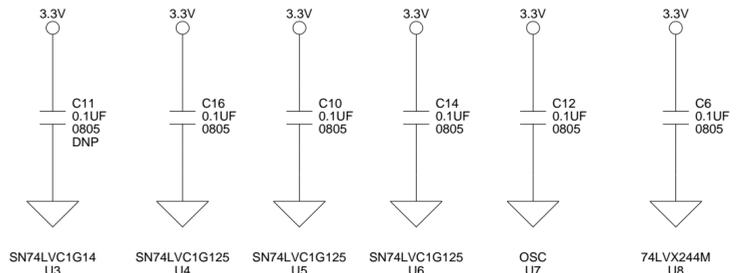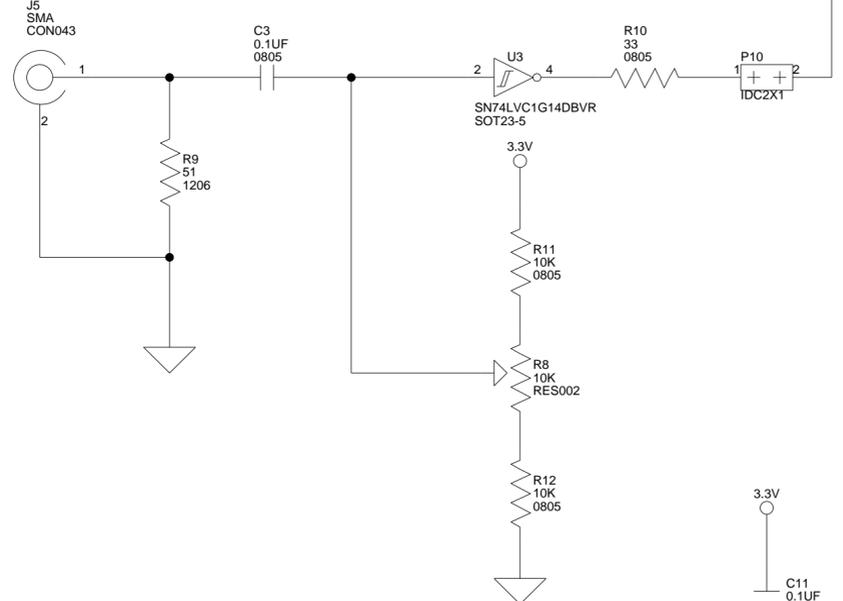

SPI INTERFACE

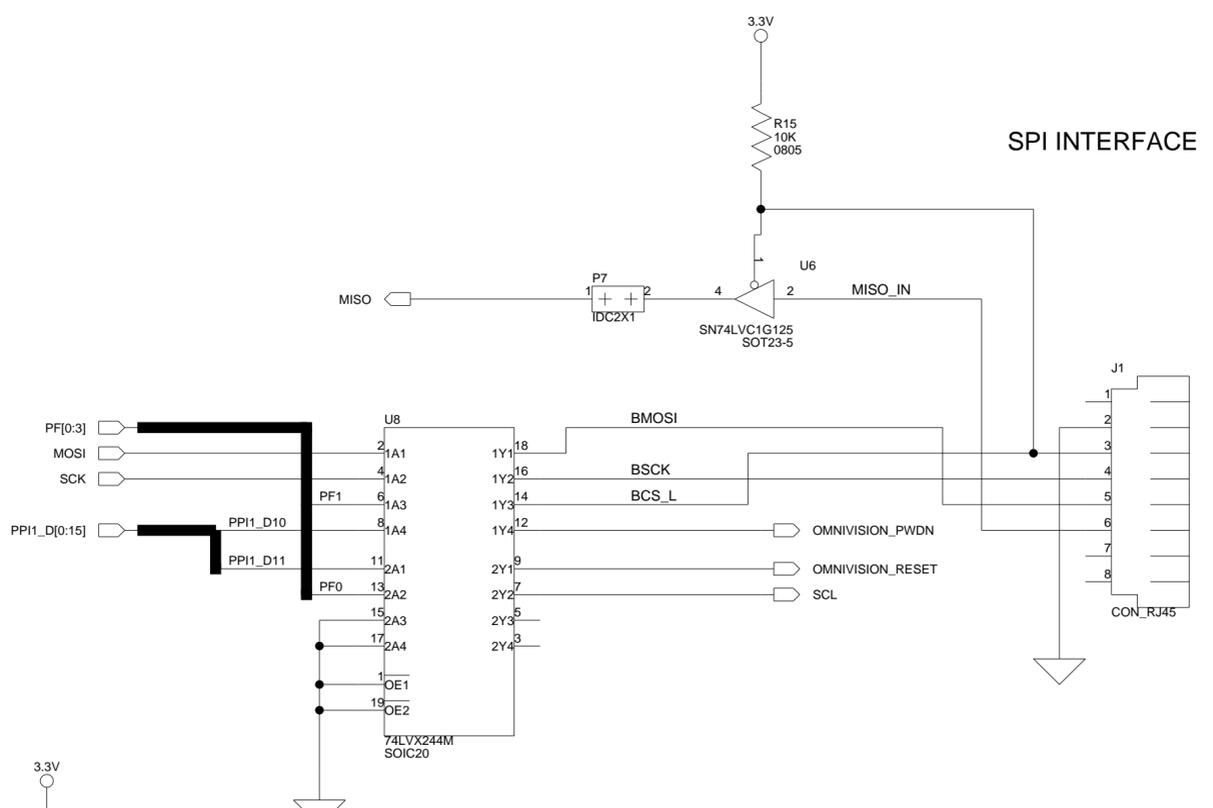

		20 Cotton Road Nashua, NH 03063 PH: 1-800-ANALOGD	
		<b>Title</b> BLACKFIN EZ-EXTENDER CONFIGURATION - SPI INTERFACE	
<b>Size C</b>	<b>Board No.</b> A0186-2003	<b>Rev</b> 2.0	
<b>Date</b> 4-24-2006_9:34	<b>Sheet</b> 6 of 7		

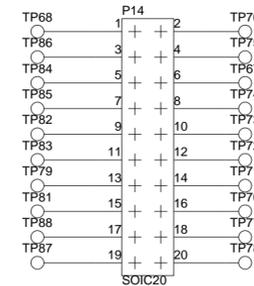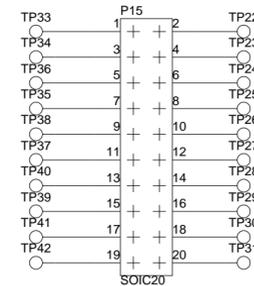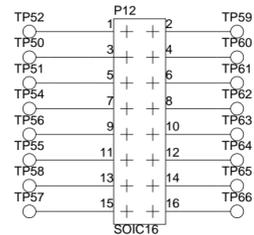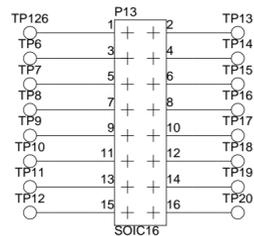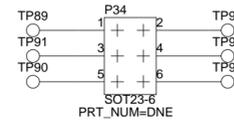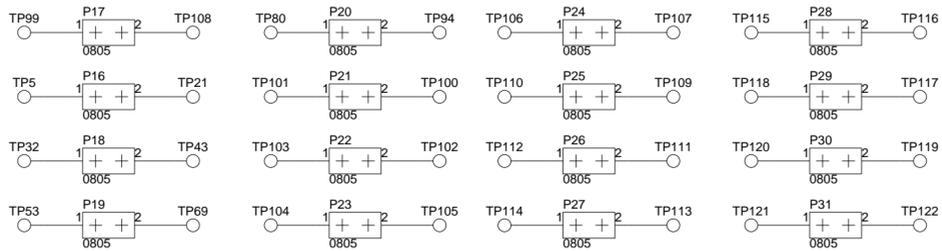

 <b>ANALOG DEVICES</b>		20 Cotton Road Nashua, NH 03063 PH: 1-800-ANALOGD	
		<b>Title</b> BLACKFIN EZ-EXTENDER BREADBOARD AREA FOOTPRINTS	
<b>Size</b> C	<b>Board No.</b> A0186-2003	<b>Rev</b> 2.0	
<b>Date</b> 4-24-2006_9:34	<b>Sheet</b> 7 of 7		

# I INDEX

## A

ADC (analog-to-digital converter) interface, [1-1](#)  
ADC/mixed-signal HSC interface, [2-3](#), [2-4](#)  
ADSP-BF533/561 processors  
    MISO signal, [2-9](#)  
    programmable flags, [2-4](#), [2-7](#), [2-8](#)  
architecture, of this EZ-Extender, [2-1](#)

## B

bidirectional drivers, [2-1](#)  
bill of materials, [A-1](#)  
block diagram, of this EZ-Extender, [2-1](#)  
board schematic, [B-1](#)  
breadboard capabilities, [-viii](#)

## C

camera  
    *See also* OmniVision  
    interface, [2-3](#), [2-4](#)  
clock  
    disconnect jumper (P10), [2-9](#)  
    routing switch (SW2), [2-5](#)  
    signals, [2-1](#), [2-3](#), [2-5](#)  
customer support, [-x](#)

## D

DAC (digital-to-analog converter) interface, [1-2](#)

## data

    directing, [1-2](#), [1-4](#), [1-5](#), [2-4](#)  
    signals, *See* PPI0, PPI1  
    transfer (PPI/HSC), [1-1](#)  
DATA\_A net, [2-3](#), [2-4](#)  
DATA\_B net, [2-3](#)  
dimensions, of this EZ-Extender, [-ix](#)  
DIP switches, *See* SW<sub>x</sub>  
direction control switch (SW1), [2-4](#)

## E

expansion interface, [-vii](#)  
external clock disable jumper (P37), [2-10](#)

## F

features, of this EZ-Extender, [-viii](#)  
FLZ-type connector, [1-4](#)  
frame sync signals, [1-2](#), [1-4](#), [1-5](#), [2-1](#)  
FSYNC1-2 (ADC/HCS) frame sync signals,  
    [2-3](#), [2-4](#), [2-7](#)  
FSYNC1-2 (LCD) frame sync signals, [2-3](#), [2-8](#)

## G

general frame sync routing switch (SW3), [2-7](#)  
general-purpose signals, [2-1](#)

## H

HSC (high-speed converter), [-viii](#), [1-1](#), [1-2](#)

# INDEX

## I

### interfaces

- ADC and mixed-signal HSC, [1-1](#)
- camera, [1-3](#)
- DAC high-speed converter (HSC), [1-2](#)
- LCD display, [1-4](#)

## J

jumpers, *See* Px

## L

### LCD

- backlight inverters, [1-5](#)
- frame sync routing switch (SW4), [2-8](#)
- interface, [1-4](#), [2-3](#)

## M

### MISO

- disconnect jumper (P7), [2-9](#)
- signal, [2-9](#)
- mixed-signal HSC interface, [1-1](#)

## N

notation conventions, [-xvi](#)

## O

- OmniVision OV6630AA module, [1-3](#), [2-9](#)
  - See also* camera
- oscillator socket (U10), [2-3](#), [2-6](#)

## P

- P10 (SMA connector clock disconnect) jumper, [2-9](#)
- P36 (PPI data routing) jumper, [2-9](#)
- P37 (ext clock disable) jumper, [2-10](#)
- P7 (MISO disconnect) jumper, [2-9](#)

parallel peripheral interfaces

- See also* PPI0, PPI1
- clocks, [1-1](#), [1-3](#), [1-4](#), [1-5](#)
- clock sources, [2-6](#)
- PF0 programmable flag, [2-4](#)
- PF2-3 programmable flags, [2-7](#), [2-8](#)
- PPI0\_CLK signal, [2-3](#), [2-5](#)
- PPI0 net, [2-3](#)
- PPI0\_SYNC1-2 signals, [2-7](#), [2-8](#)
- PPI1\_CLK signal, [2-3](#), [2-5](#)
- PPI1 net, [2-3](#)
- PPI1\_SYNC1-2 signals, [2-8](#)
- programmable flags, *See* PFX

## R

- RJ-45 connector, [-viii](#), [1-1](#)
- RX\_CLK signal, [2-3](#), [2-6](#)

## S

- schematic, [B-1](#)
- serial peripheral interconnect, *See* SPI
- SMA connector (J5), [2-3](#), [2-6](#), [2-9](#)
- SO signal, [2-9](#)
- SPI
  - connector (J1)
  - signals, [1-1](#)
  - surface mounted (SMT) footprints, [-viii](#)
- SW1 (direction control) switch, [2-4](#)
- SW2 (clock routing) switch, [2-5](#)
- SW3 (gen frame sync routing) switch, [2-7](#)
- SW4 (LCD frame sync routing) switch, [2-8](#)

## T

- transmit
  - clock, [2-10](#)
  - mode, [2-1](#)
- TX\_CLK signal, [2-3](#), [2-5](#), [2-10](#)



## Стандарт Электрон Связь

Мы молодая и активно развивающаяся компания в области поставок электронных компонентов. Мы поставляем электронные компоненты отечественного и импортного производства напрямую от производителей и с крупнейших складов мира.

Благодаря сотрудничеству с мировыми поставщиками мы осуществляем комплексные и плановые поставки широчайшего спектра электронных компонентов.

Собственная эффективная логистика и склад в обеспечивает надежную поставку продукции в точно указанные сроки по всей России.

Мы осуществляем техническую поддержку нашим клиентам и предпродажную проверку качества продукции. На все поставляемые продукты мы предоставляем гарантию .

Осуществляем поставки продукции под контролем ВП МО РФ на предприятия военно-промышленного комплекса России , а также работаем в рамках 275 ФЗ с открытием отдельных счетов в уполномоченном банке. Система менеджмента качества компании соответствует требованиям ГОСТ ISO 9001.

Минимальные сроки поставки, гибкие цены, неограниченный ассортимент и индивидуальный подход к клиентам являются основой для выстраивания долгосрочного и эффективного сотрудничества с предприятиями радиоэлектронной промышленности, предприятиями ВПК и научно-исследовательскими институтами России.

С нами вы становитесь еще успешнее!

### Наши контакты:

**Телефон:** +7 812 627 14 35

**Электронная почта:** [sales@st-electron.ru](mailto:sales@st-electron.ru)

**Адрес:** 198099, Санкт-Петербург,  
Промышленная ул, дом № 19, литера Н,  
помещение 100-Н Офис 331